


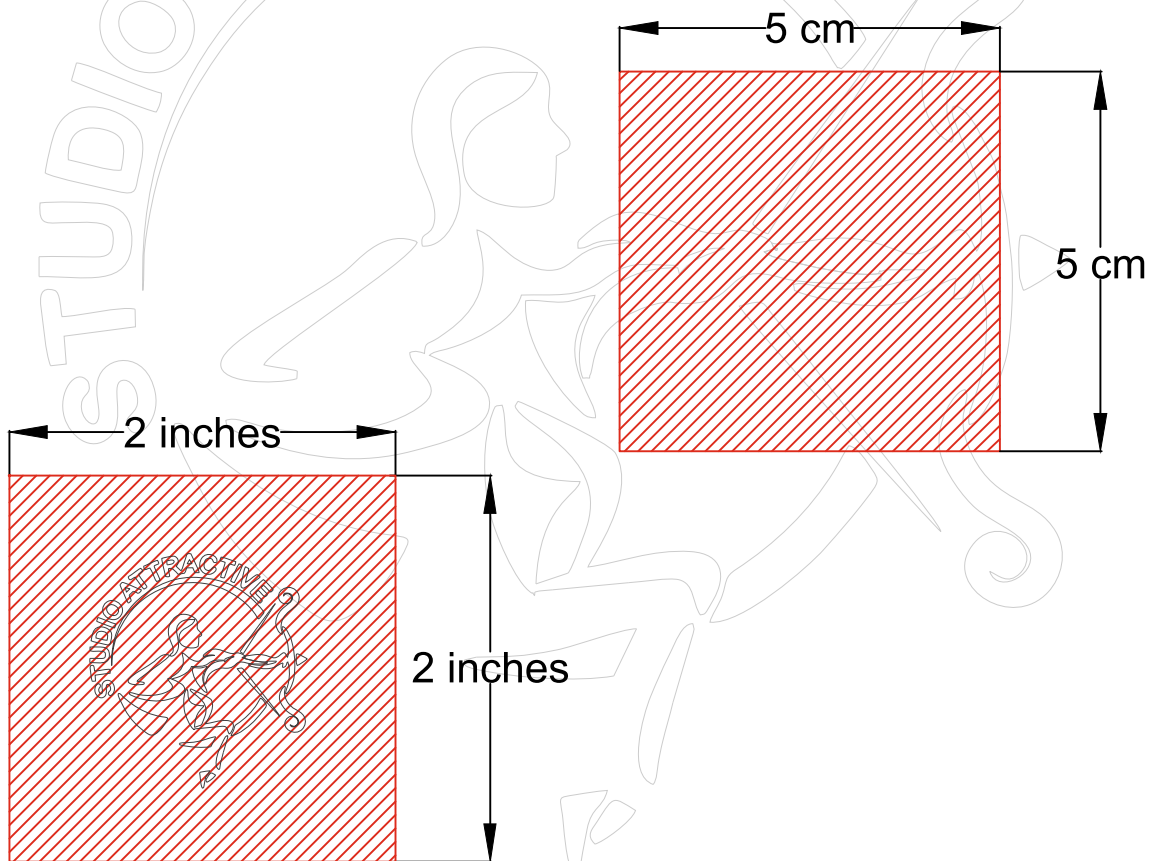


Test Page


Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

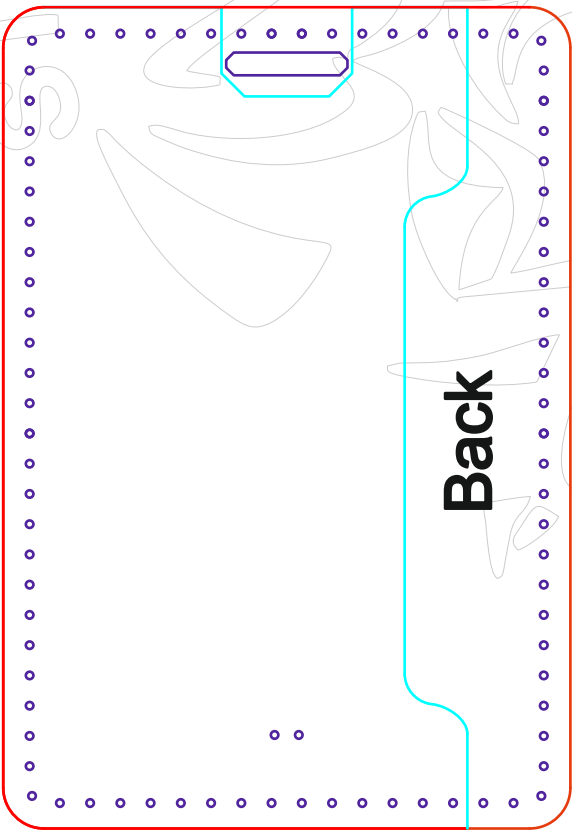

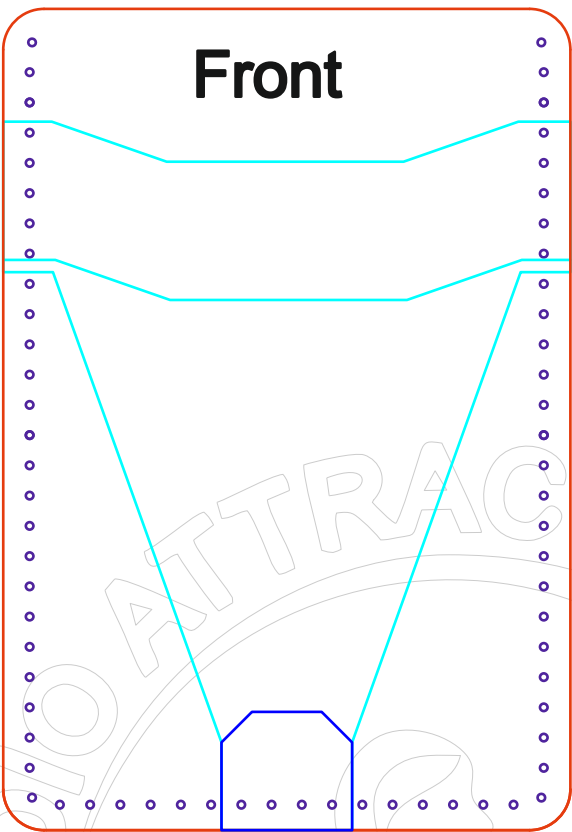

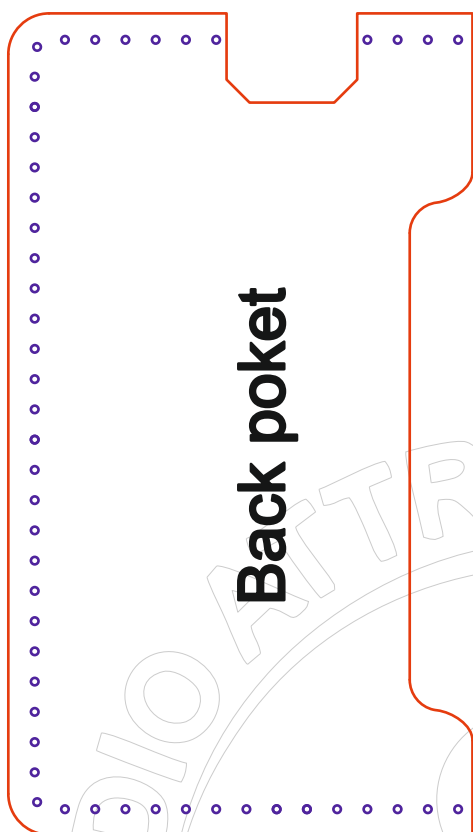


Back pocket

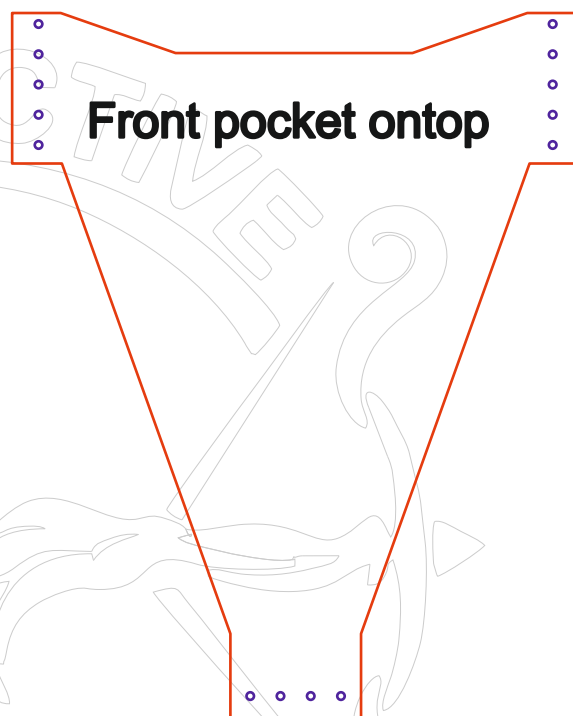

Front pocket on top

A

B

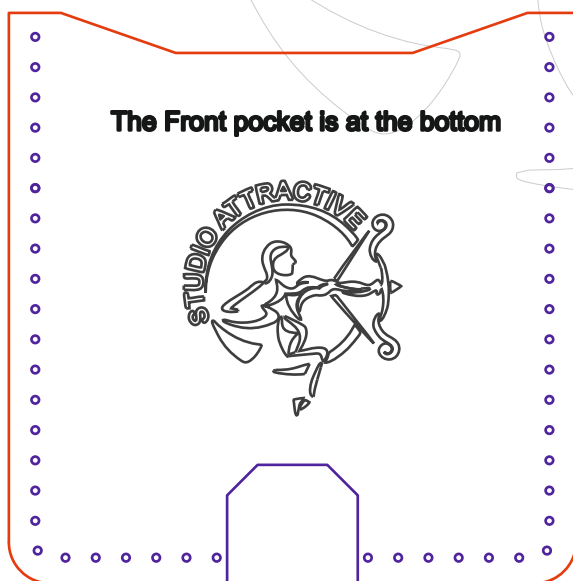

The Front pocket is at the bottom