 
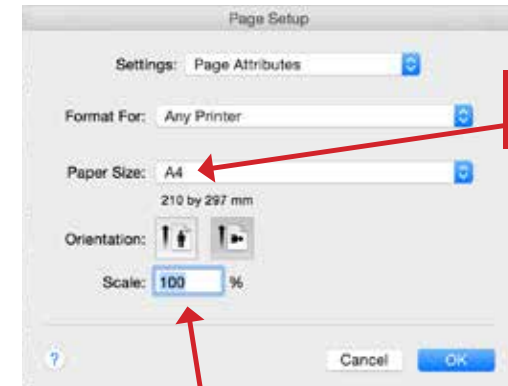 


PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

 
 
Select
Actual size

Set the
paper size

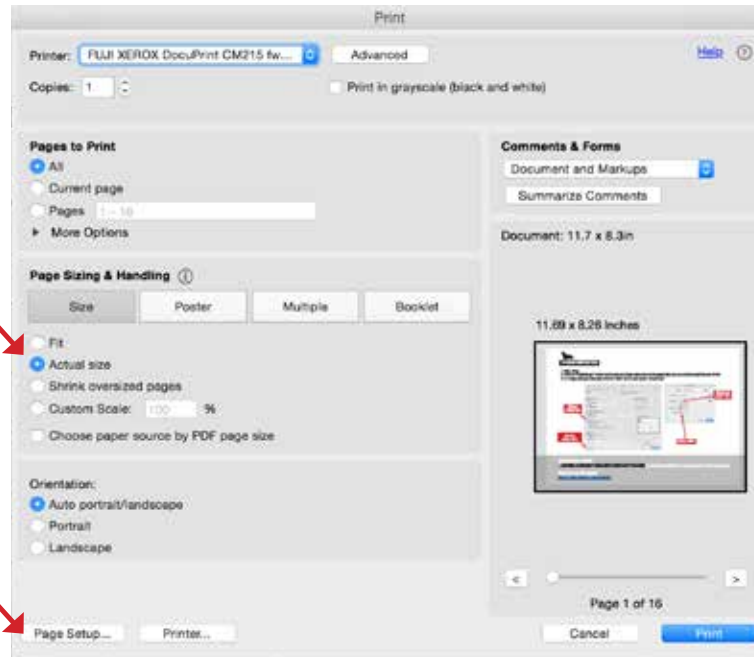

Select the
paper size

Scale 100%

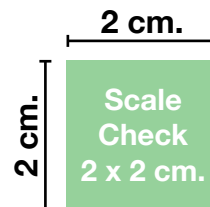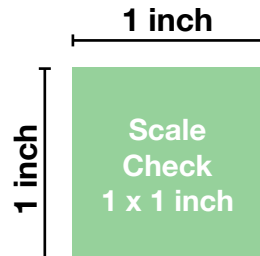


IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns


link for free download
 
<https://get.adobe.com/reader>

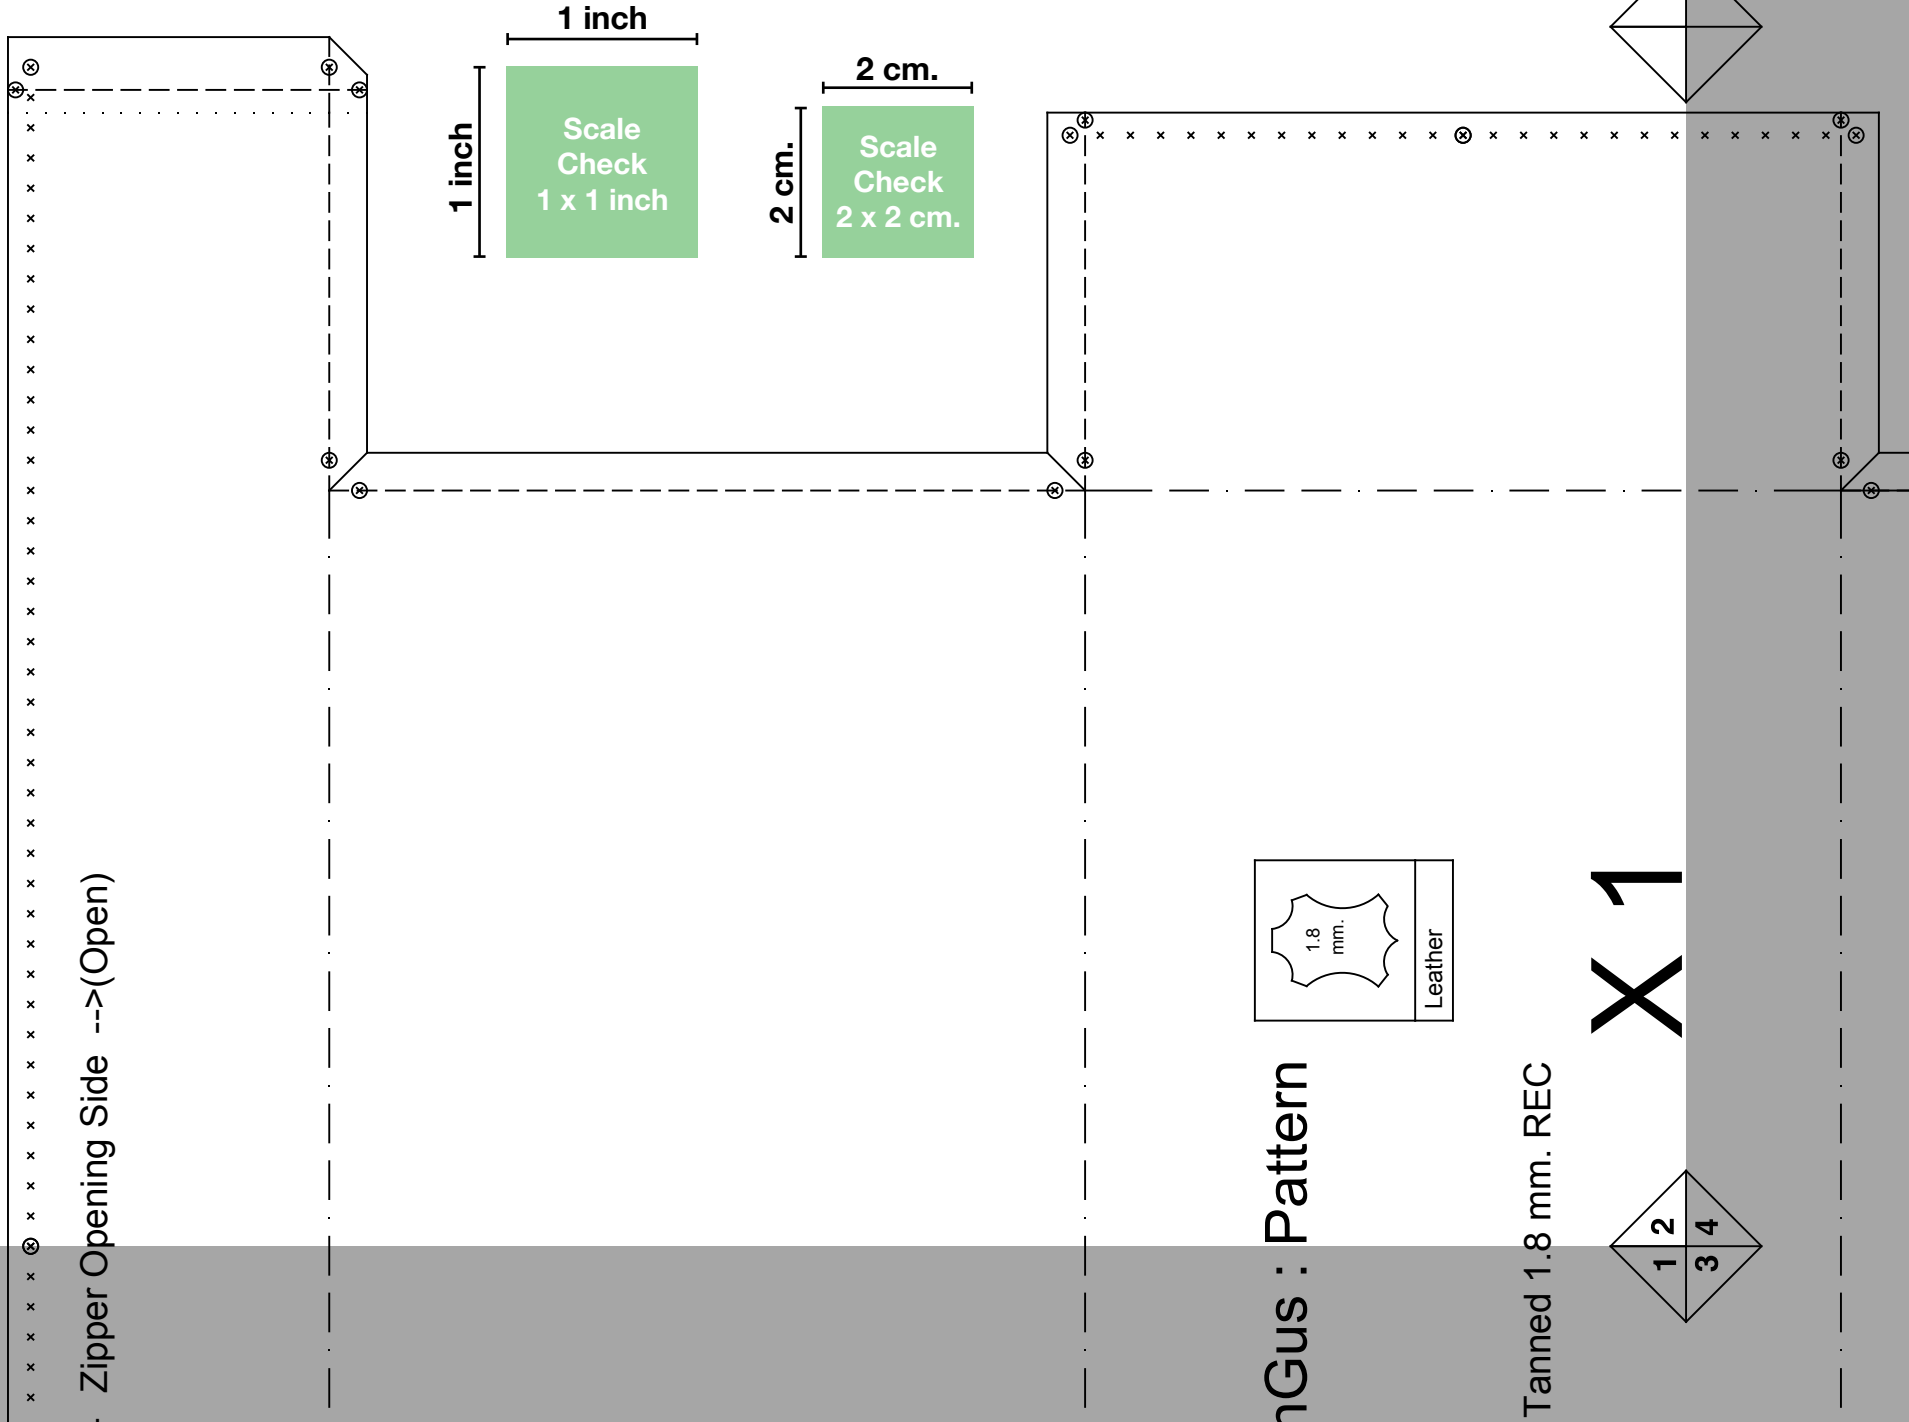





(Close)<--- Zipper Opening Side

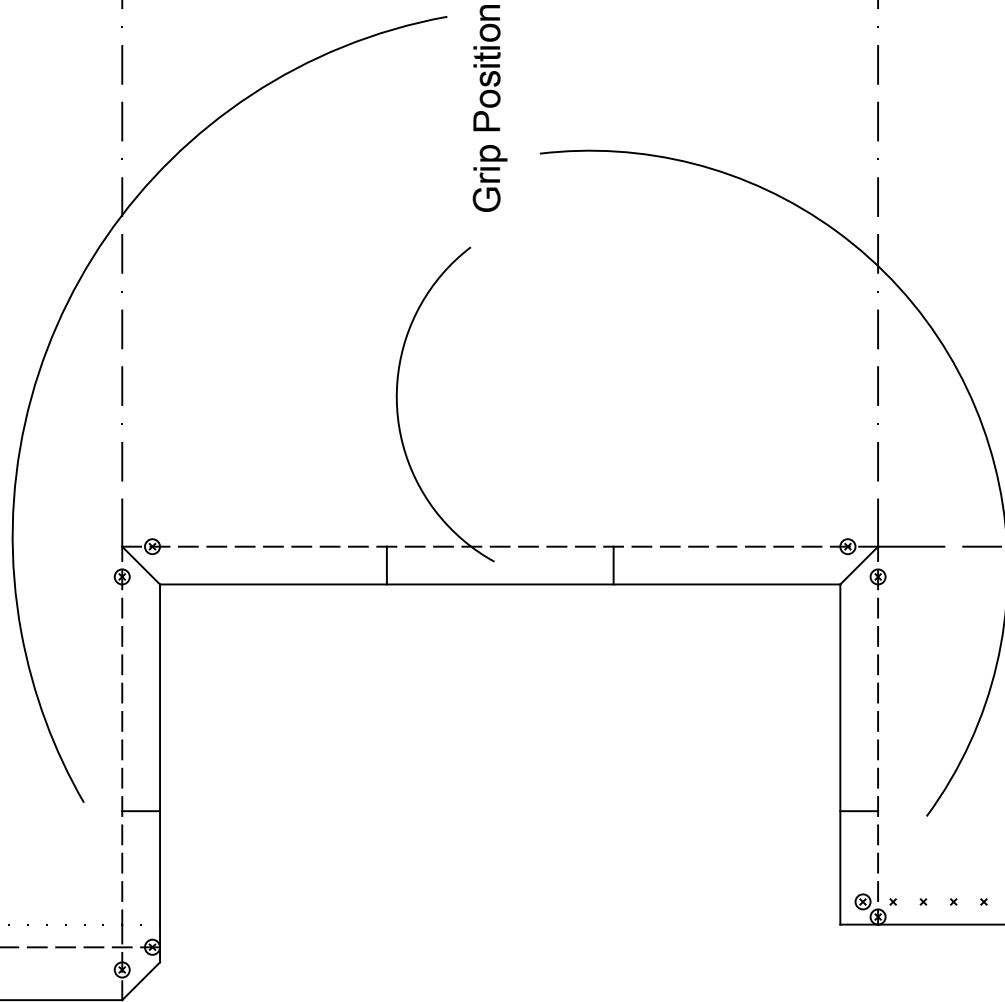 

CraftsmanGus : Pattern

Dopp Kit
SML DK 01
Main Body


 
 
Chrome / Veg Tanned 1.8 mm. REC

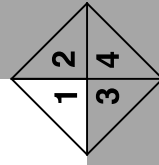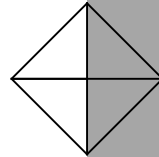



Tanned 1.8 mm. REC

   X1

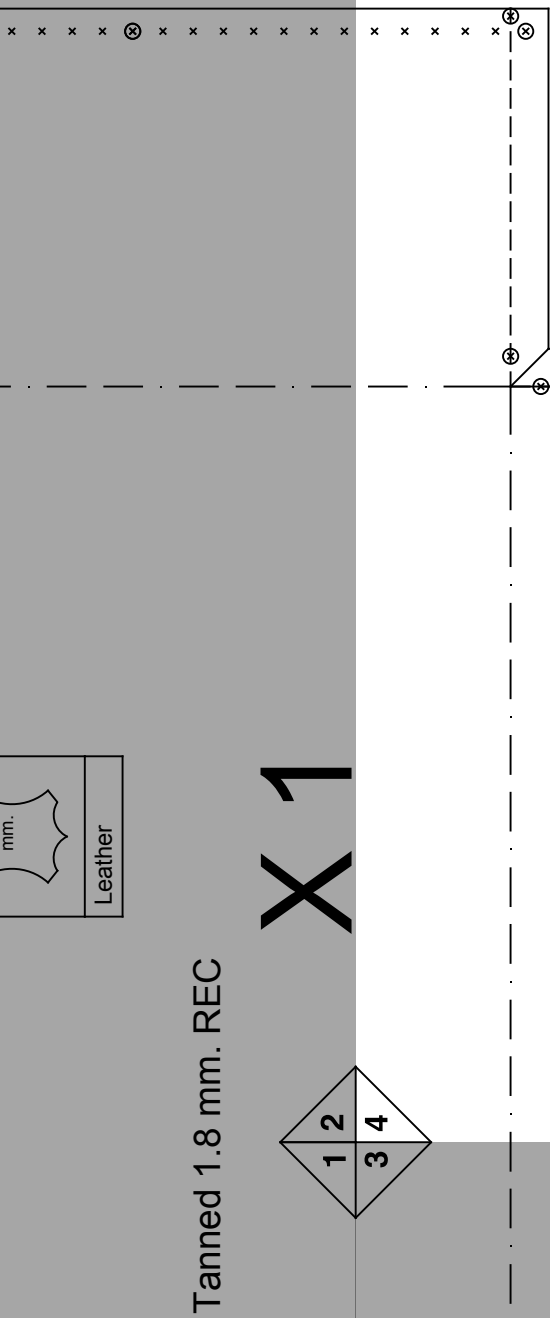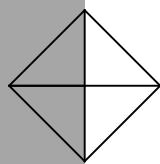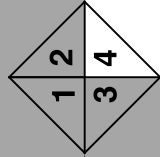




- Zipper Opening Side -->(Open)

nGus : Pattern

Tanned 1.8 mm. REC

X1

   Dopp Kit
SML DK 01
Main Body
Chrome / Veg Tanned 1.8 mm. REC

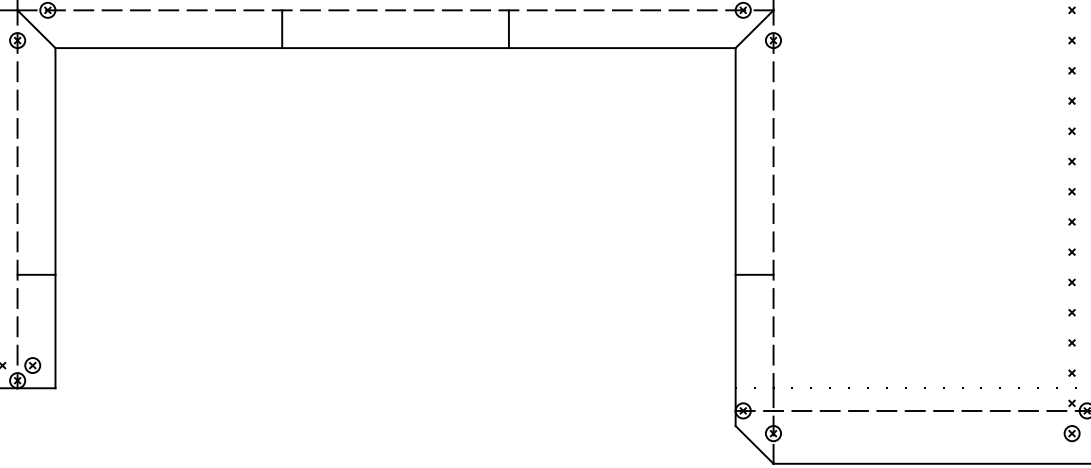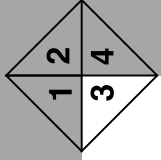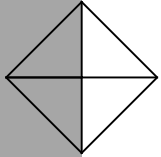

(Close)<--- Zipper Opening Side --->



CraftsmanGus : Pattern

Dopp Kit
SML DK 01
Main Body
Chrome / Veg Tanned 1.8 mm. REC