




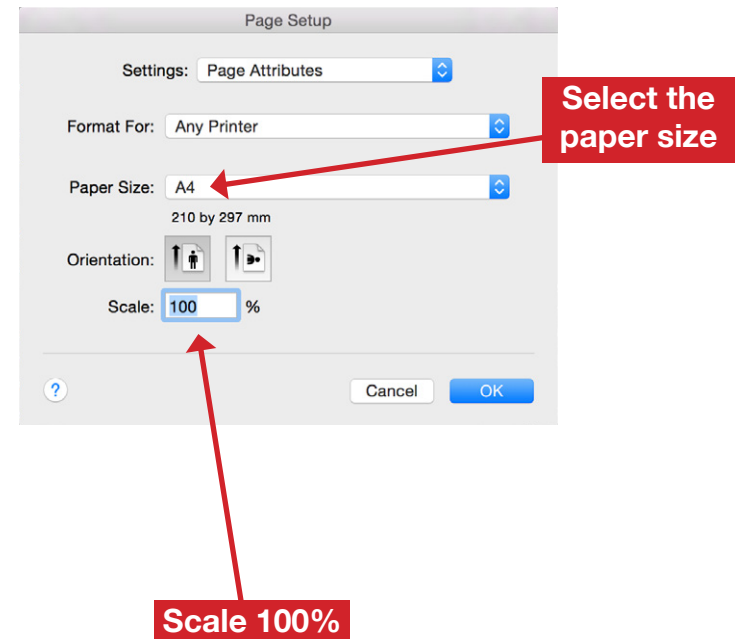


PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

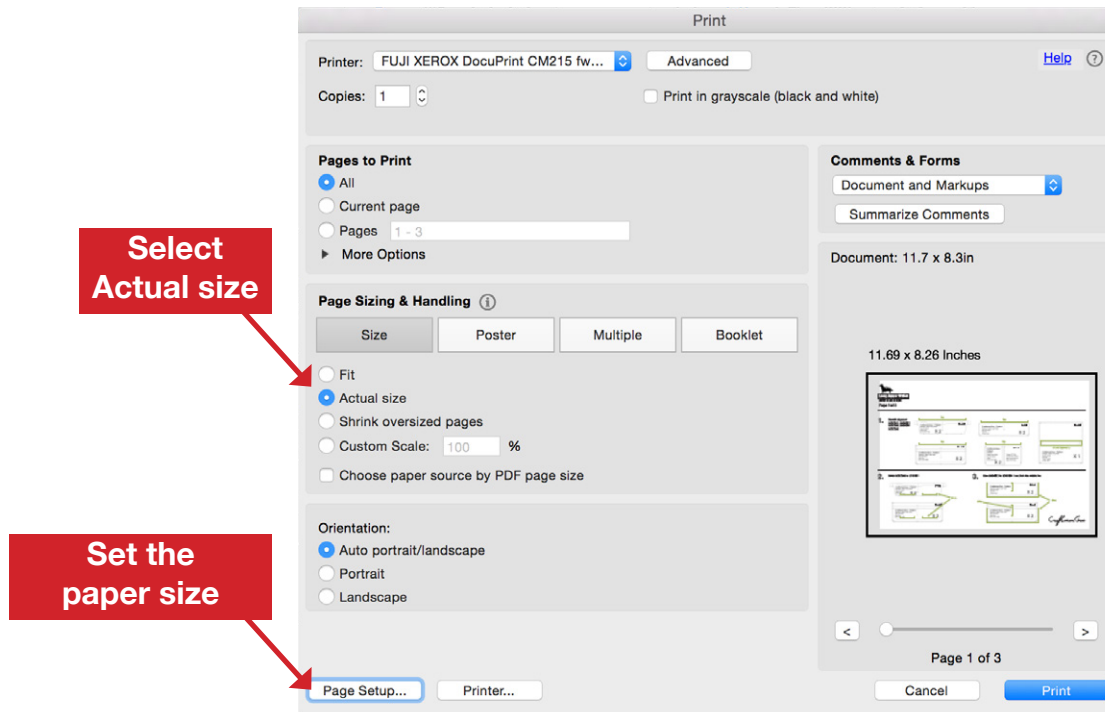

CraftsmanGus

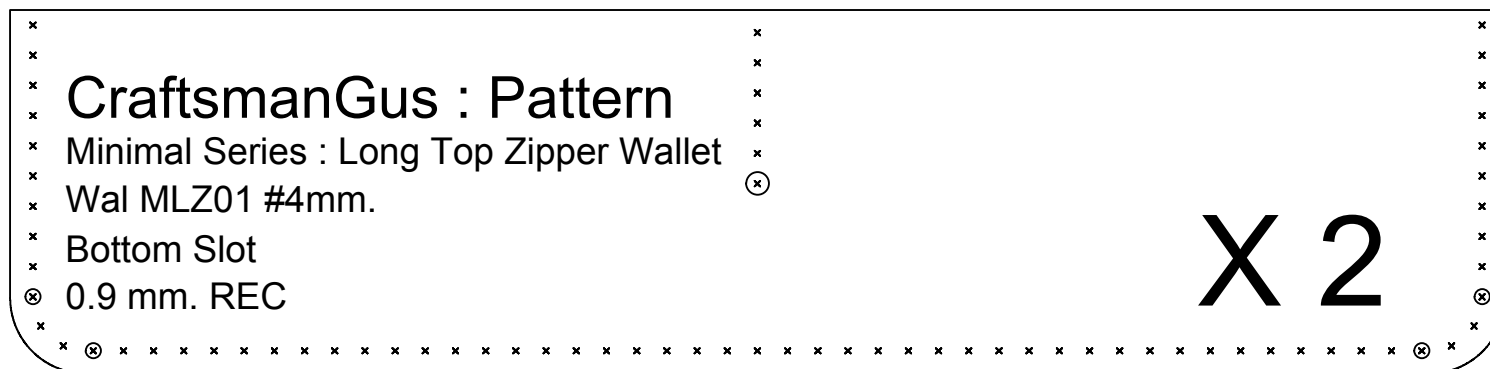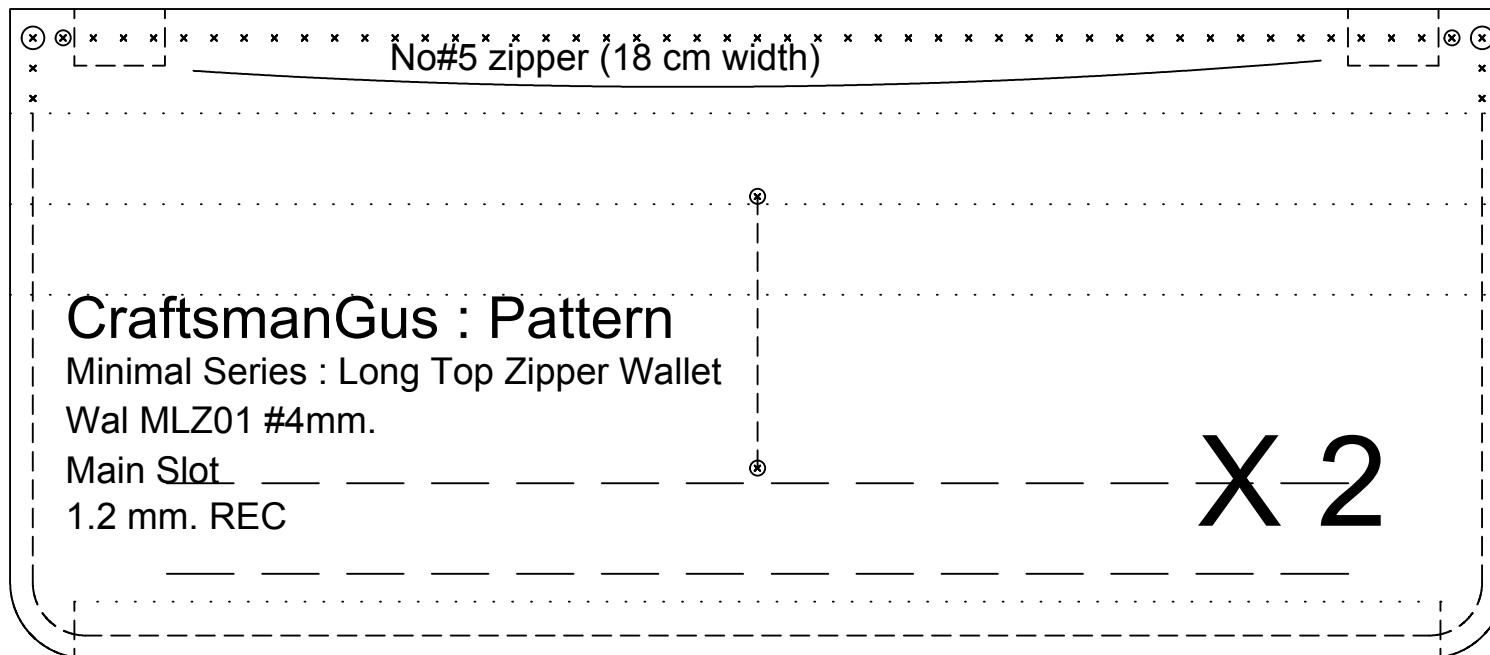



CraftsmanGus : Pattern

Wal MLZ01 #4mm.

Interior Slot

0.9 mm. REC

X 4

CraftsmanGus : Pattern

Minimal Series : Long Top Zipper Wallet

Wal MLZ01 #4mm.

Wallet Shell B

0.9-1.2 mm. (Soft Veg or Chrome) REC

X 1

