

Printing the pattern

Set up your printer to A4 size paper and mark “Actual size” box.

Alternatively you can use “letter” format which is approximately the same size and will not impact the size of the pattern.

Print **Test** page first before printing all the patterns.

Print

Printer: Canon LBP211/212 UFR II Properties Advanced Help ?

Copies: 1 Print in grayscale (black and white) Save ink/toner

Pages to Print

☒ All
☐ Current page
☐ Pages 1 More Options

Page Sizing & Handling

Size Poster Multiple Booklet

☐ Fit
☒ Actual size
☐ Shrink oversized pages
☐ Custom Scale: 100 %
☐ Choose paper source by PDF page size
☐ Print on both sides of paper

Orientation:
☒ Auto portrait/landscape
☐ Portrait
☐ Landscape

Comments & Forms

 
 
Document Summarize Comments

Document: 8.3x11.7in
8.27x11.69 Inches

Test Page
Make sure these dimensions are correct before you starting print patterns

Page 1 of 1



Page Setup... Print Cancel

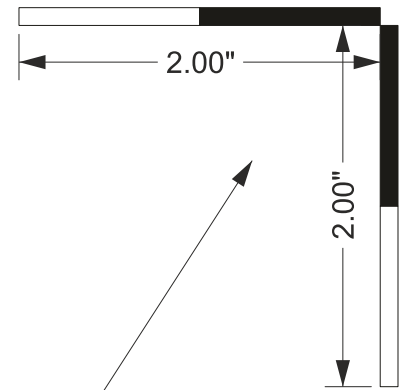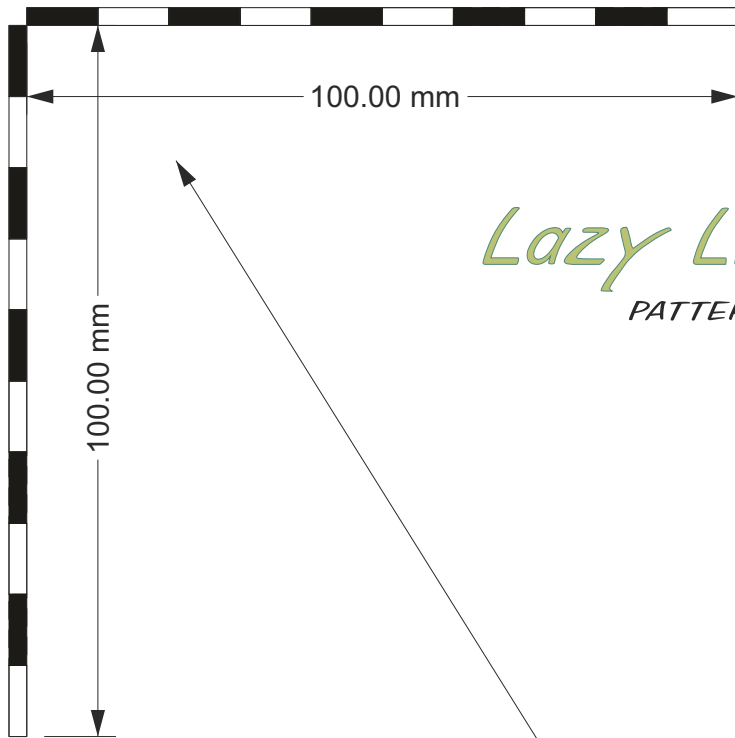

Lazy Lizard
PATTERNS





Test Page

  *Make sure these dimensions are correct
before you starting print patterns*

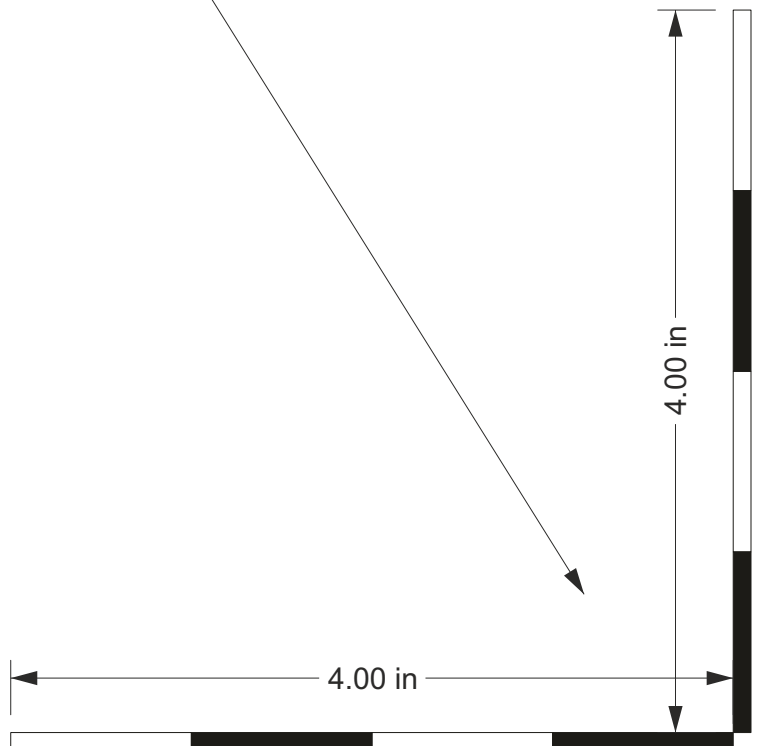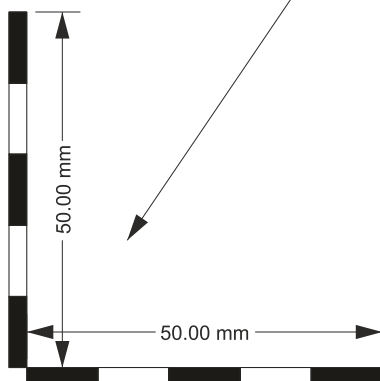





Lazy Lizard.®

    LIMITED
PATTERNS

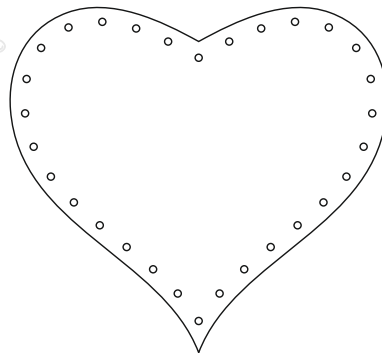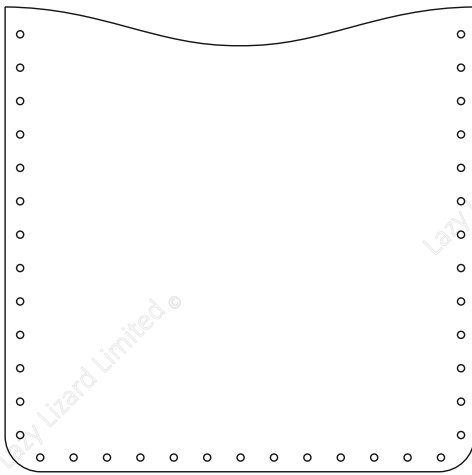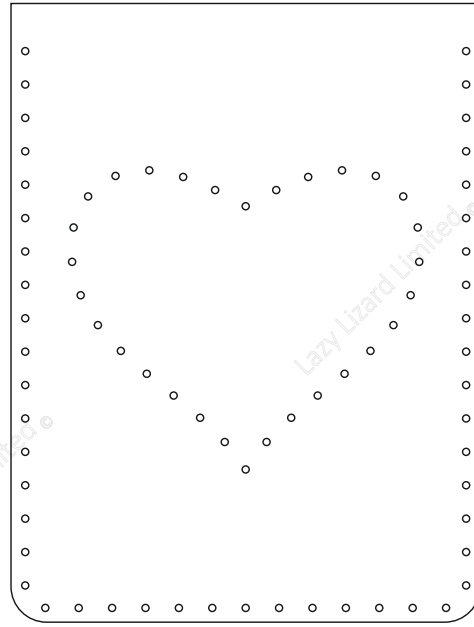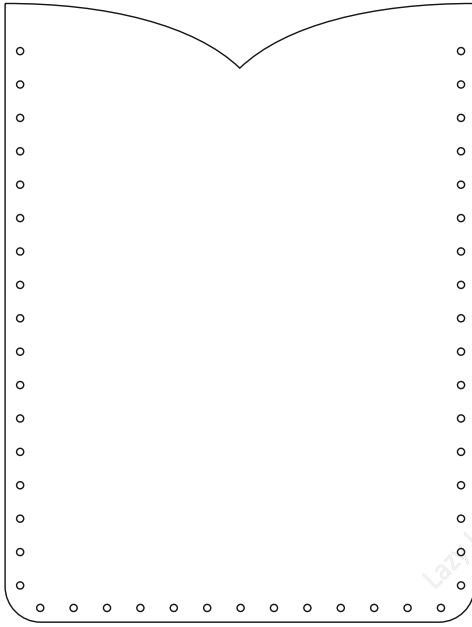





Lazy Lizard[®]

    LIMITED
PATTERNS

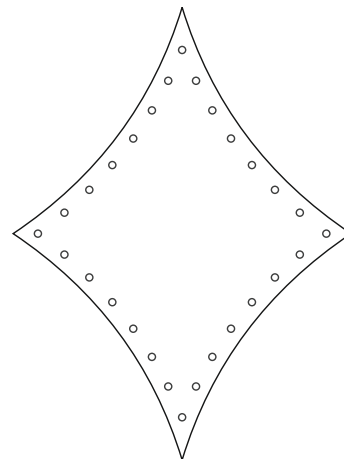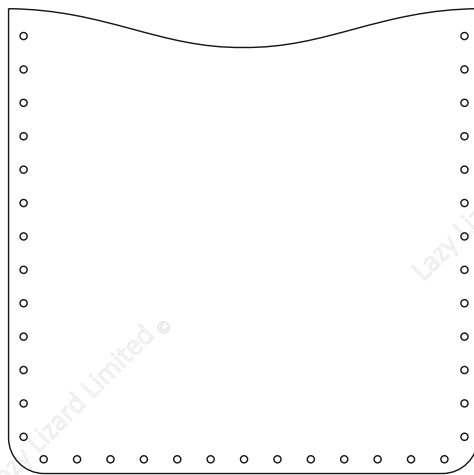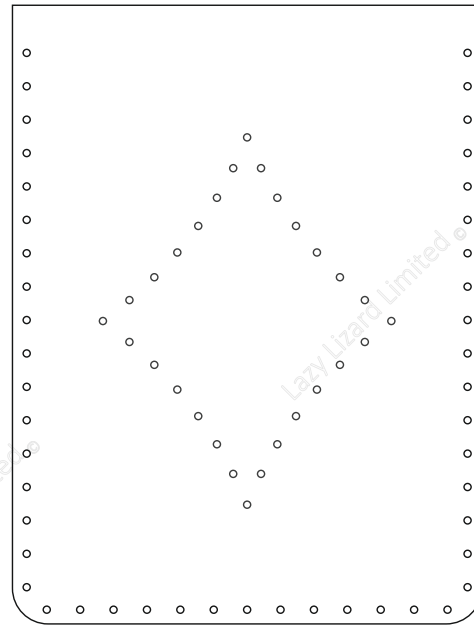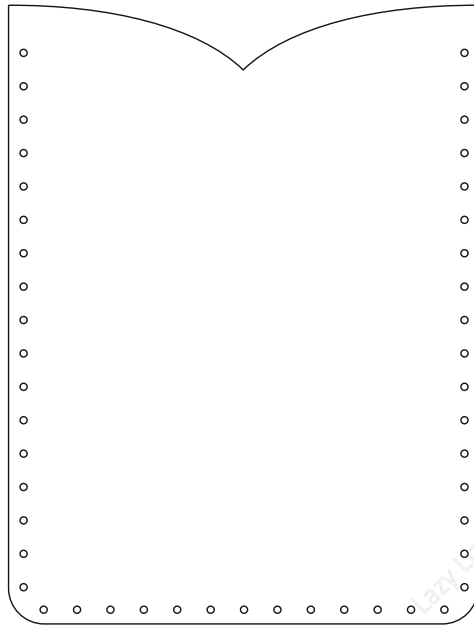

Lazy Lizard[®]

    LIMITED
PATTERNS

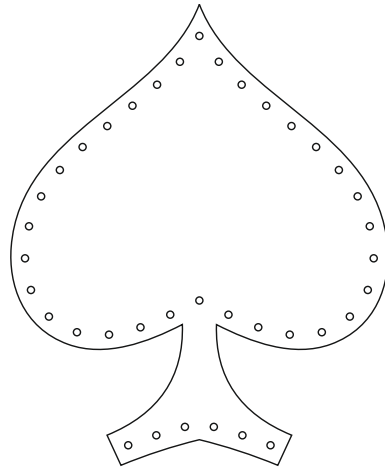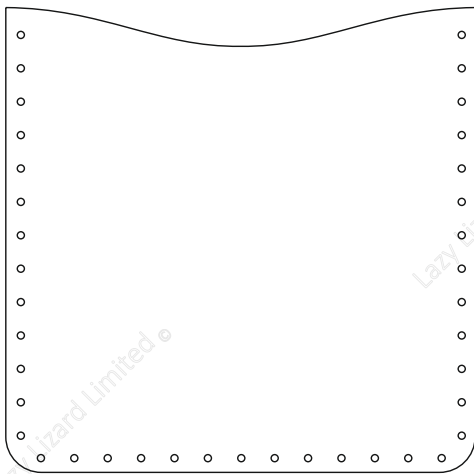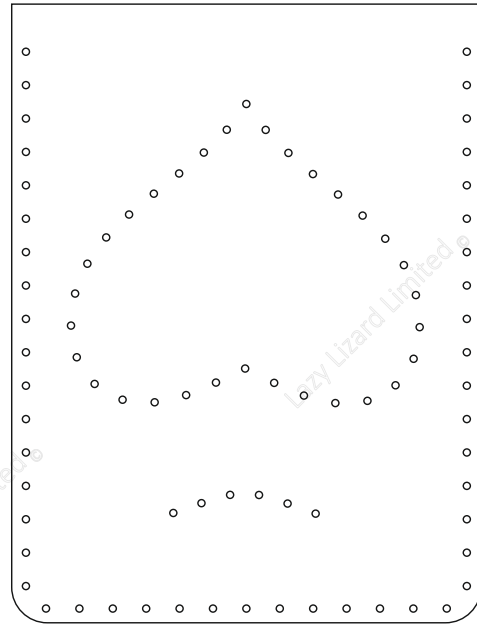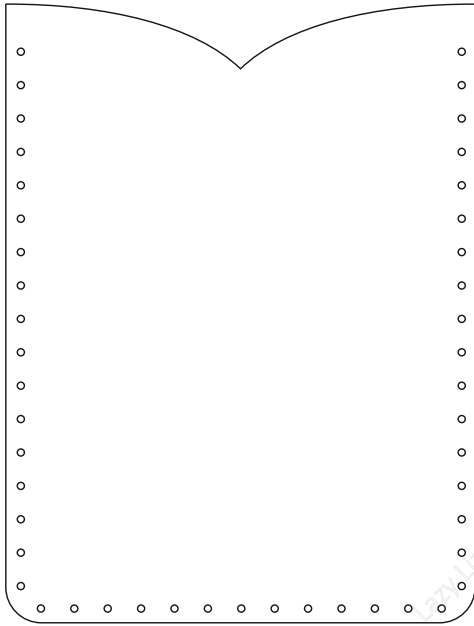

Lazy Lizard[®]

LIMITED
PATTERNS

