



19 cm

Test page


Select A4 in the paper size printing menu

Choose «actual size» in the printing preferences



Make sure these dimensions are correct before starting
your pattern

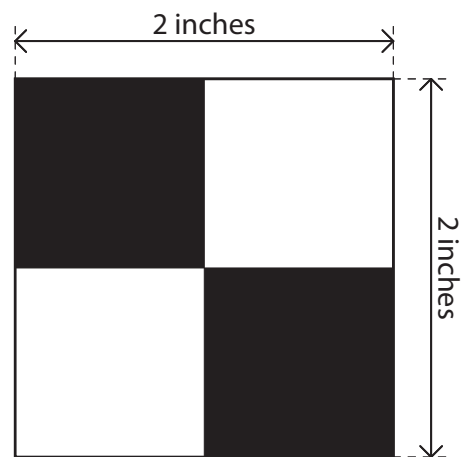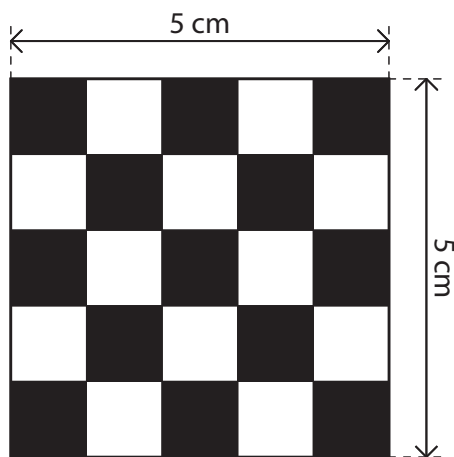

OKLOM



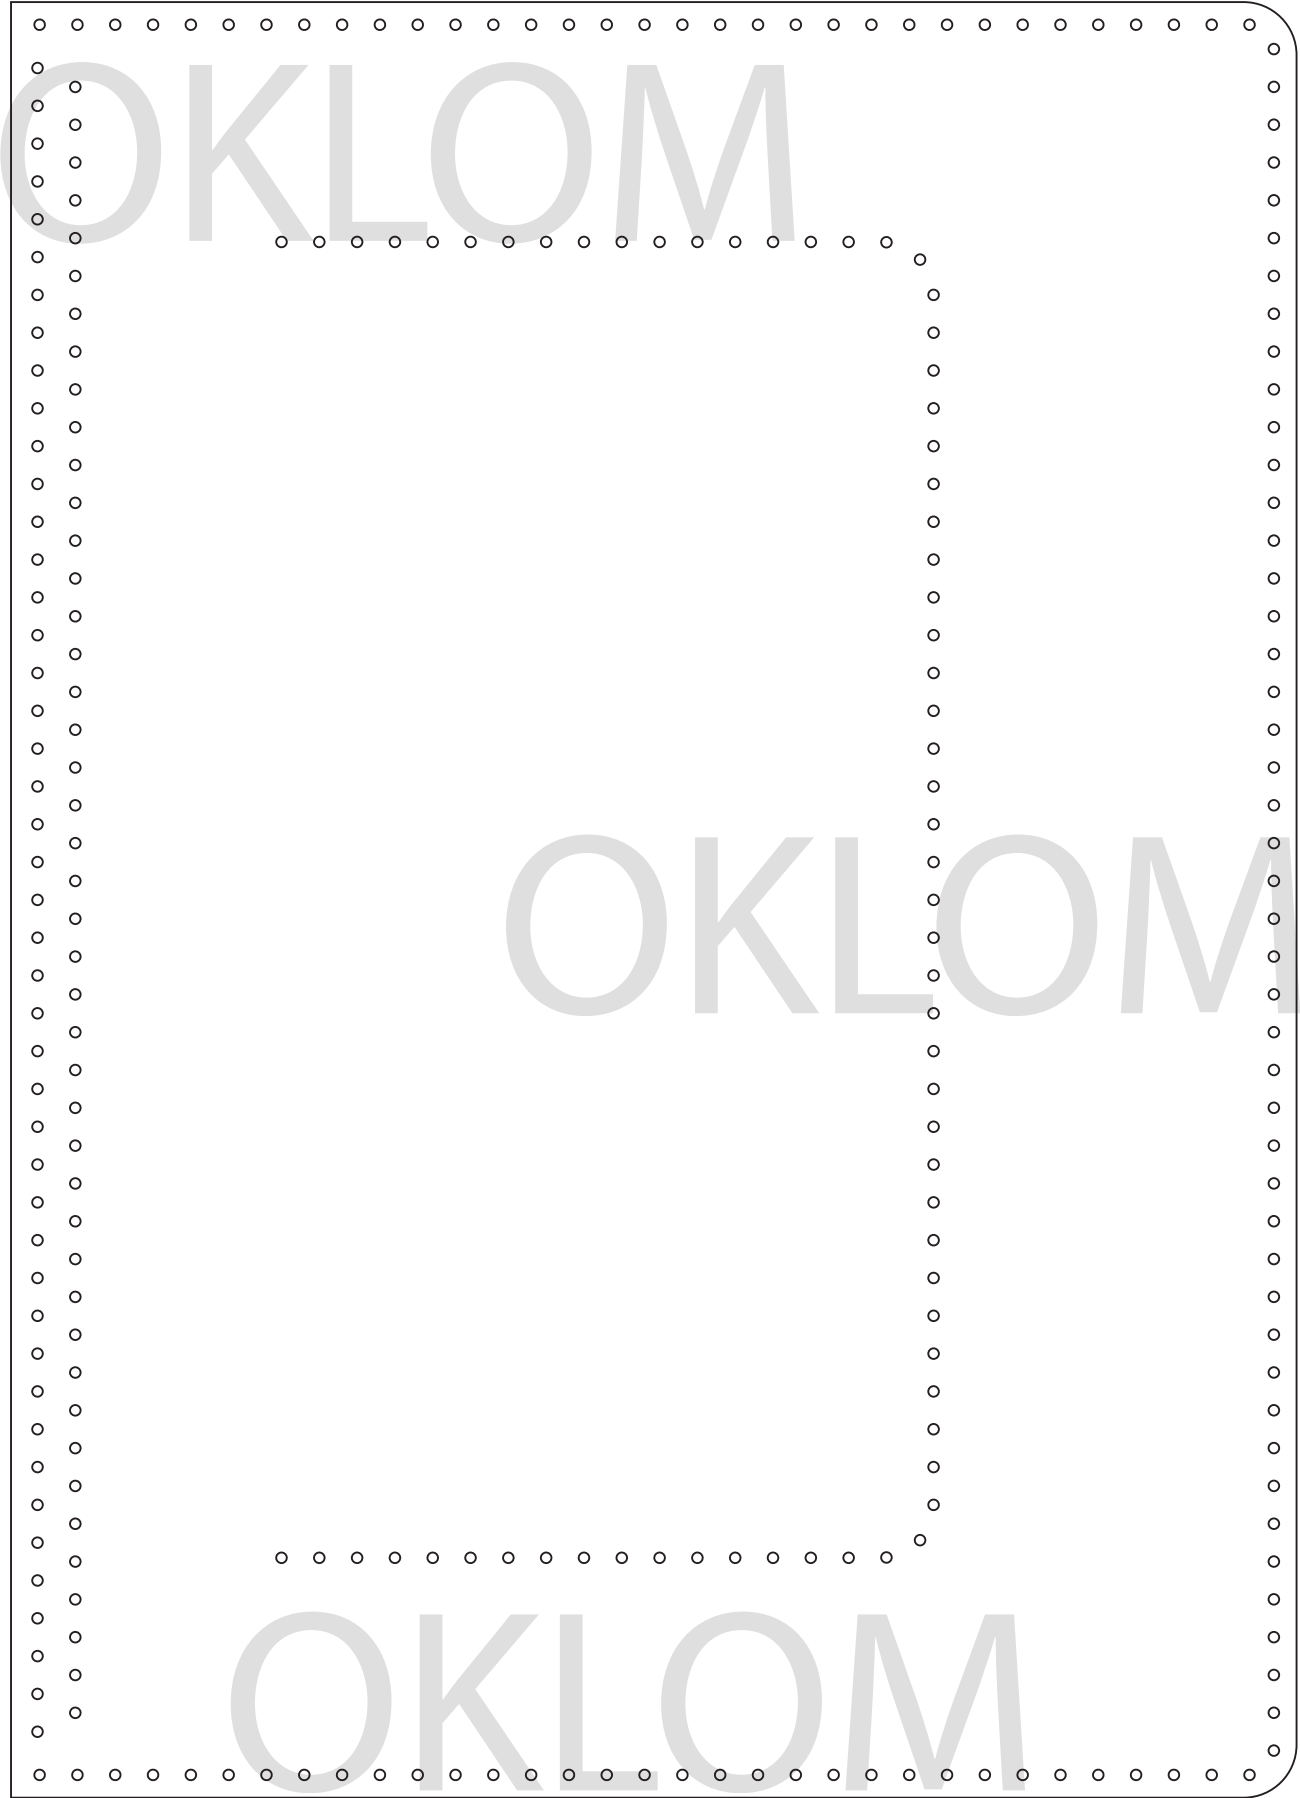




OKLOM

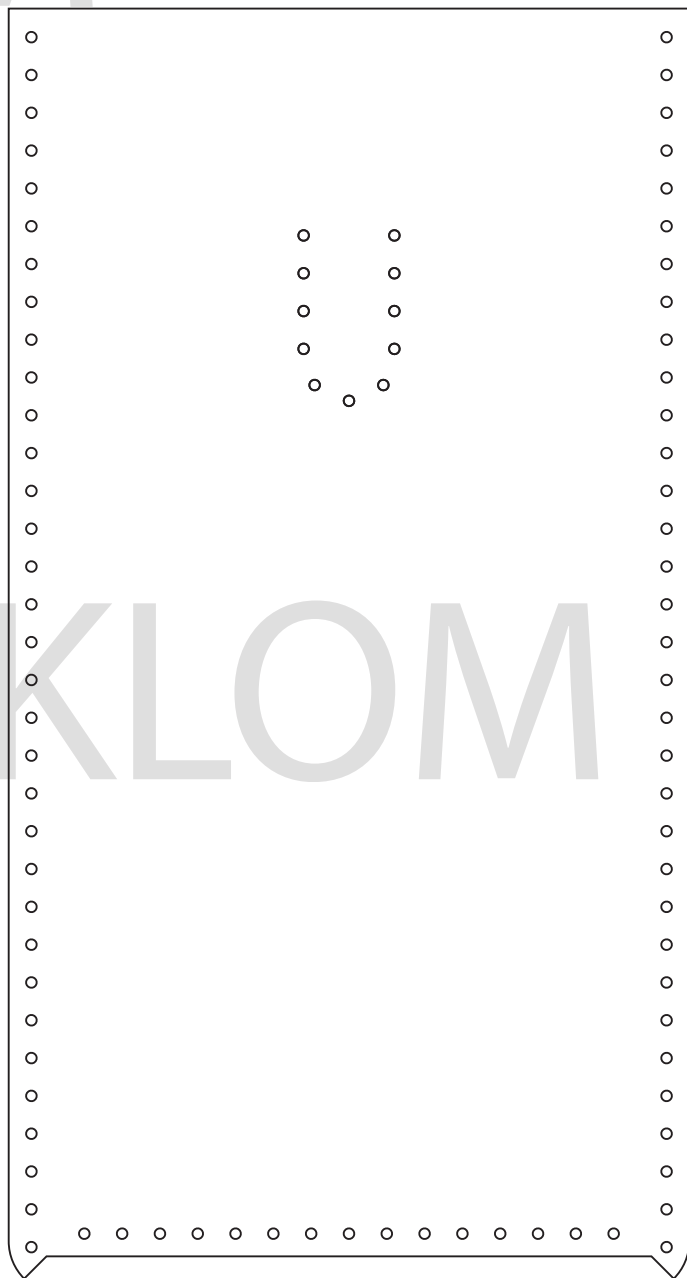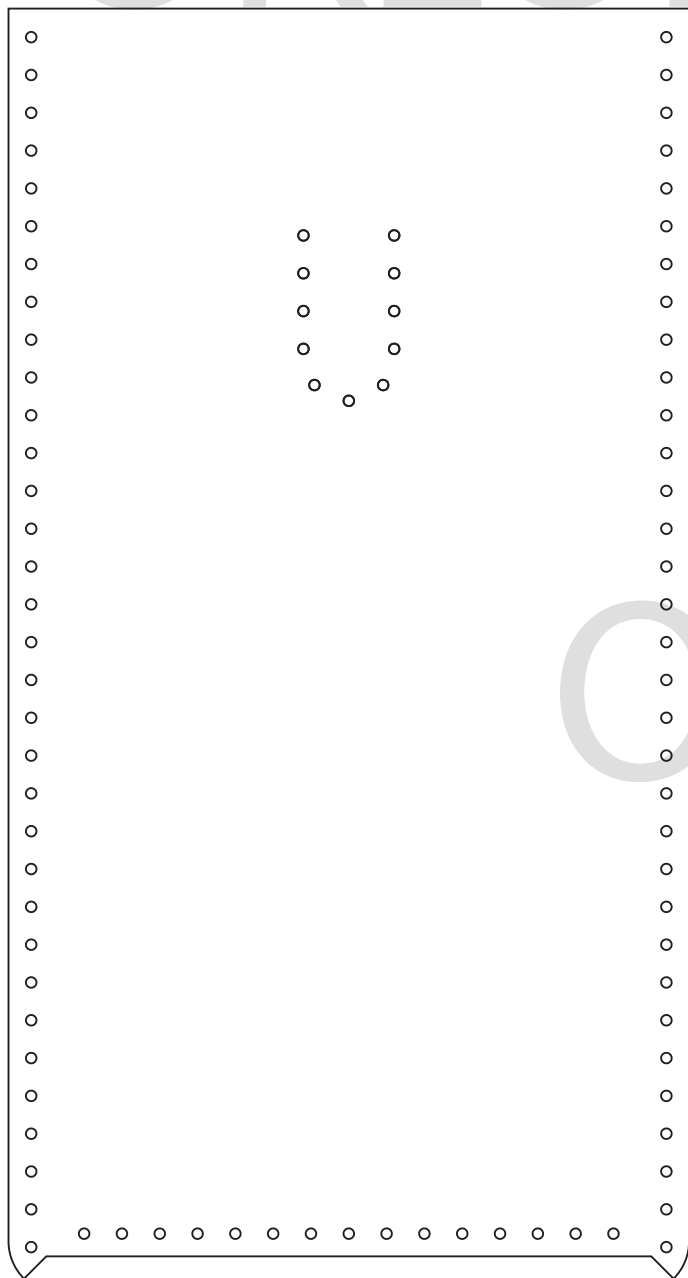

OKLOM

OKLOM

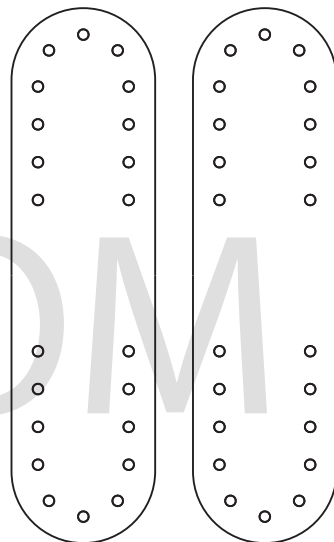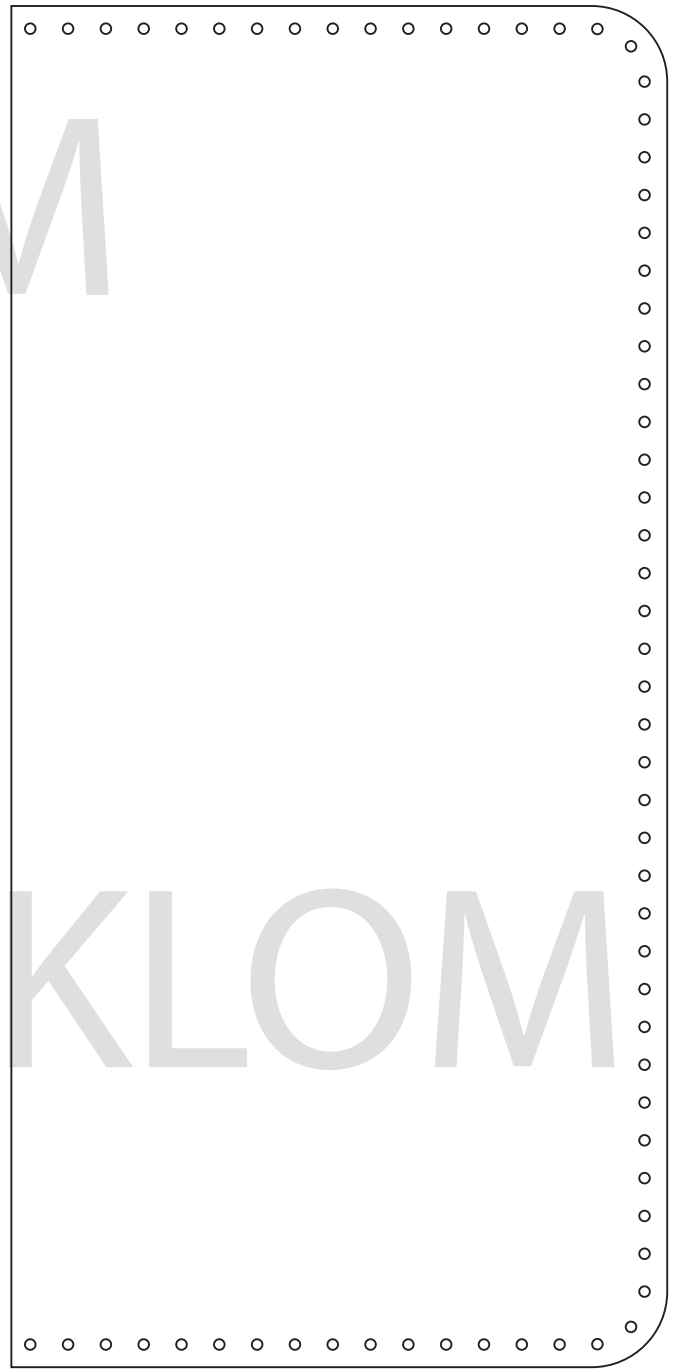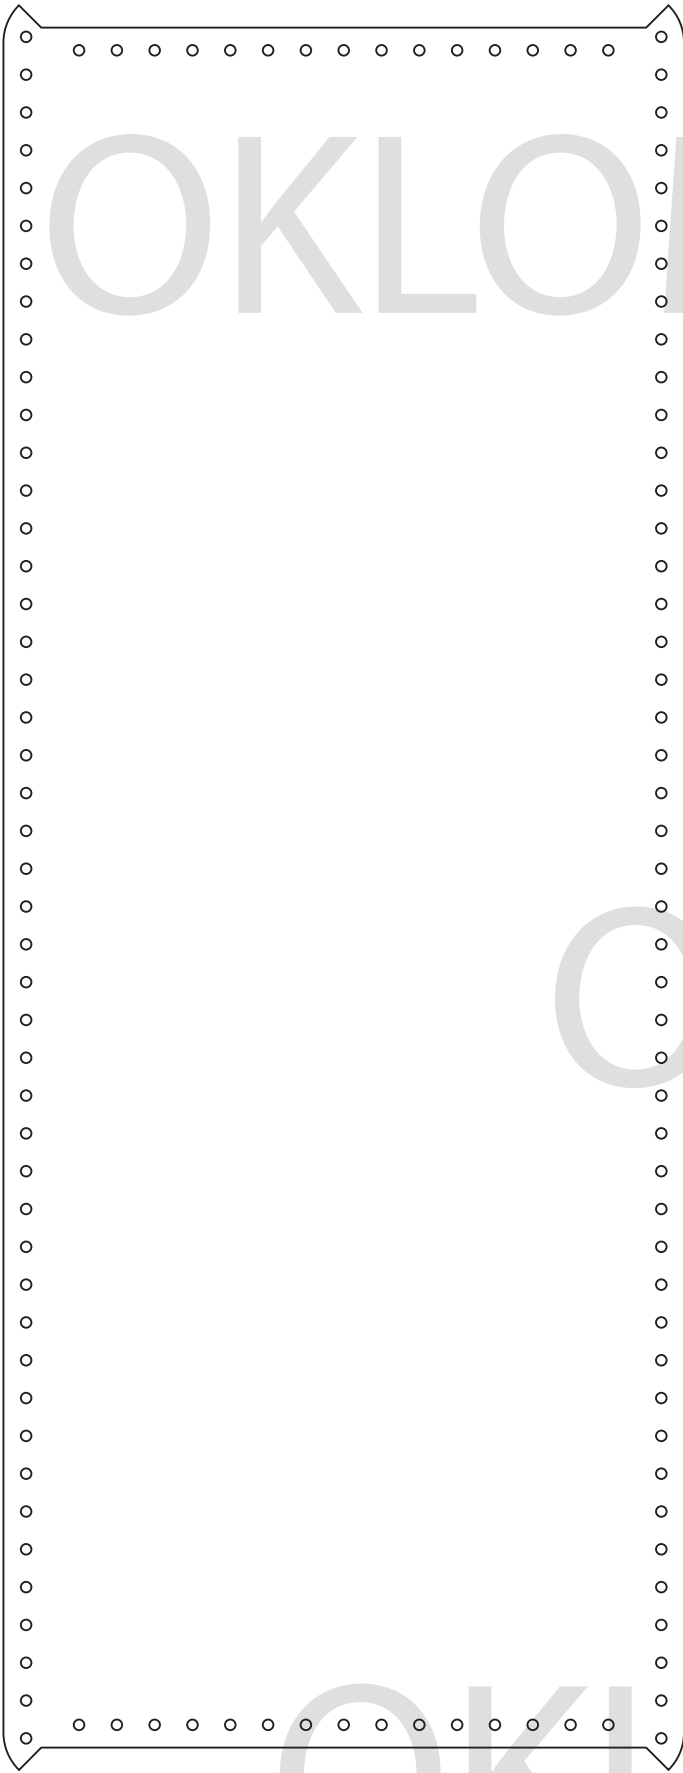

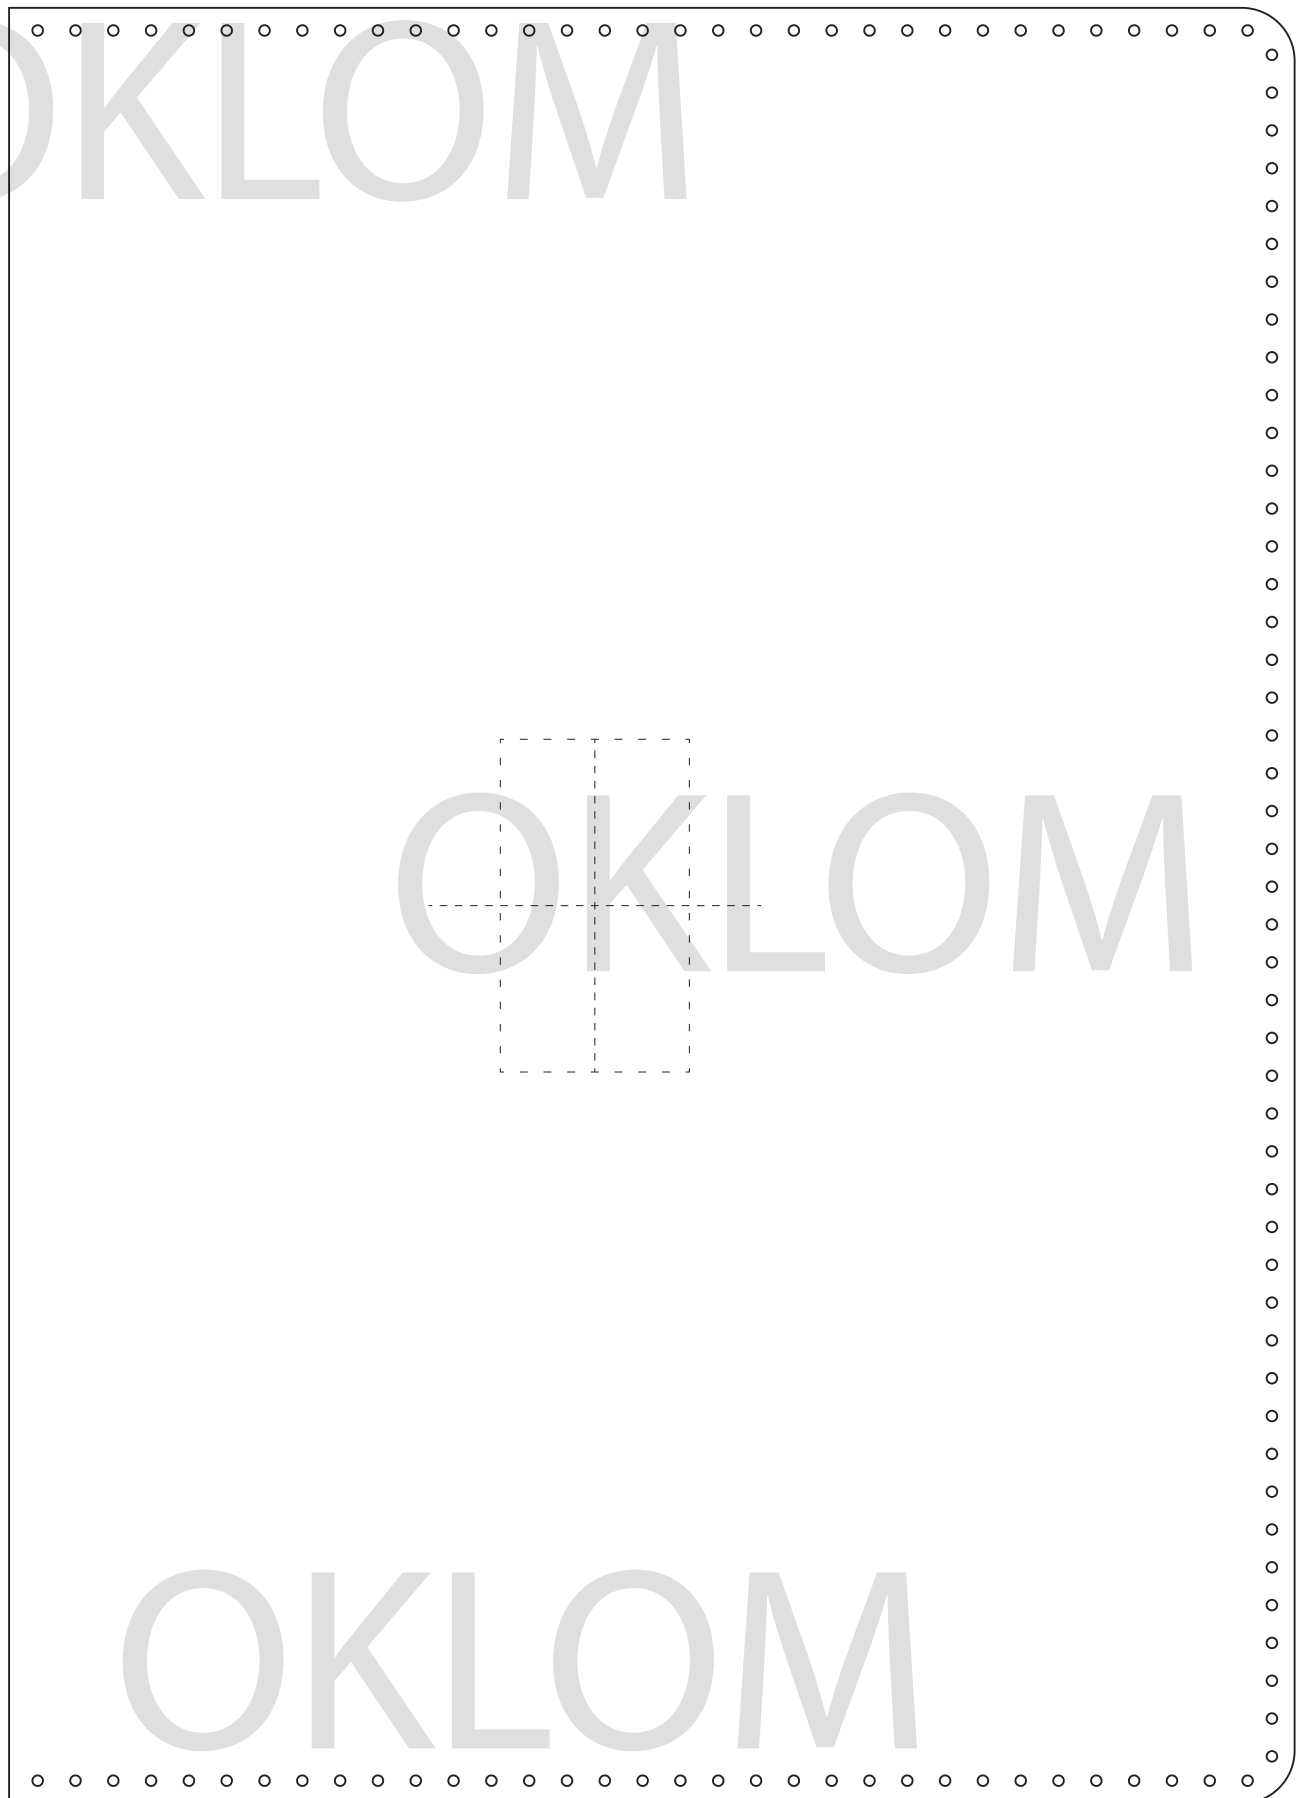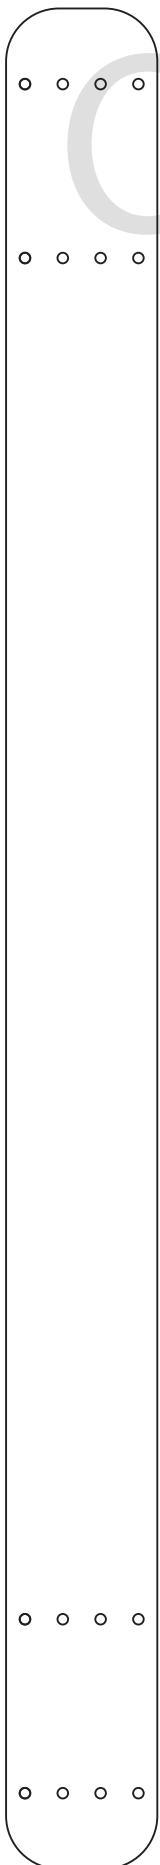

OKLOM

OKLOM

OKLOM