 
 
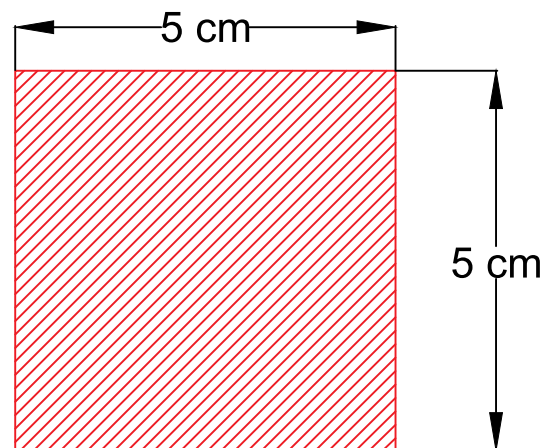 
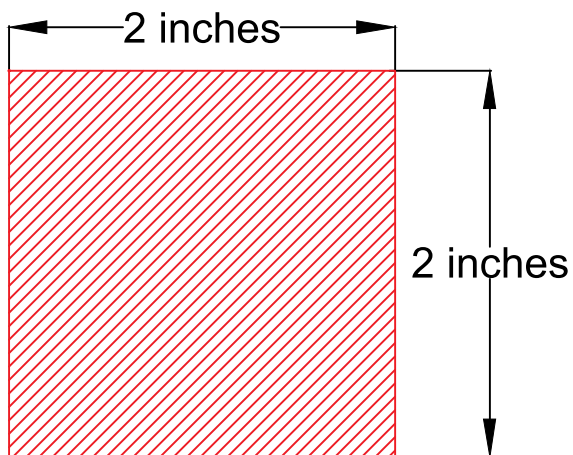 


Test Page

 
Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

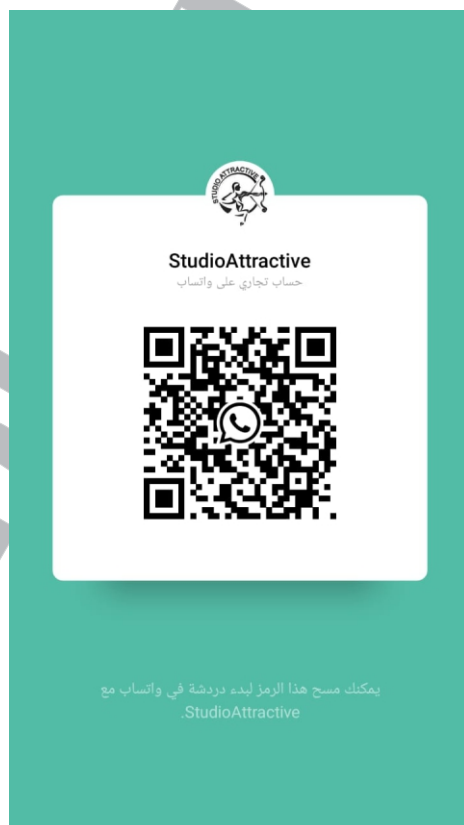

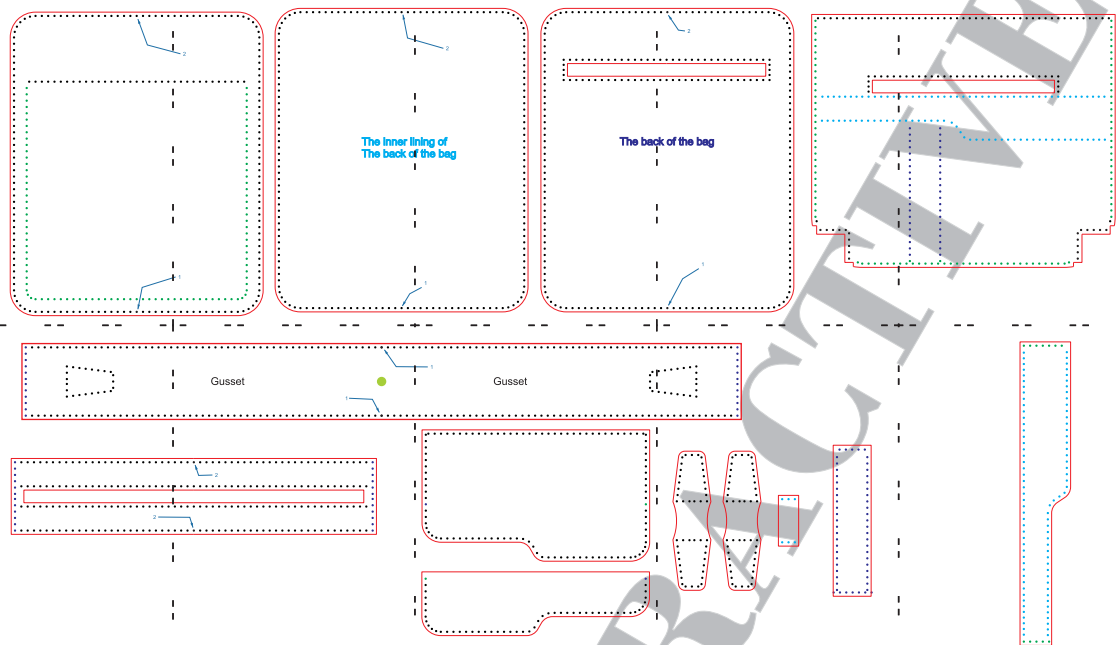

STUDIO ATTRACTIVE




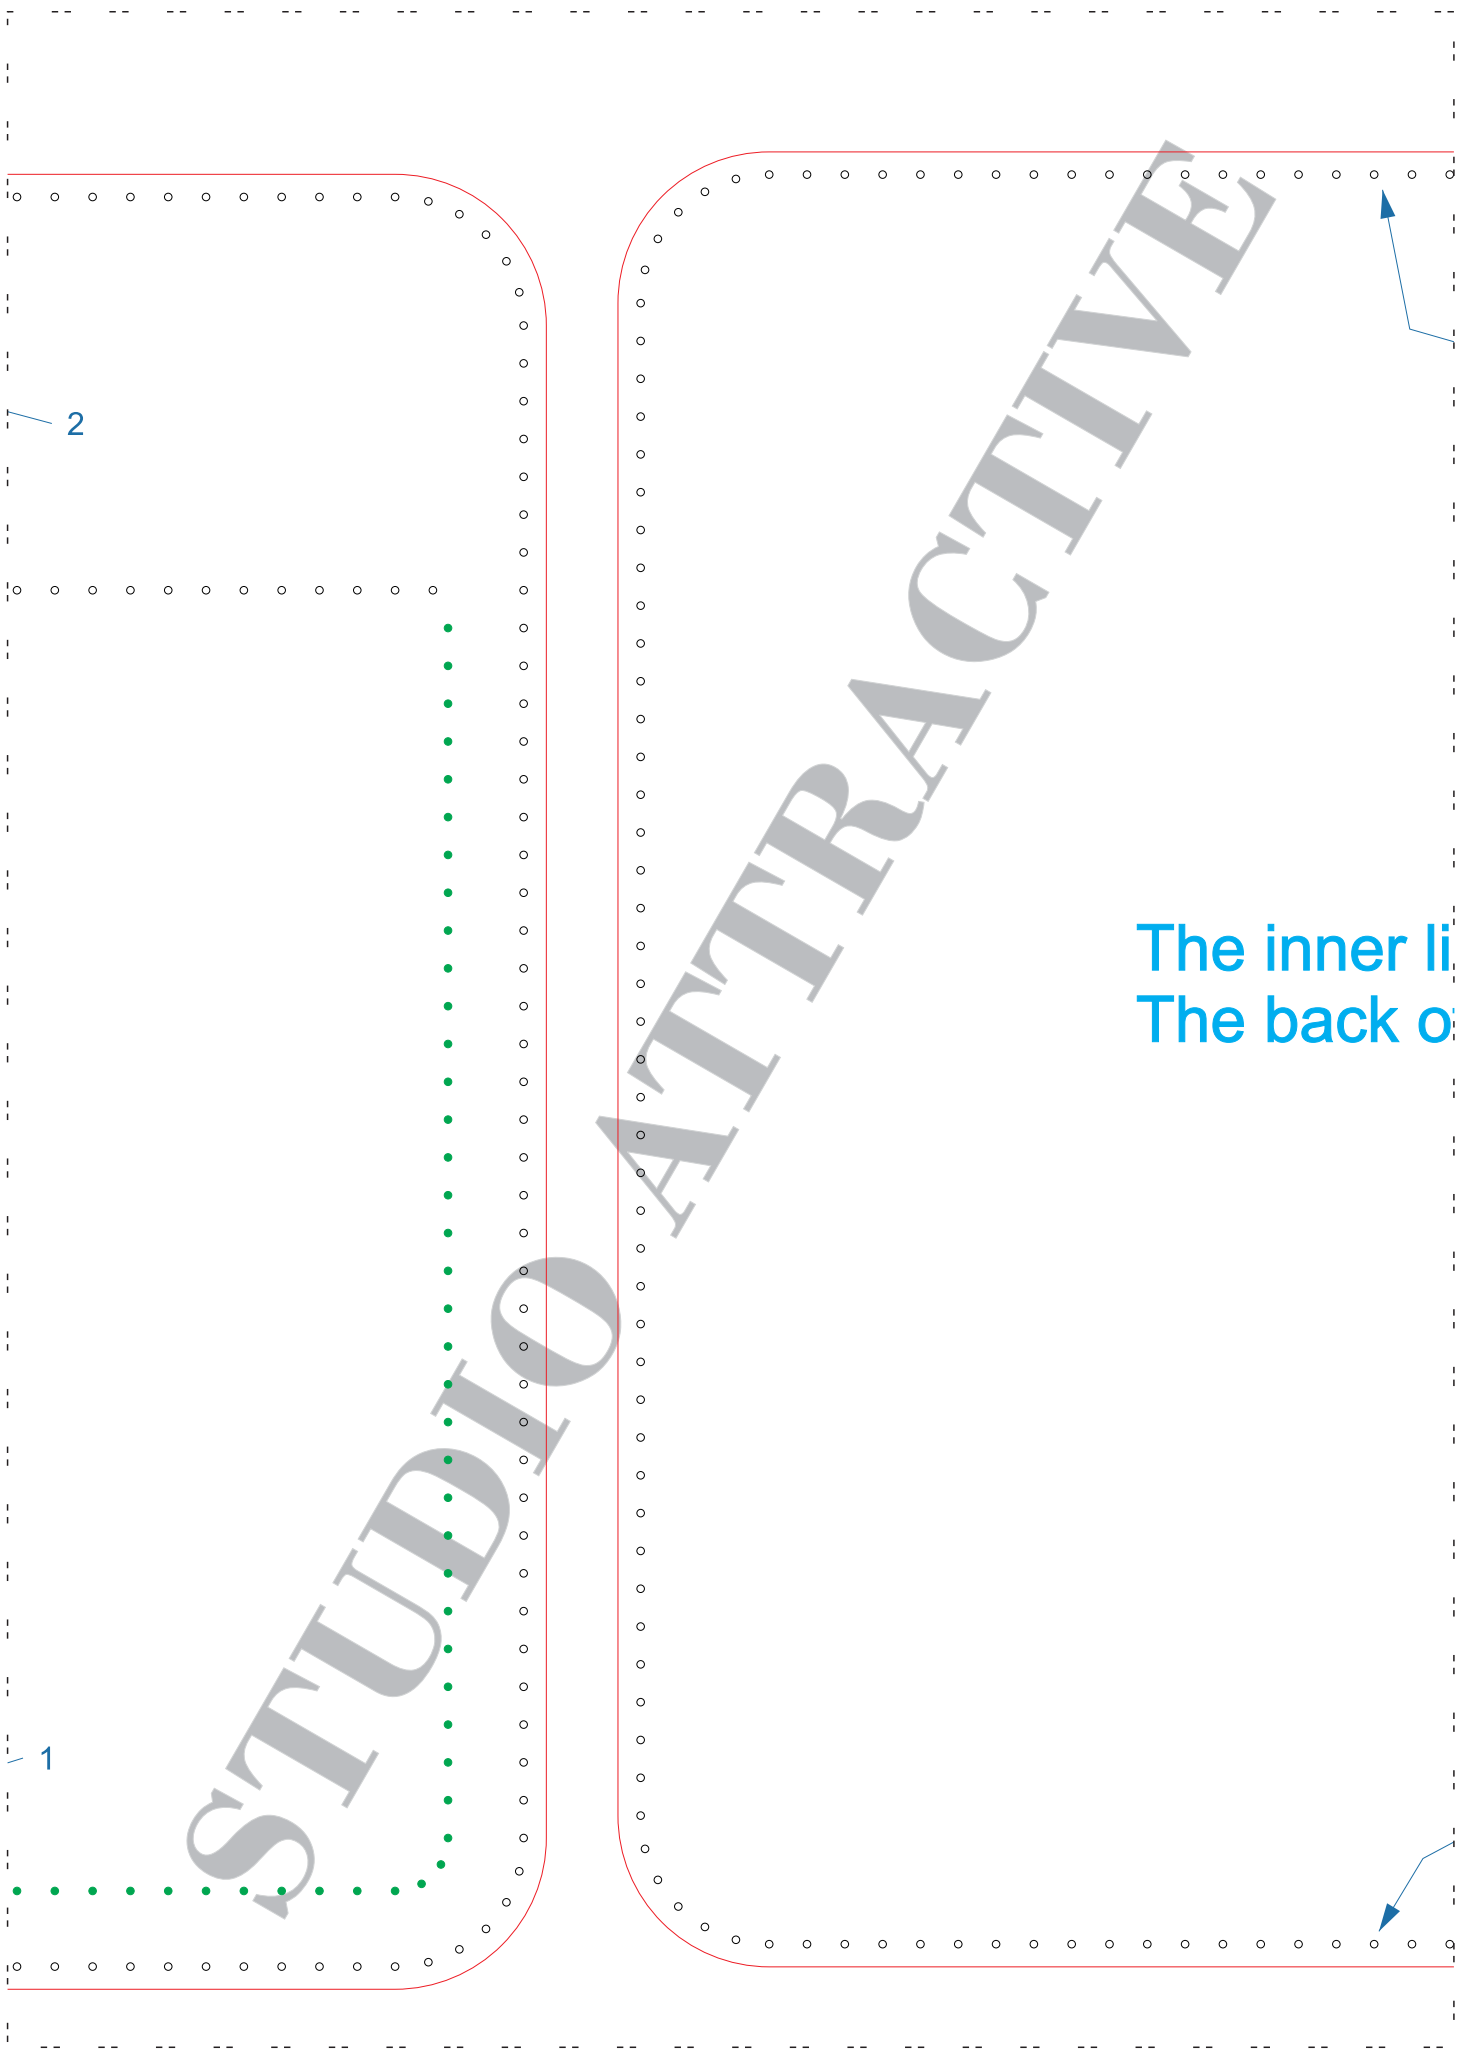

2


1

 
The inner li
The back o

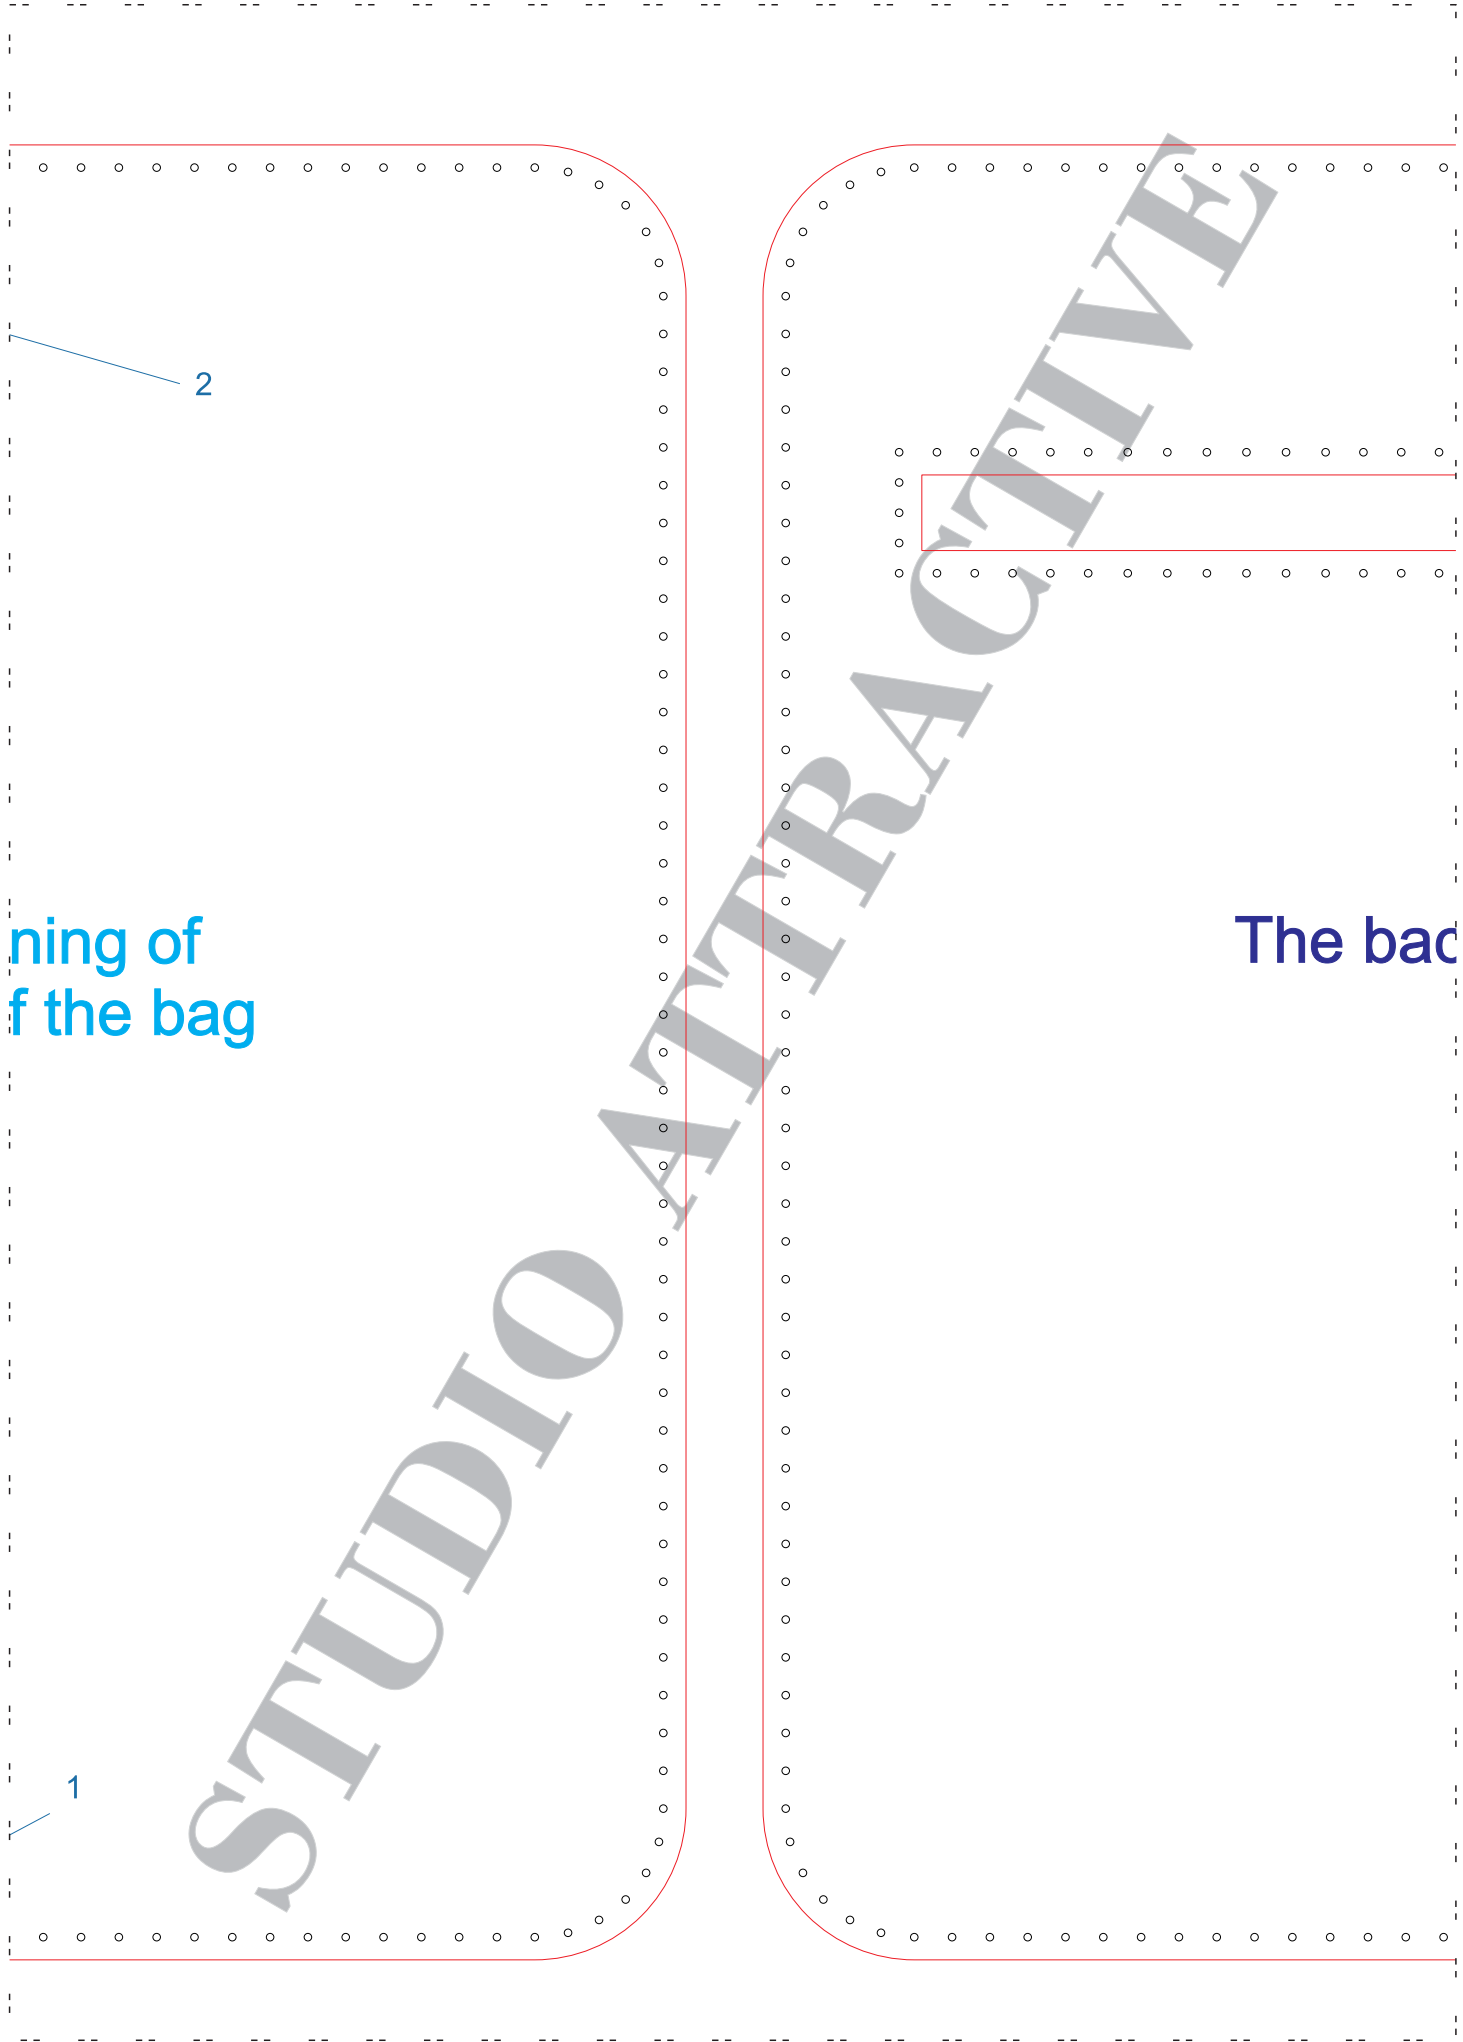


ning of
f the bag

  The bac

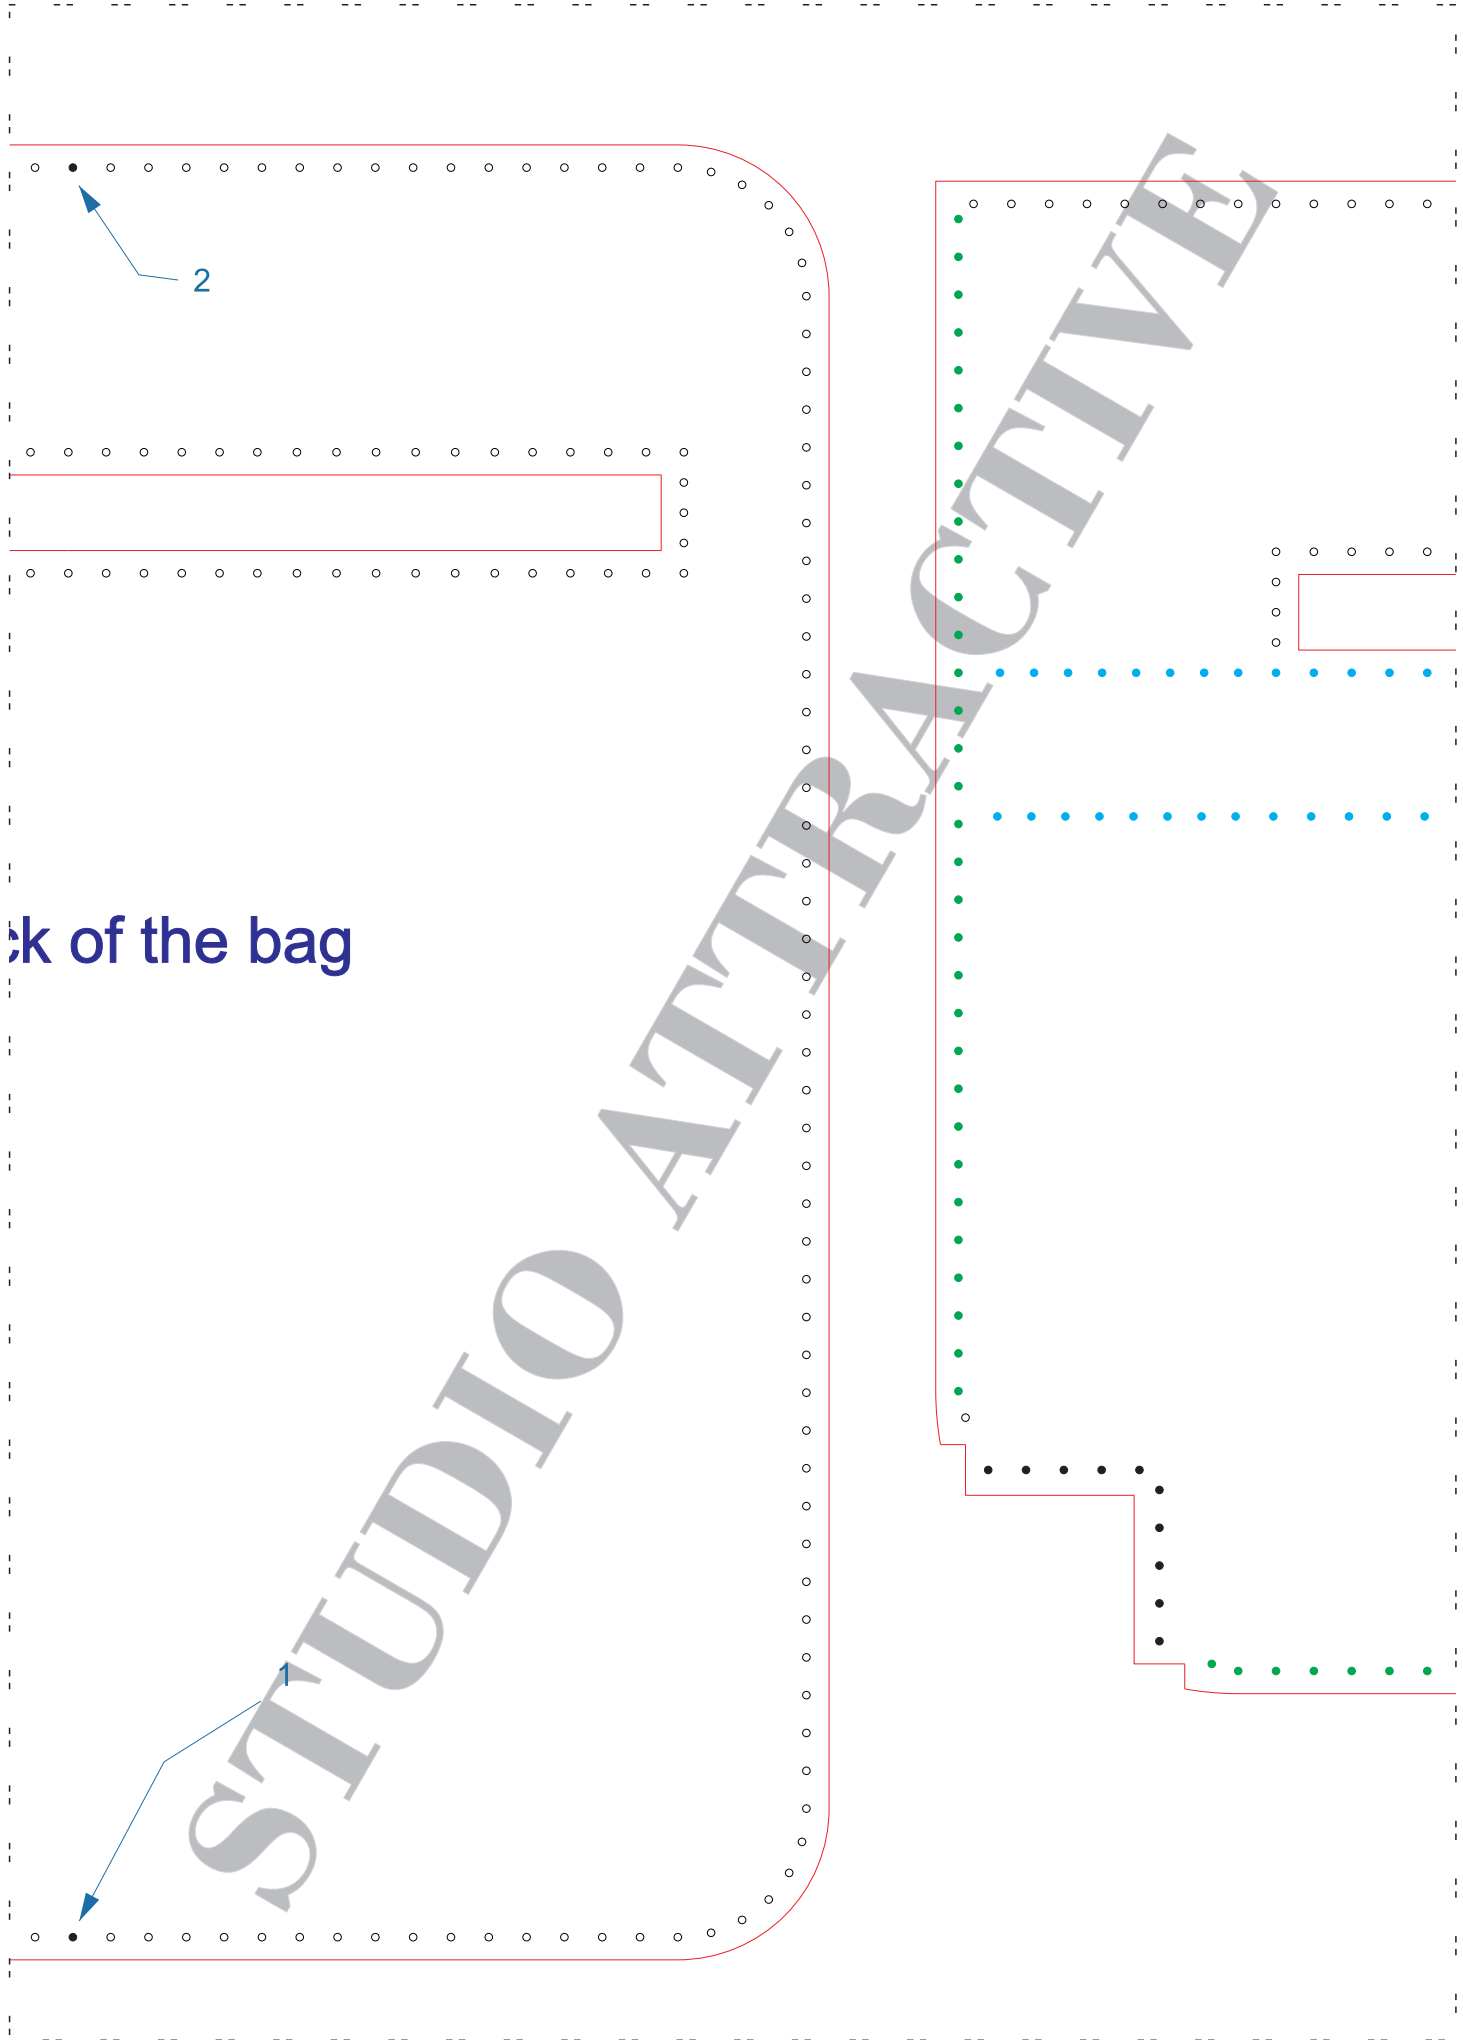

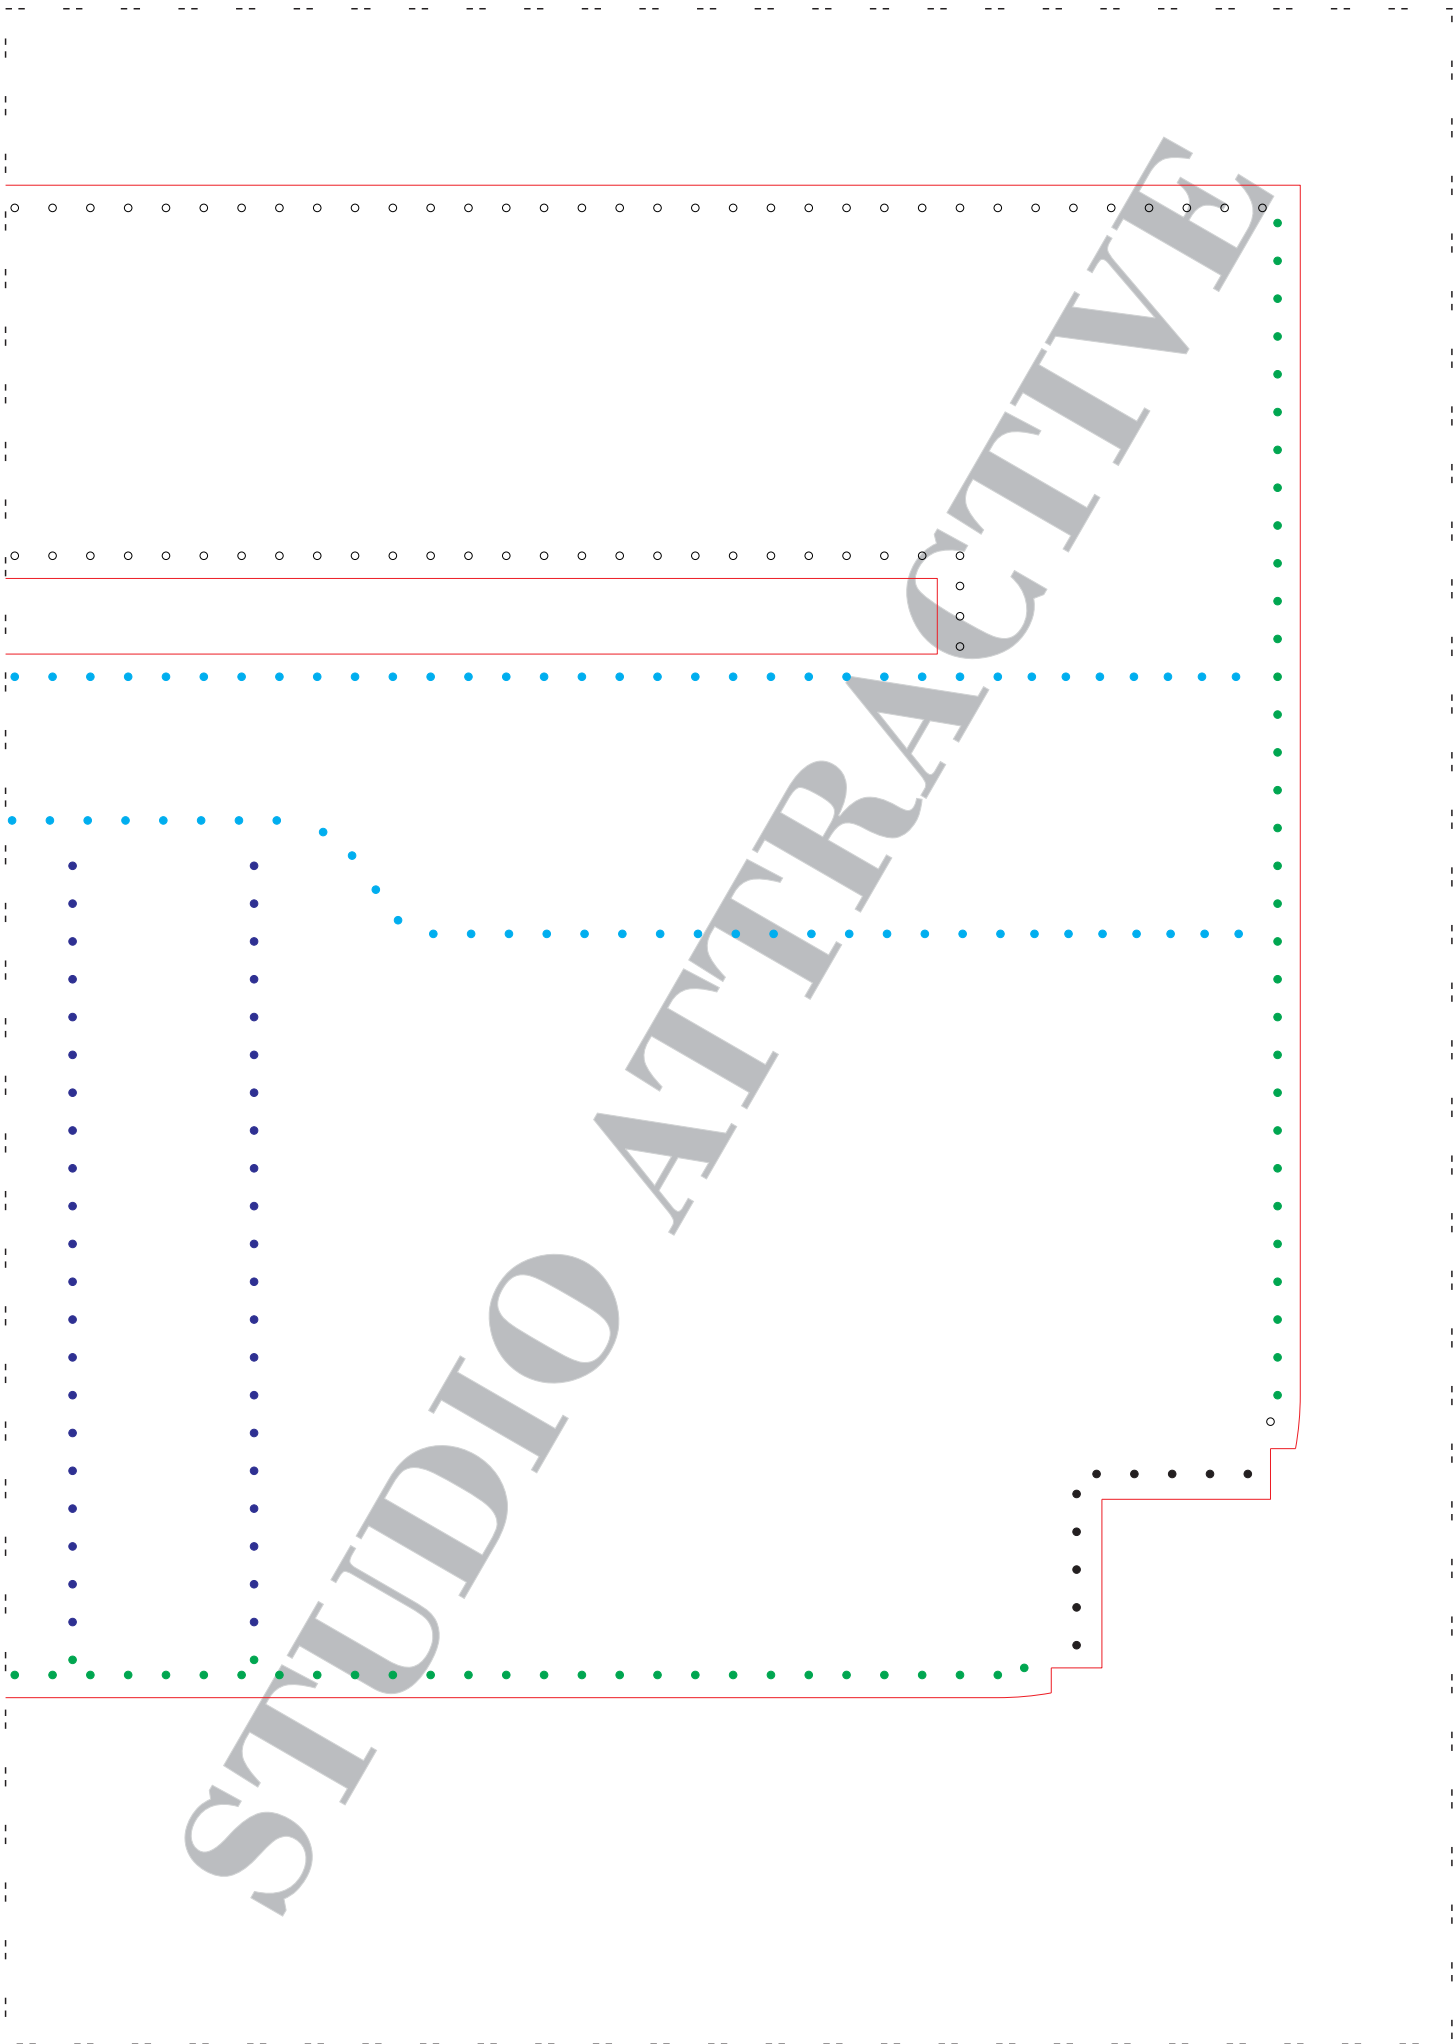

STUDIO ATTRACTIVE


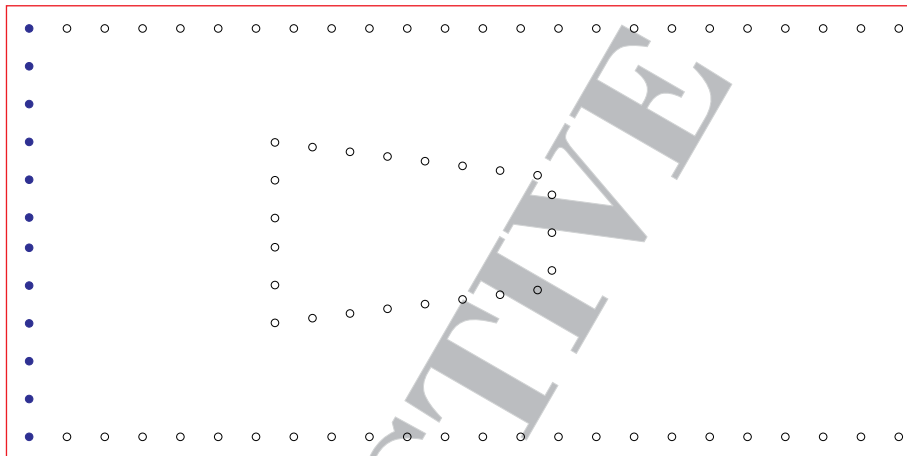 


Gusset



1

  2







1

2

1

    Gusset

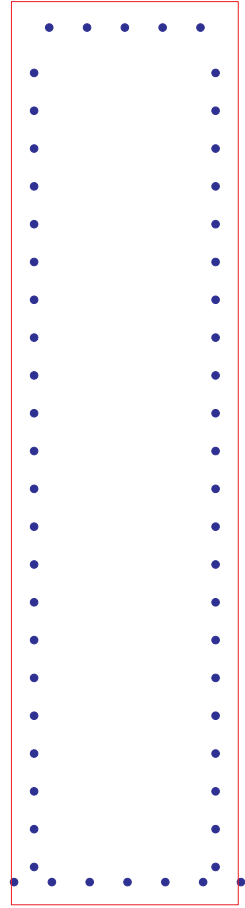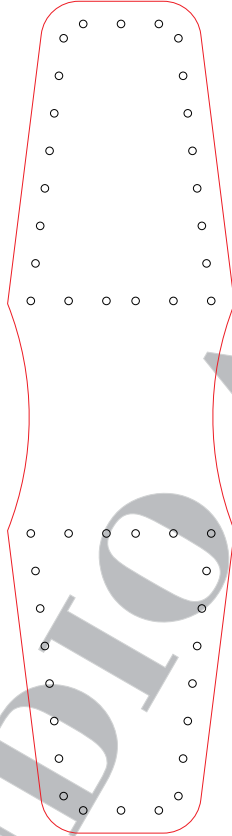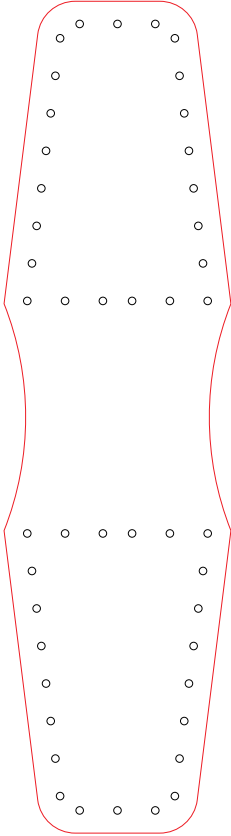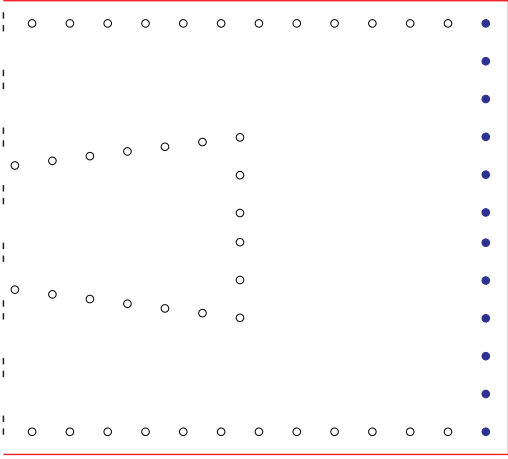

STUDIO ATTRACTIVE

