



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

Select Actual size

Set the paper size

Select the paper size





Scale 100%



IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>

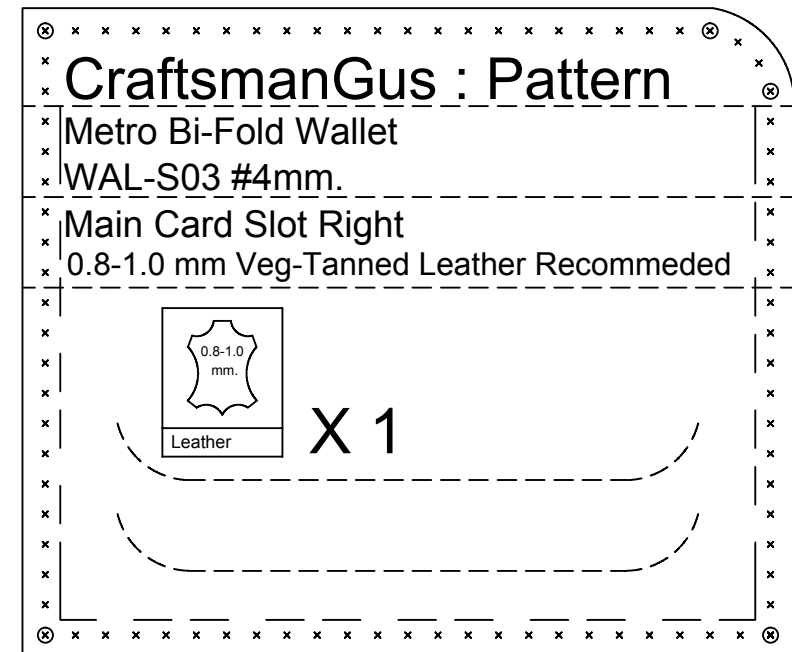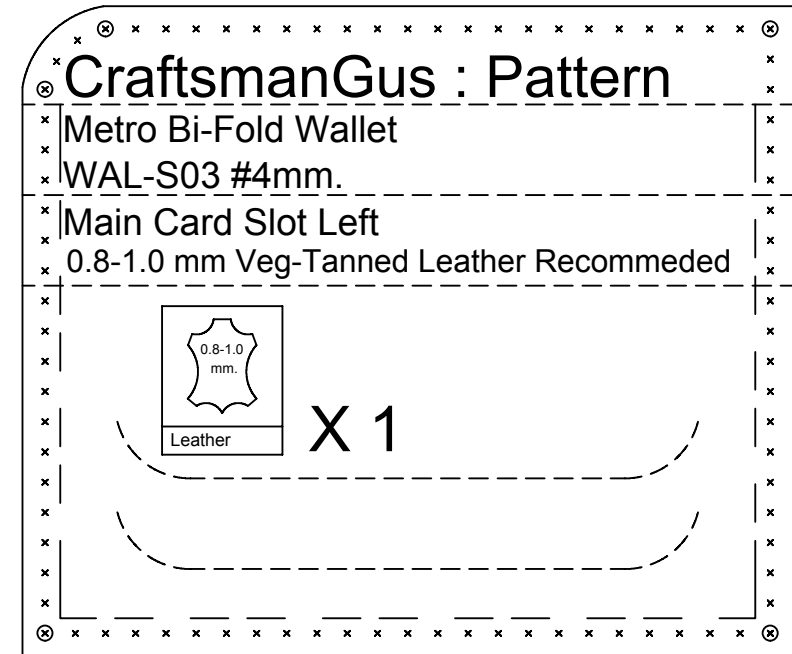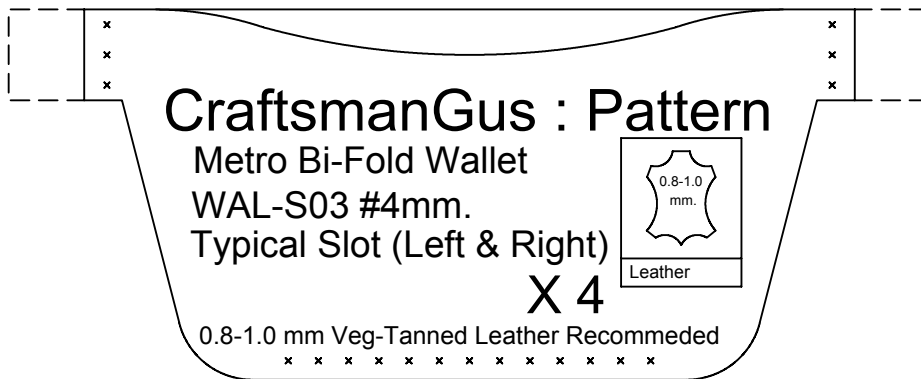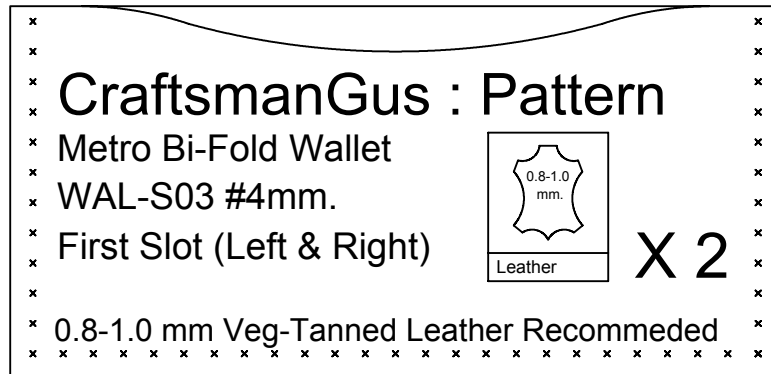

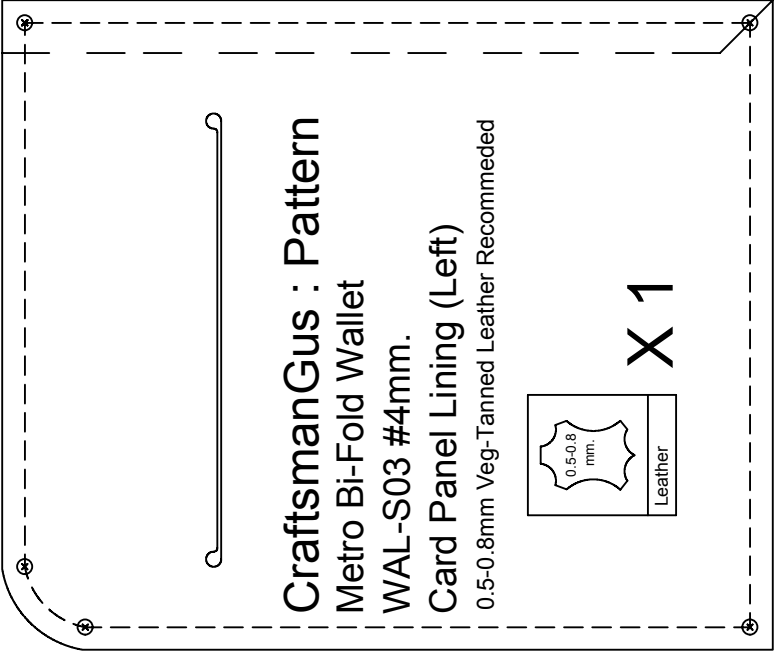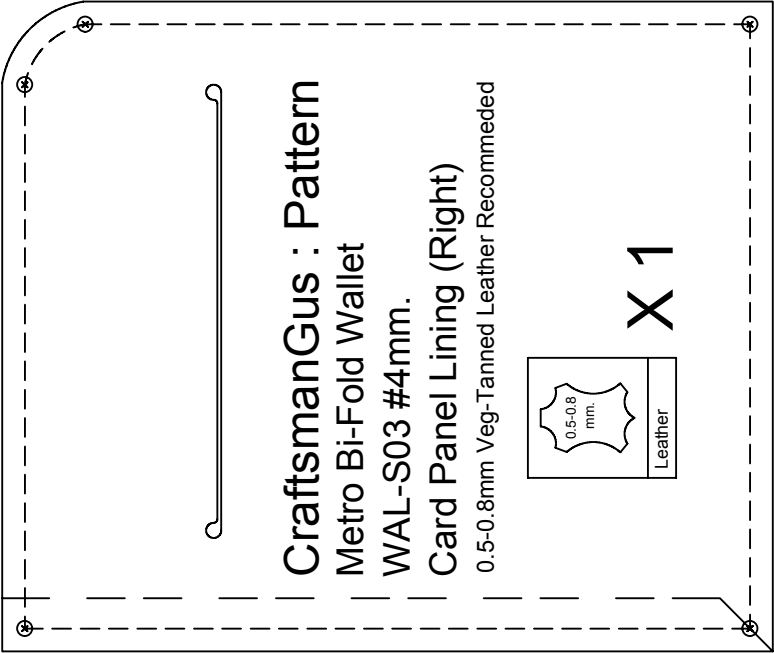




CraftsmanGus : Pattern

Metro Bi-Fold Wallet

WAL-S03 #4mm.

Main Interior Panel


1.5-1.8 mm Veg-Tanned Leather Recommended

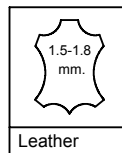

X 1

1.5-1.8 mm Veg-Tanned Leather Recommended

This notch is optional

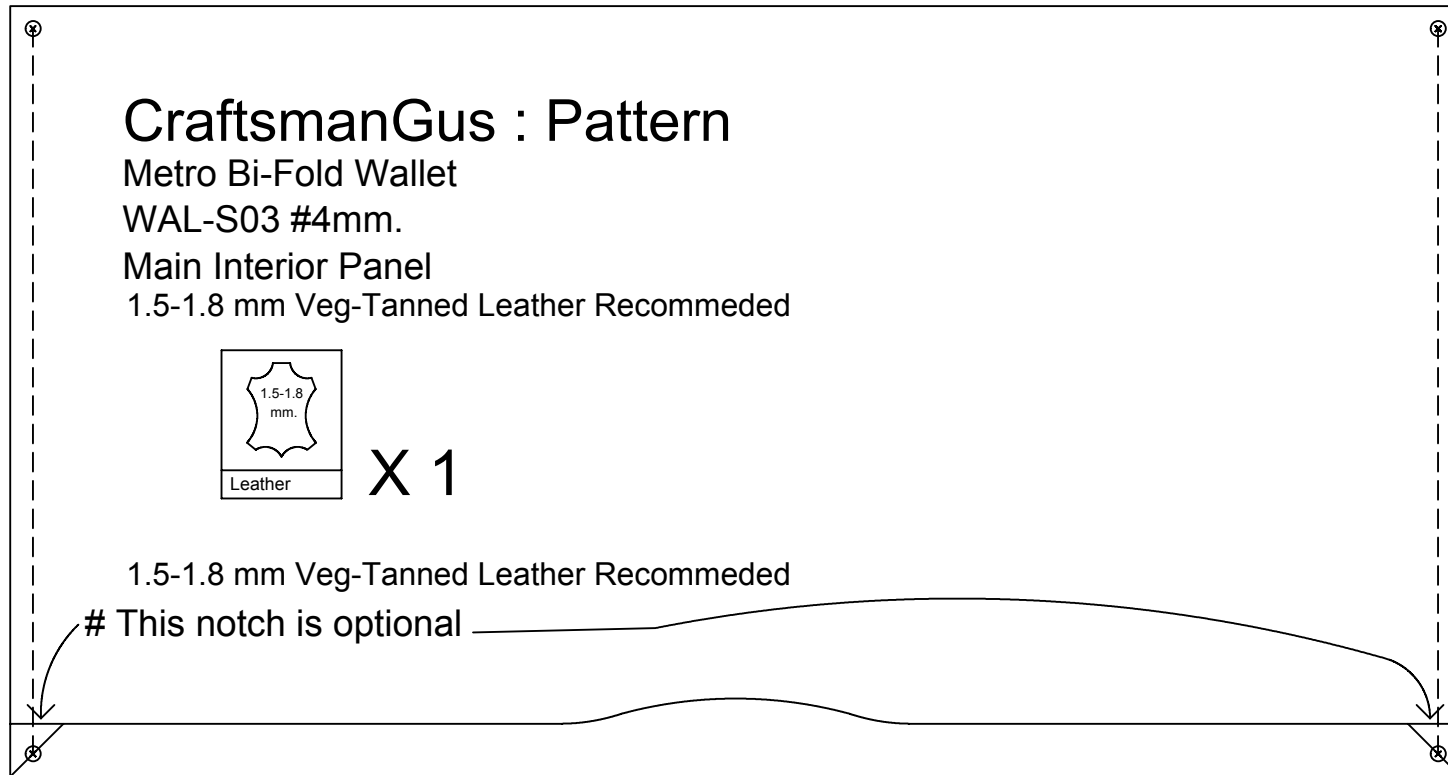



Metro Bi-Fold Wallet

WAL-S03 #4mm.

Cover

1.8mm Veg-Tanned Leather Recommended

