 
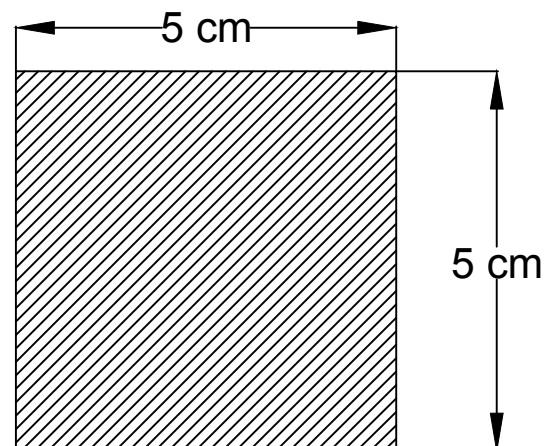 



18,2 cm

Test Page


Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

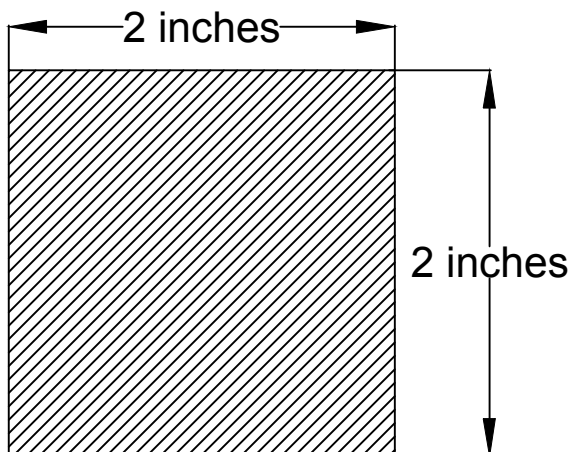

 
7,17 inches

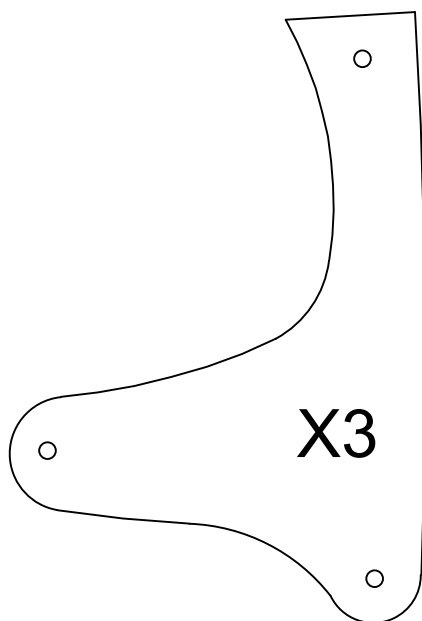

X3

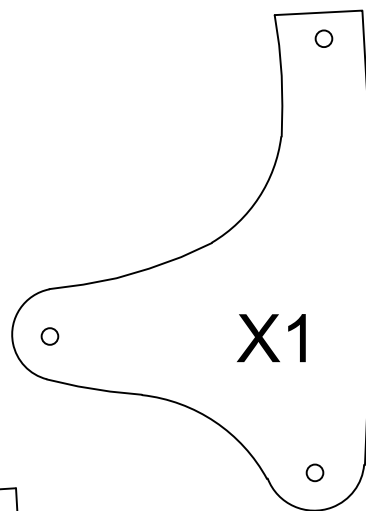 


X1


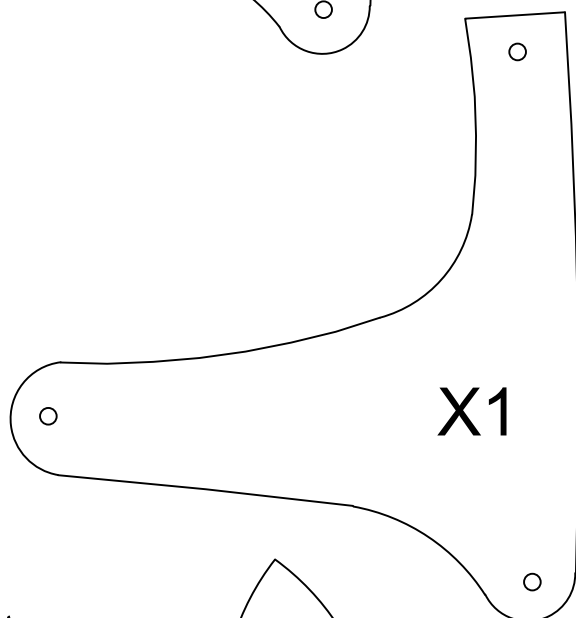 


X1

 **left hand
S
18-20 cm**

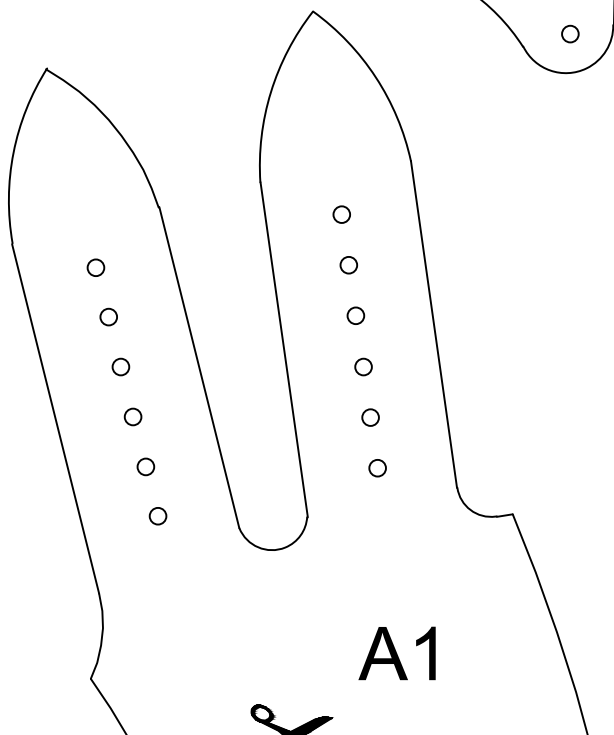


A1

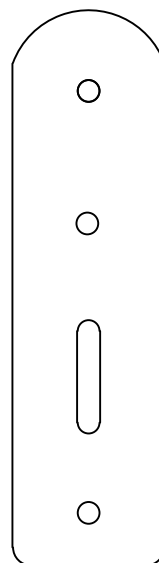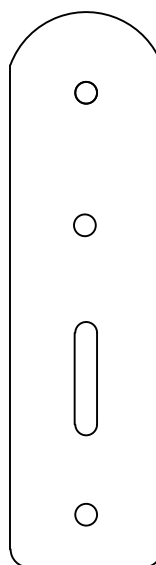  





A2




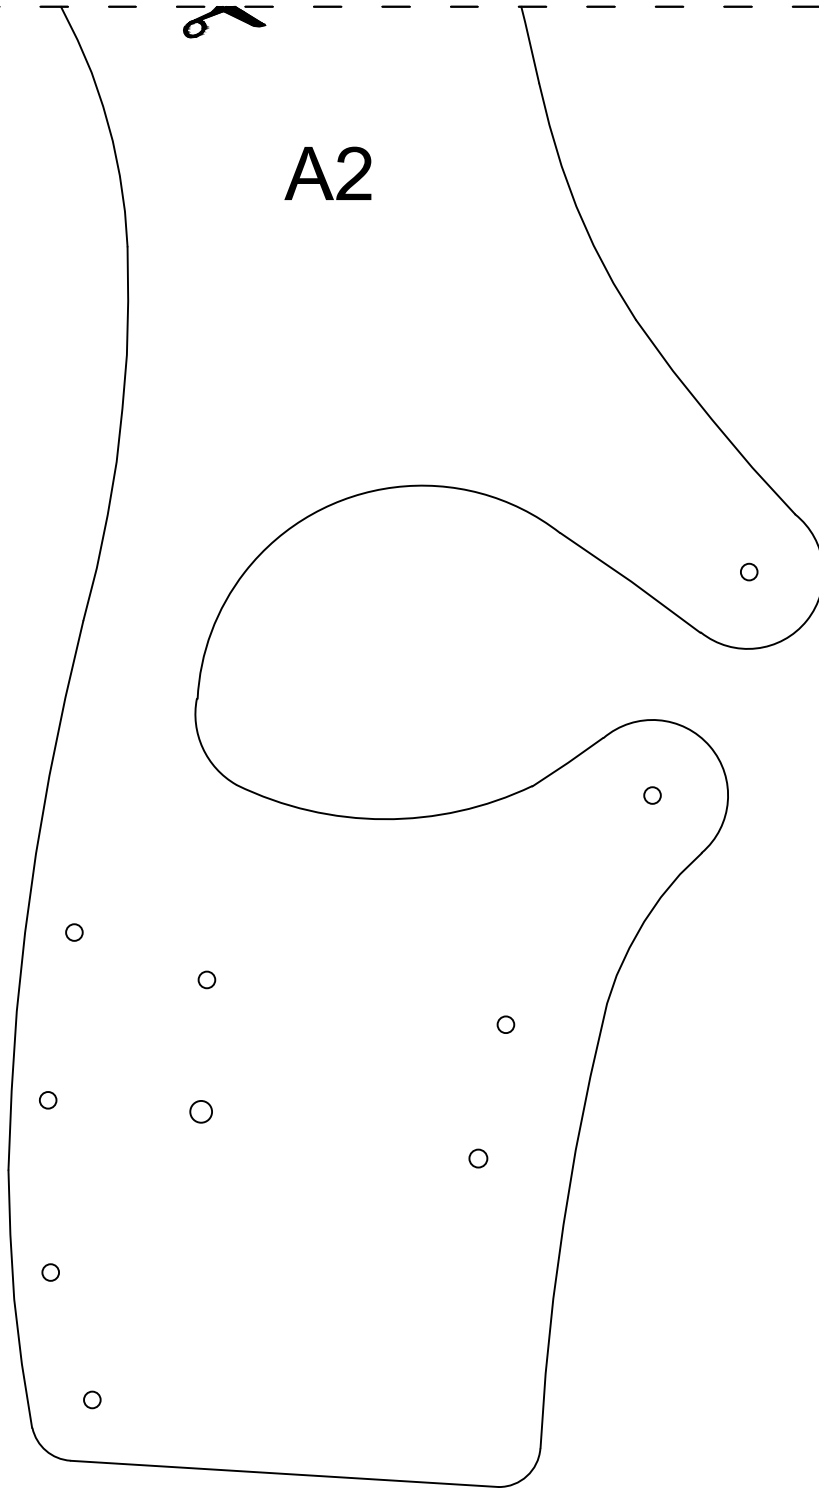 


left hand
S

  18-20 cm

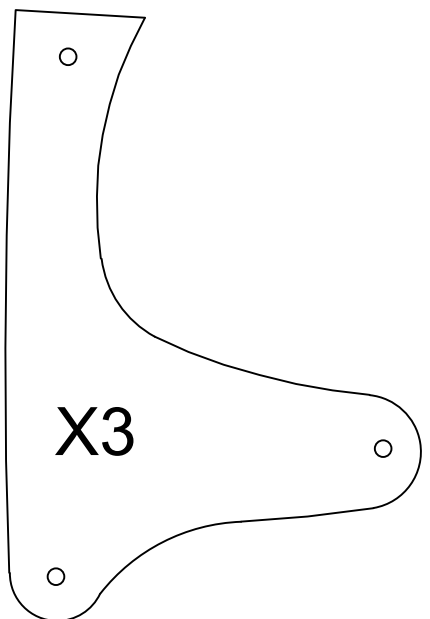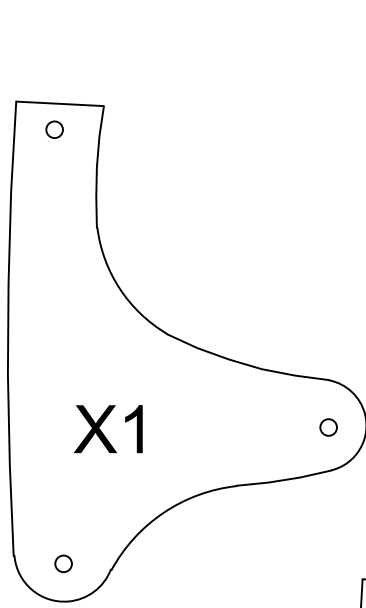

right hand
S
18-20 cm

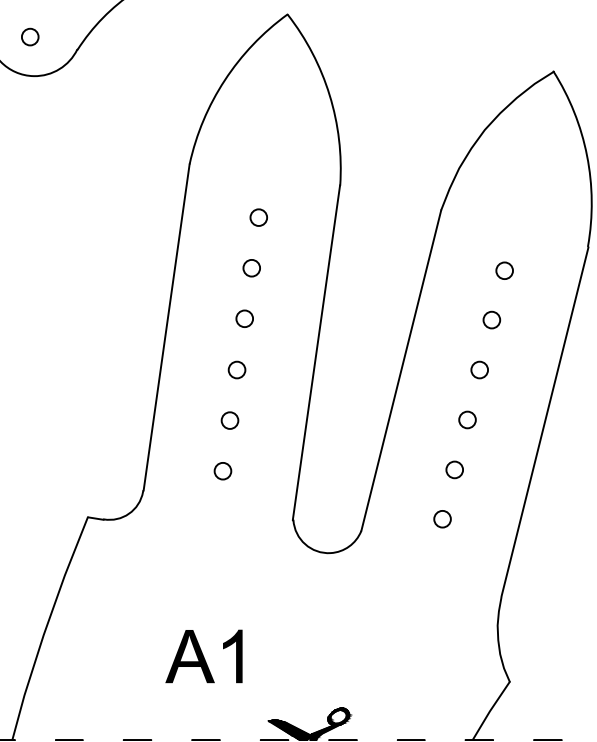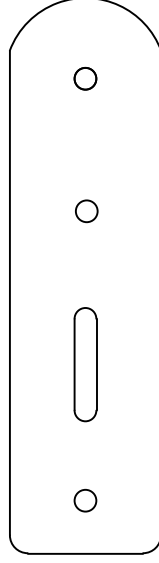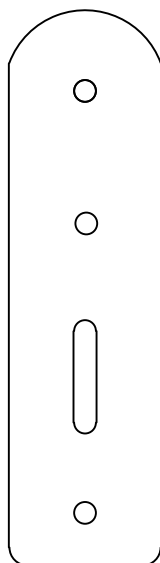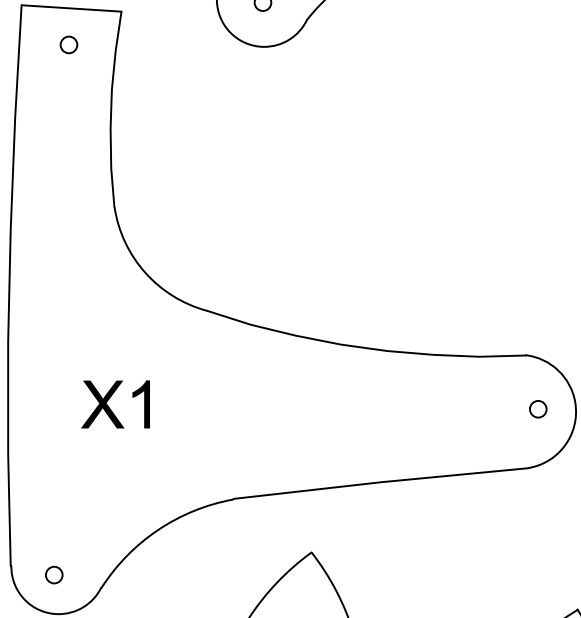    

A1



