 




PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

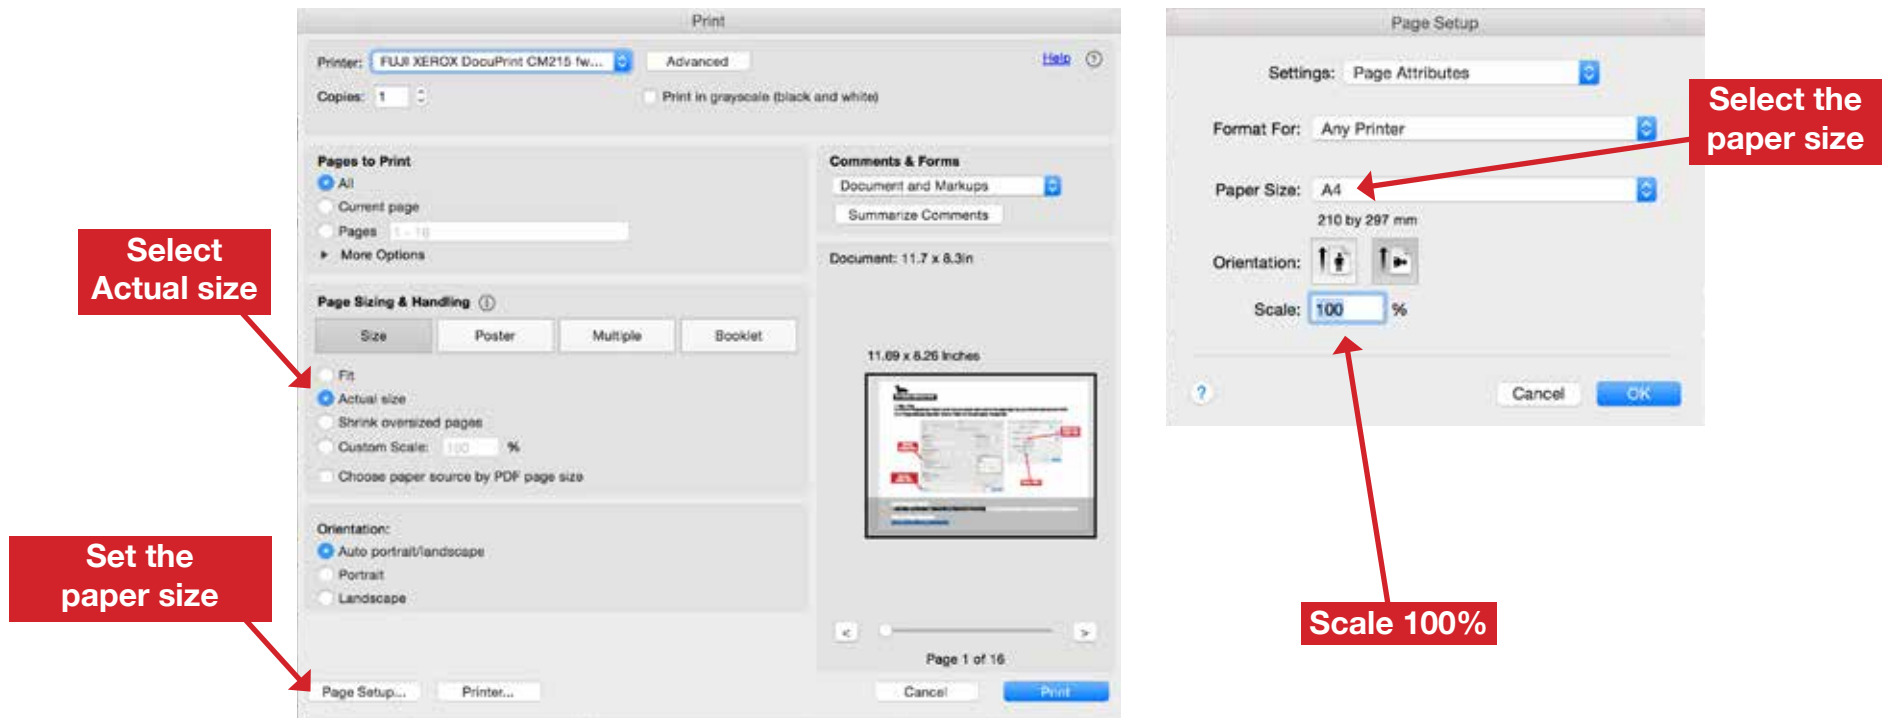

IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>



LEATHER

CraftsmanGus Pattern

Crossbody Bag : Toaster S

CBB 002A

 
Main Body Front & Back

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

Overlapping area

Top edge/border of base gusset

Bottom edge/border of top/zipper gusset

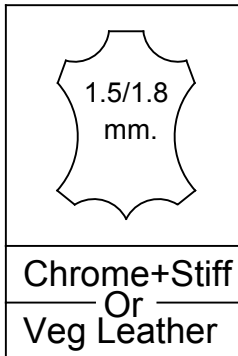

X 2

Burnish the edge if use Veg-Tanned

Paint the edge if use Chrome-Tanned (or FOLD but need to add the extra offset)(Fold over pattern need to draw 1 cm. ext)



LEATHER

CraftsmanGus Pattern

Crossbody Bag : Toaster S

CBB 002A

Gusset : Body

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

Burnish the edge if use Veg-Tanned

Paint the edge if use Chrome-Tanned (or FOLD but need to add the extra offset)

1.5/1.8
mm.

Chrome+Stiff
Or
Veg Leather

CraftsmanGus Pattern

Crossbody Bag : Toaster S

CBB 002A

Gusset : Body

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

1.5/1.8
mm.

 
 
Chrome+Stiff
Or
Veg Leather

X 1


CONNECT TO PAGE 3

Burnish the edge if use Veg-Tanned

Paint the edge if use Chrome-Tanned (or FOLD but need to add the extra offset)

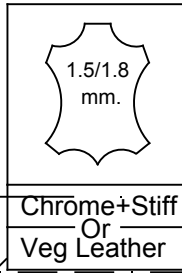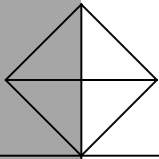

X 1

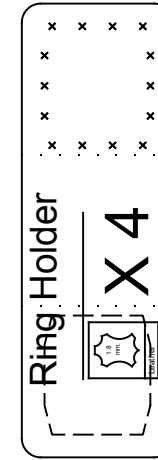 


Recommended
LD but need to add the extra offset)



X 1

CONNECT TO PAGE 2

 Skive to 1.0 mm.

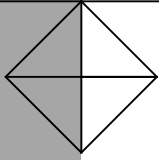



FABRIC LINING

Fold the excess fabric lining border over the stiffener

CraftsmanGus Pattern


Crossbody Bag : Toaster S

CBB.002A

Front/Back Panel

Canvas/Cotton/Denim Lining Fabric Recommended

 Overlapping area

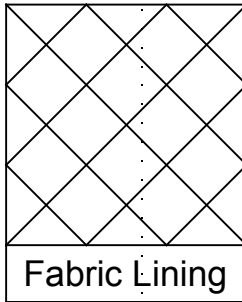

X 2

Stitch this line with GUSSET



CraftsmanGus Pattern


Crossbody Bag : Toaster S

CBB 002A

Middle x 2

Canvas/Cotton/Denim Lining Fabric Recommended

 Overlapping area

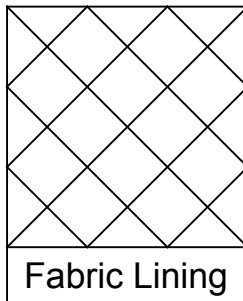

X 2

Stitch this line to connect middle panel (2&3) only

Stitch this line with GUSSET



FABRIC LINING


CraftsmanGus Pattern

Crossbody Bag : Toaster S


CBB 002A

Front/Back Pocket

 Canvas/Cotton/Denim Lining Fabric Recommended

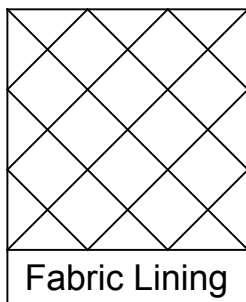

X 2

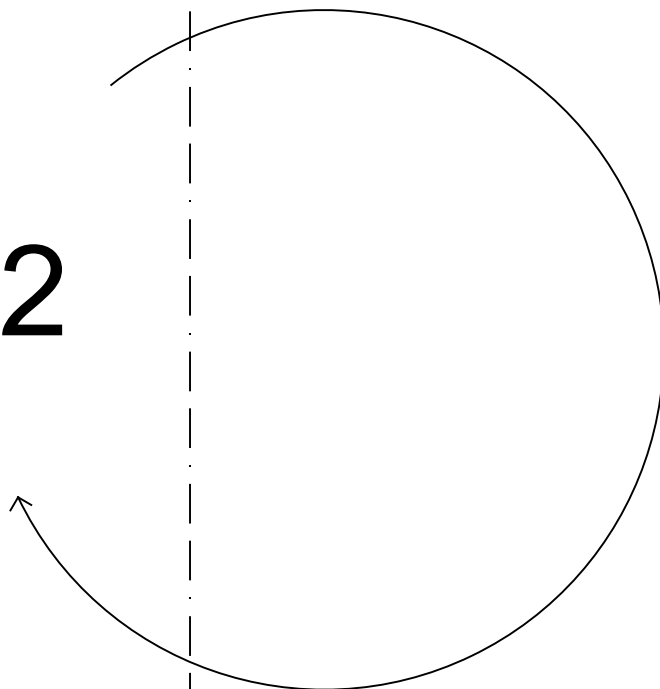 


LEATHER

CraftsmanGus Pattern

Crossbody Bag : Toaster S

 CBB-002A





Pocket Binding
0.7 mm Veg Tanned Leather (Spitted)

X2




  FABRIC LINING

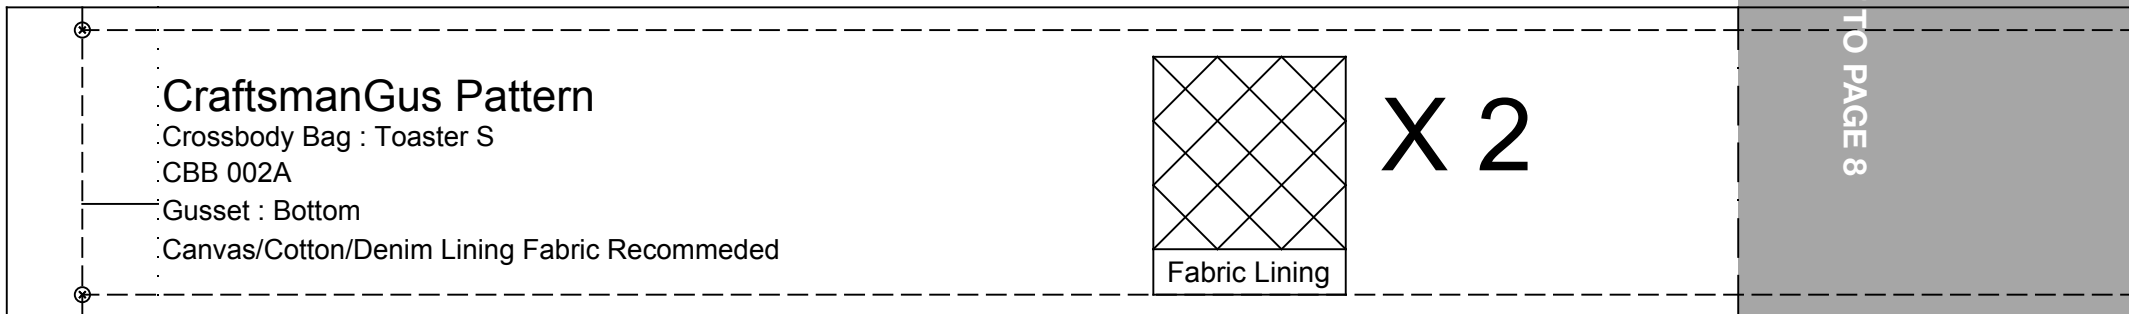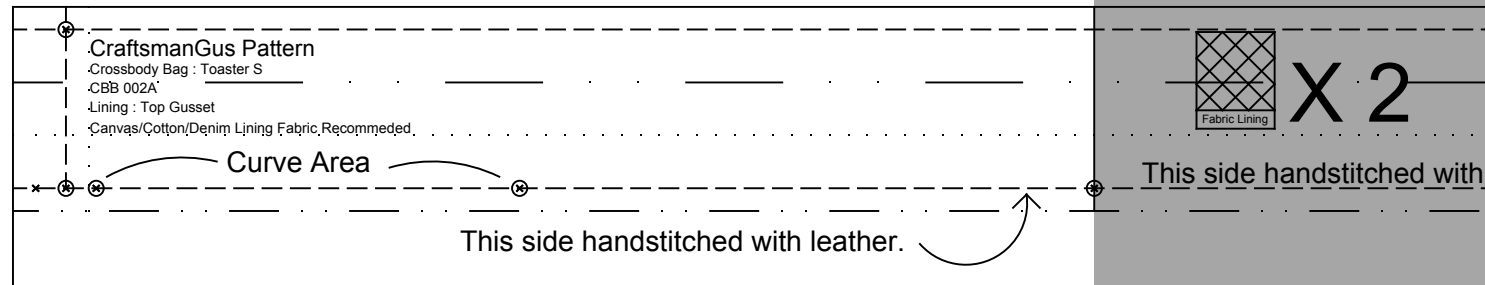



FABRIC LINING

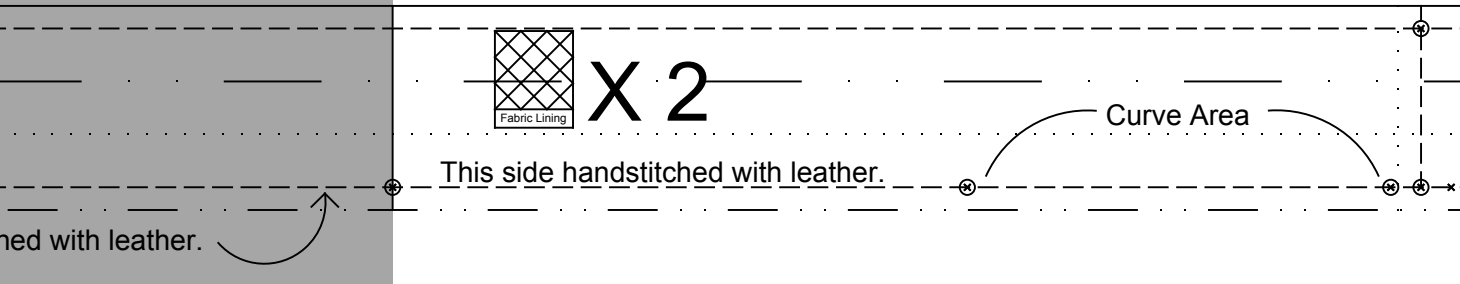 



TEXON/ STIFFENER


CraftsmanGus Pattern

Crossbody Bag : Toaster S

CBB 002A

Stiffener for front and back

 Texon or drawing paper in 0.3-0.5 mm.

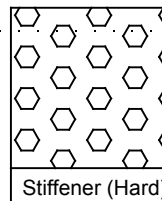

Stiffener (Hard)

X 2

LEATHER

