

190

In the print menu, in "page size and handling" choose "actual size" or "custom scale 100%". Print first this page, using a ruler make sure the measurement are right.

Print only the pages that you need, in "pages to print" choose "current page" to print the page on the right, or "pages" then write 1 - 10 for example if you want to print pages from 1 to 10.

50

Unit : mm

A4 Paper

100

280

280

190

 
Mark this hole
out if you are
not going to
make the
inner pocket.

 
Left Arm

Mark this hole
out if you are
not going to
make the
magnetic
bracelet.

Mark this hole
out if you are
not going to
use this bag
as a backpack.

Mark
Point

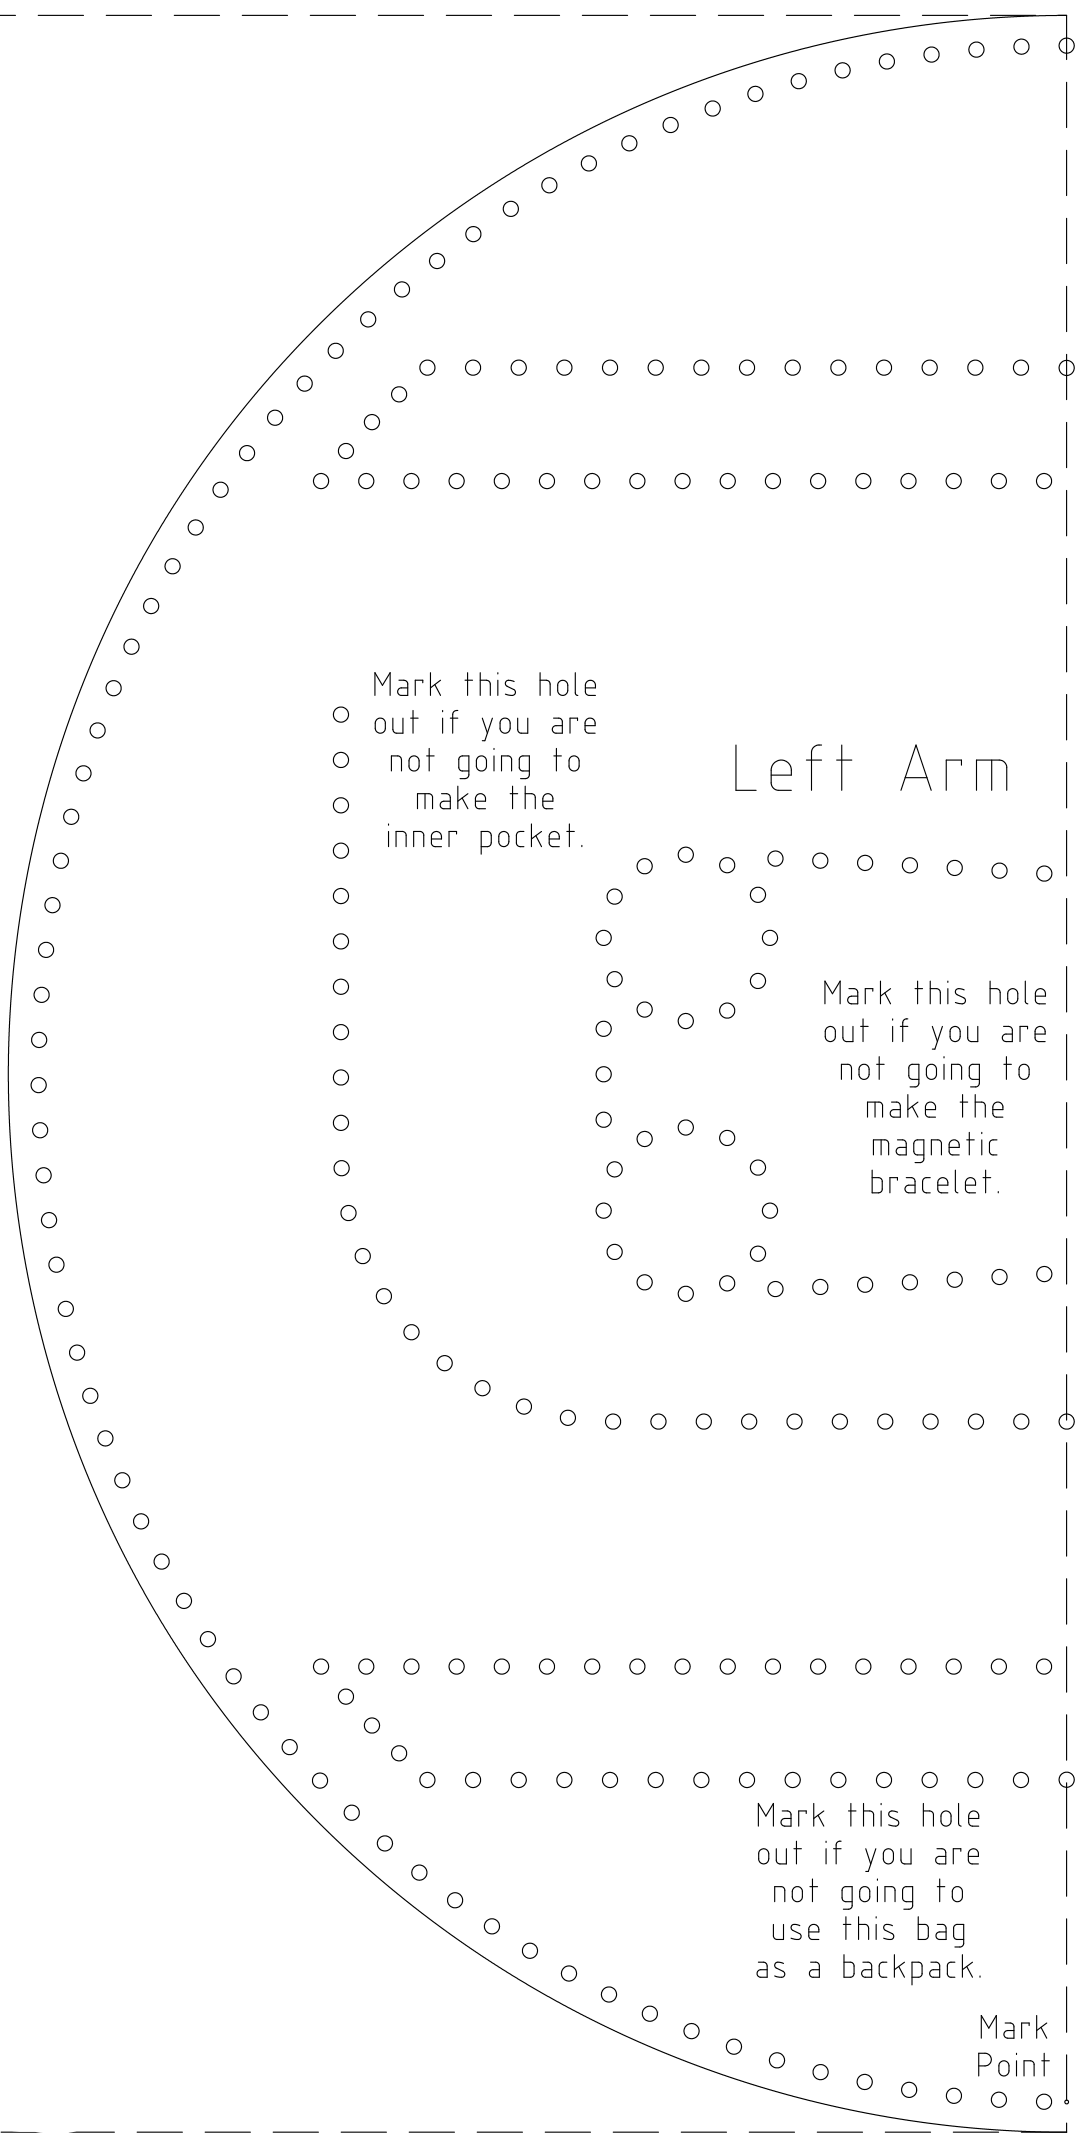

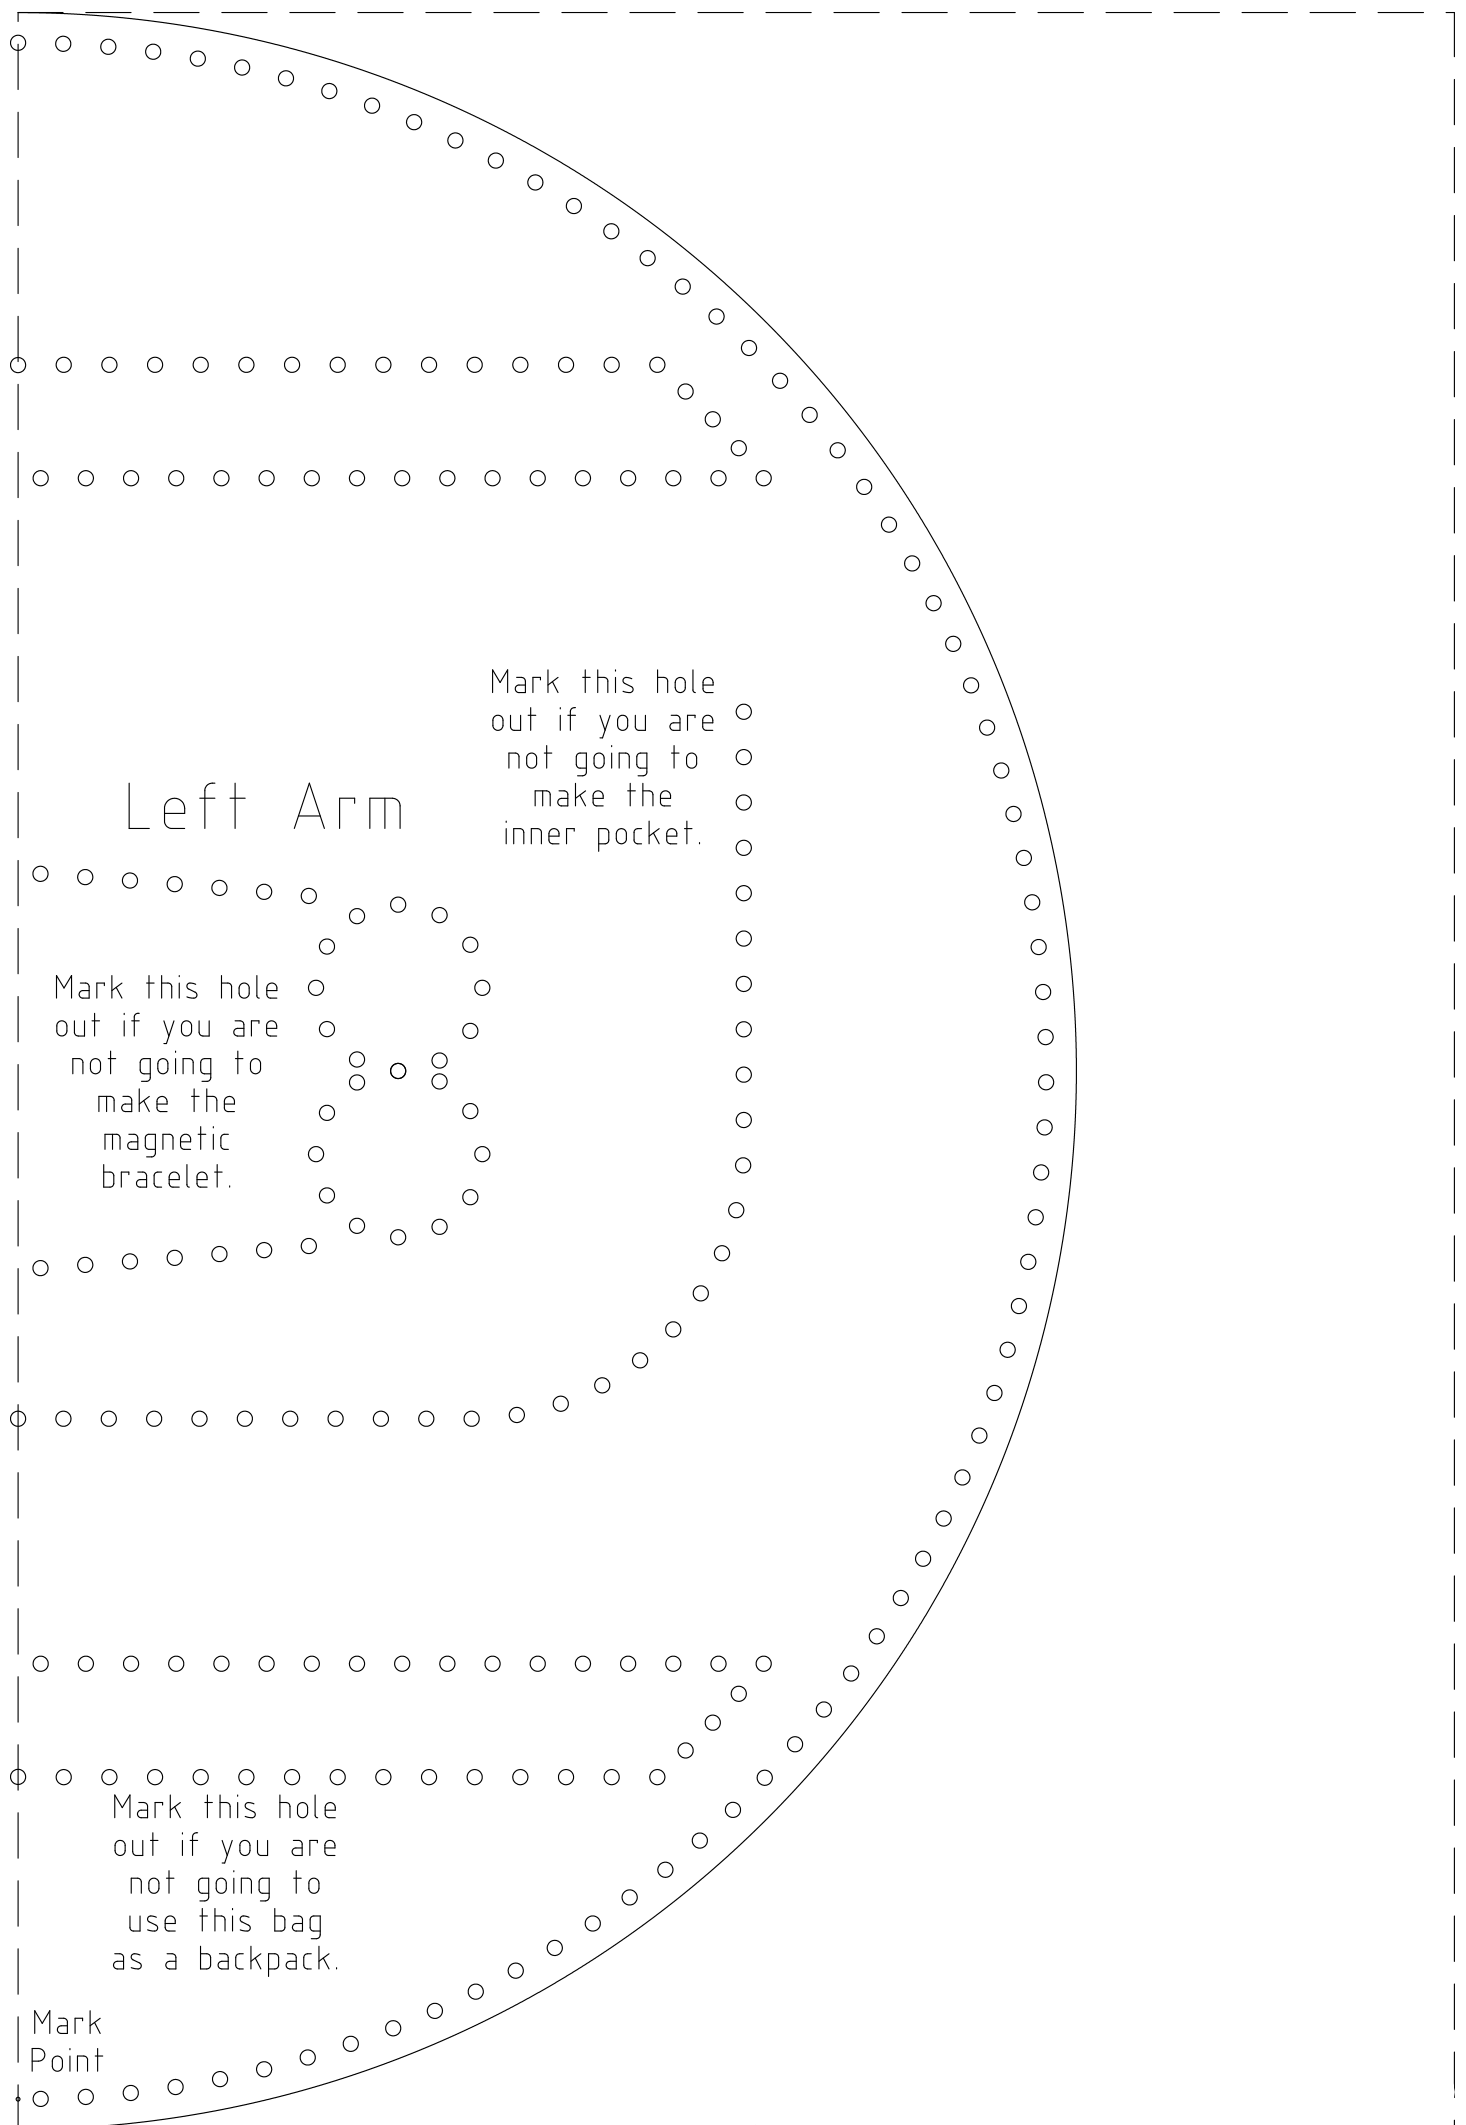


Mark this hole
out if you are
not going to
make the
inner pocket.

Right Arm

Mark this hole
out if you are
not going to
make the
magnetic
bracelet.

Mark this hole
out if you are
not going to
use this bag
as a backpack.

 Mark
Point

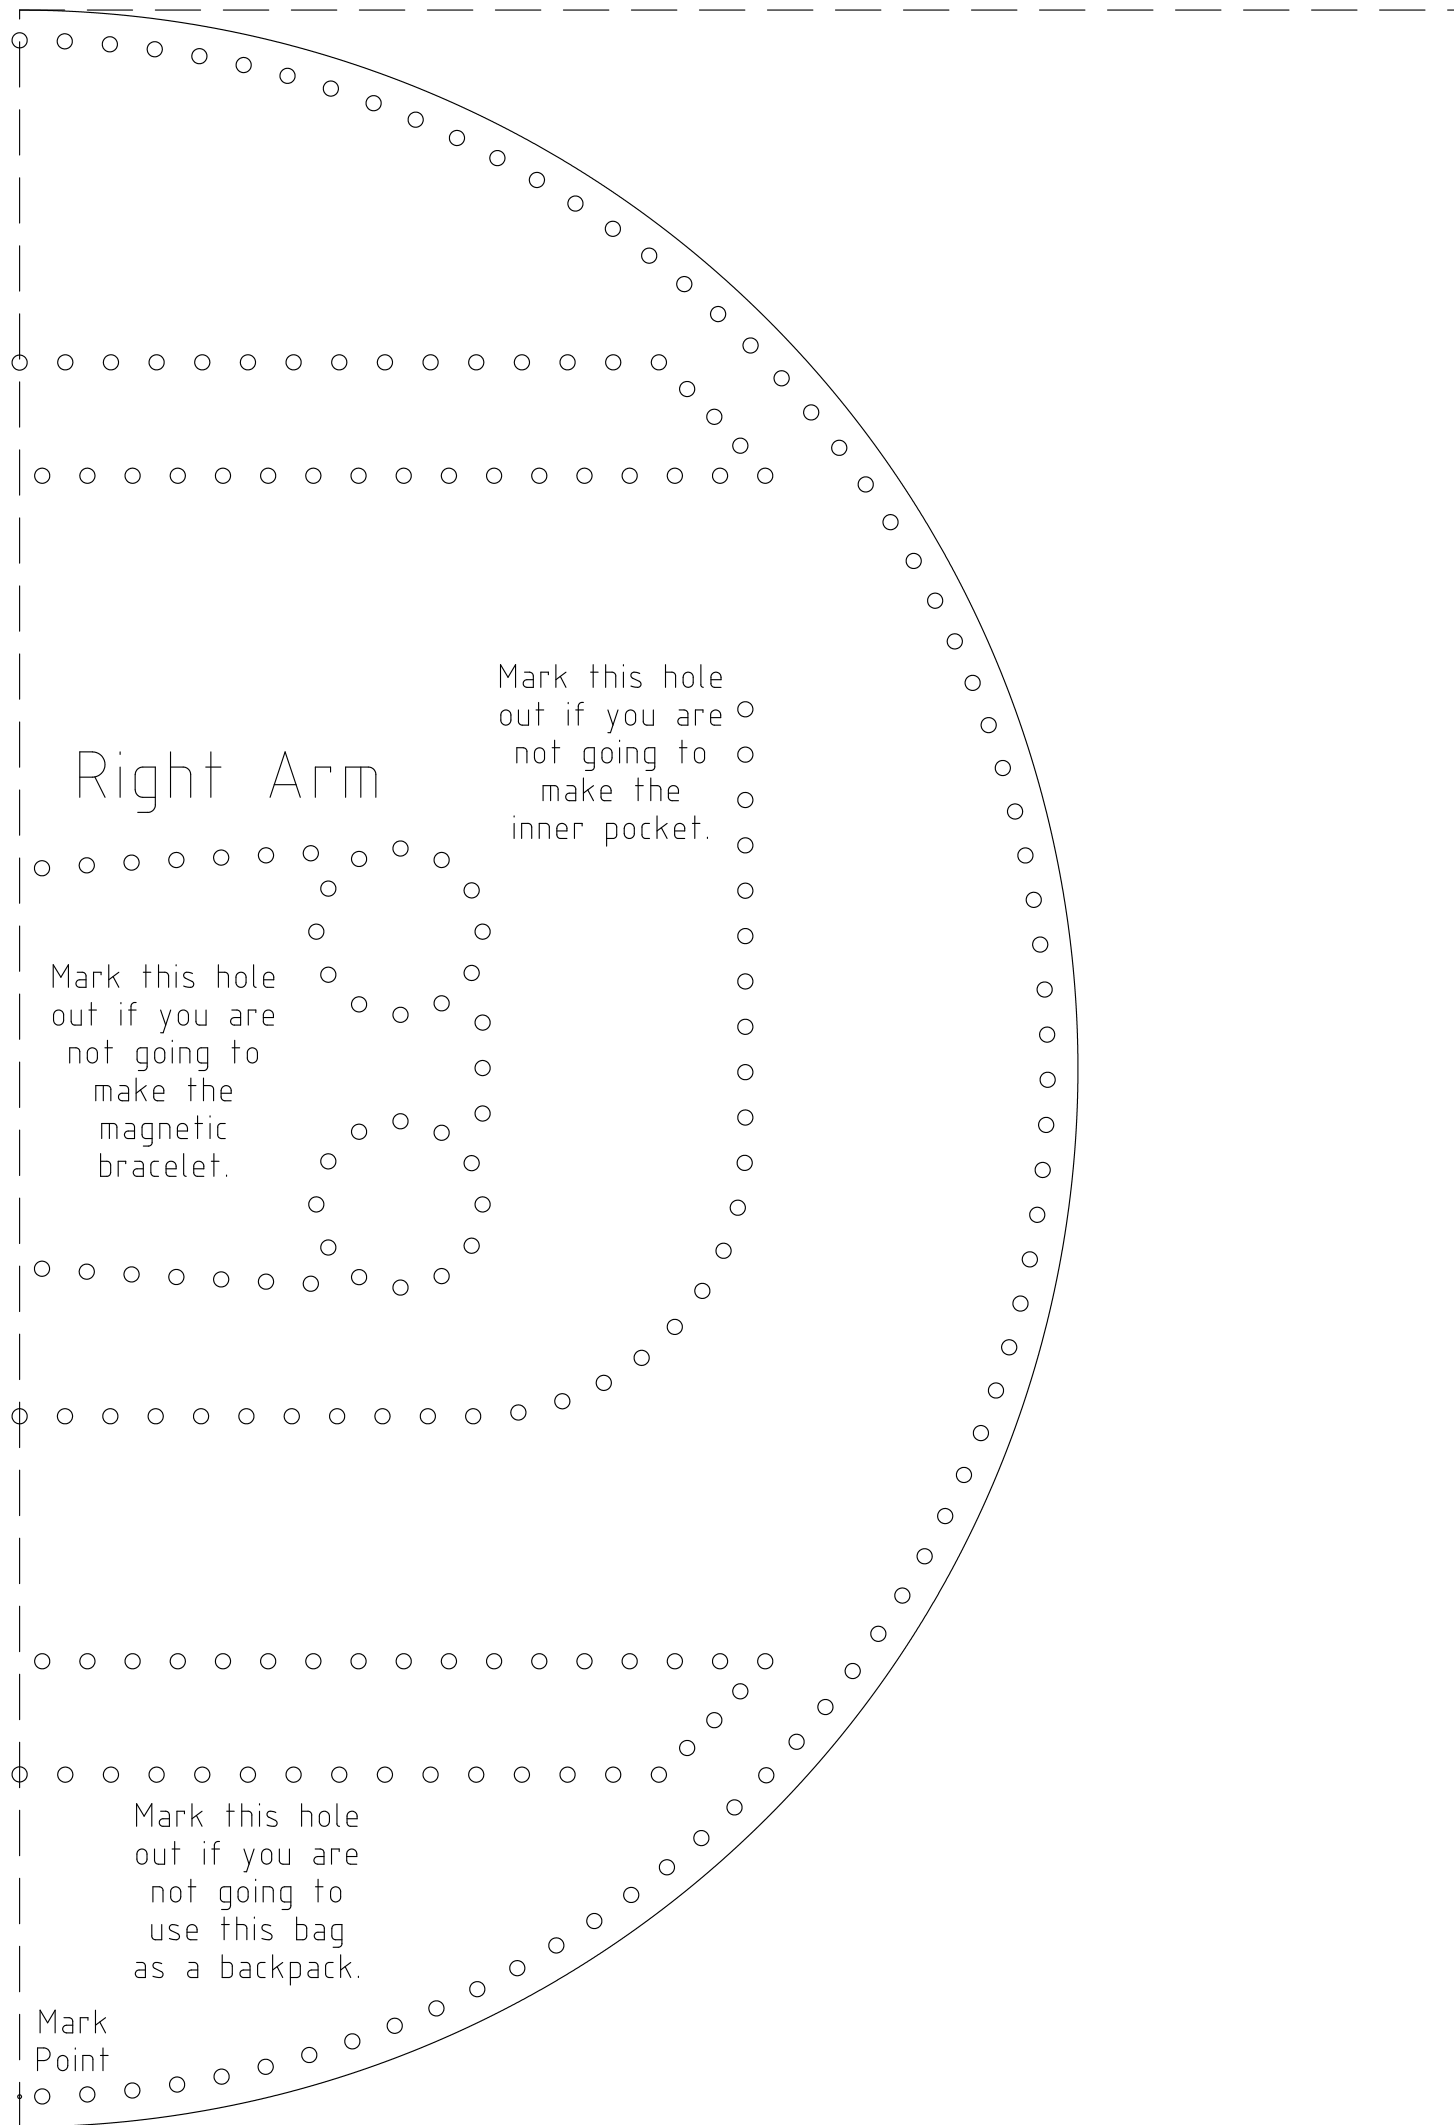



Right Arm



Mark this hole
out if you are
not going to
make the
inner pocket.




Mark this hole
out if you are
not going to
make the
magnetic
bracelet.

Mark this hole
out if you are
not going to
use this bag
as a backpack.

       Mark
Point

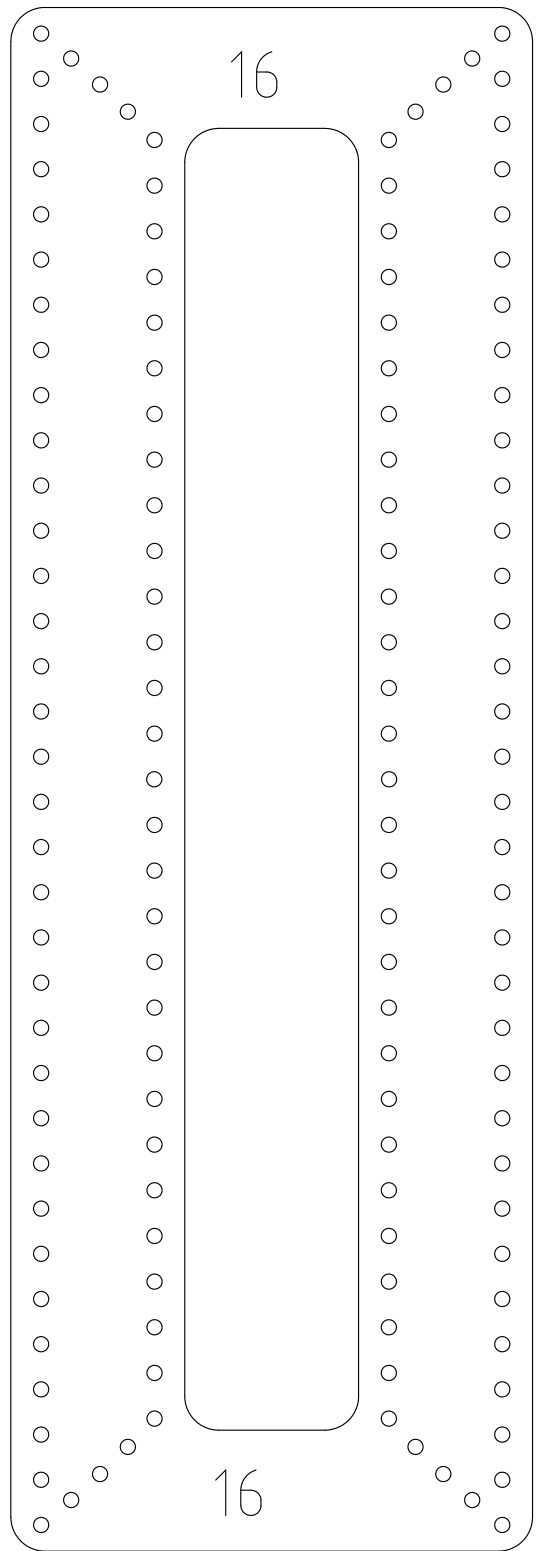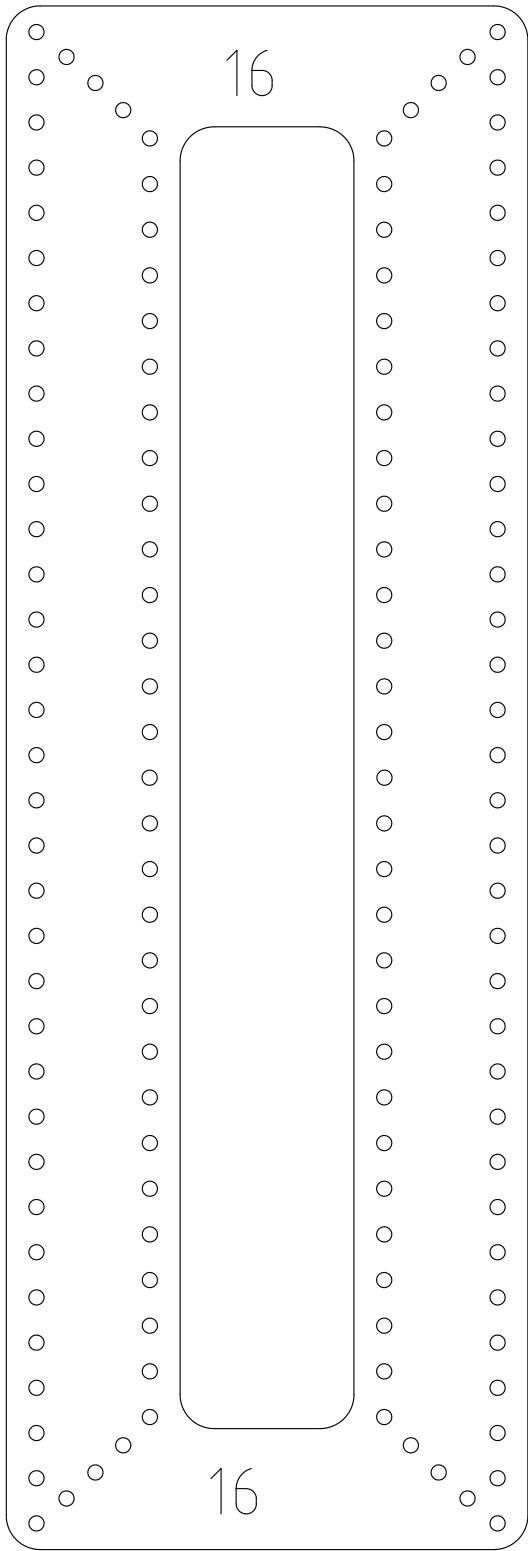

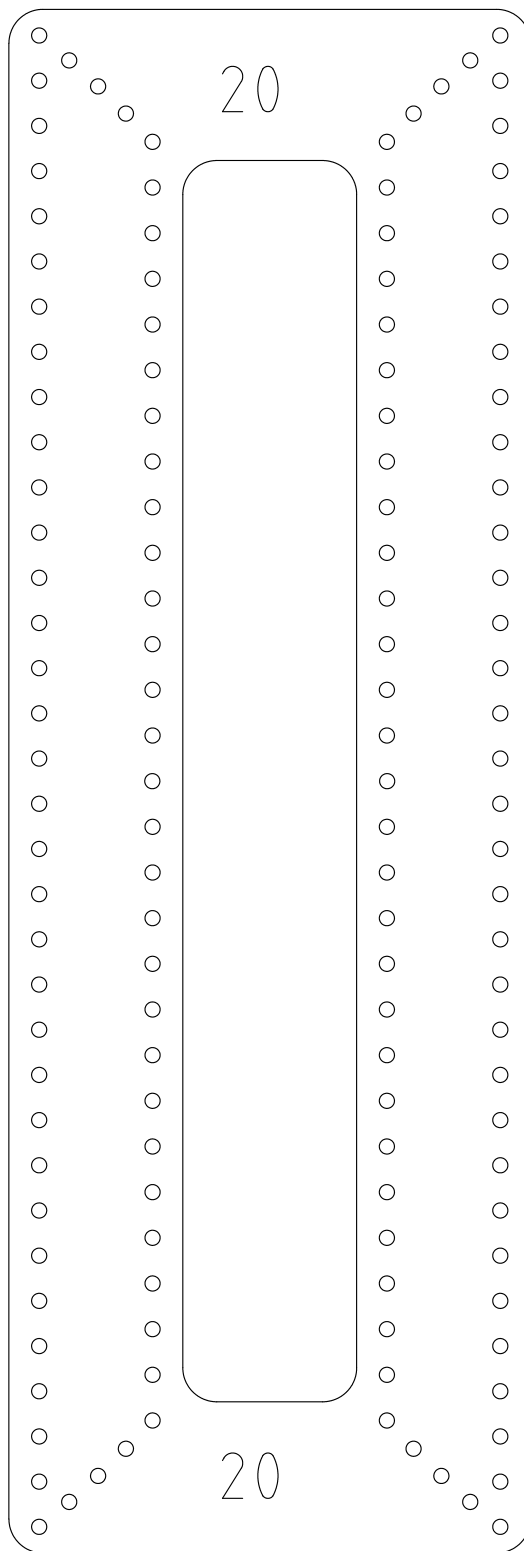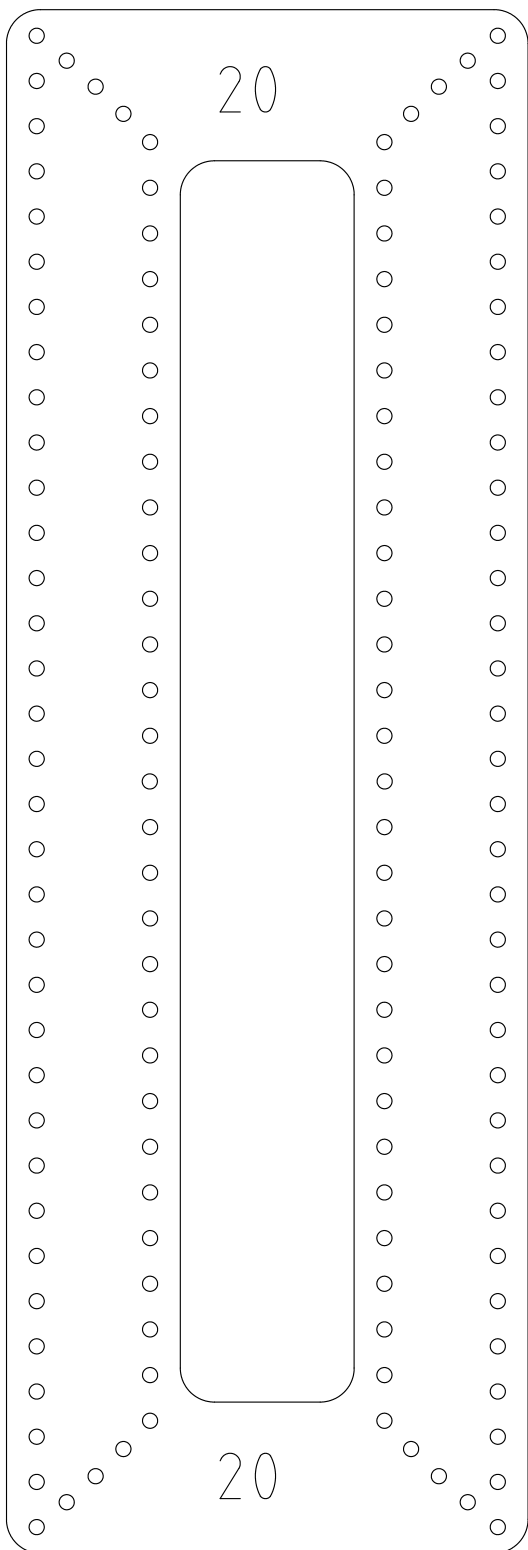

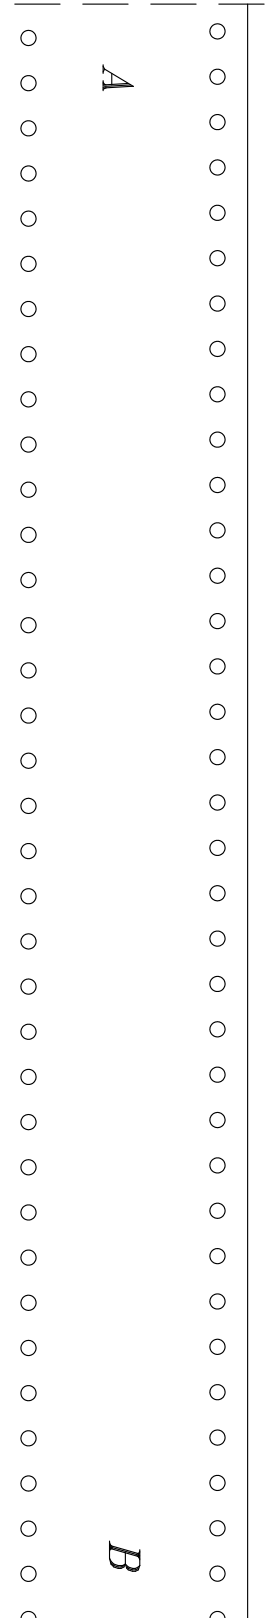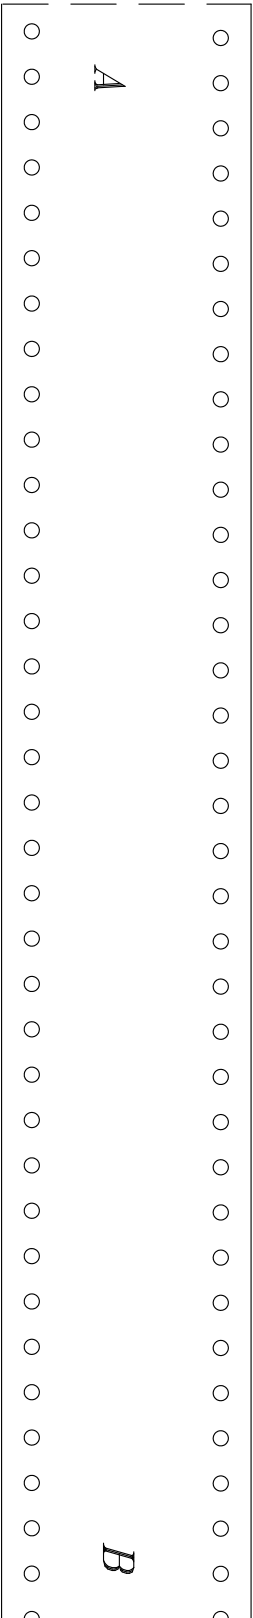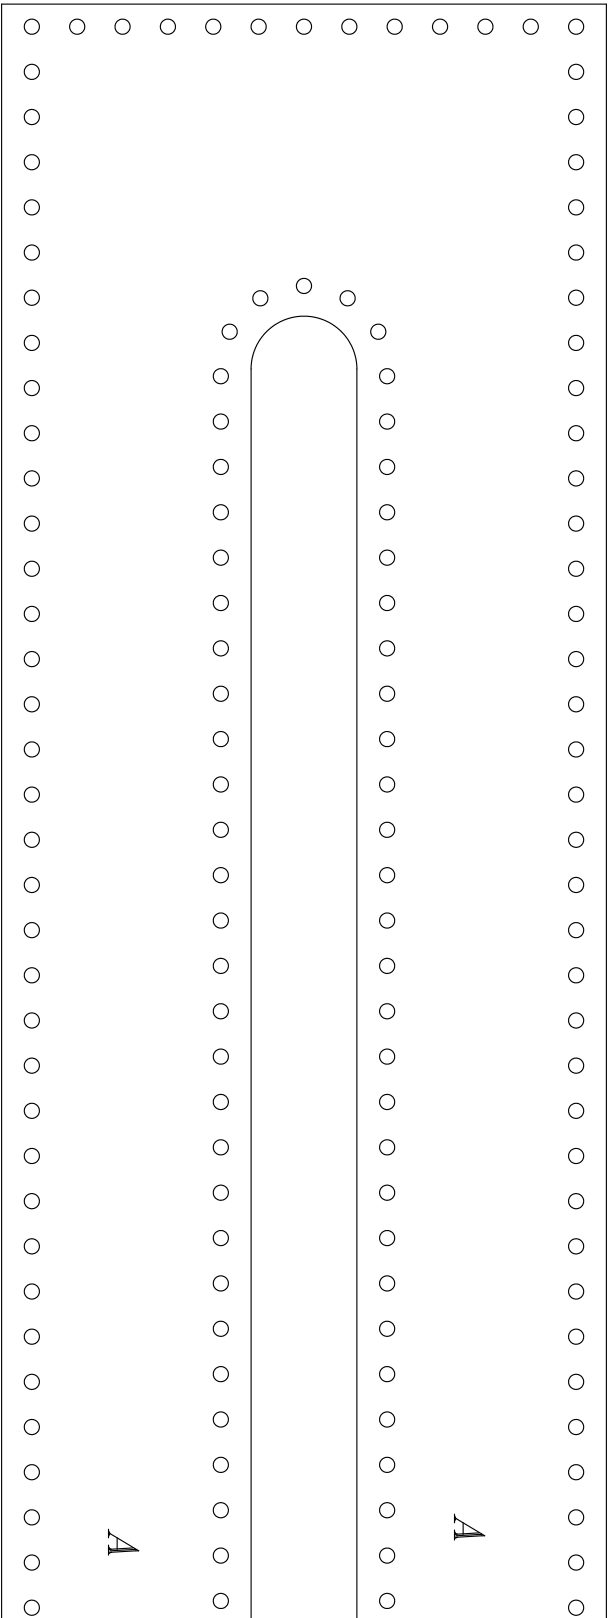

B

 
C

 
 
 
 
B

 
C

 
C

 
 
 
 
 
 
 
C

 
 


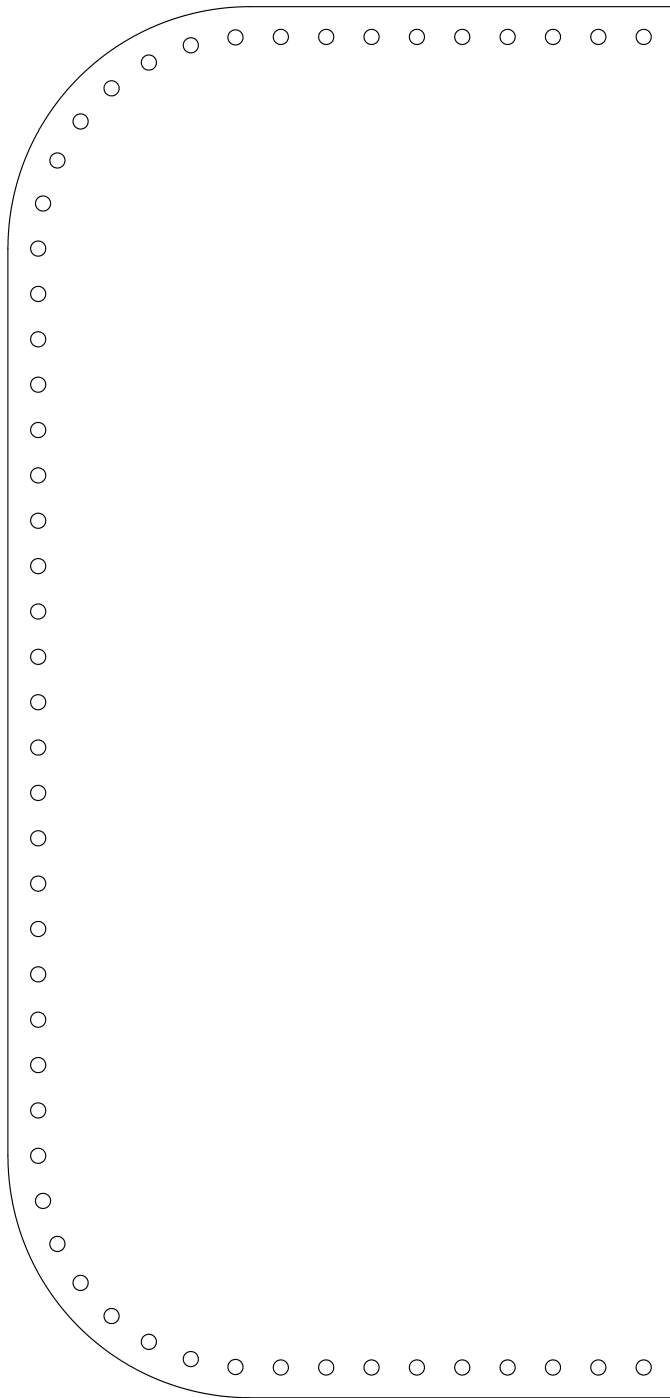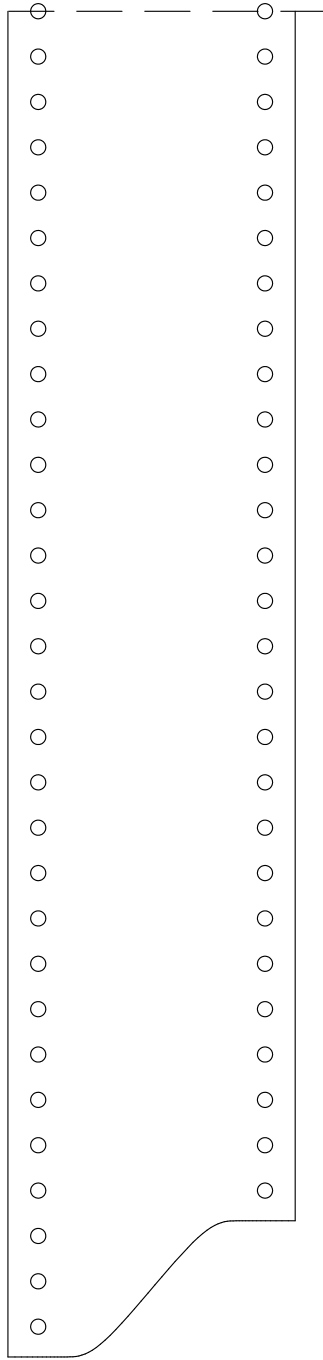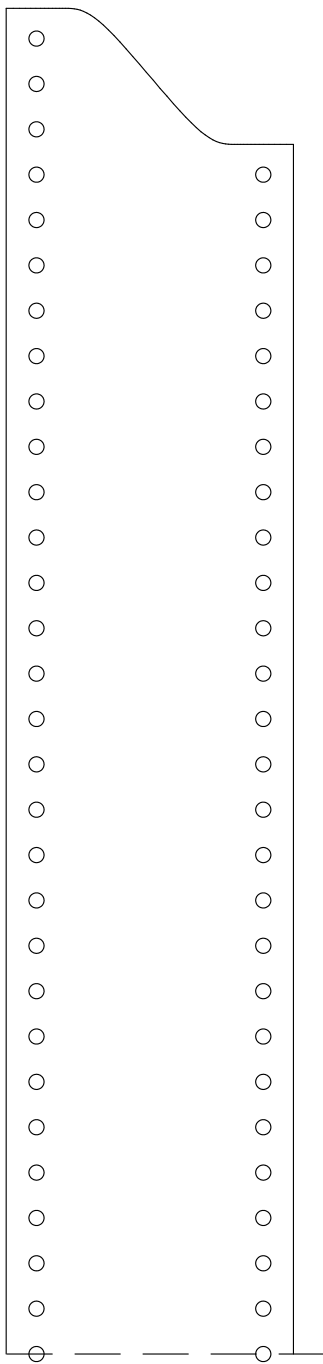 
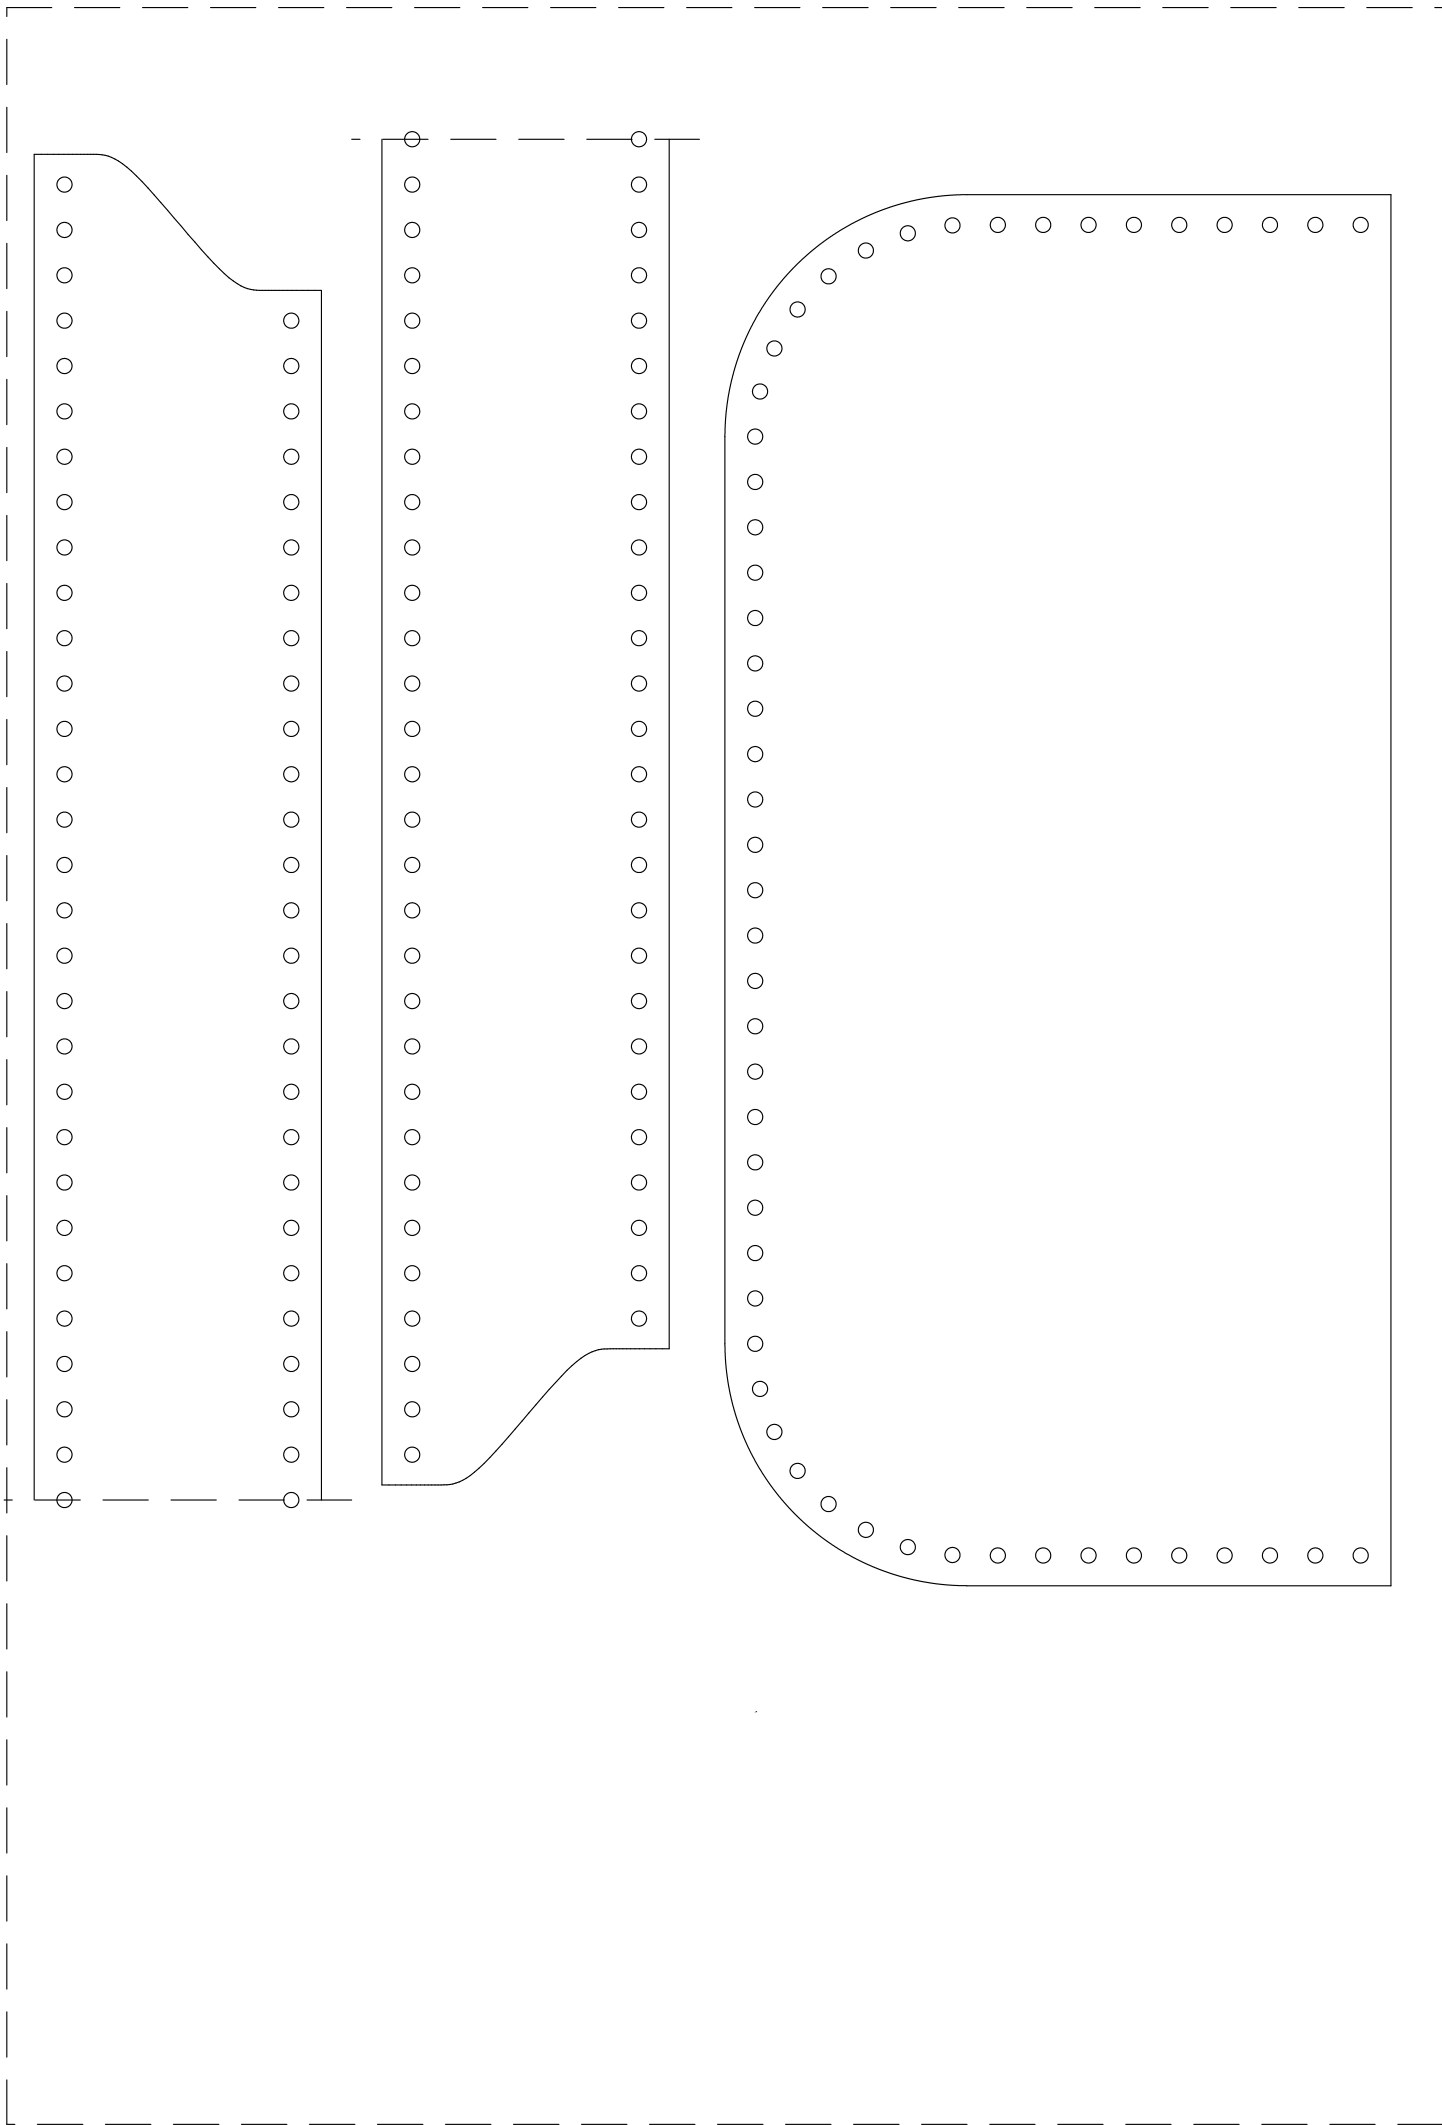 


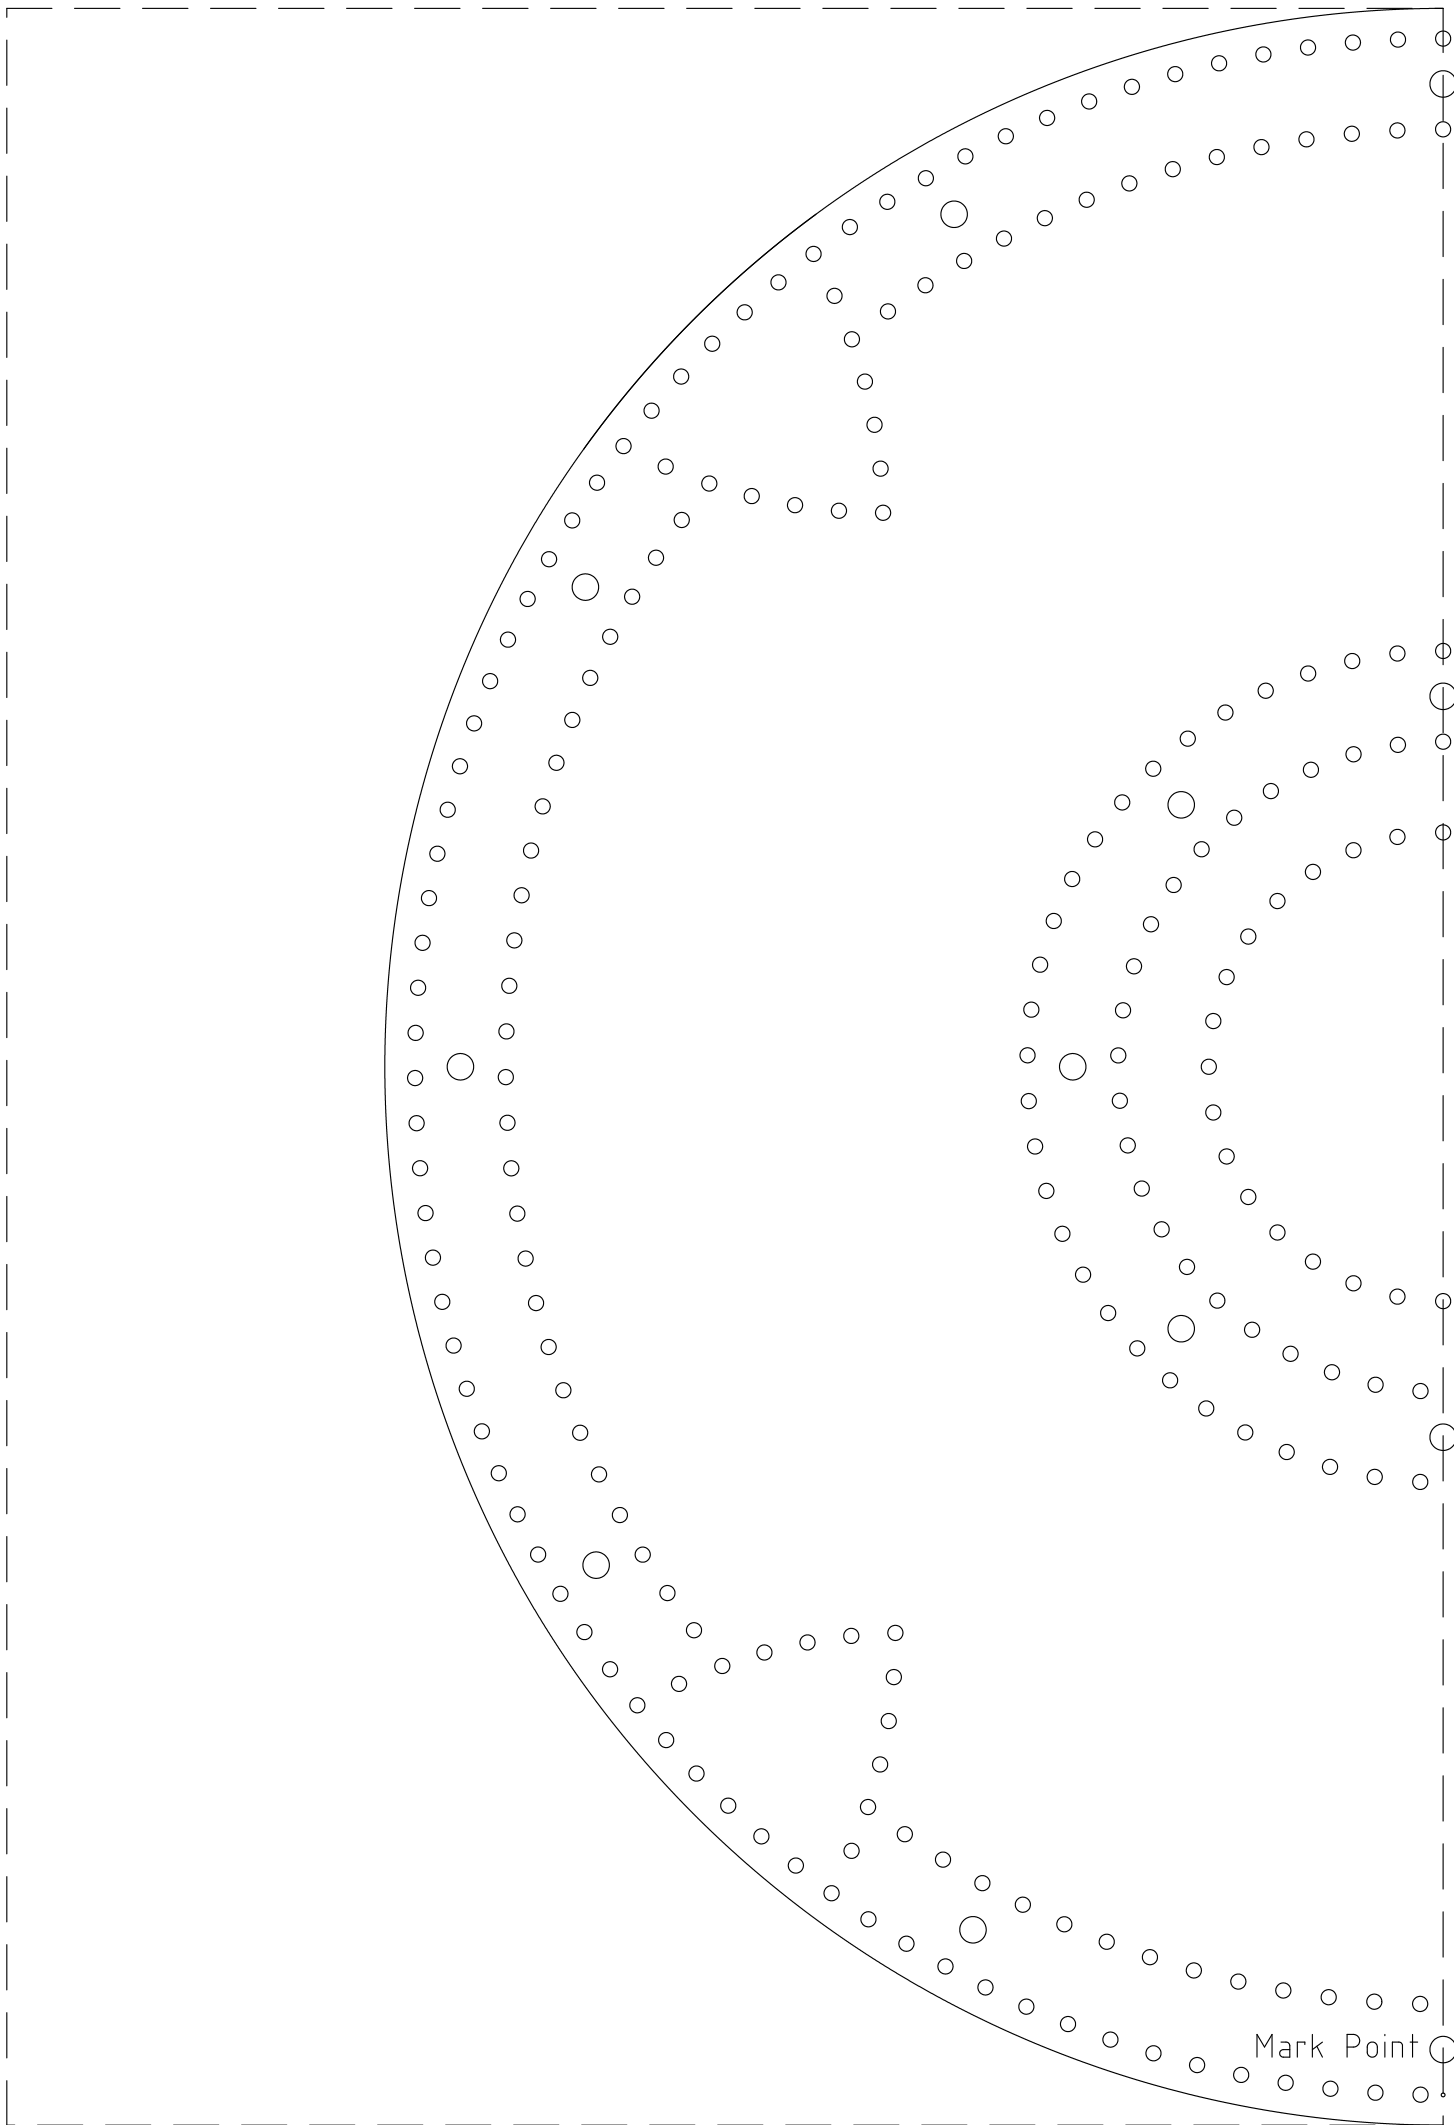 


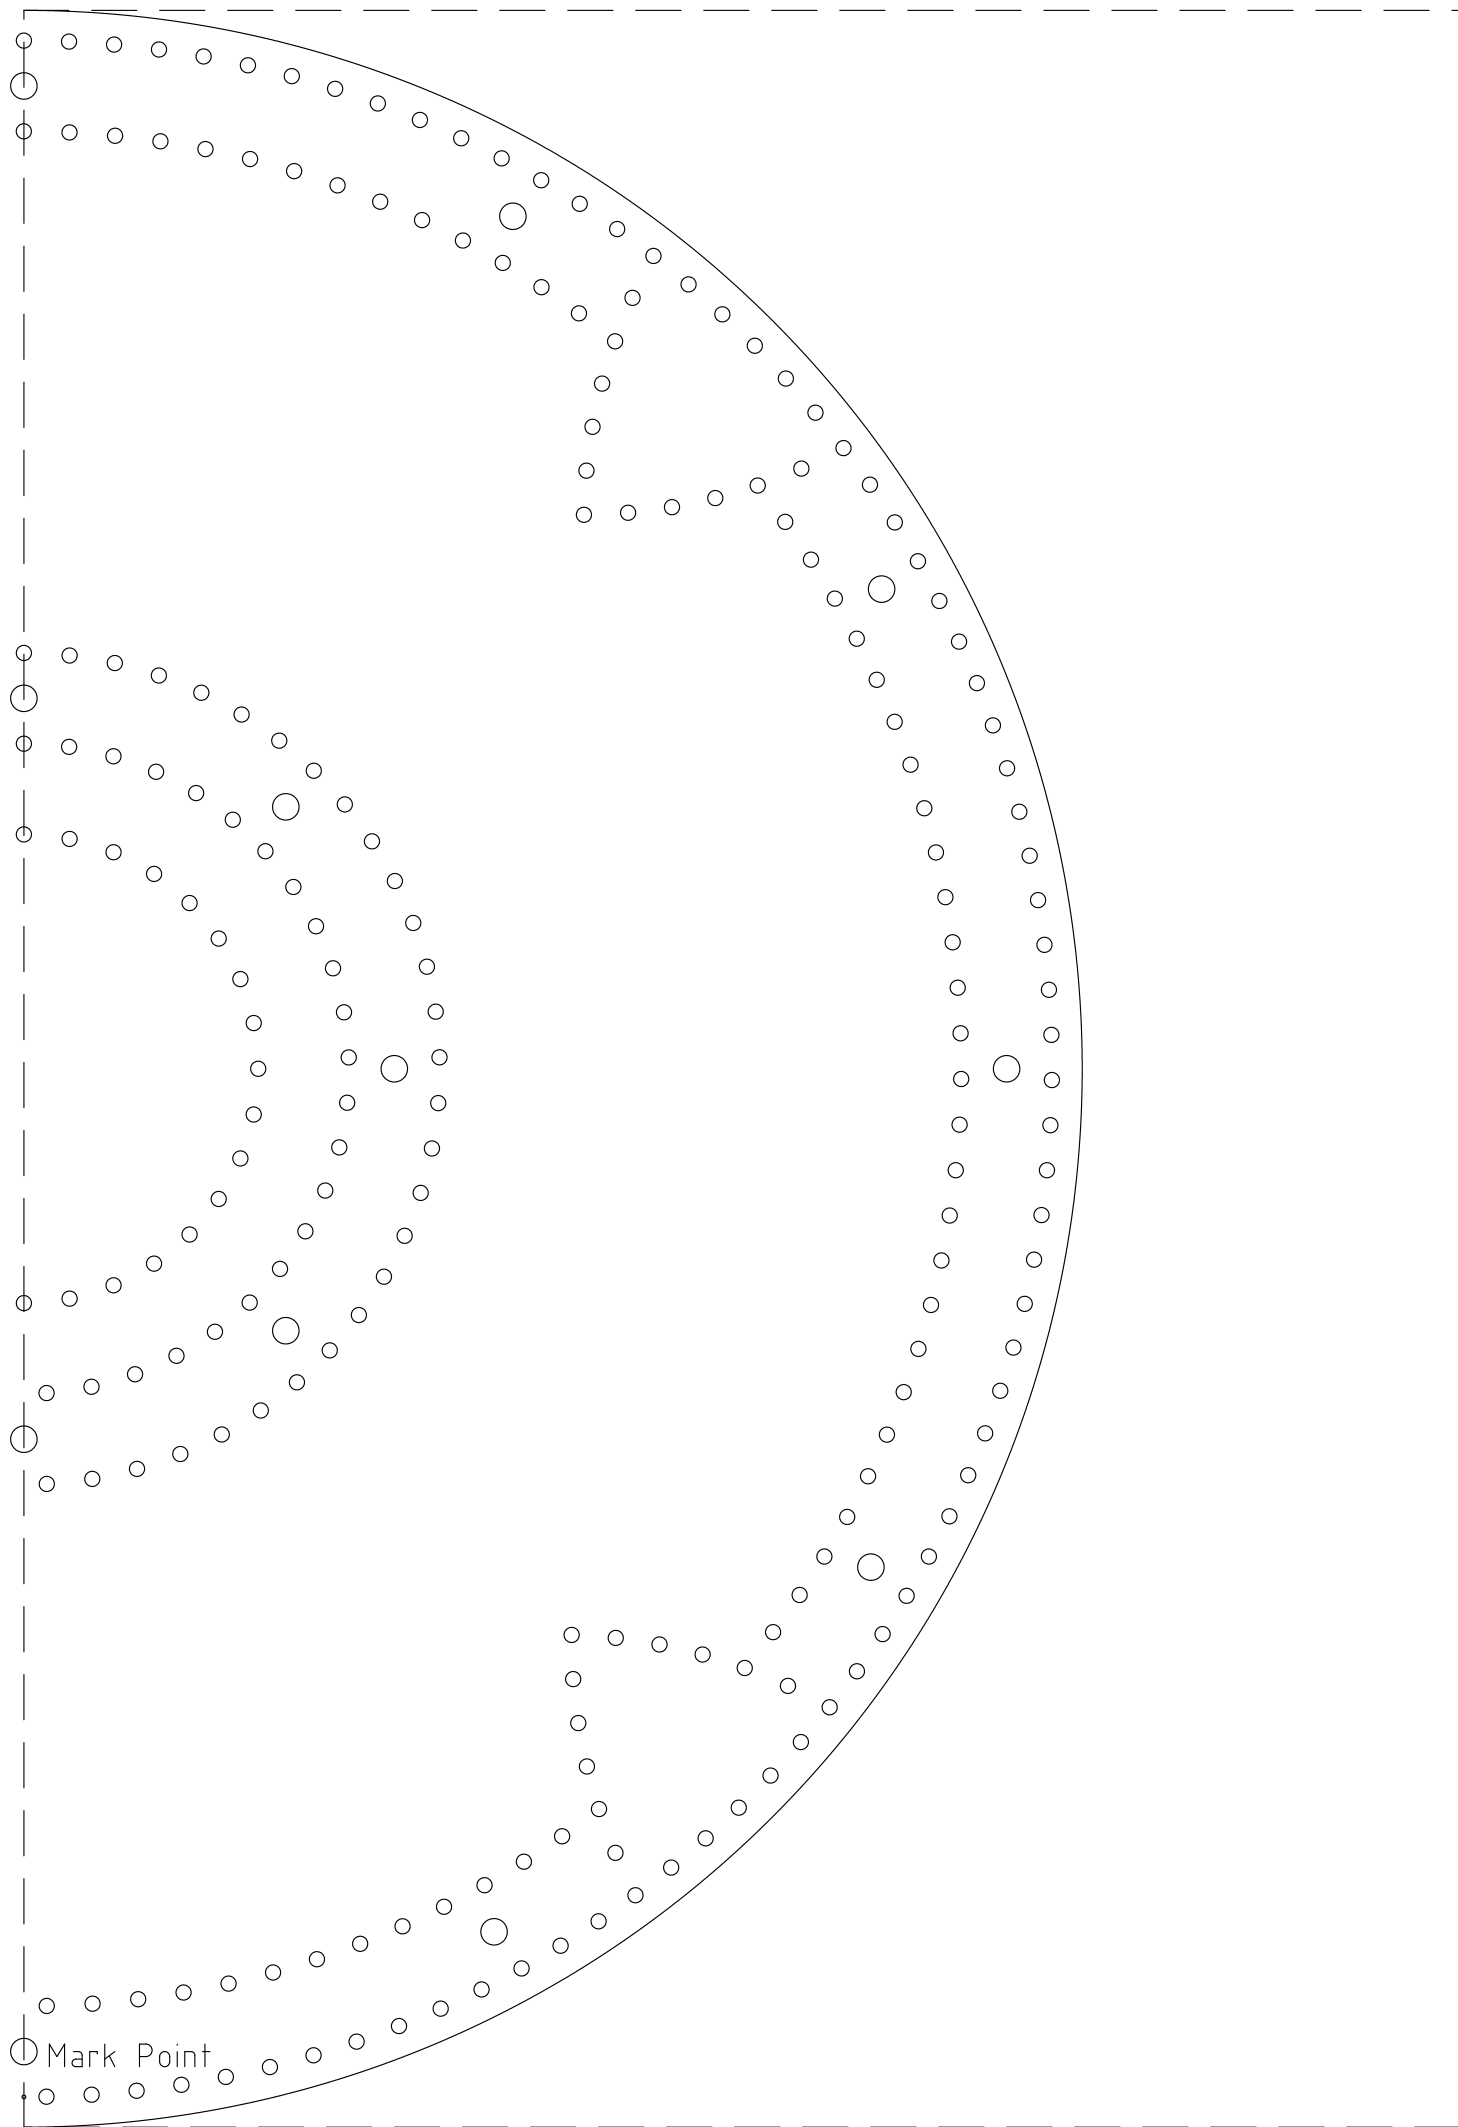 


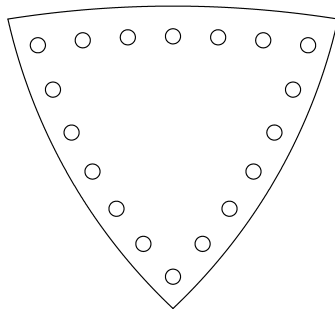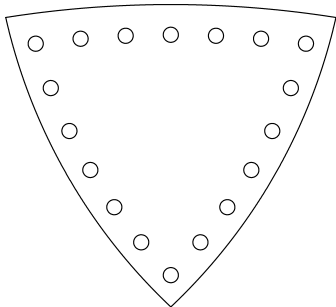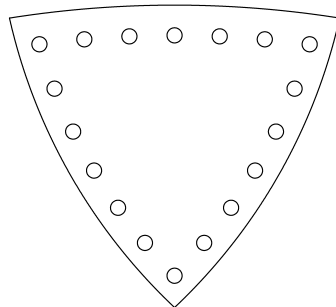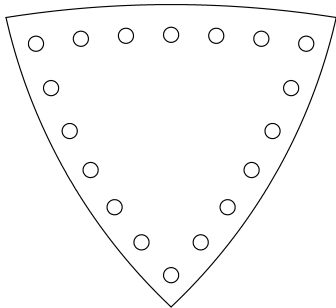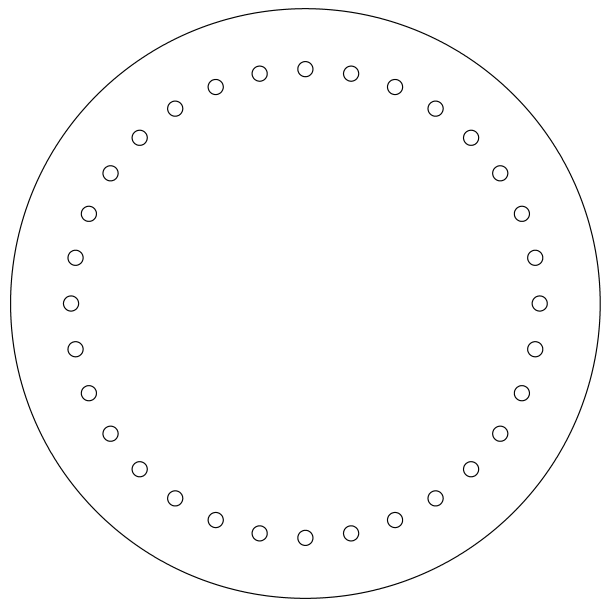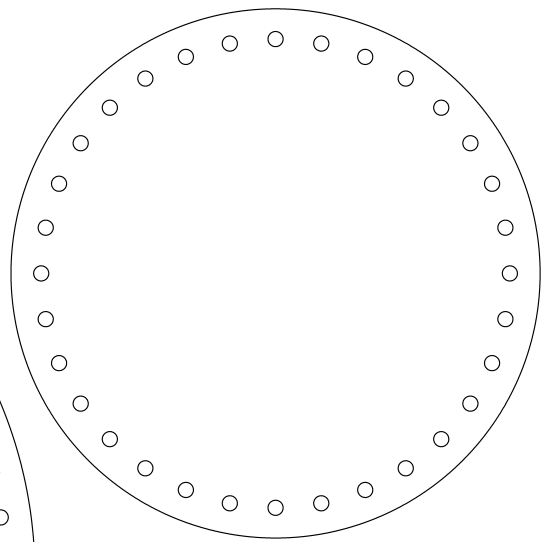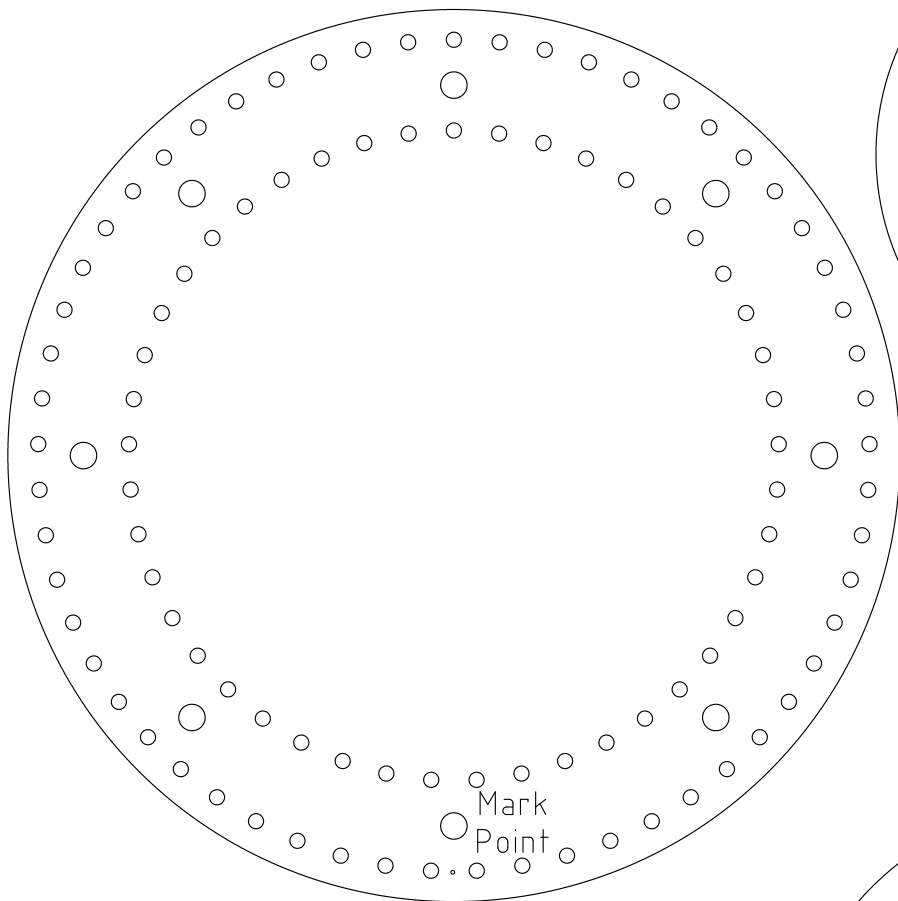 


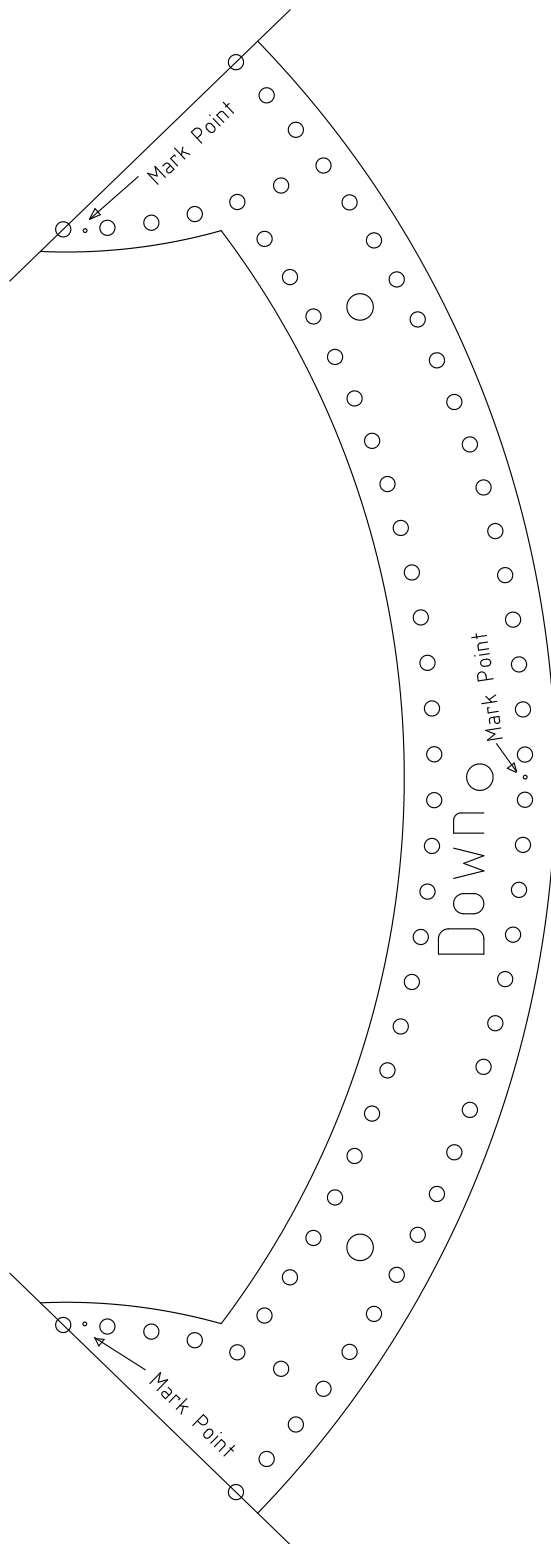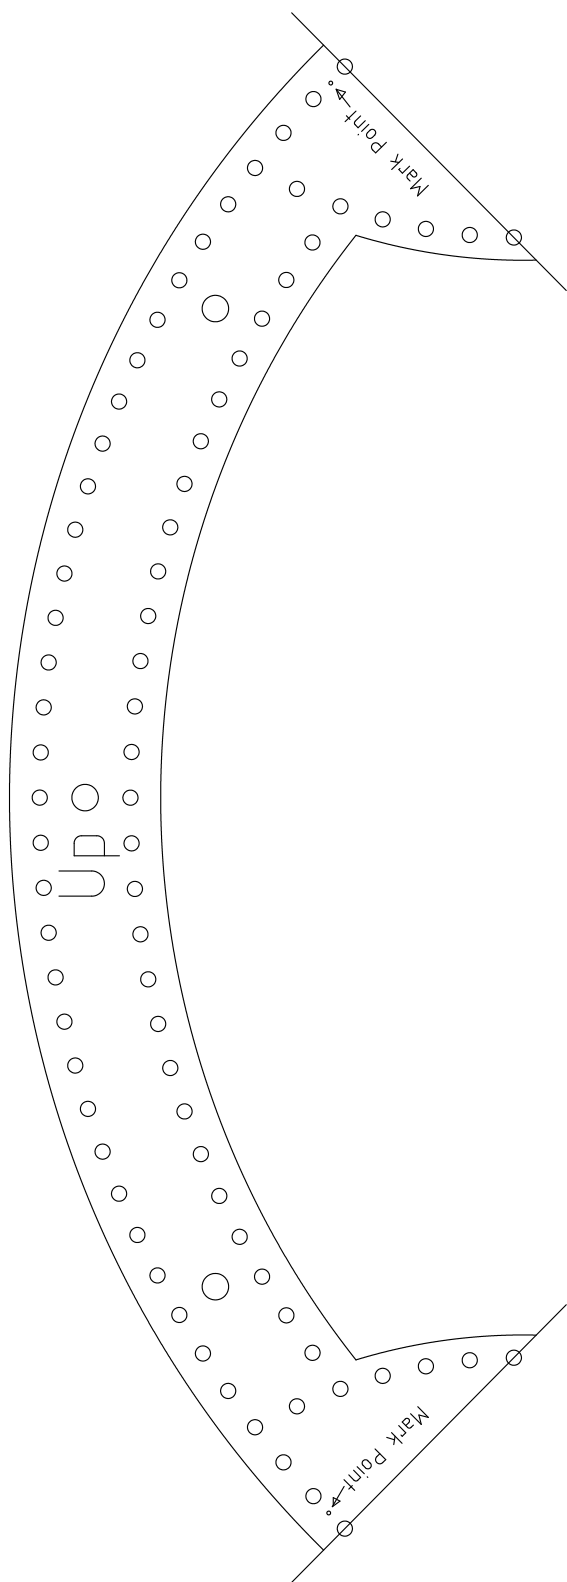

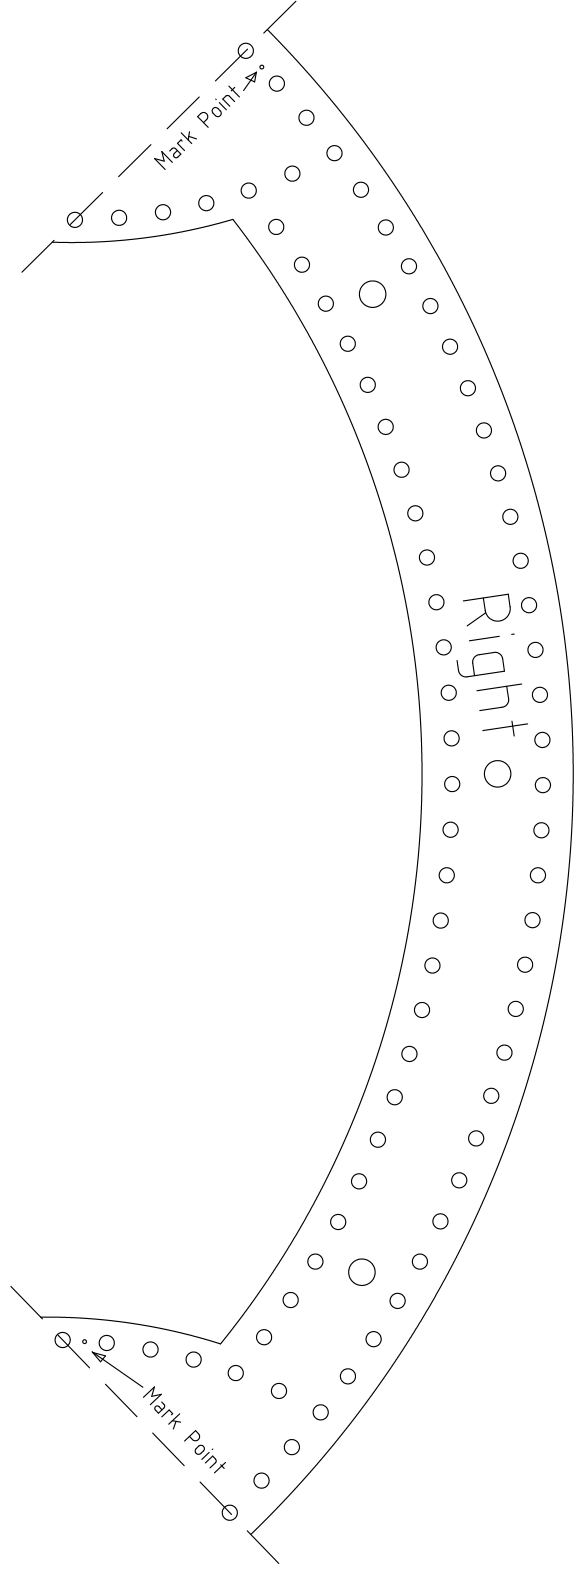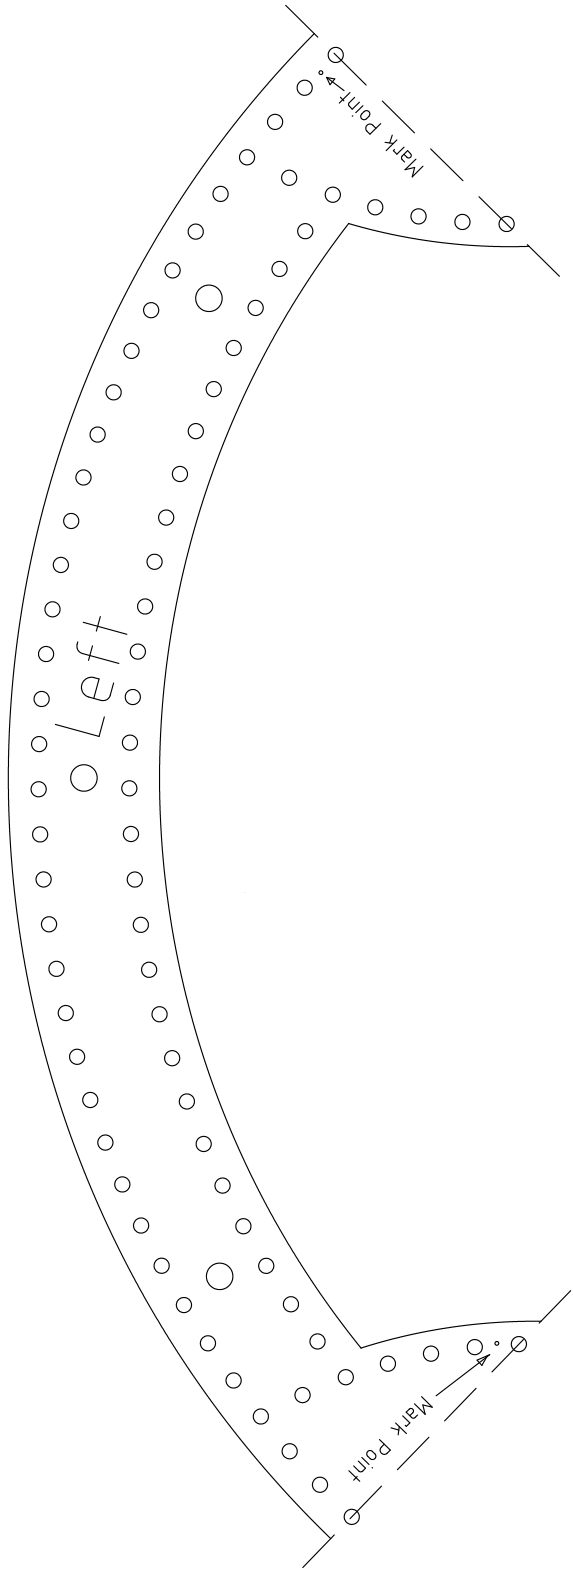


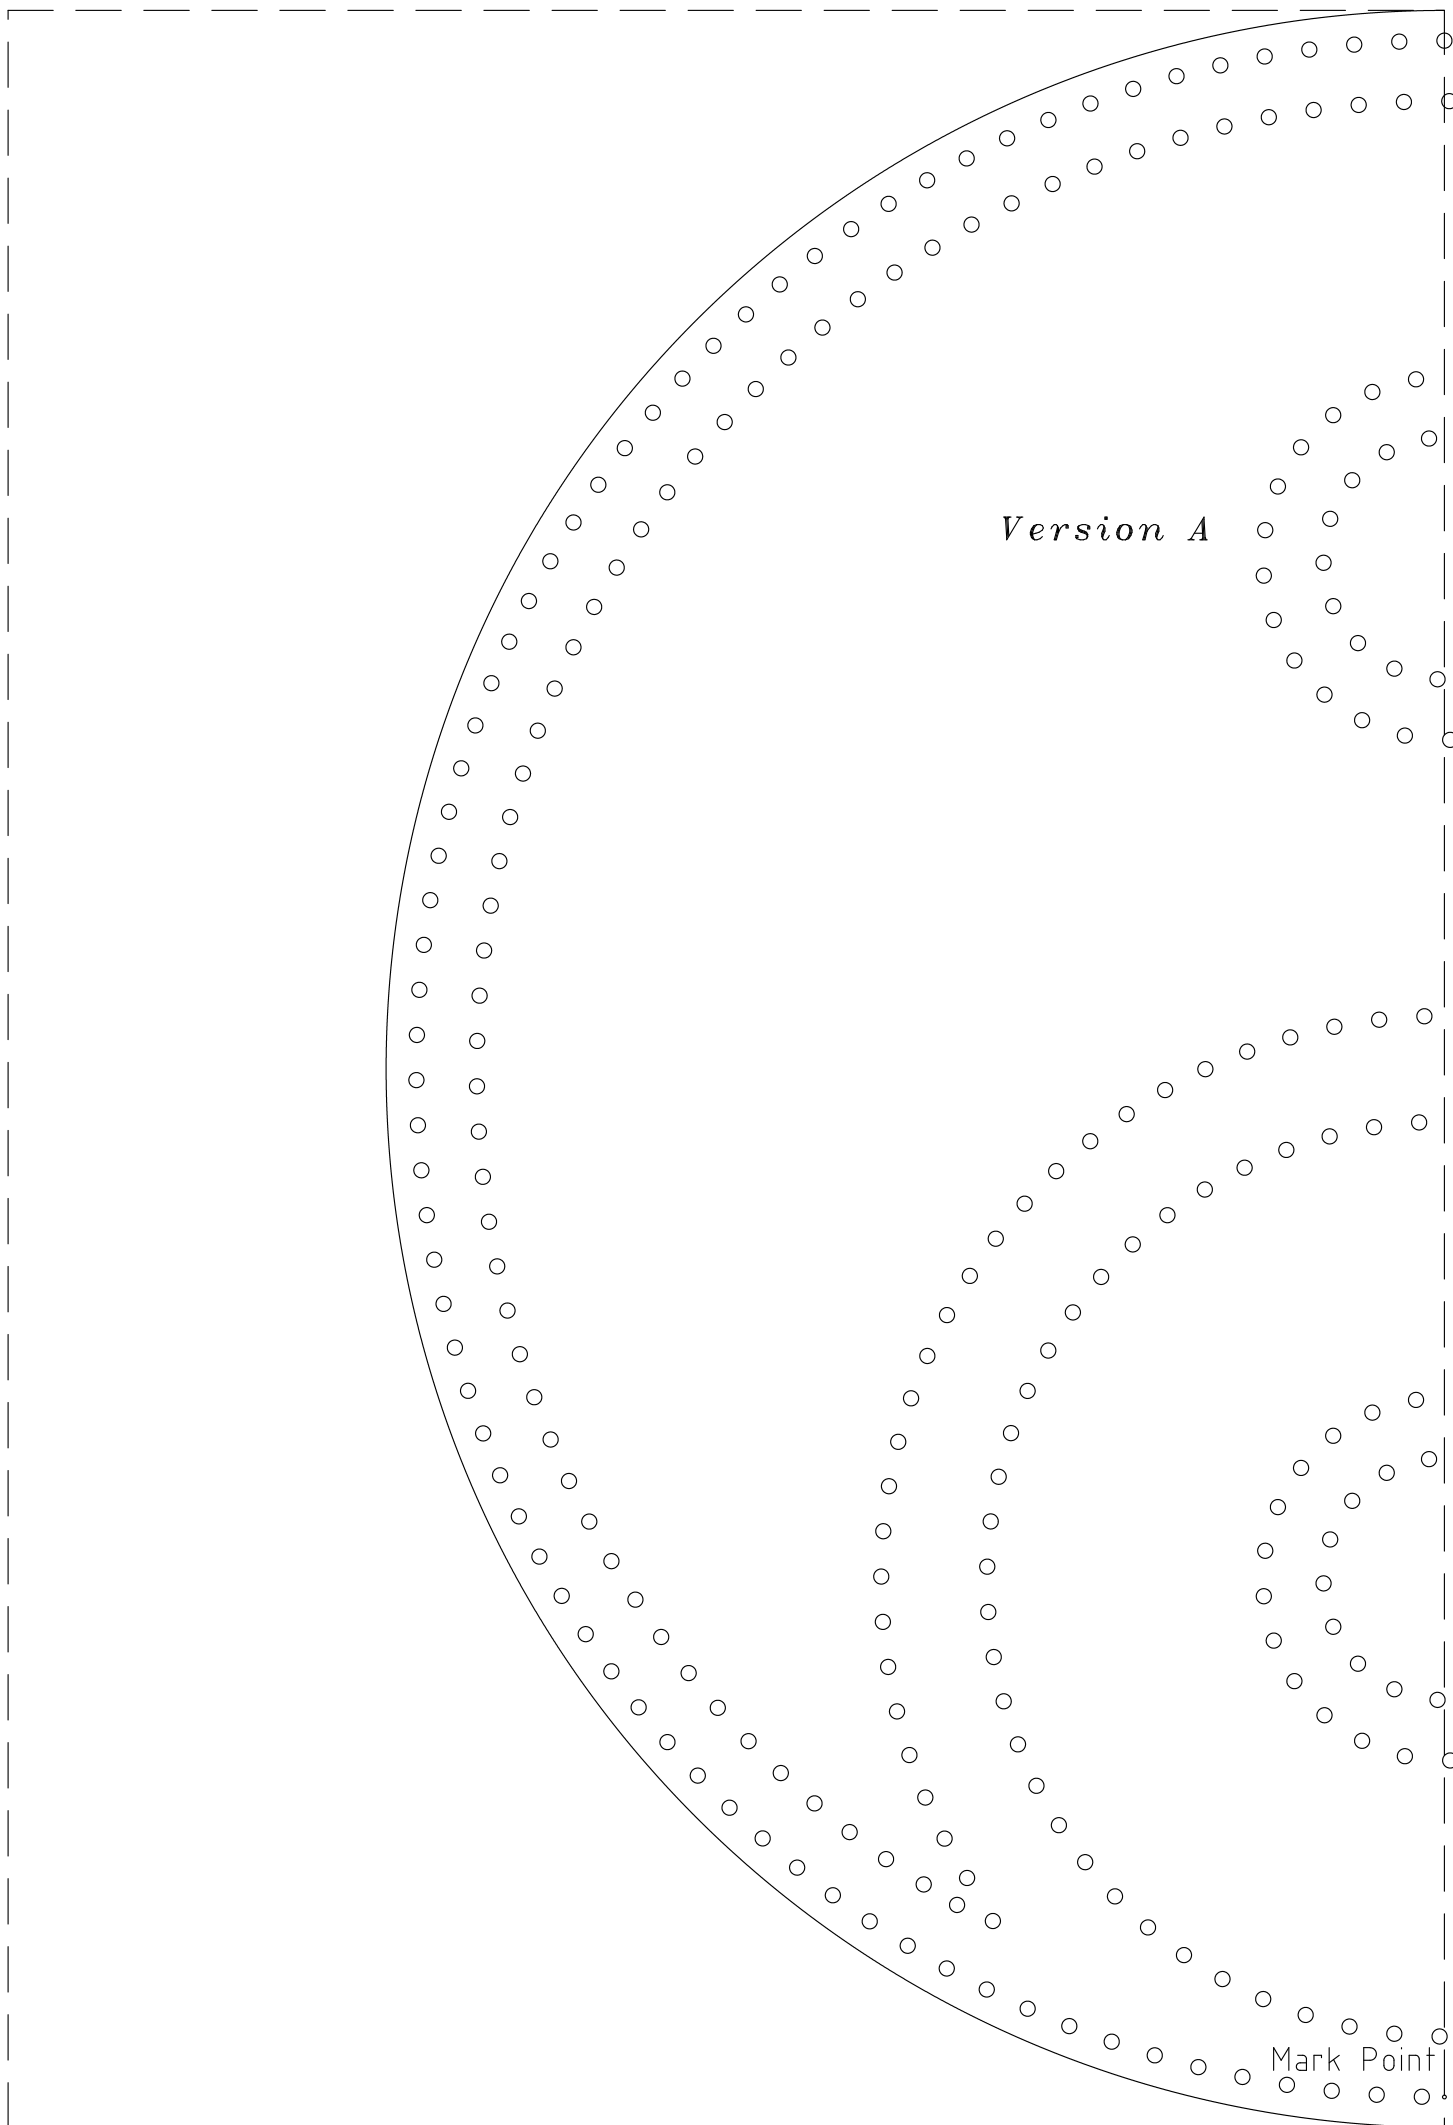


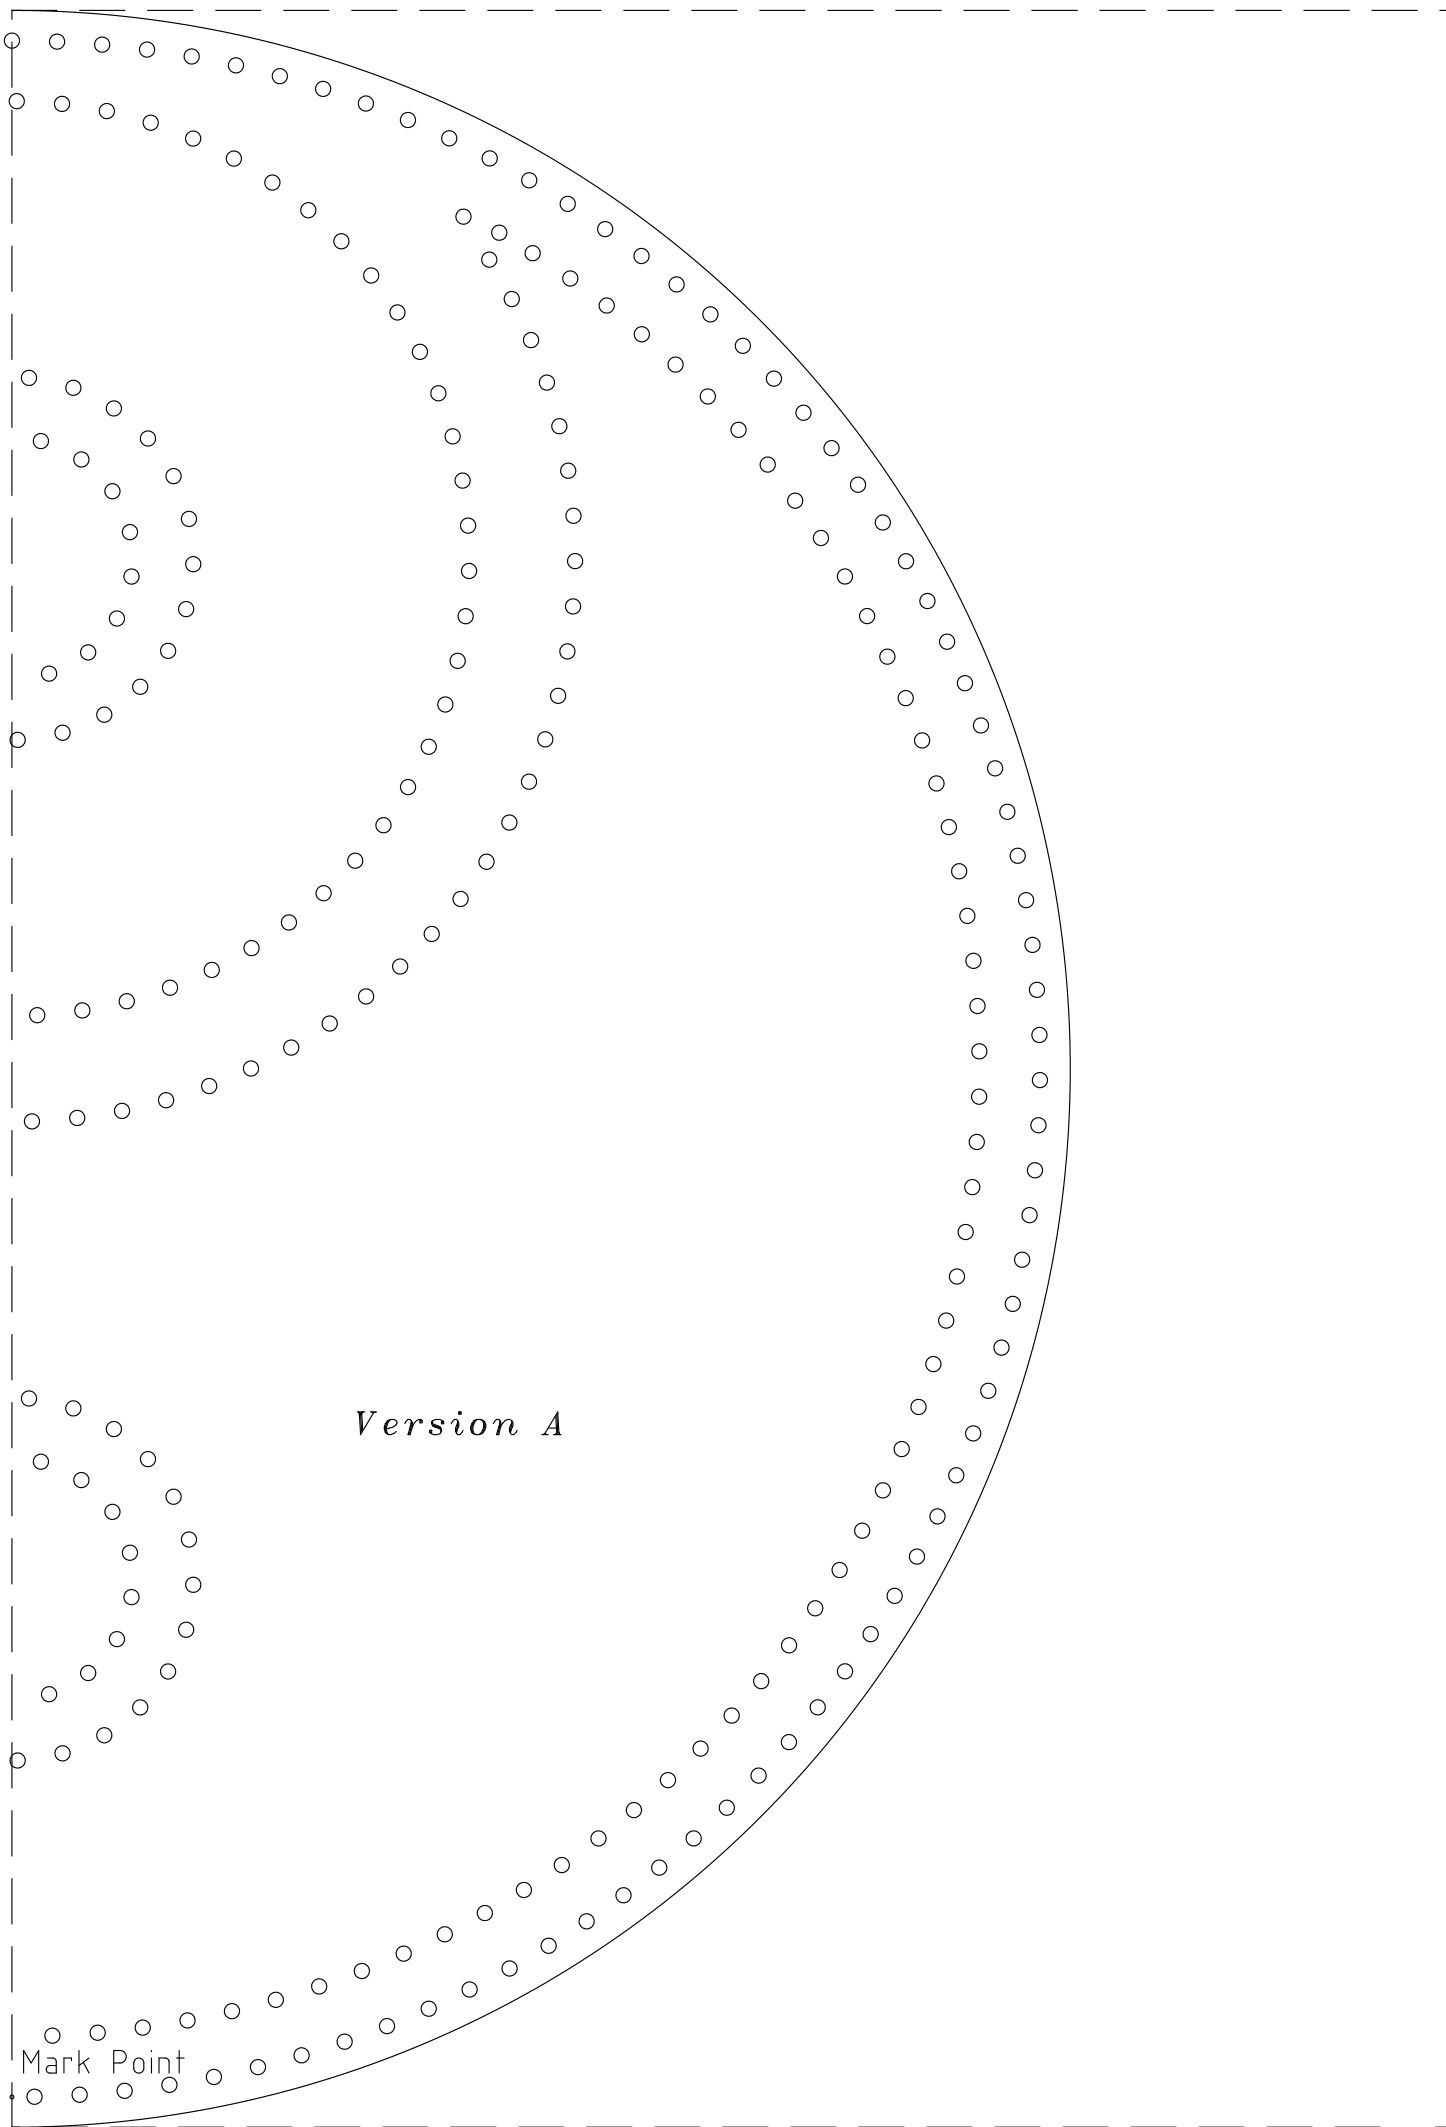


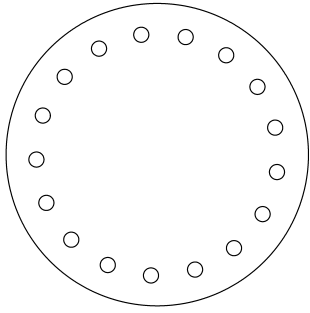



Version A



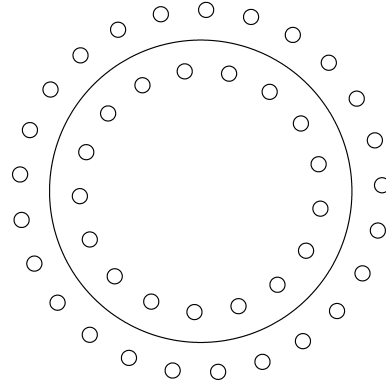 


Print this page 2x

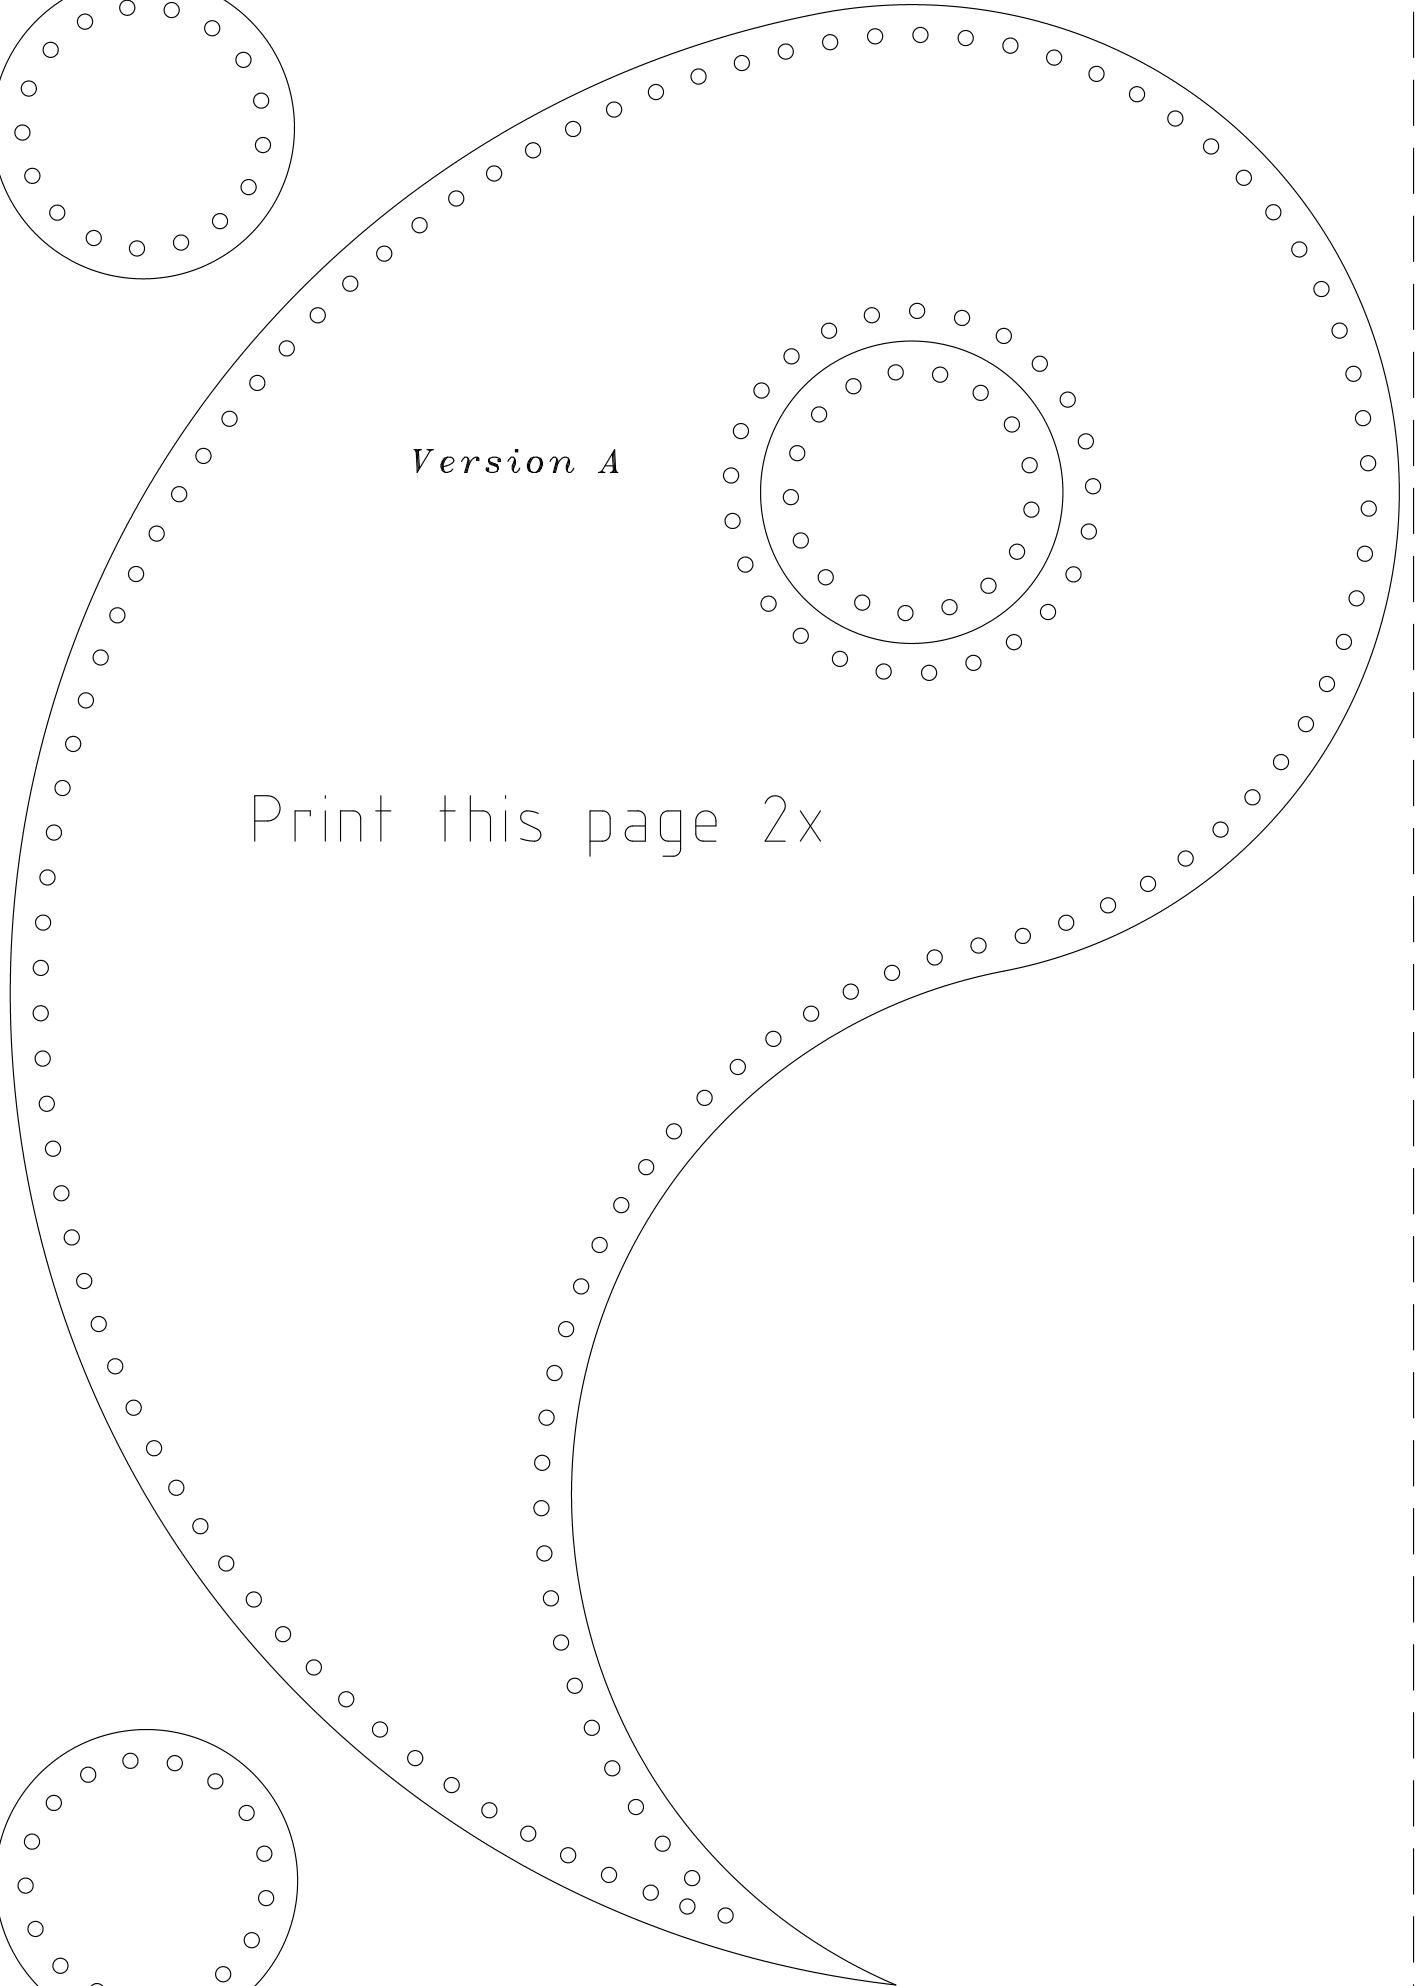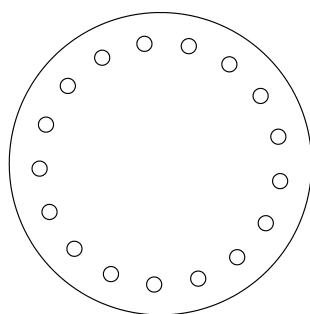  

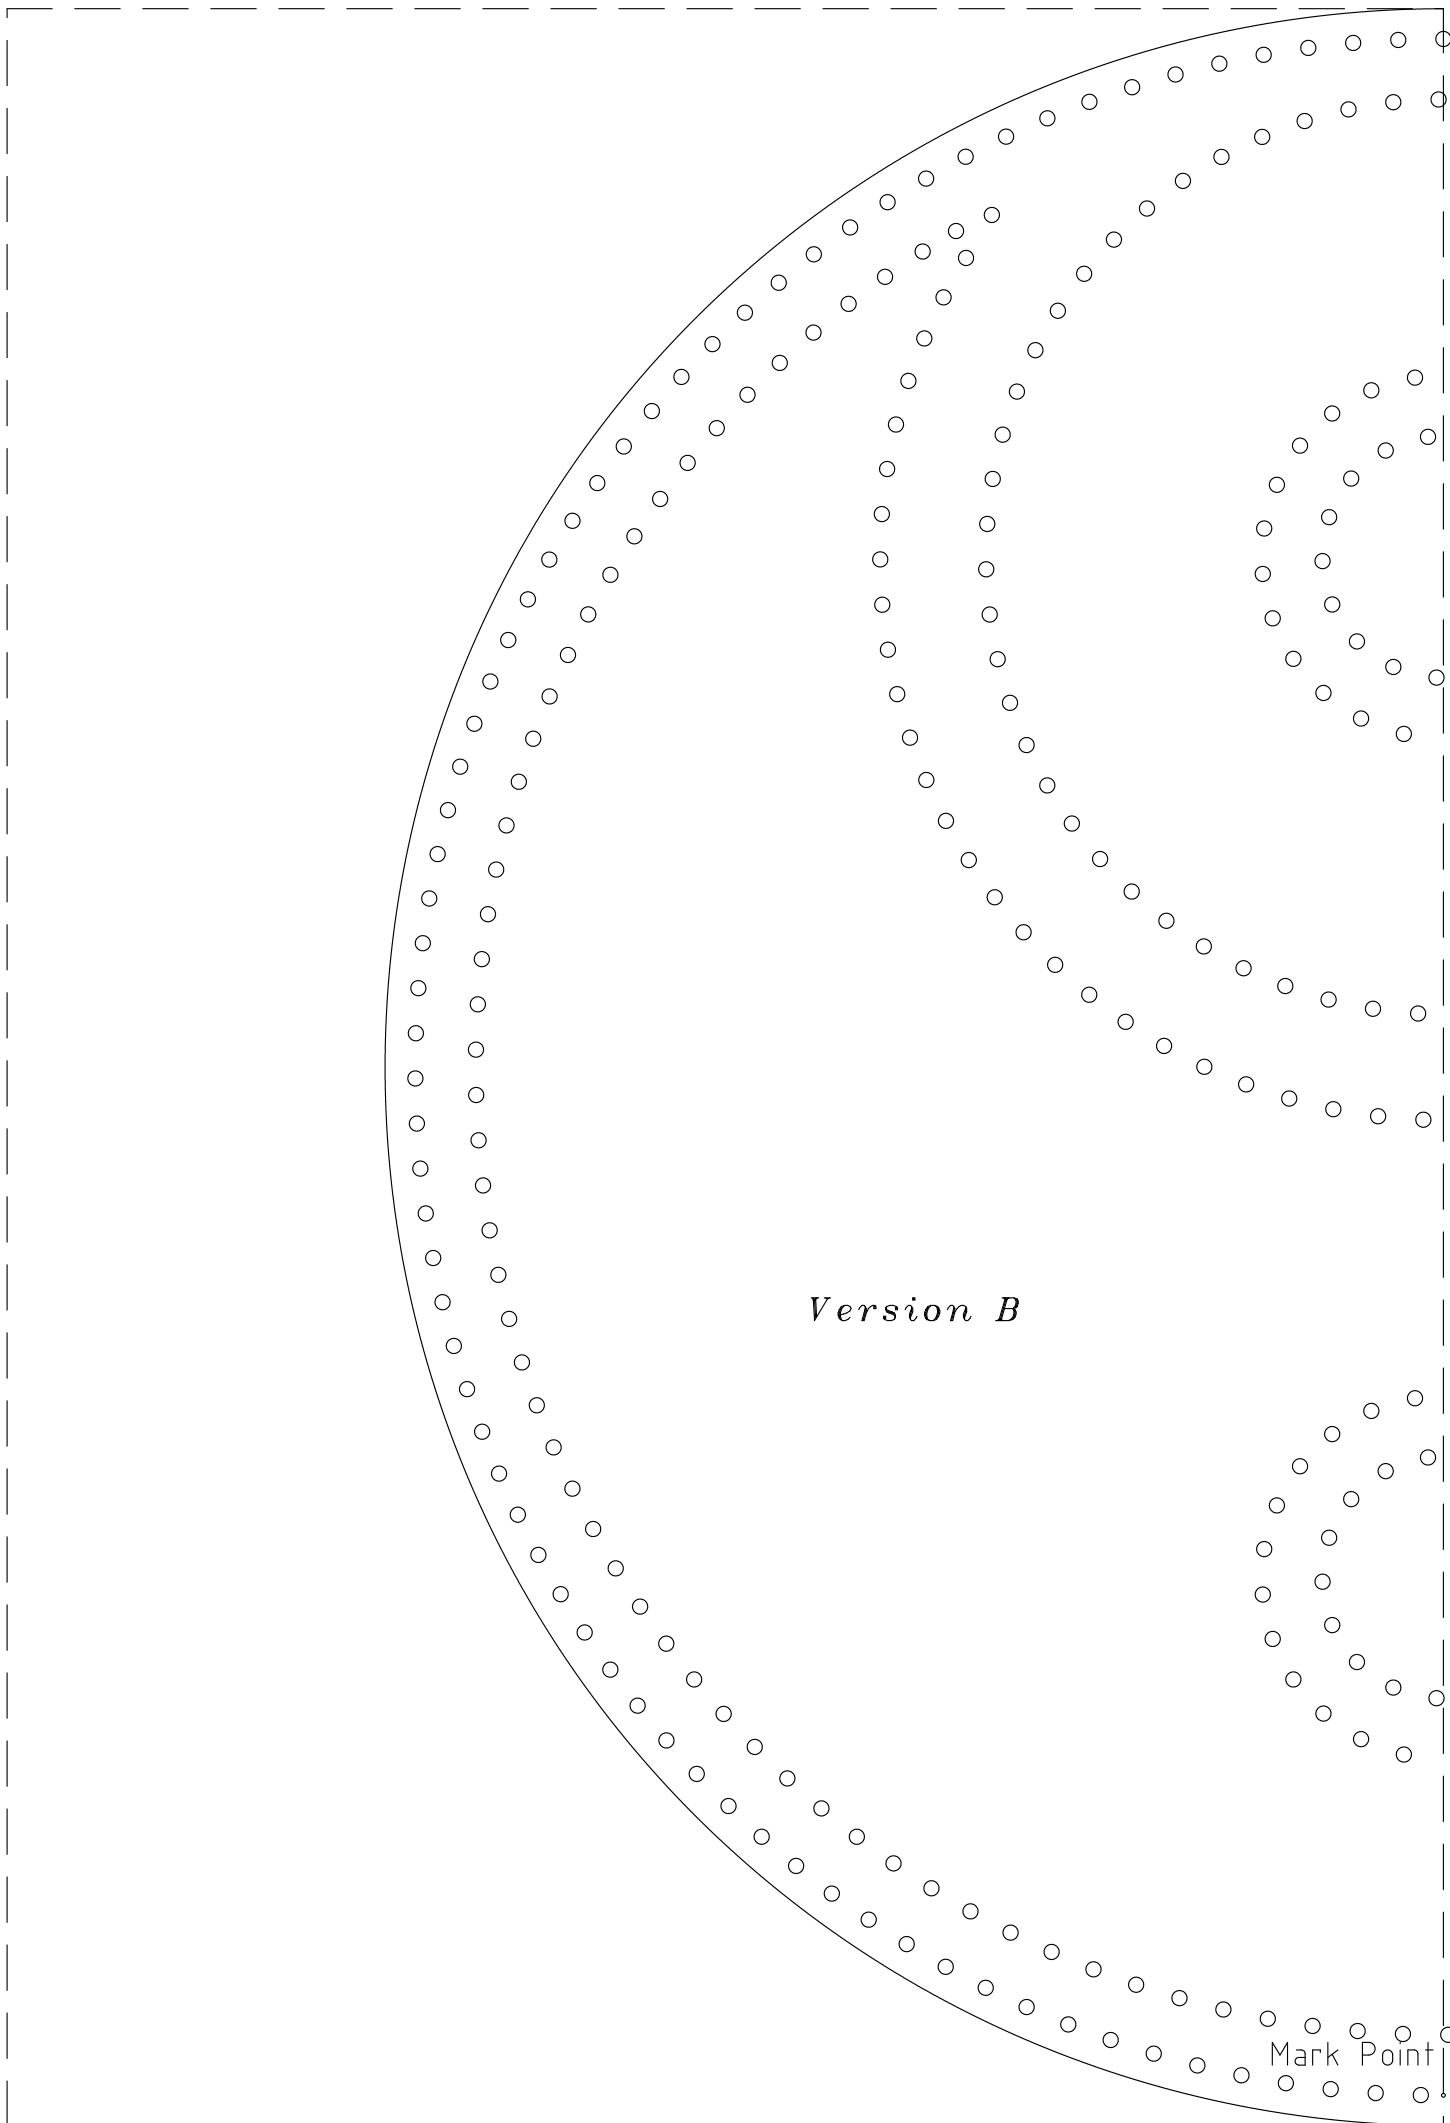 

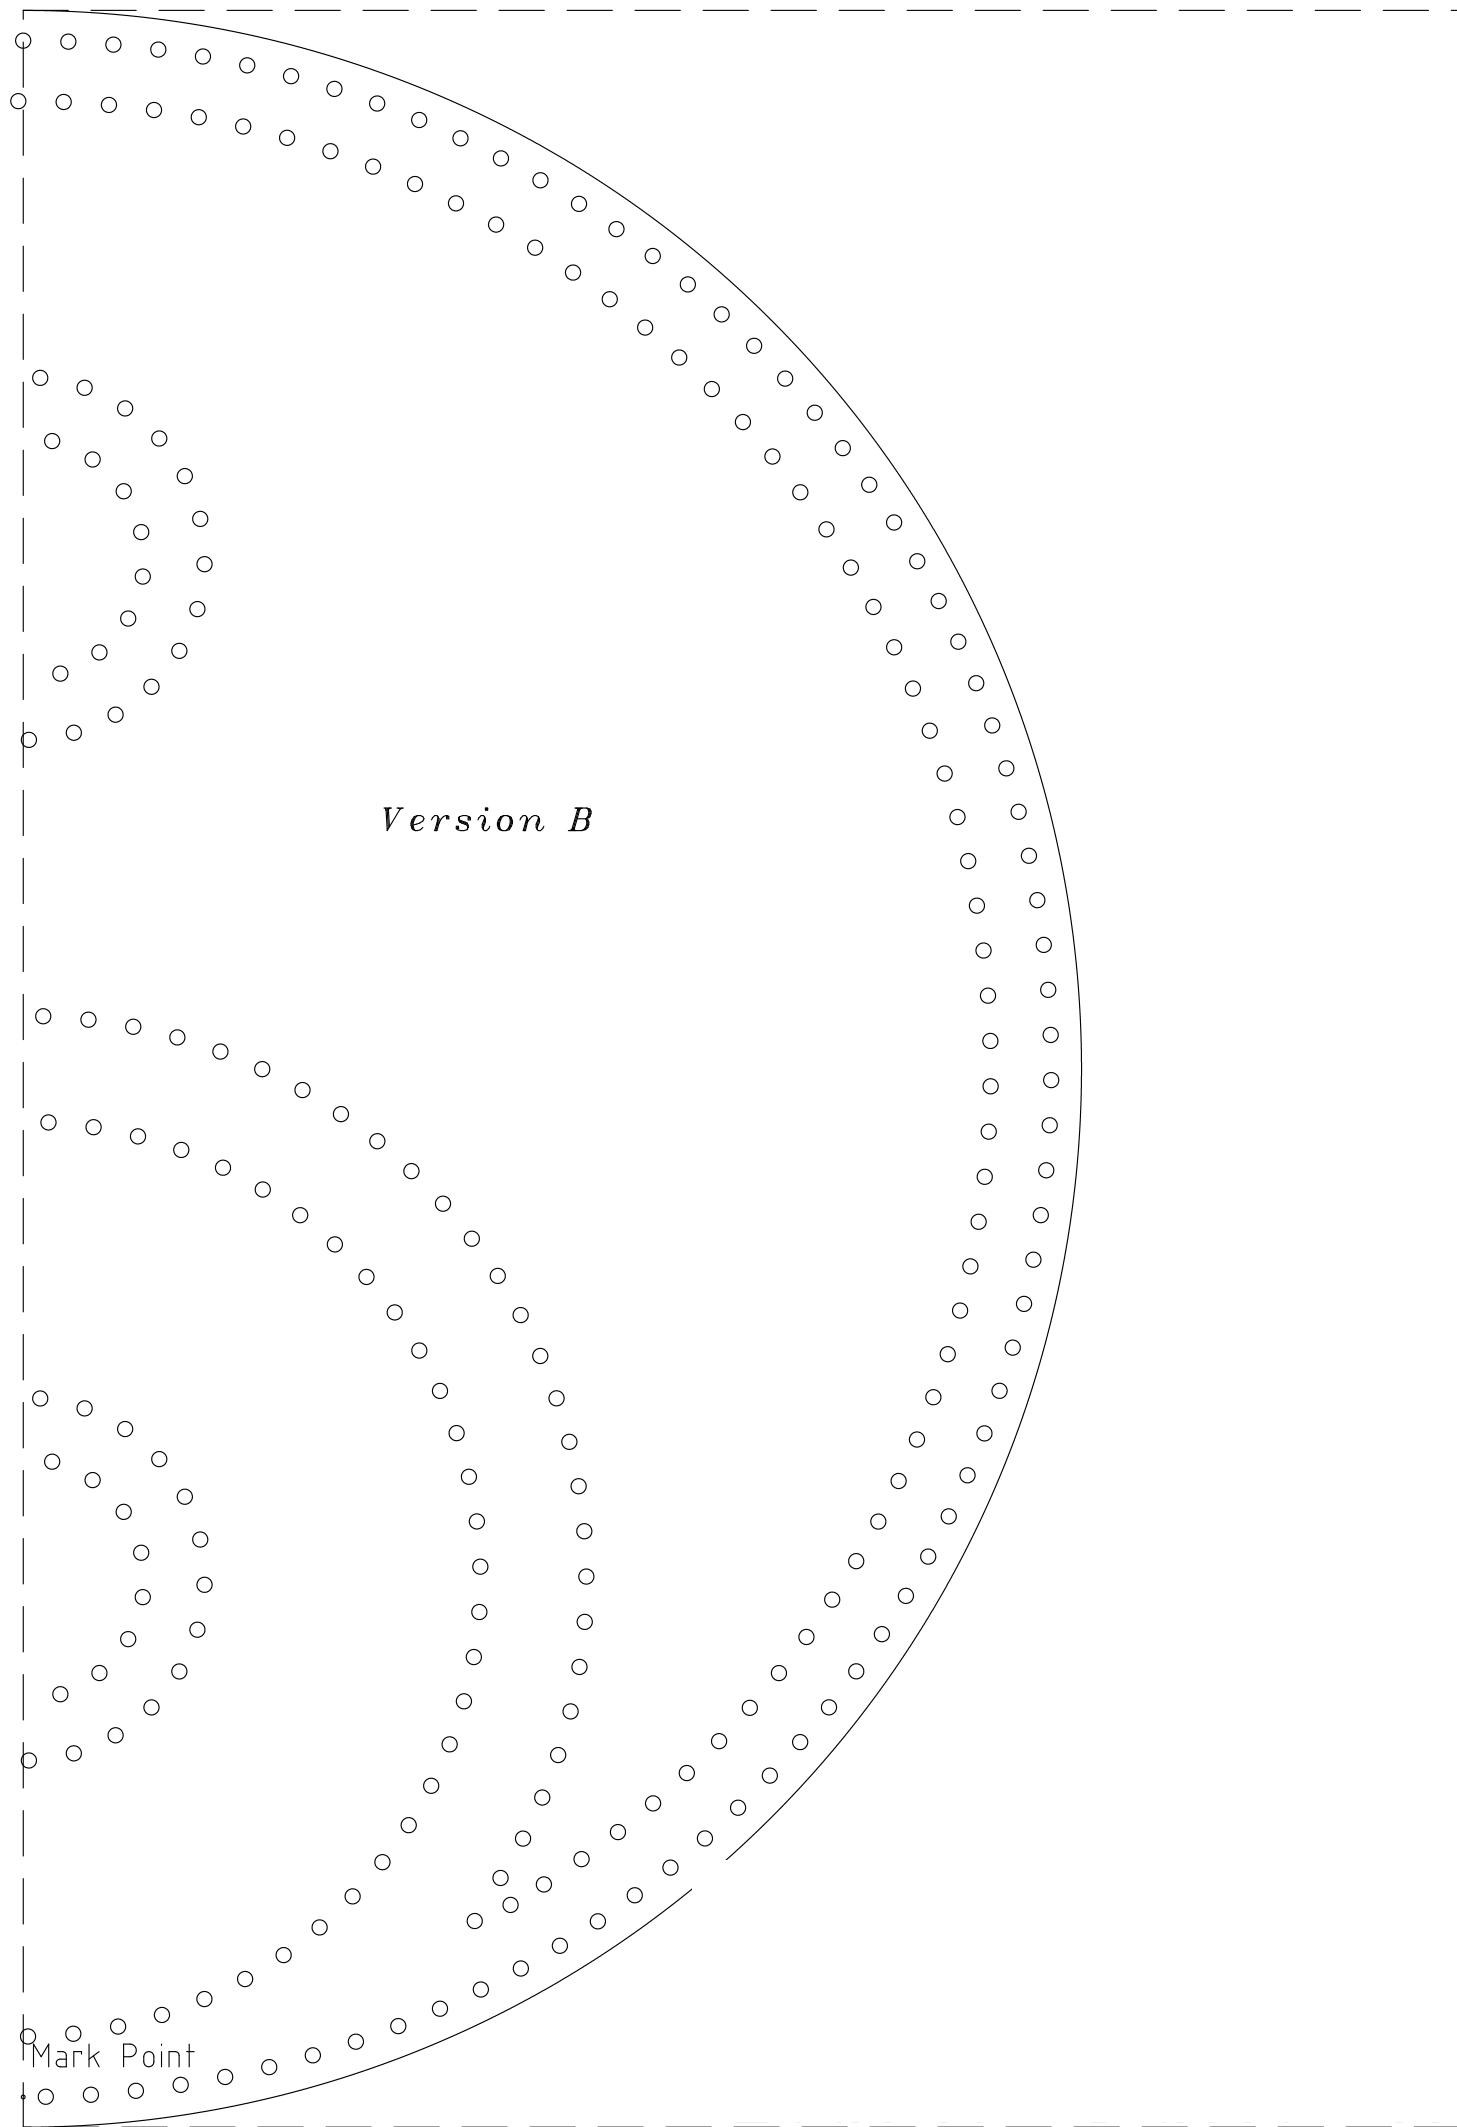 

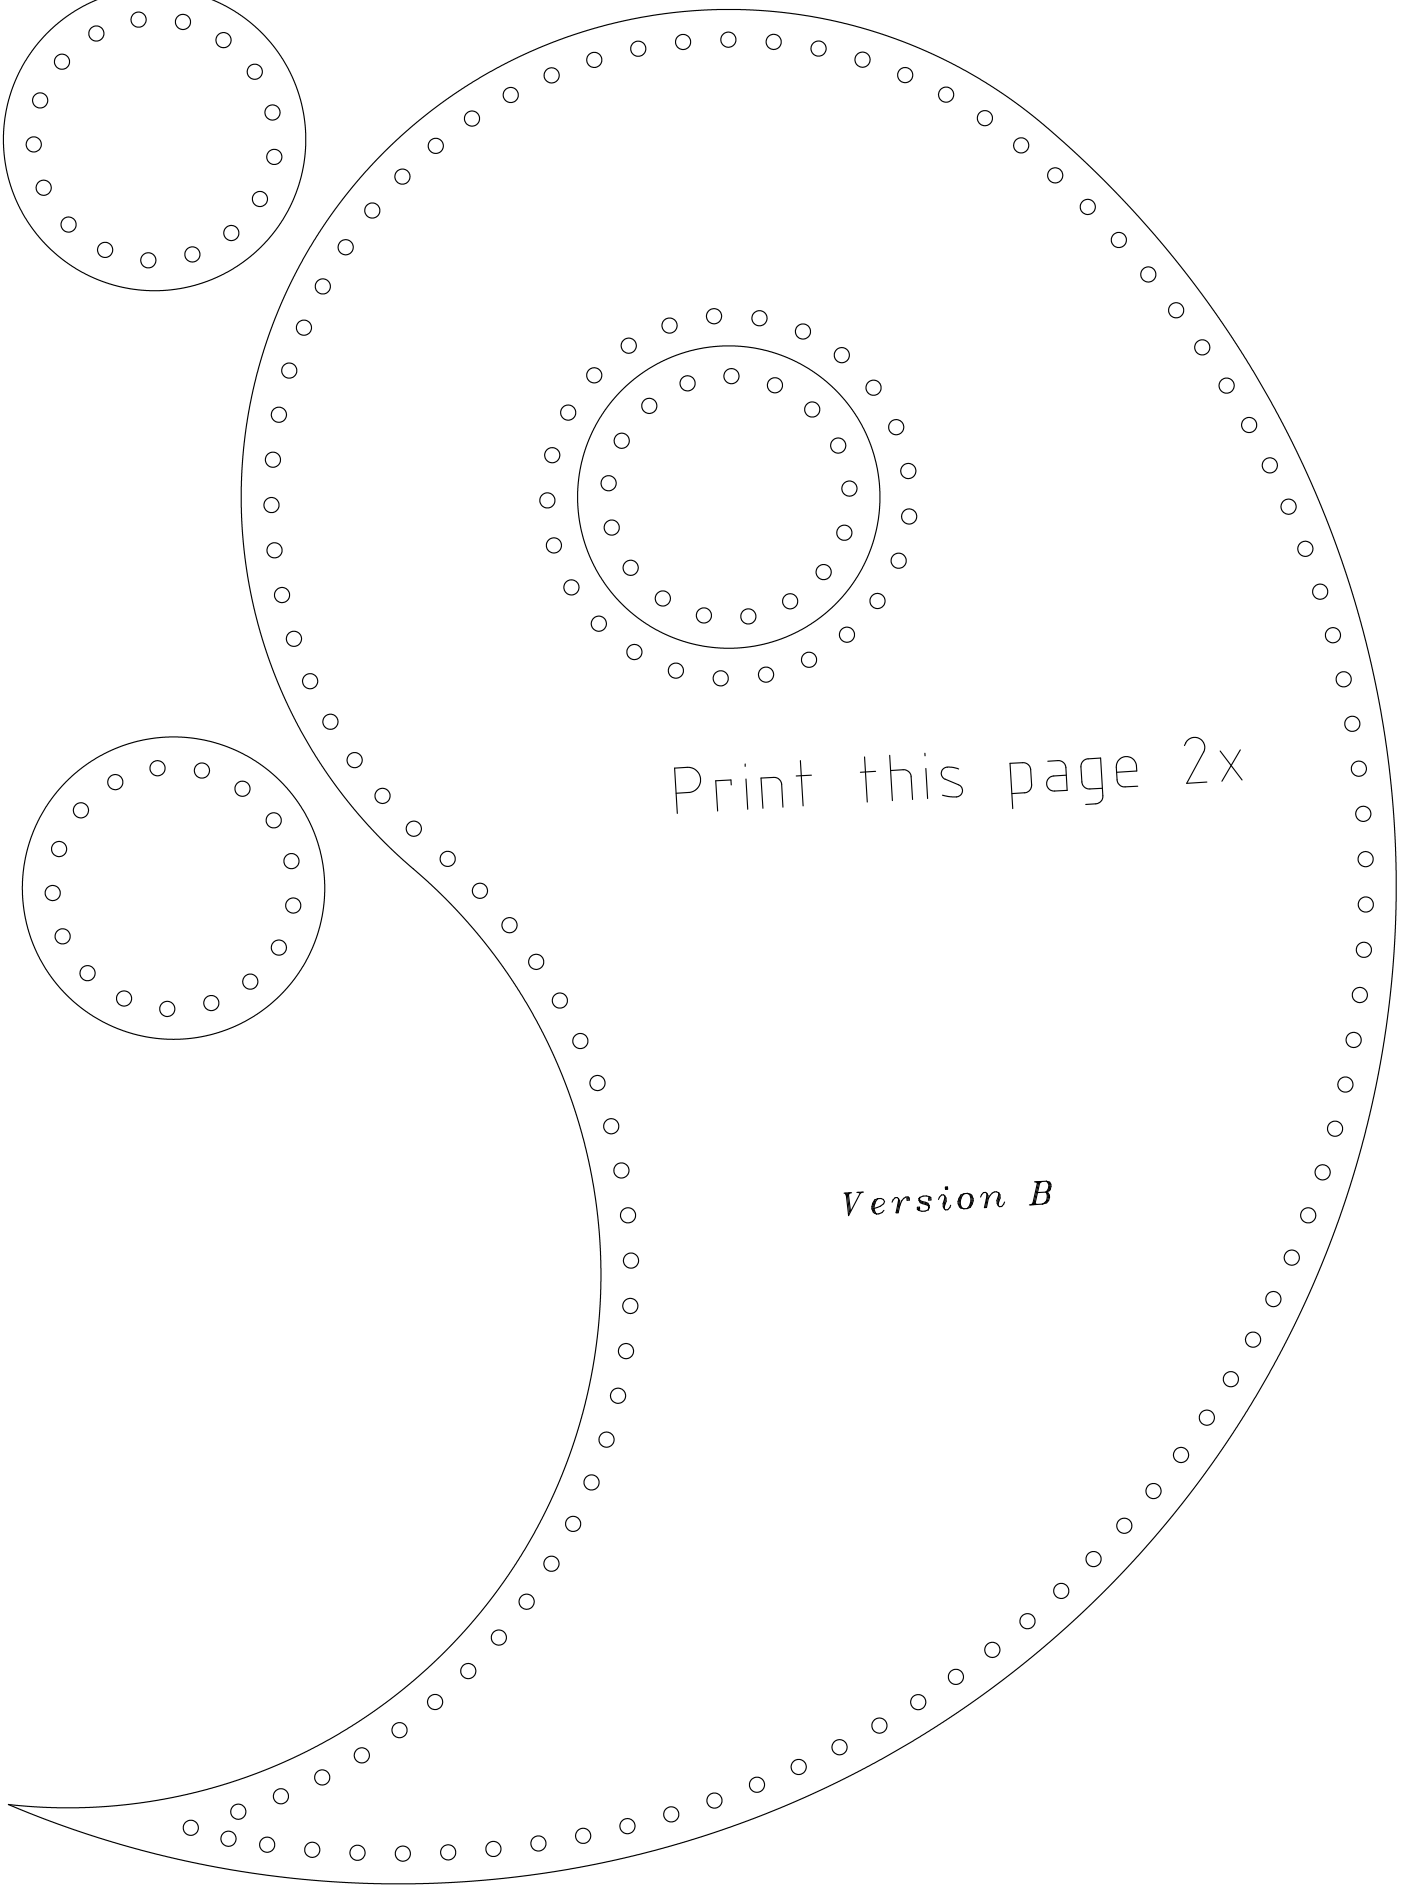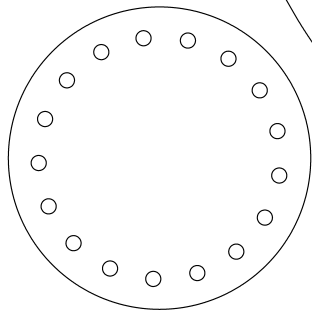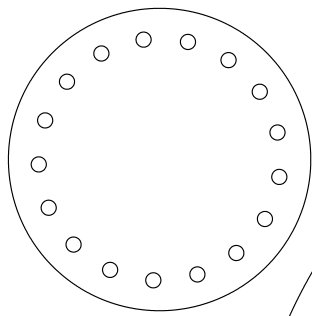   

Print this page 2x

Version B

