 
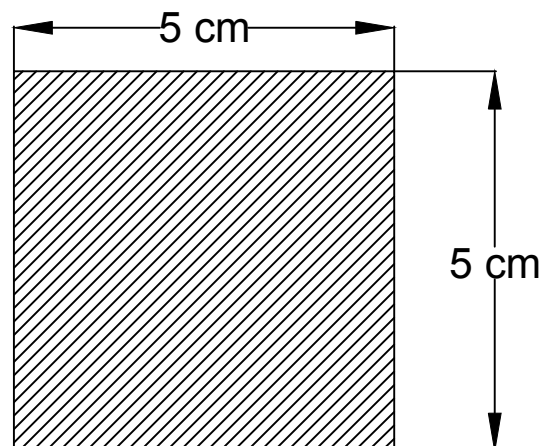 





18,2 cm

Test Page



Select A4 in the paper size printing menu
Choose "actual size" in the printing preferences
Make sure these dimensions are correct
before starting your pattern

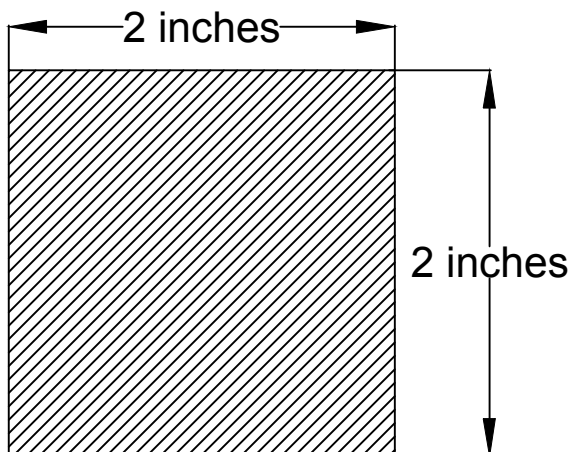


   7,17 inches

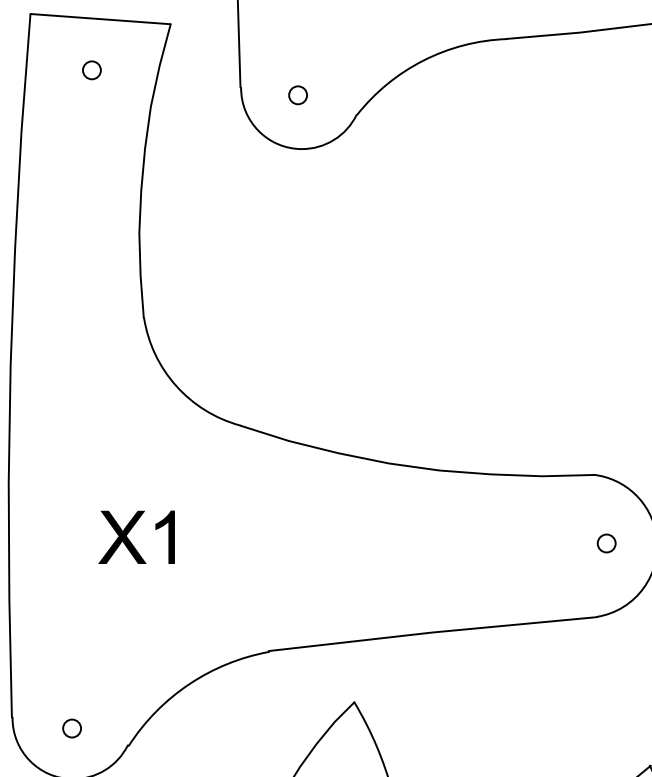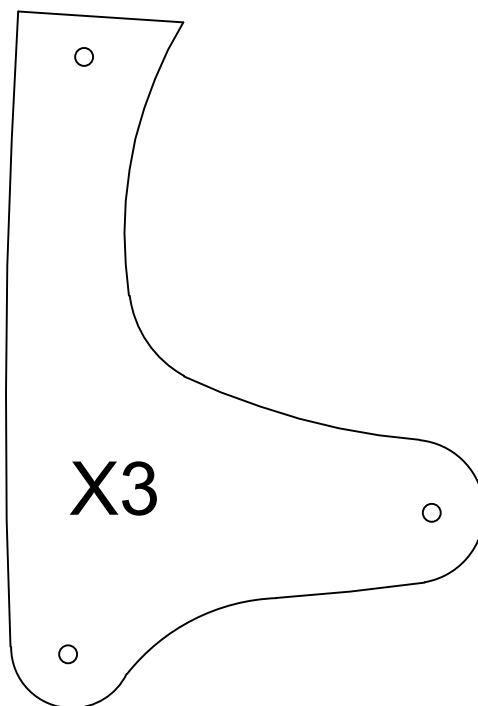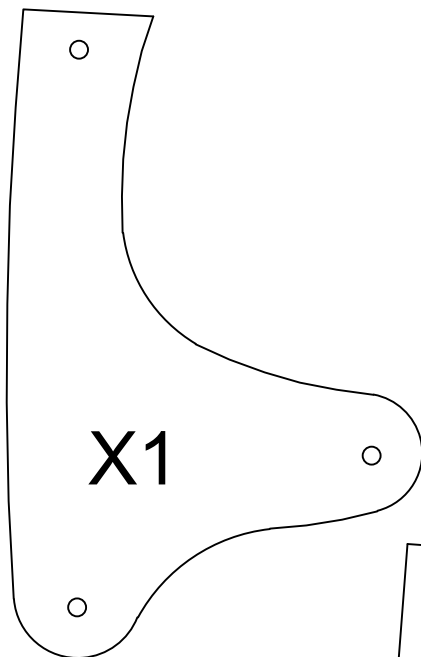

right hand
M
20.5-23.5 cm

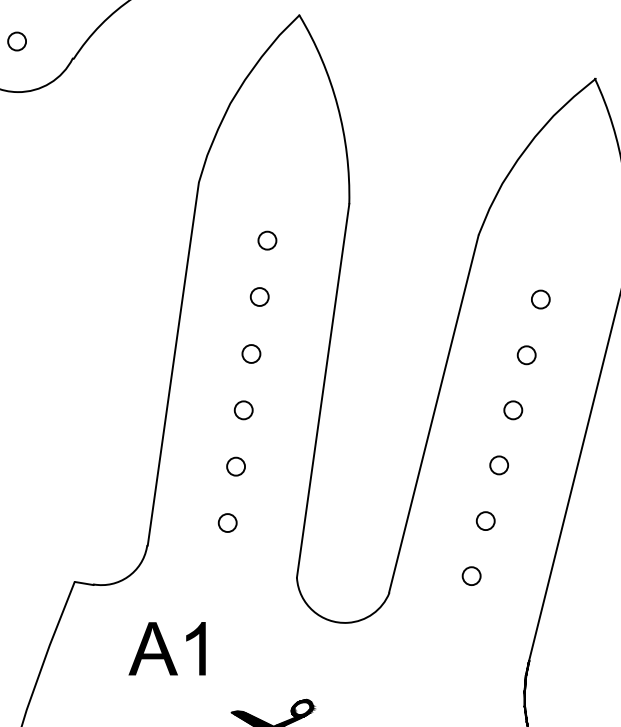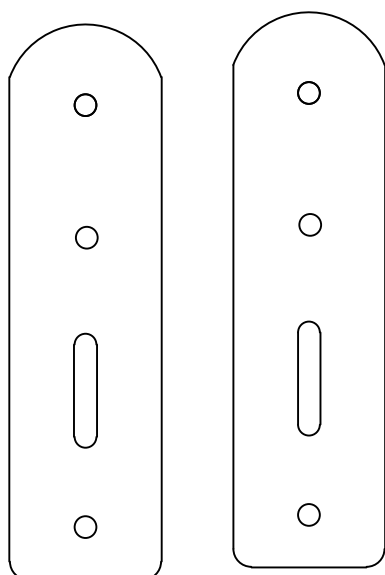  

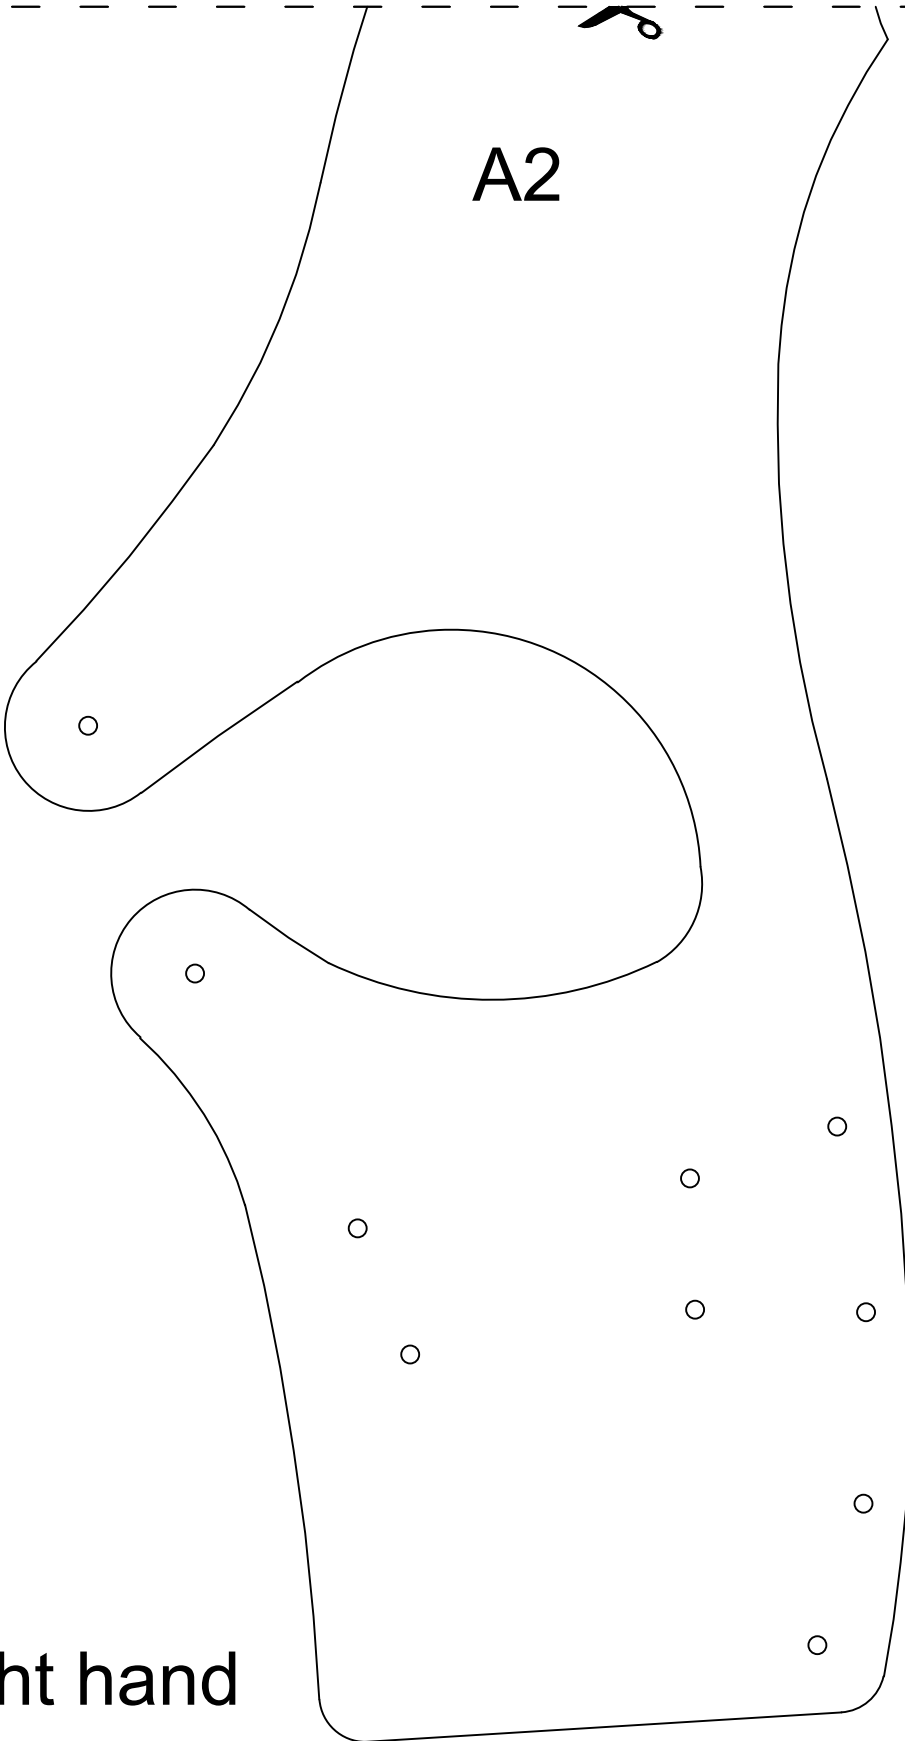 


A2

The image shows a pattern piece labeled 'A2' within a dashed rectangular border. The pattern piece is an irregular shape with a small notch at the top center, indicated by a scissors icon. It features a large, rounded, bulbous section in the middle. There are two small circles on the left side of the pattern, one near the top and one near the middle. The bottom right corner of the pattern piece is rounded. The entire pattern piece is enclosed within a dashed rectangular border.


right hand

M

 
20.5-23.5 cm

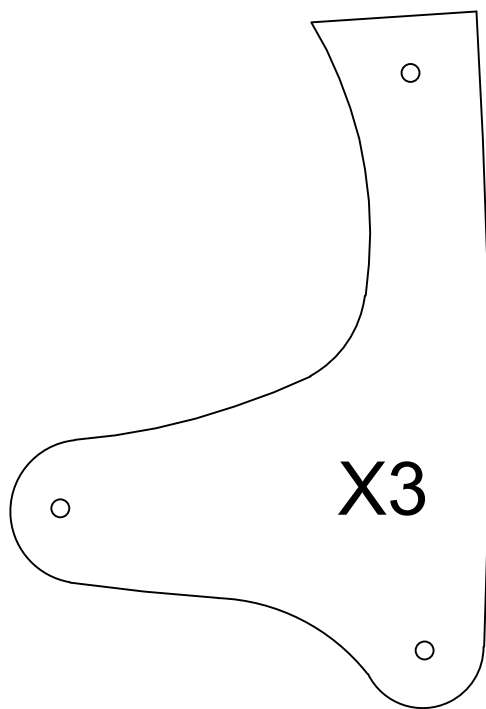

X3

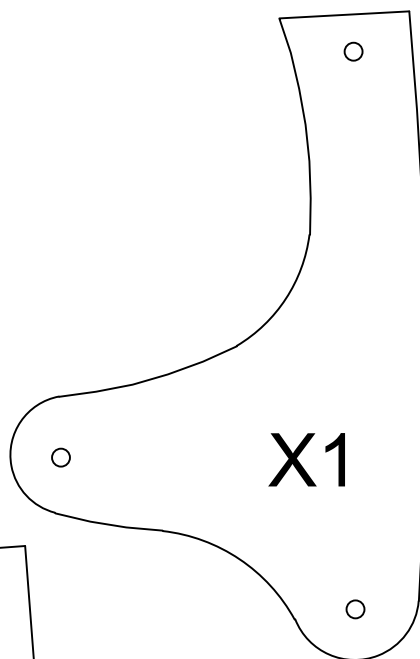 

X1

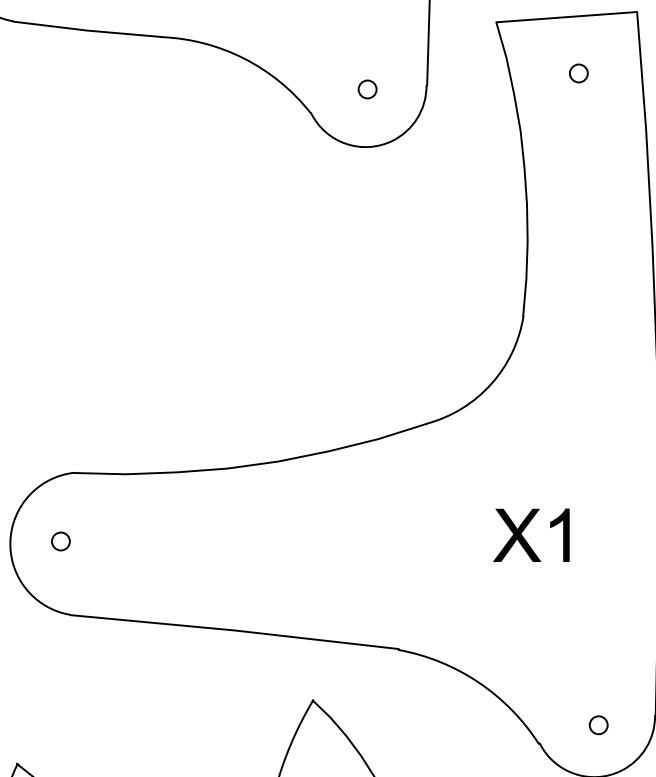 


X1



left hand


M

 20.5-23.5 cm

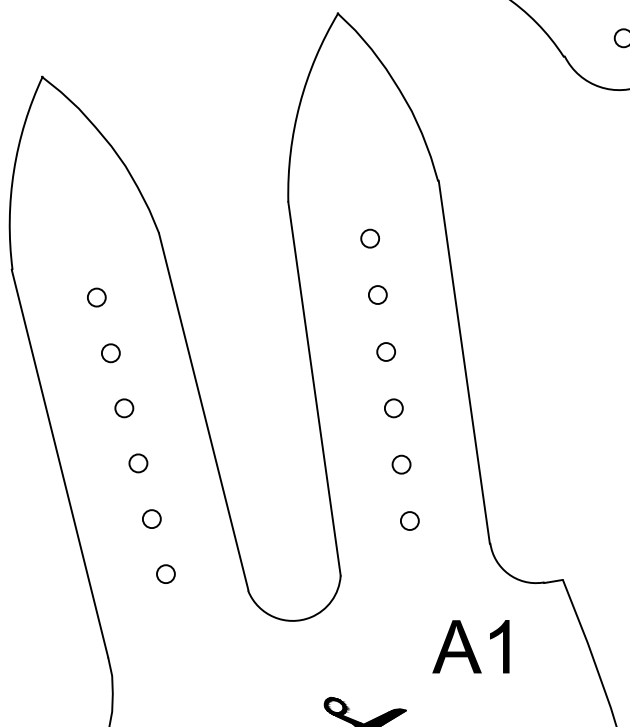

A1

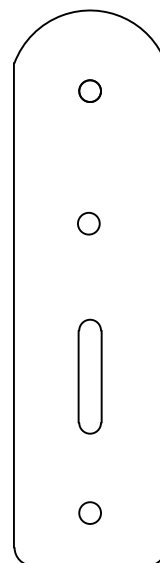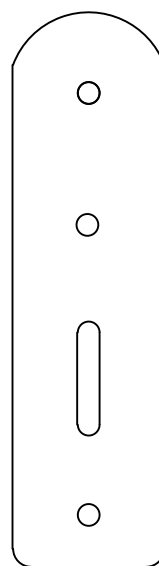  

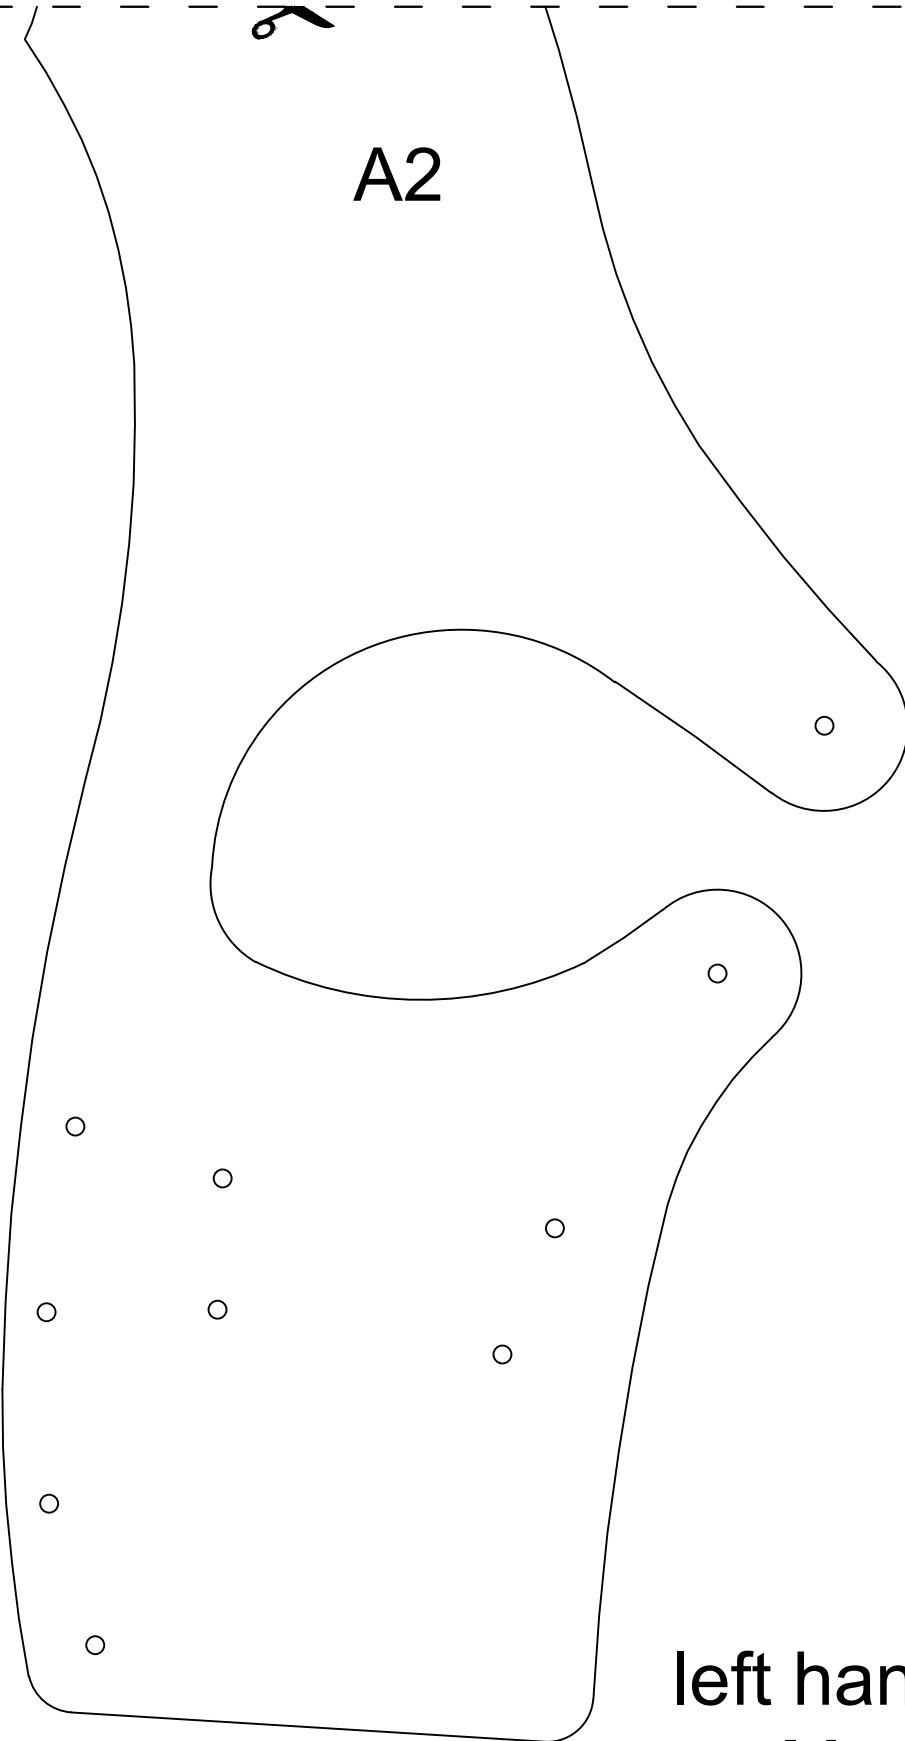 

A2

left hand

M

20.5-23.5 cm