



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

Select Actual size

Set the paper size

Select the paper size

Scale 100%

The image displays two screenshots of Adobe Acrobat's printing interface. The left screenshot shows the 'Print' dialog box. In the 'Pages to Print' section, 'All' is selected. In the 'Page Sizing & Handling' section, the 'Size' button is selected, and 'Actual size' is chosen under the 'Fit' options. The 'Page Setup...' button is highlighted with a red arrow and a callout box that says 'Set the paper size'. The right screenshot shows the 'Page Setup' dialog box. In the 'Page Attributes' settings, the 'Paper Size' is set to 'A4' (210 by 297 mm) and the 'Scale' is set to '100%'. Both 'Paper Size' and 'Scale' are highlighted with red arrows and callout boxes that say 'Select the paper size' and 'Scale 100%' respectively.

IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>





