 
 
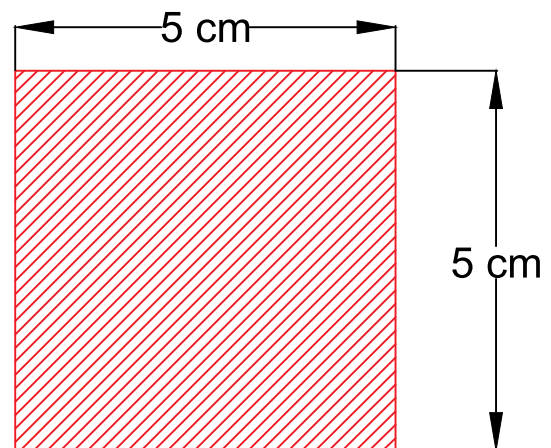 
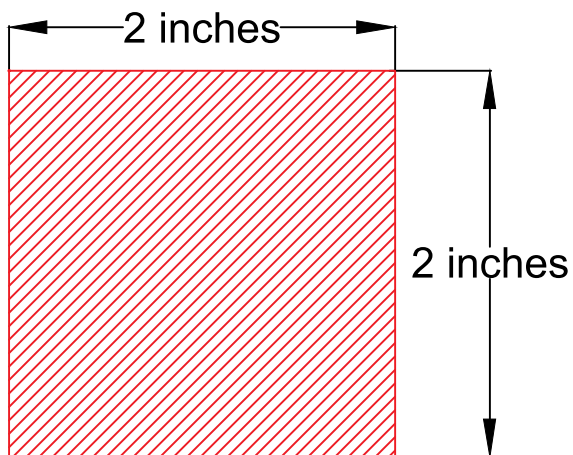 


# Test Page

 
Select A4 in the paper size printing menu  
Choose "actual size" in the printing preferences  
Make sure these dimensions are correct  
before starting your pattern

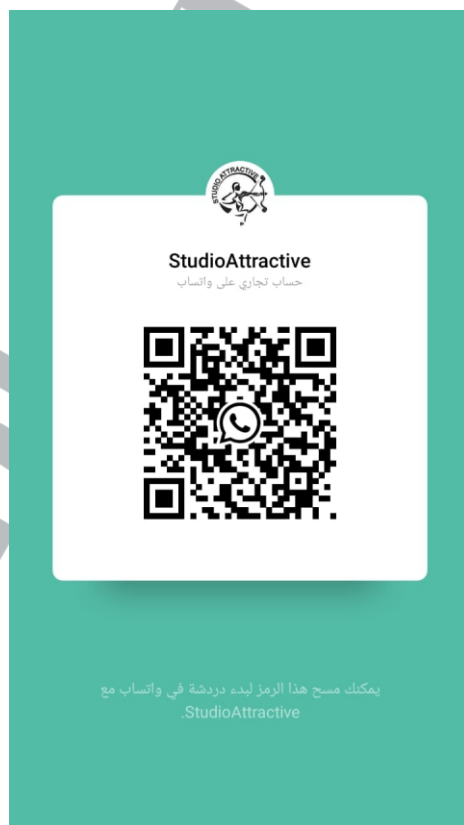

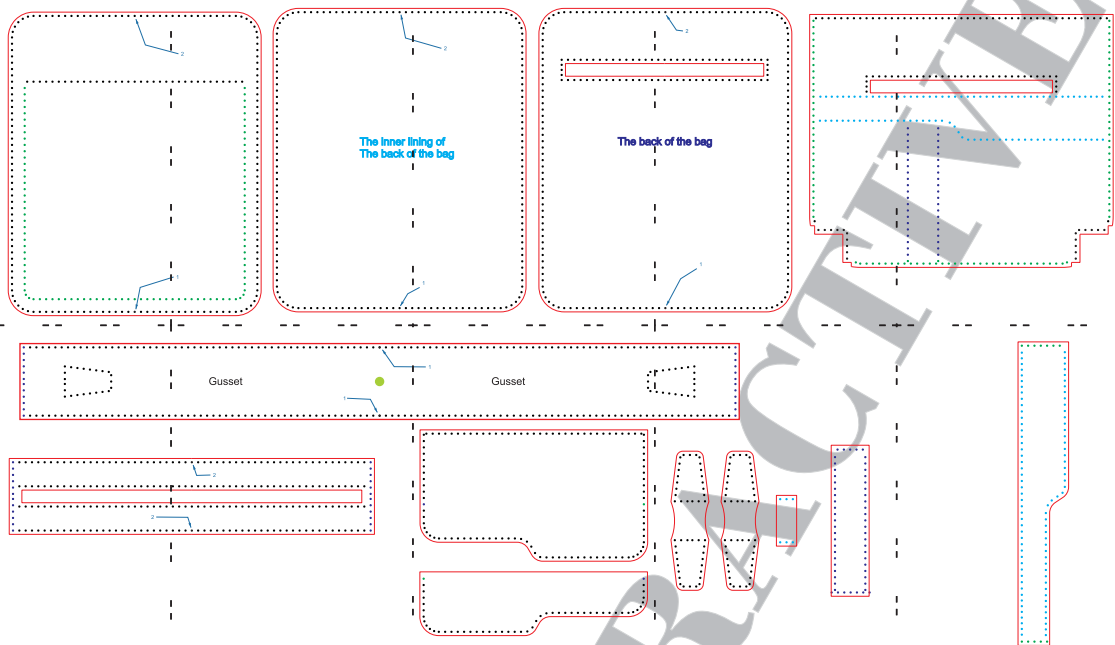

STUDIO ATTRACTIVE




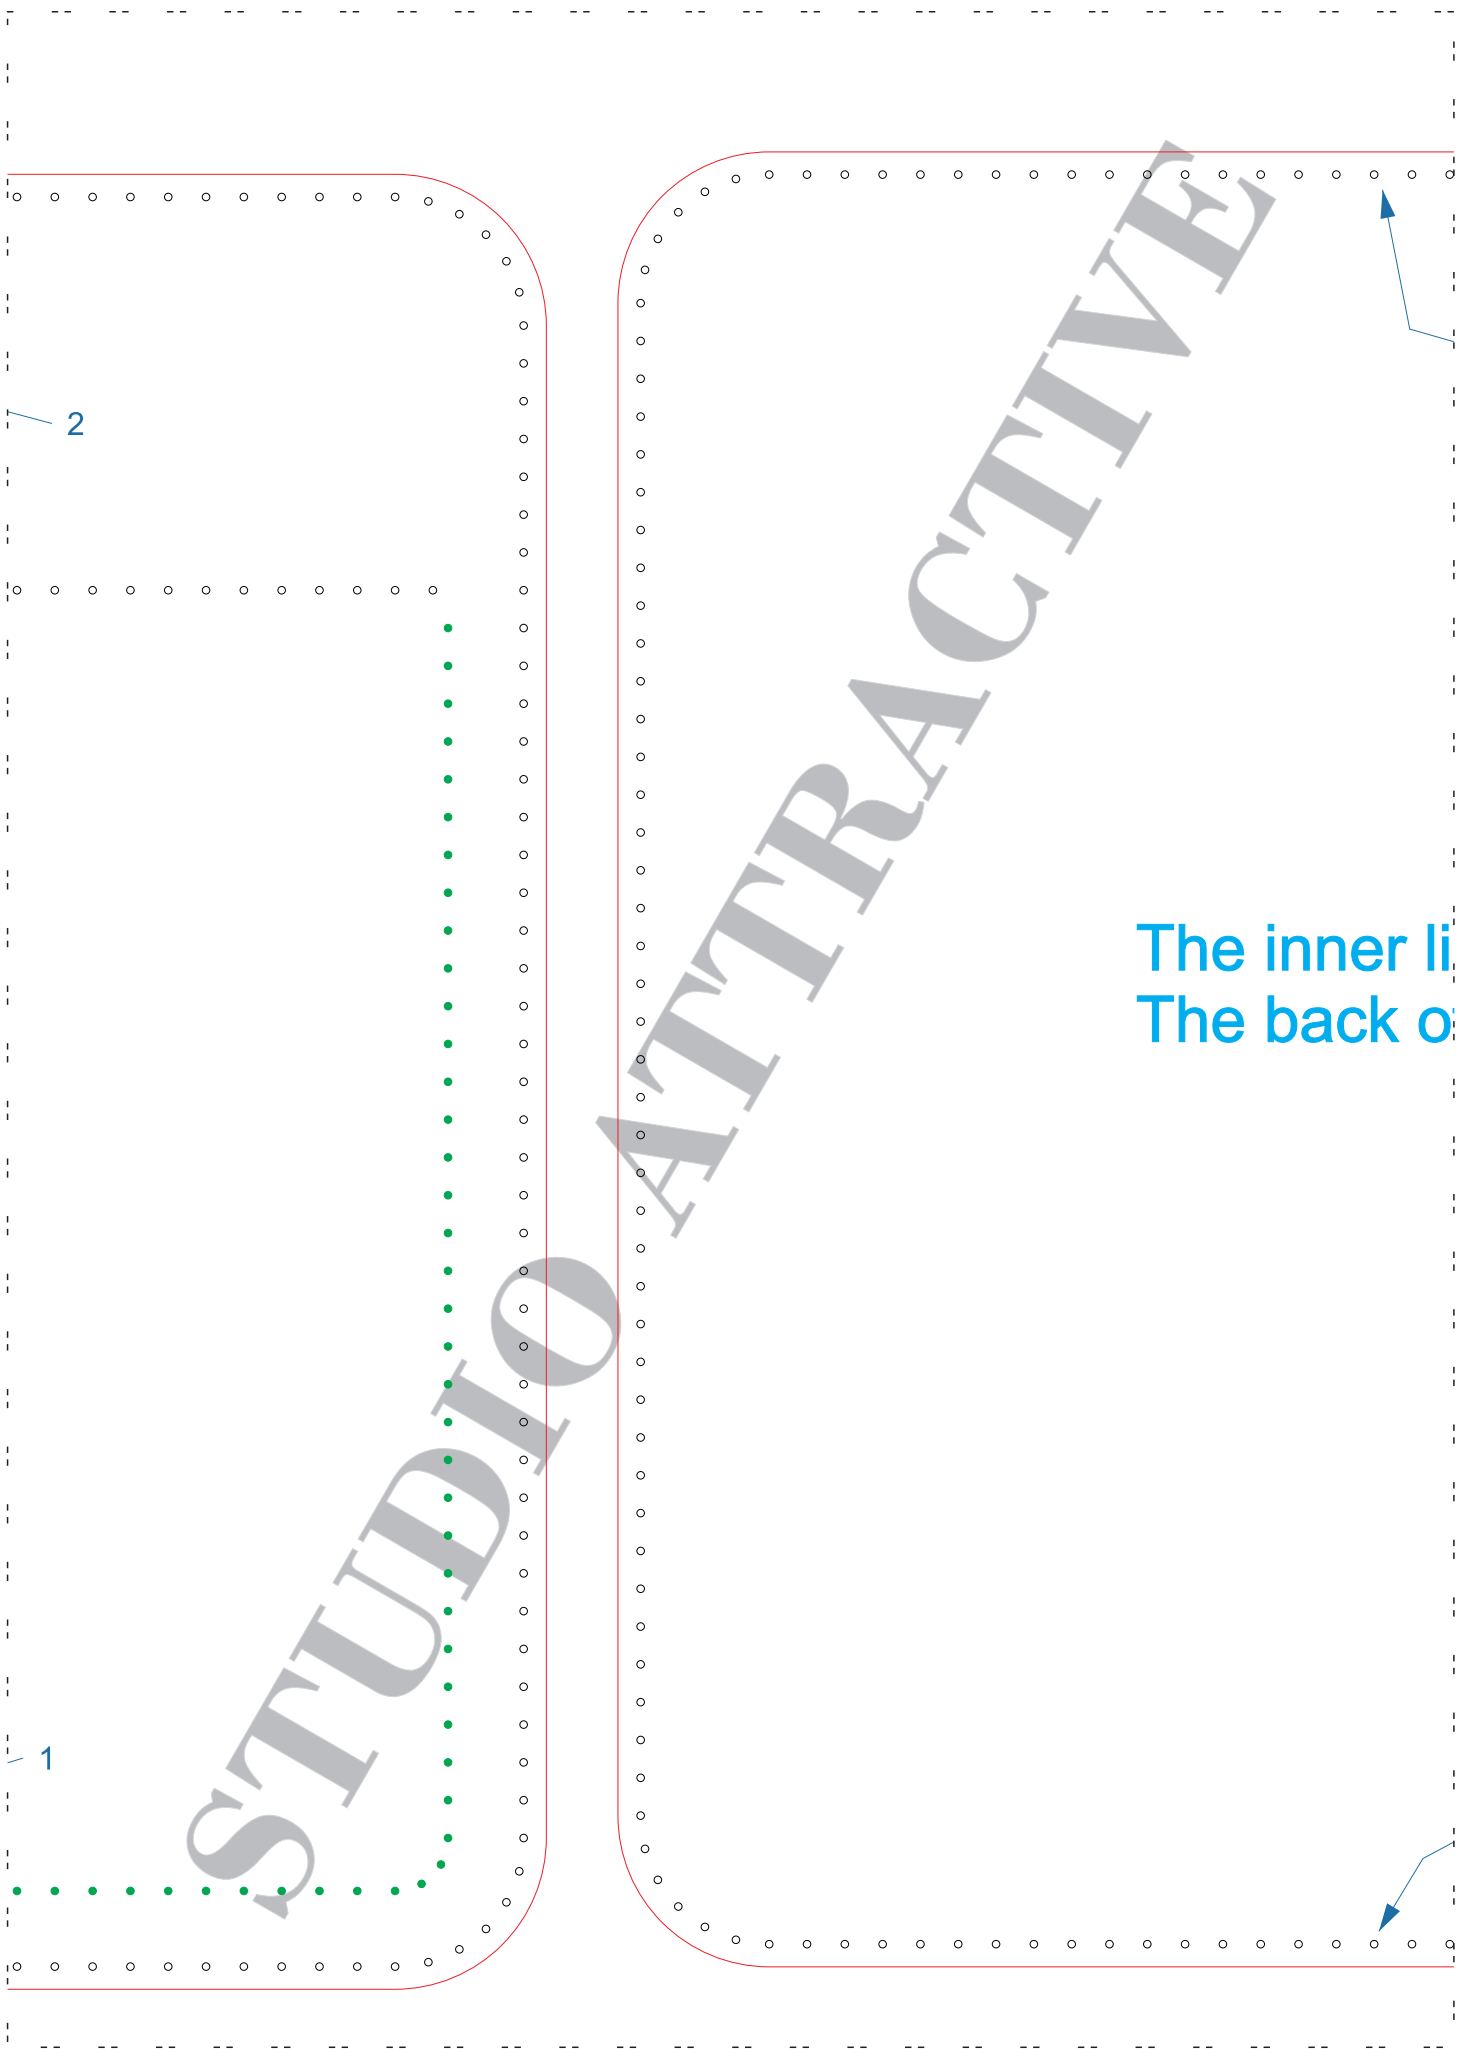

2


1

 The inner li  
The back o

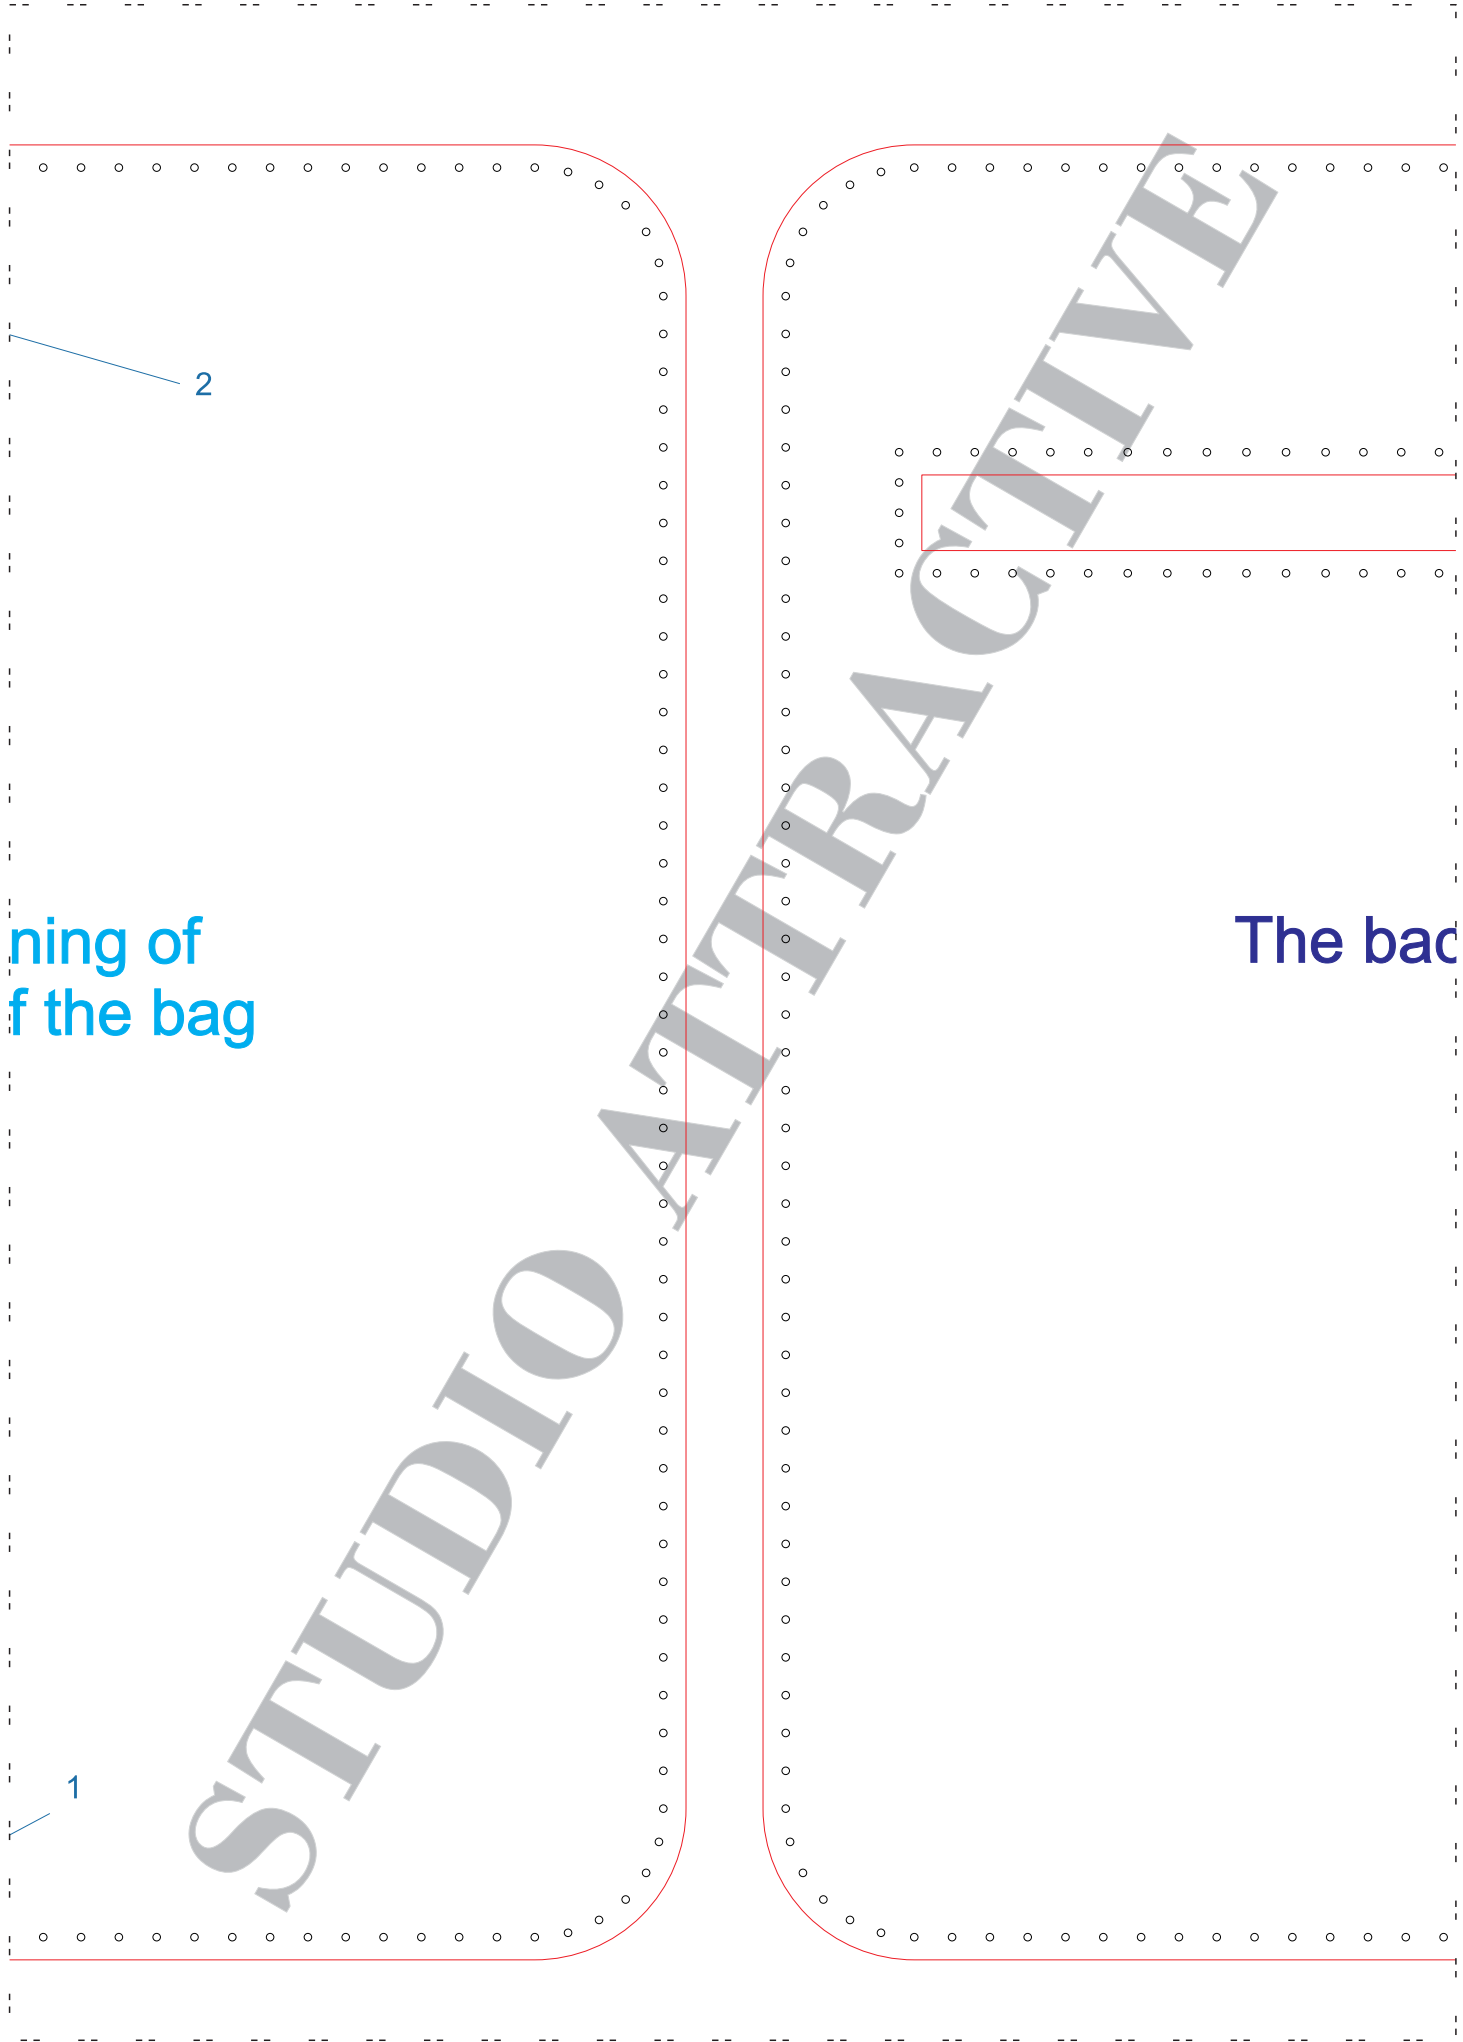


ning of  
f the bag

 
The bac

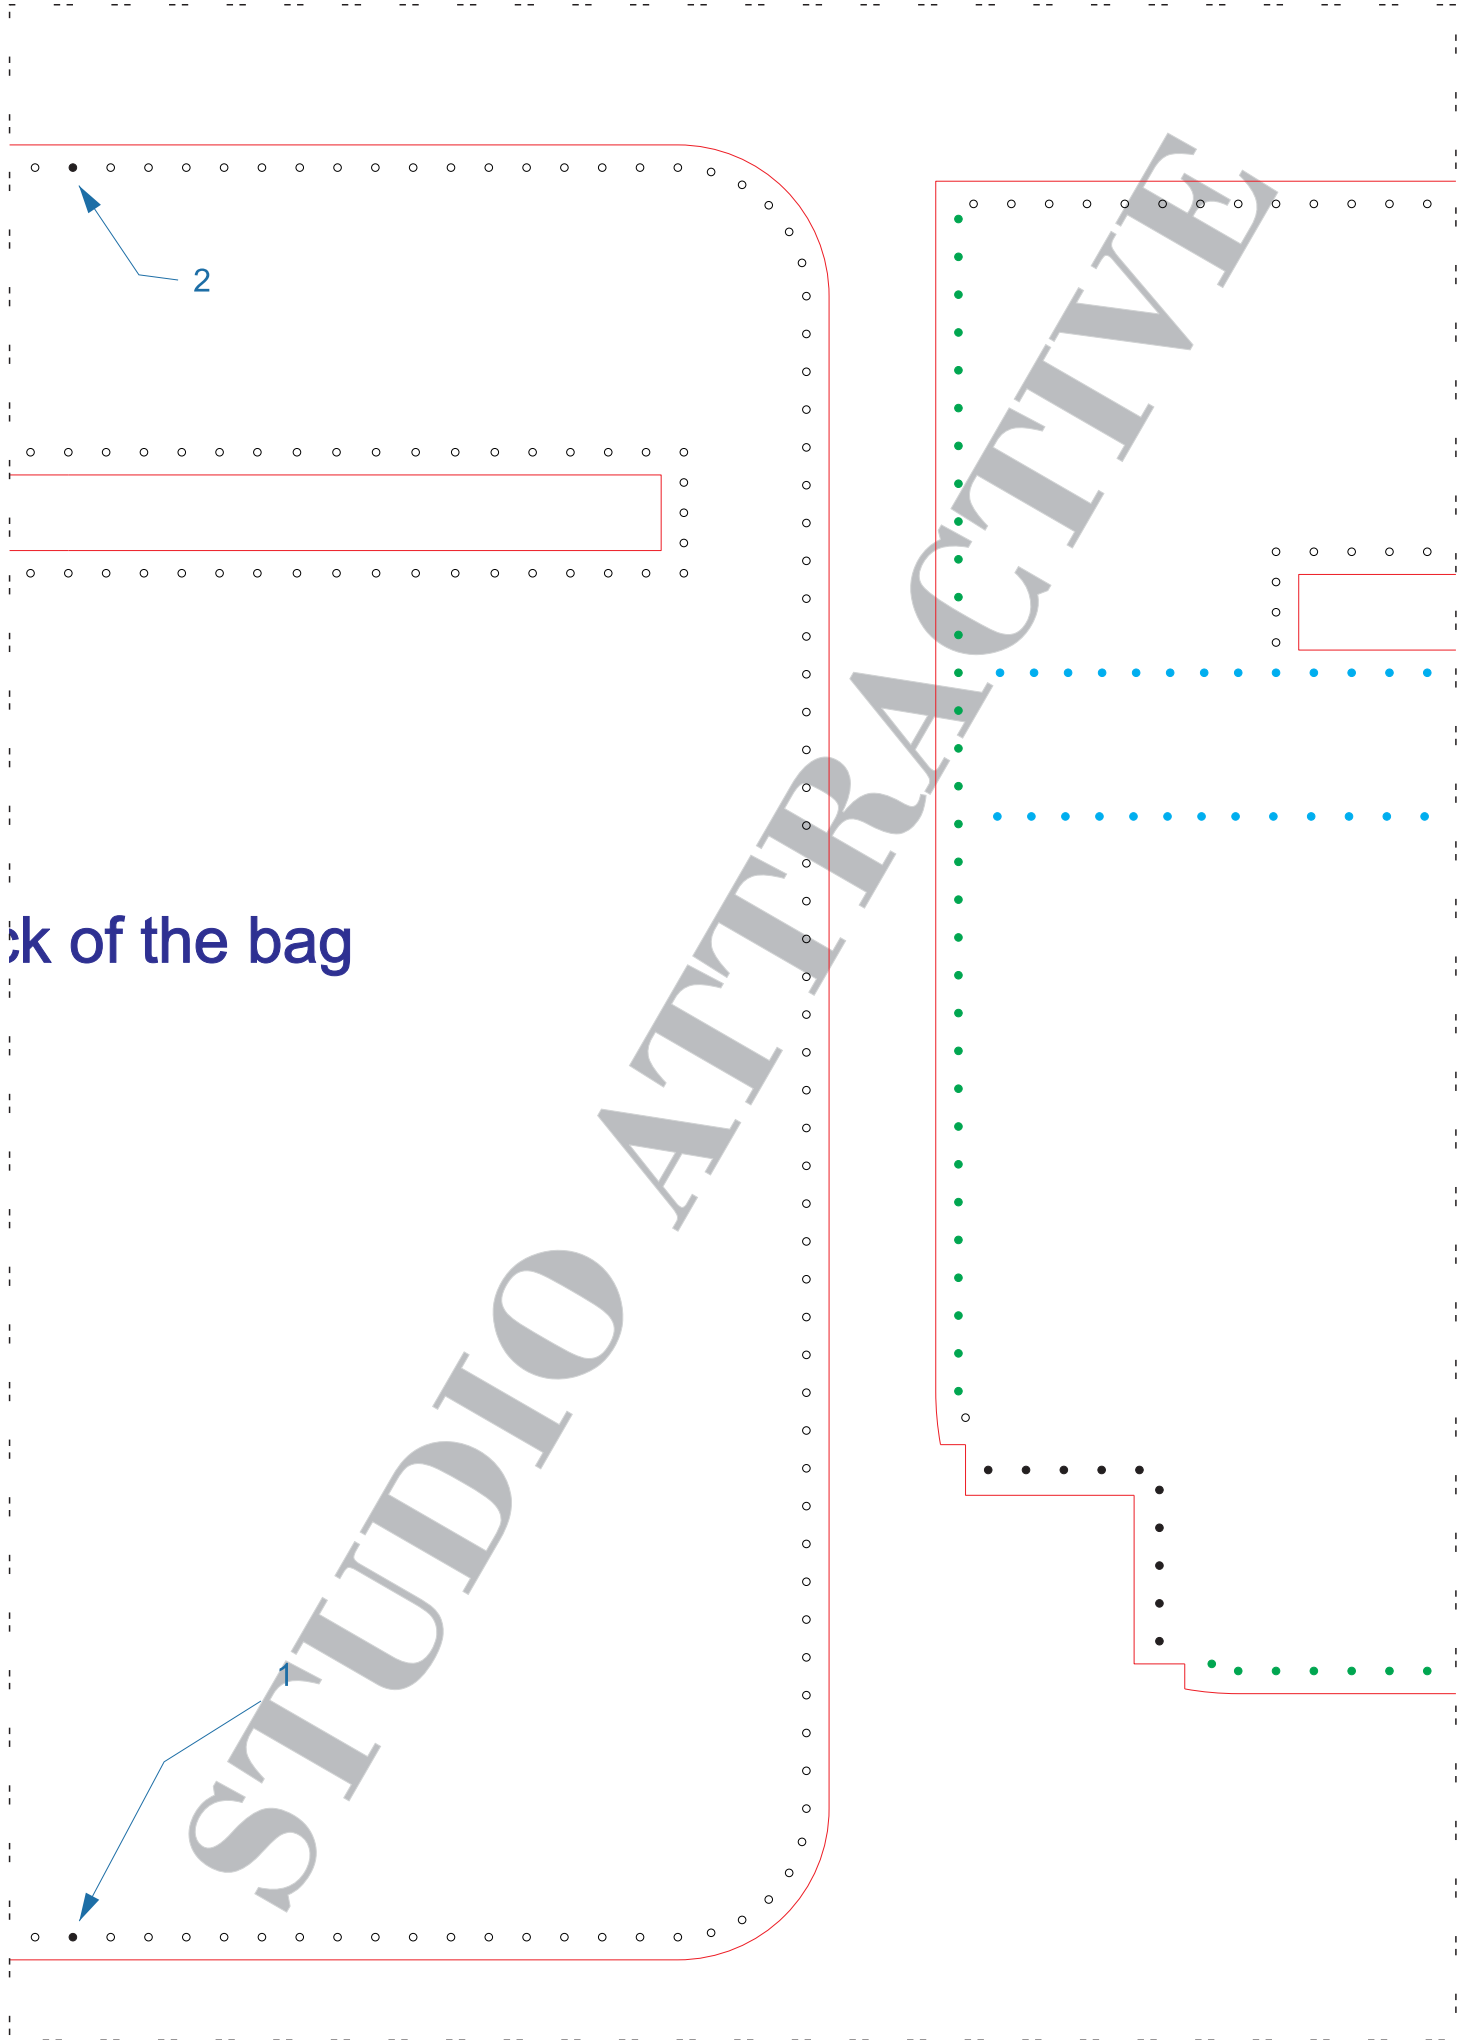

ck of the bag

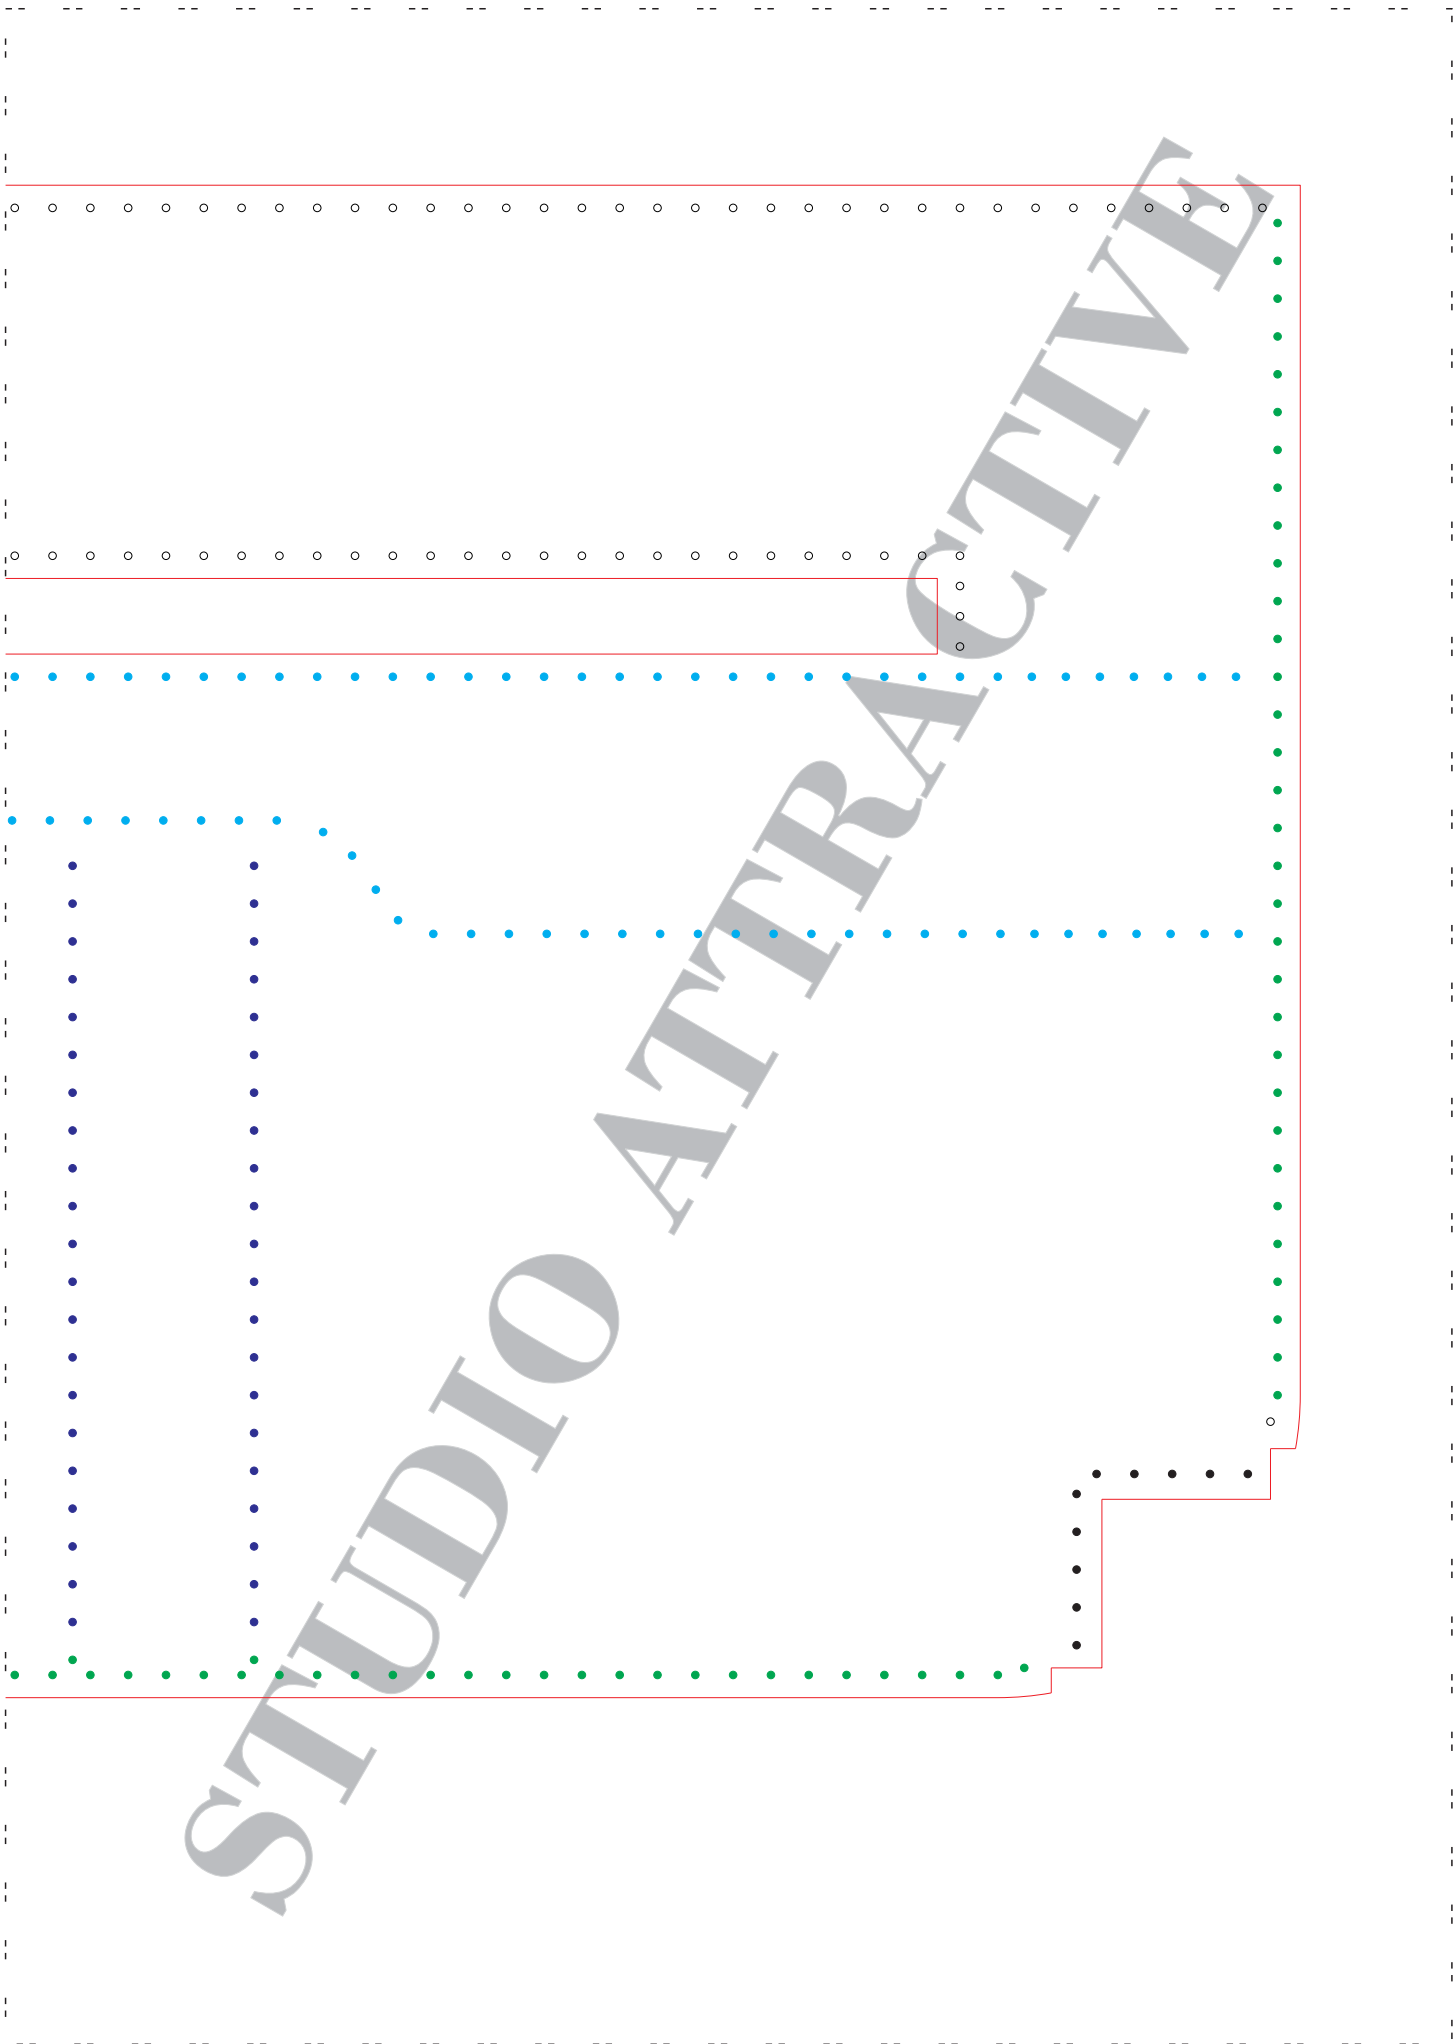 

STUDIO ATTRACTIVE

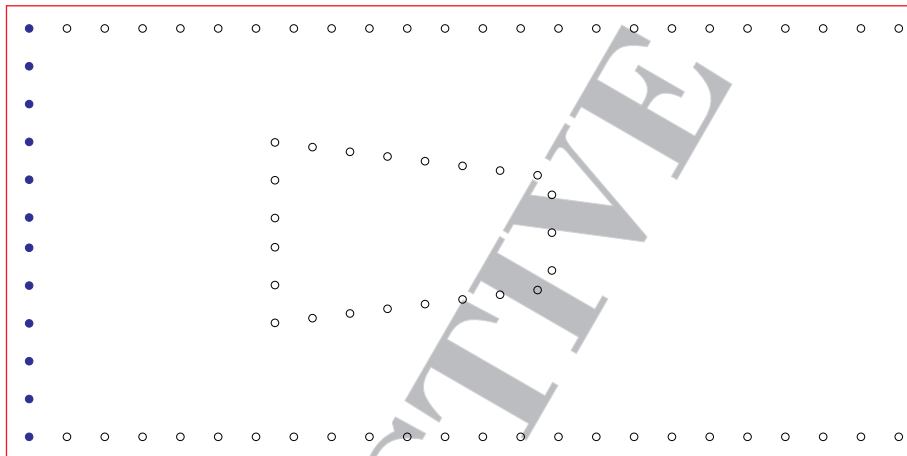 


# Gusset







1

 2

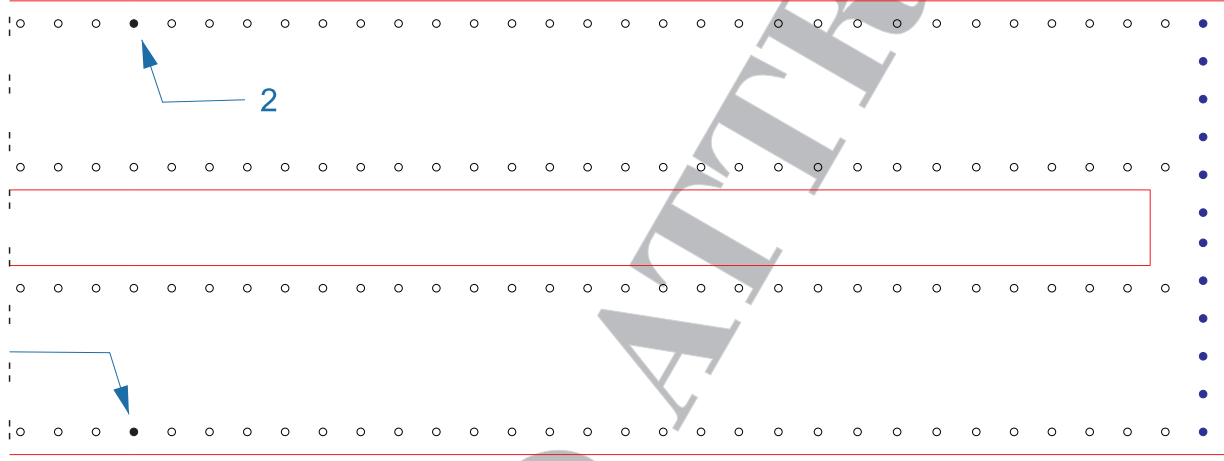

1

    Gusset

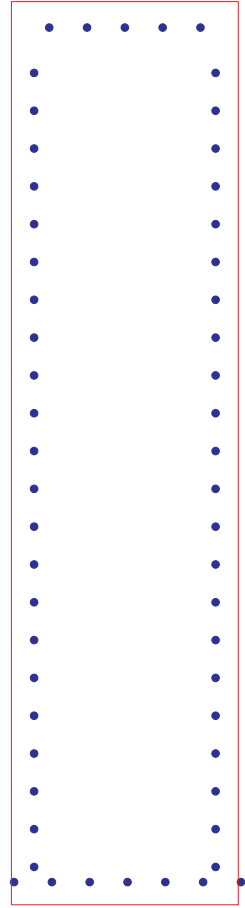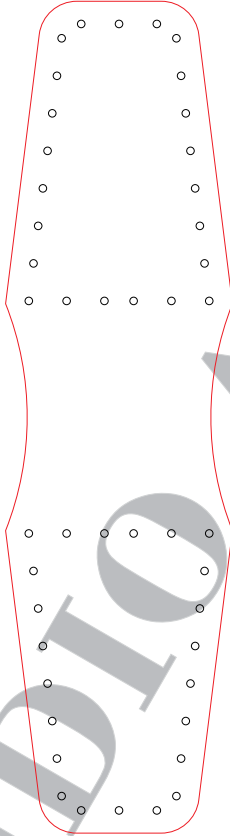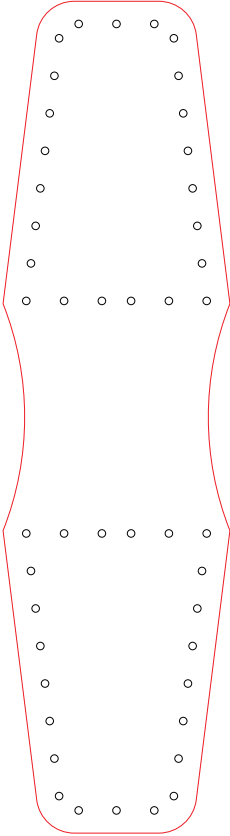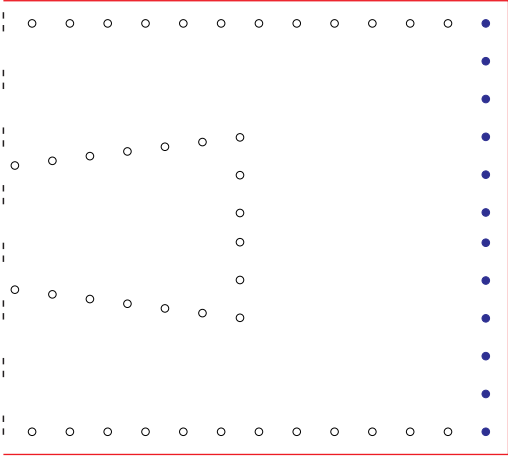

STUDIO ATTRACTIVE

