



19 cm

# Test page

Select A4 in the paper size printing menu


Choose «actual size» in the printing preferences

Make sure these dimensions are correct before starting  
your pattern

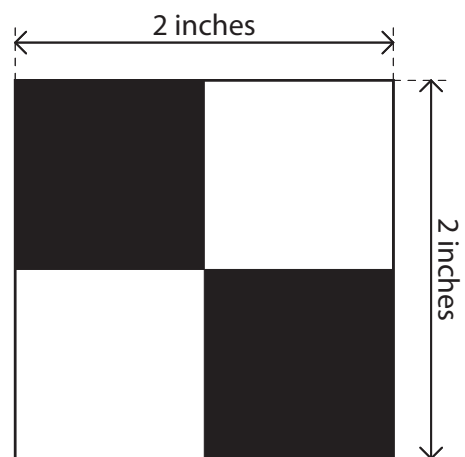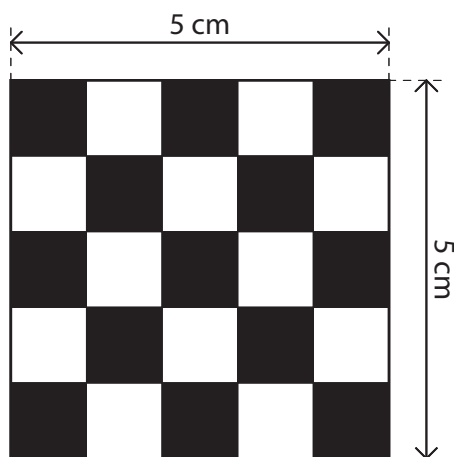

# OKLOM

OKLOM

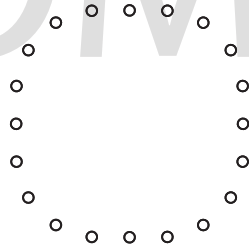

OKLOM

OKLOM

c

OKLOM

C

OKLOM

OKLOM

OKLOM

D

OKLOM

OKLOM

OKLOM

D

OKLOM

OKLOM

OKLOM

OKLOM

OKLOM

OKLOM

OKLOM

OKLOM

A

A

B

B

OKLOM

L

L

M



M

N


N

K

K

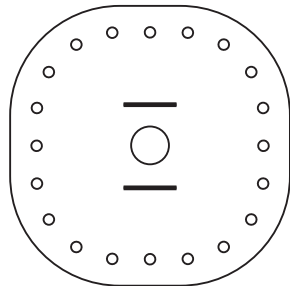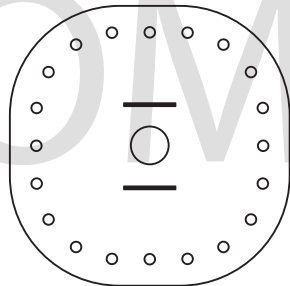

OKLOM

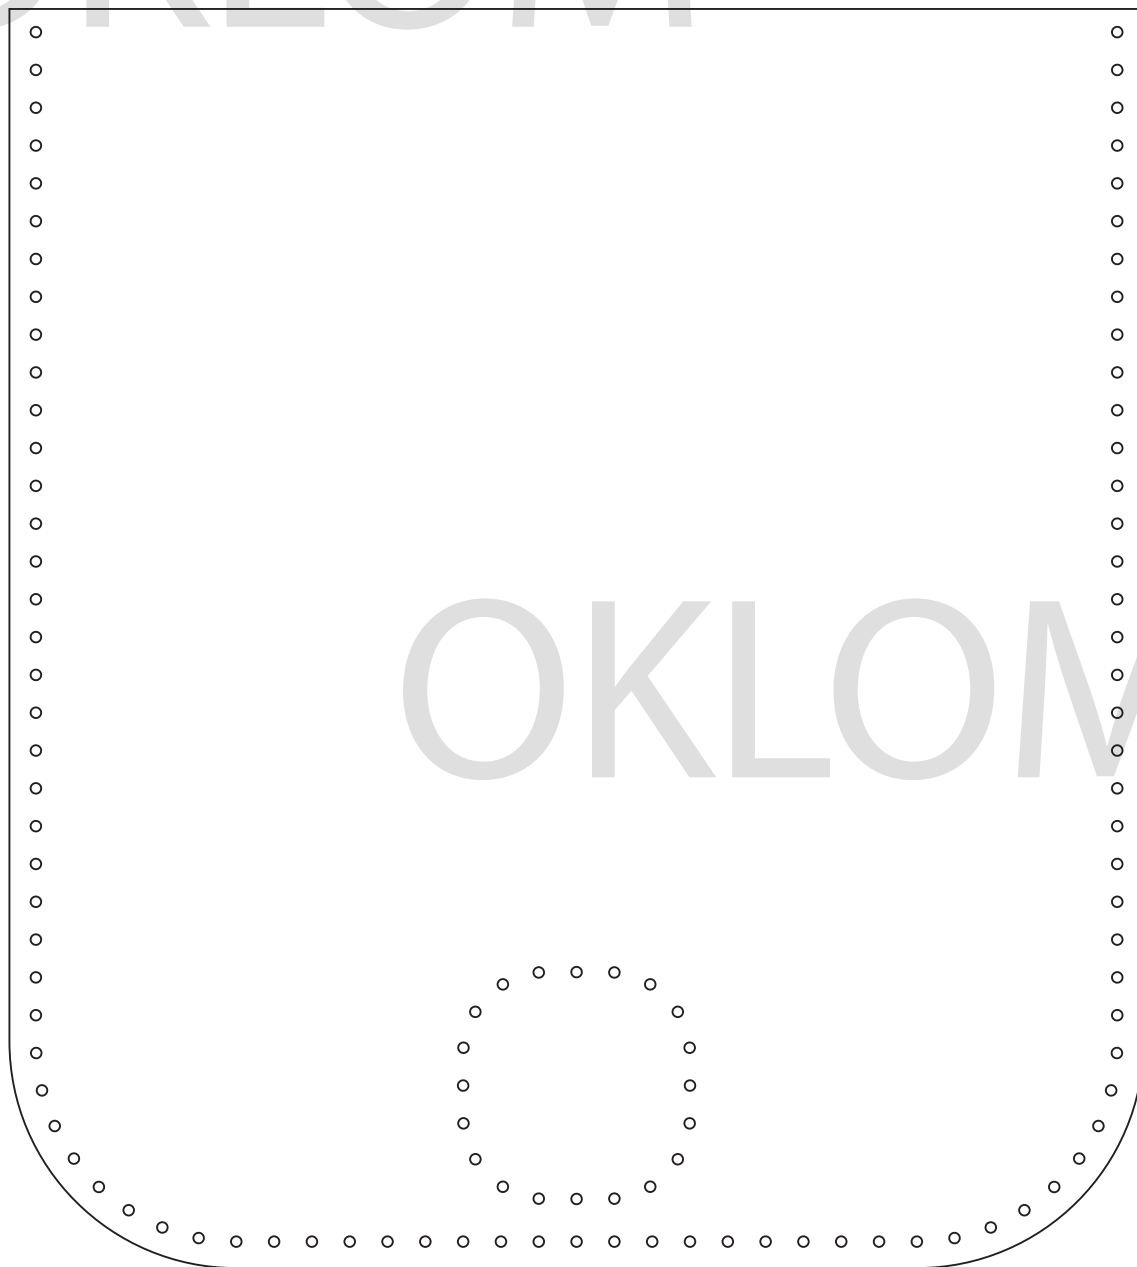

OKLOM

OKLOM