



TEST PAGE

Make sure everything is the right scale and you can see the black border around this page on all sides.

The designs, instructions and patterns are only intended for personal use by sewing hobbyists. All industrial use is prohibited. The materials, including the photographs, drawings, instructions, articles and patterns, are protected by copyright laws and the right of reproducing them by any means or in any form is exclusively reserved for the copyright holder. The copying of the material onto a device that can be used for duplicating it is also regarded as reproduction. Copyright © Marina Karlova. All rights reserved.

You can sell the items you create using this pattern but I would kindly ask you to buy the pattern again for every 10 items you sell, this is a way for me to get my royalties.



NOTICE FOR RUSSIAN SPEAKING CRAFTERS

Мы с вами коллеги, поэтому давайте уважать друг друга. Пожалуйста, не нужно заниматься пиратством. Выкройки стоят не так уж дорого, и благодаря их продажам мы, дизайнеры, можем кушать, оплачивать счета и продолжать создавать для вас новые дизайны. Если эта выкройка попала к вам откуда-то еще, кроме как из моего магазина, пожалуйста, свяжитесь со мной и поделитесь информацией о том, где и как она распространяется.

ASYMMETRICAL



Materials:

I recommend using a 3 to 4 oz leather (veg or chrome). With thicker leather the backpack would come out too heavy. **Important! You will need a natural edge of similar shape for the flap. Edges like this are very common in cowhides.**

Waxed thread around 0.8mm thick, that's more of your own choice, that is what I use.

Hardware:

4 x 1" buckles

8 x 3/8" grommets (size may vary slightly but you have to adjust the holes)

2 x 1" D-rings

Rivets

Tools:

Scissors, knife (paper knife or rotary cutter would also work).

Stitching irons: my pattern is made for 5mm stitching irons (5 stitches per inch). If you are willing to use any other size please make sure that the hole count is the same where it has to be the same: pocket front and pocket gusset, the vertical seams, the bottom and both front and back panels.

Needles - according to your thread size, a pair of saddle needles.

Mallet, grommet setter, rivet setter, hole puncher.

Instructions:

Print the pattern at actual size (100%). Use the reference on top of each page to make sure everything is printed correctly. Join the pages together, you will find further instructions on the pattern itself.

Any questions or comments, e-mail me: lissius@gmail.com.

Join our Karlova Leatherwork Patterns Group on Facebook!

www.facebook.com/groups/karlovadesign

0cm 1cm 2cm 3cm 4cm 5cm

A-1

1/8 3/8 5/8 7/8 1in

2in

3in



BACKPACK BODY / FRONT PANEL

The main body is sewn inside out (turned), but you can use the overlock if you prefer.

The pockets' front is sewn together with pocket gussets in the overlock.



overlapping stitching style if you want.

overlapping manner, pocket front being on top. See pictures for reference.

0cm 1cm 2cm 3cm 4cm 5cm


A-3

10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100

1in

2in


3in

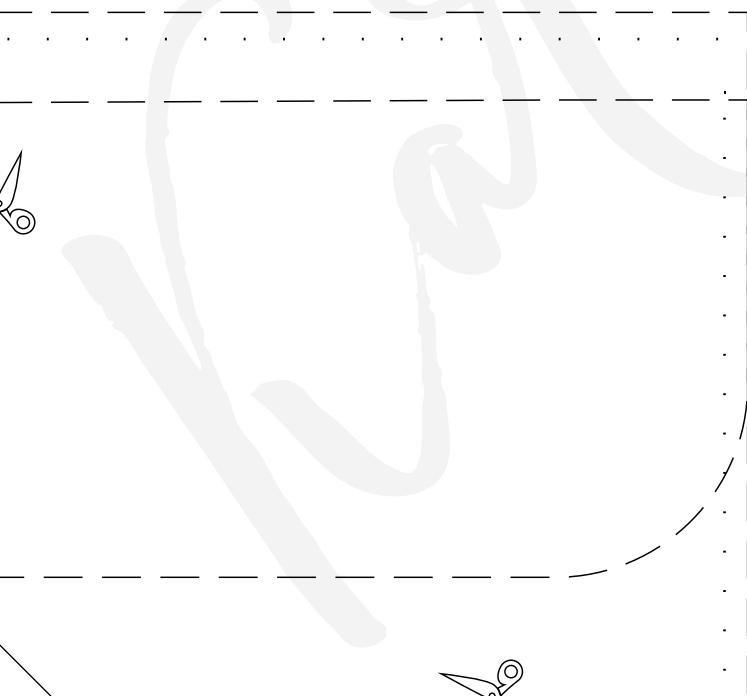

0cm 1cm 2cm 3cm 4cm 5cm

A-4

1in 2in 3in

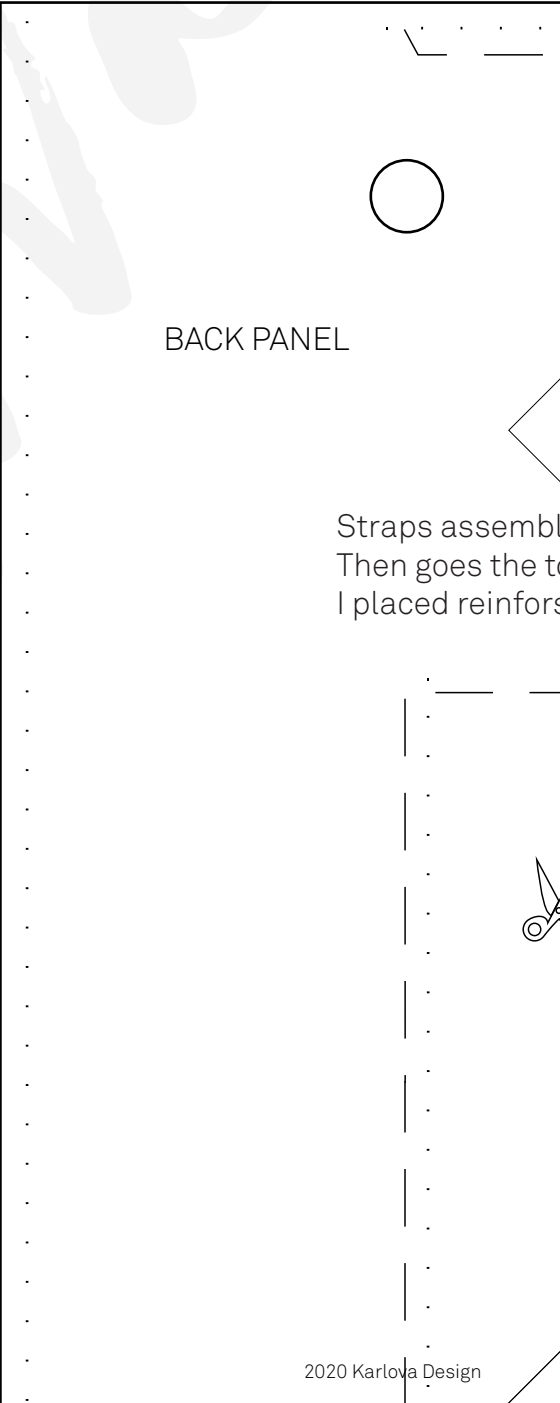

BACK PANEL


Straps assembly
Then goes the top
I placed reinforcement

0cm 1cm 2cm 3cm 4cm 5cm

A-5

1in 2in 3in

MAIN FLAP

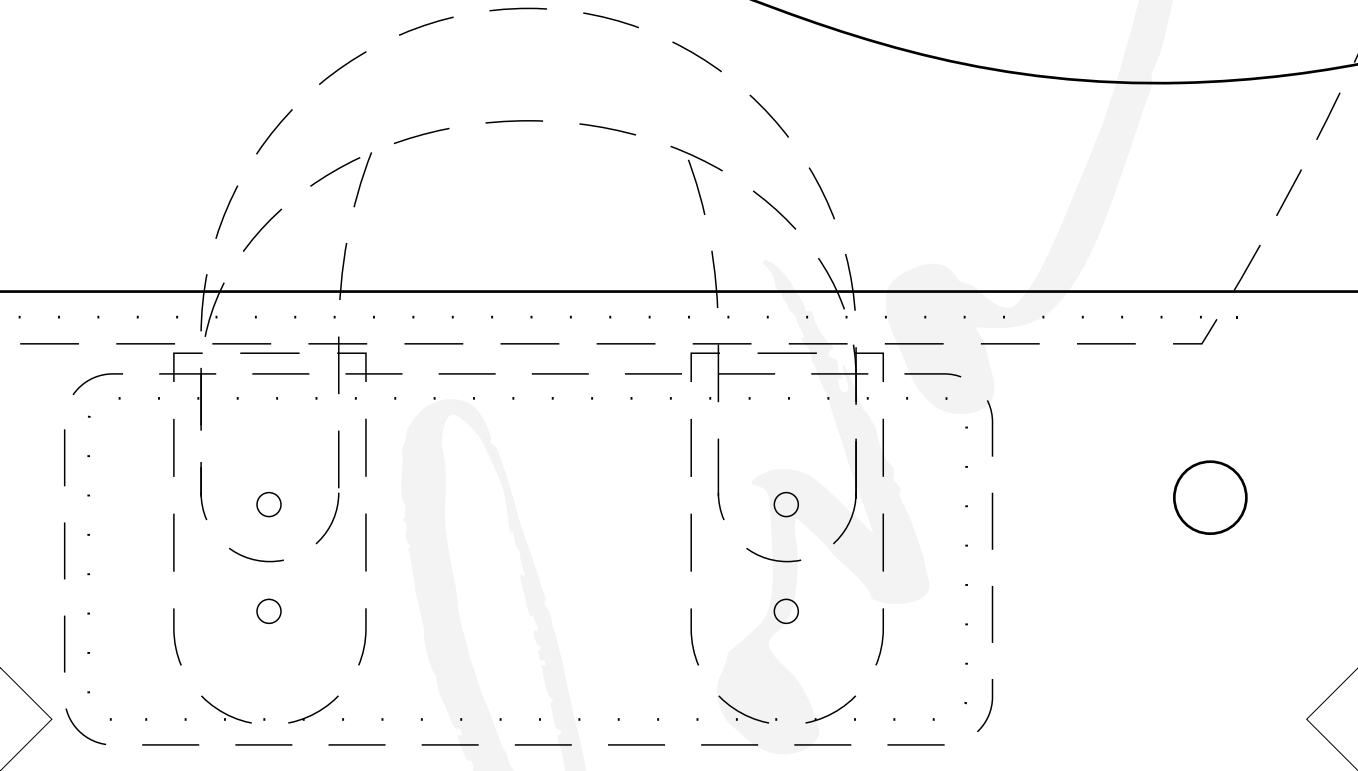





y from bottom to top: Reinforcement goes on the flesh side. Then goes the back panel.
top handle on top pair of rivets. And lastly, the D-ring strap holders on top. On my backpack
sment on outside. That's an option, but not the best one.



0cm 1cm 2cm 3cm 4cm 5cm

A-6


1in 2in 3in

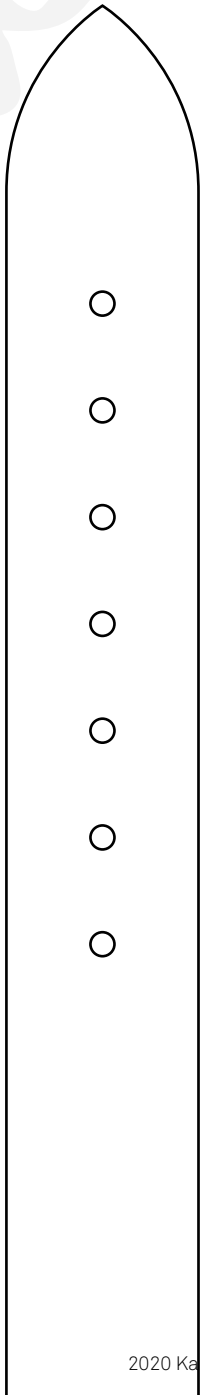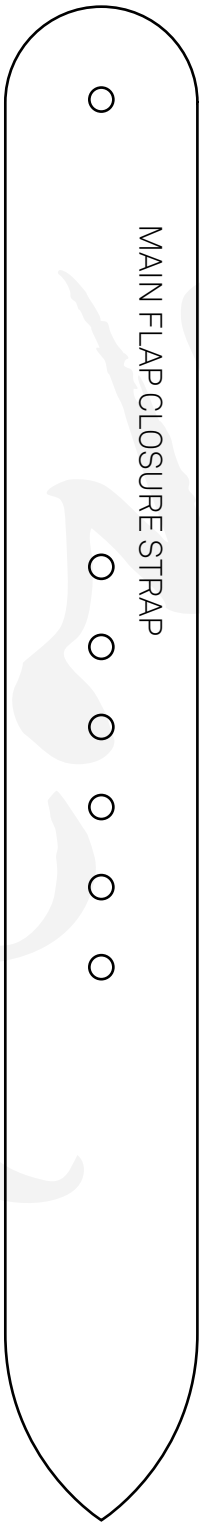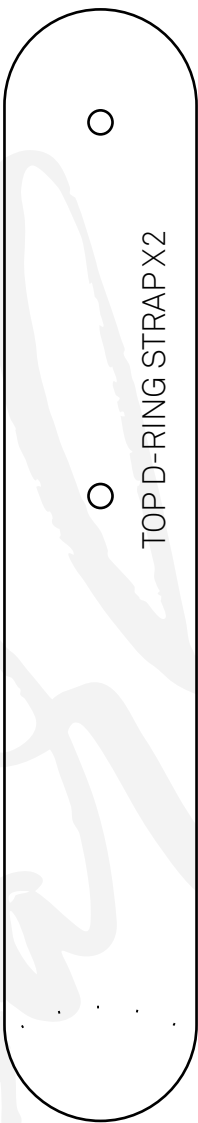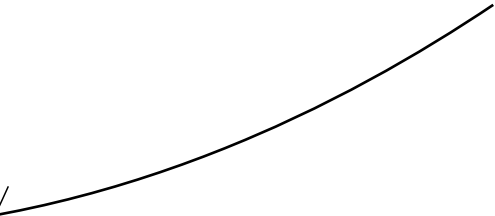


0cm 1cm 2cm 3cm 4cm 5cm

B-1

1in 2in 3in

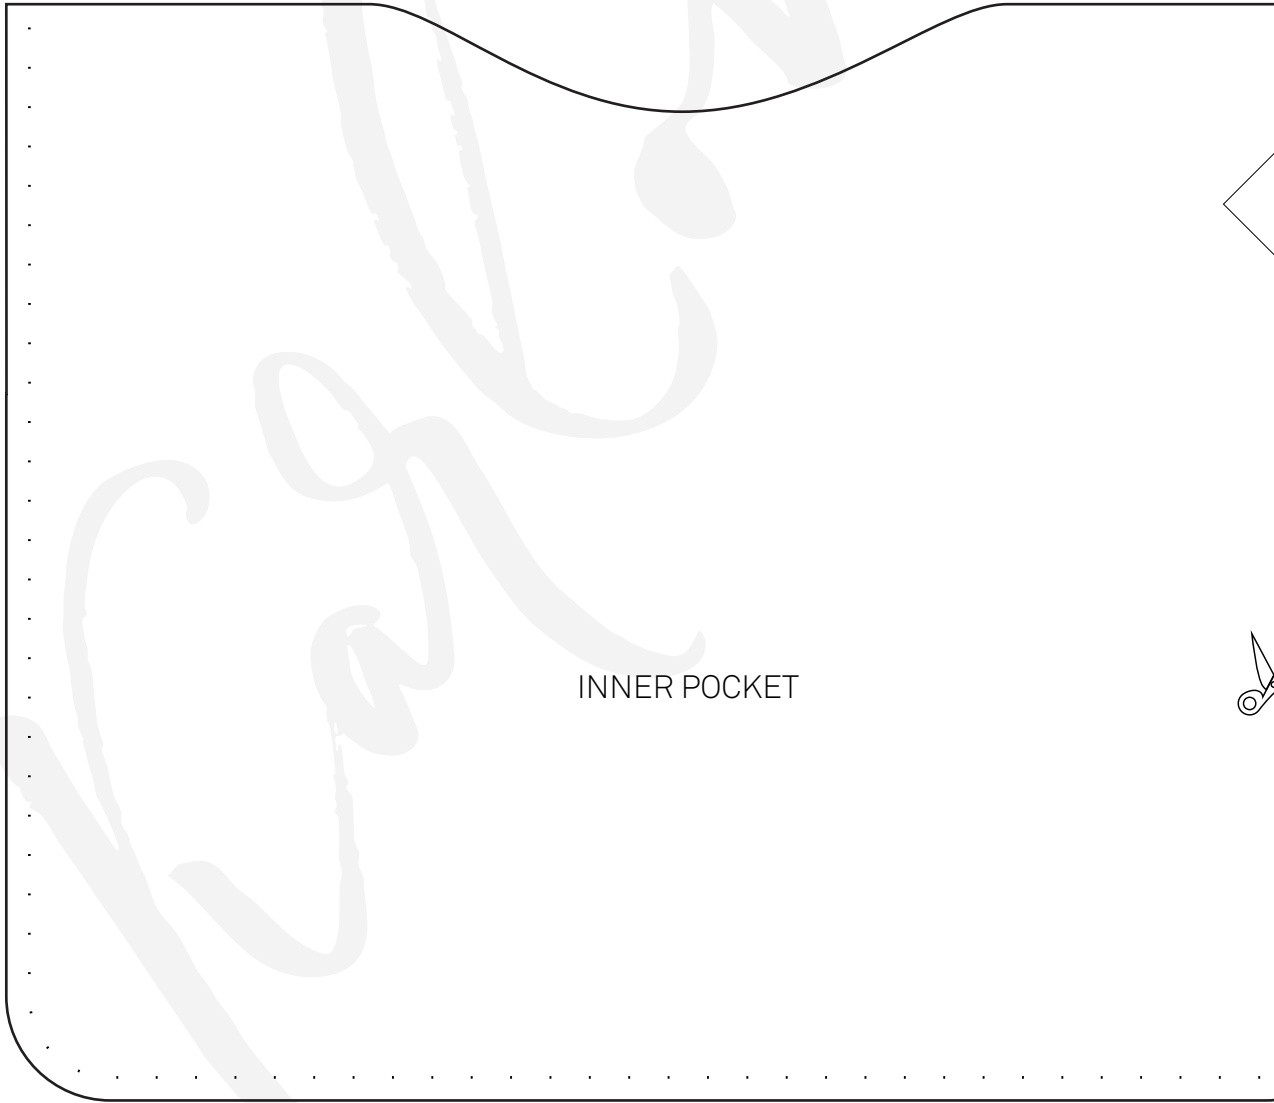


INNER POCKET

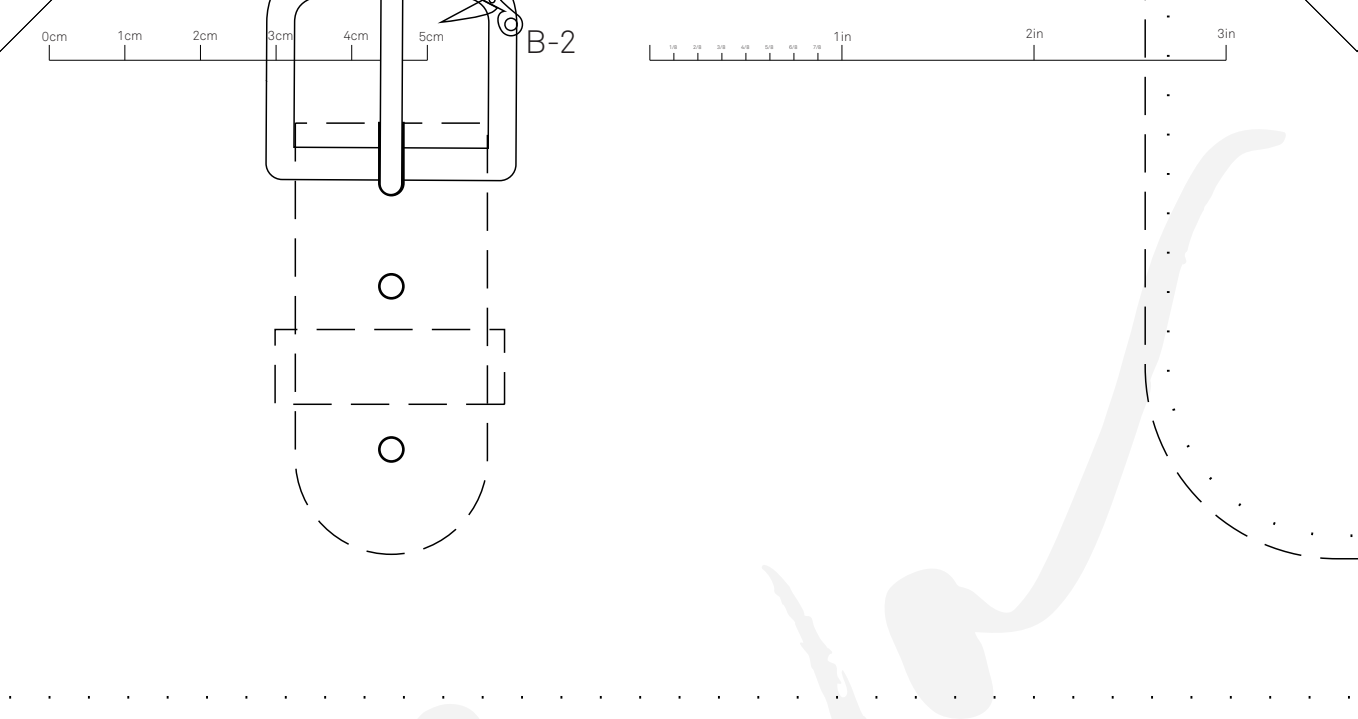

First, attach the buckle to the pocket front.
Then attach the gusset to the pocket front.
Attach the whole pocket to the front panel.

POCKET FRONT

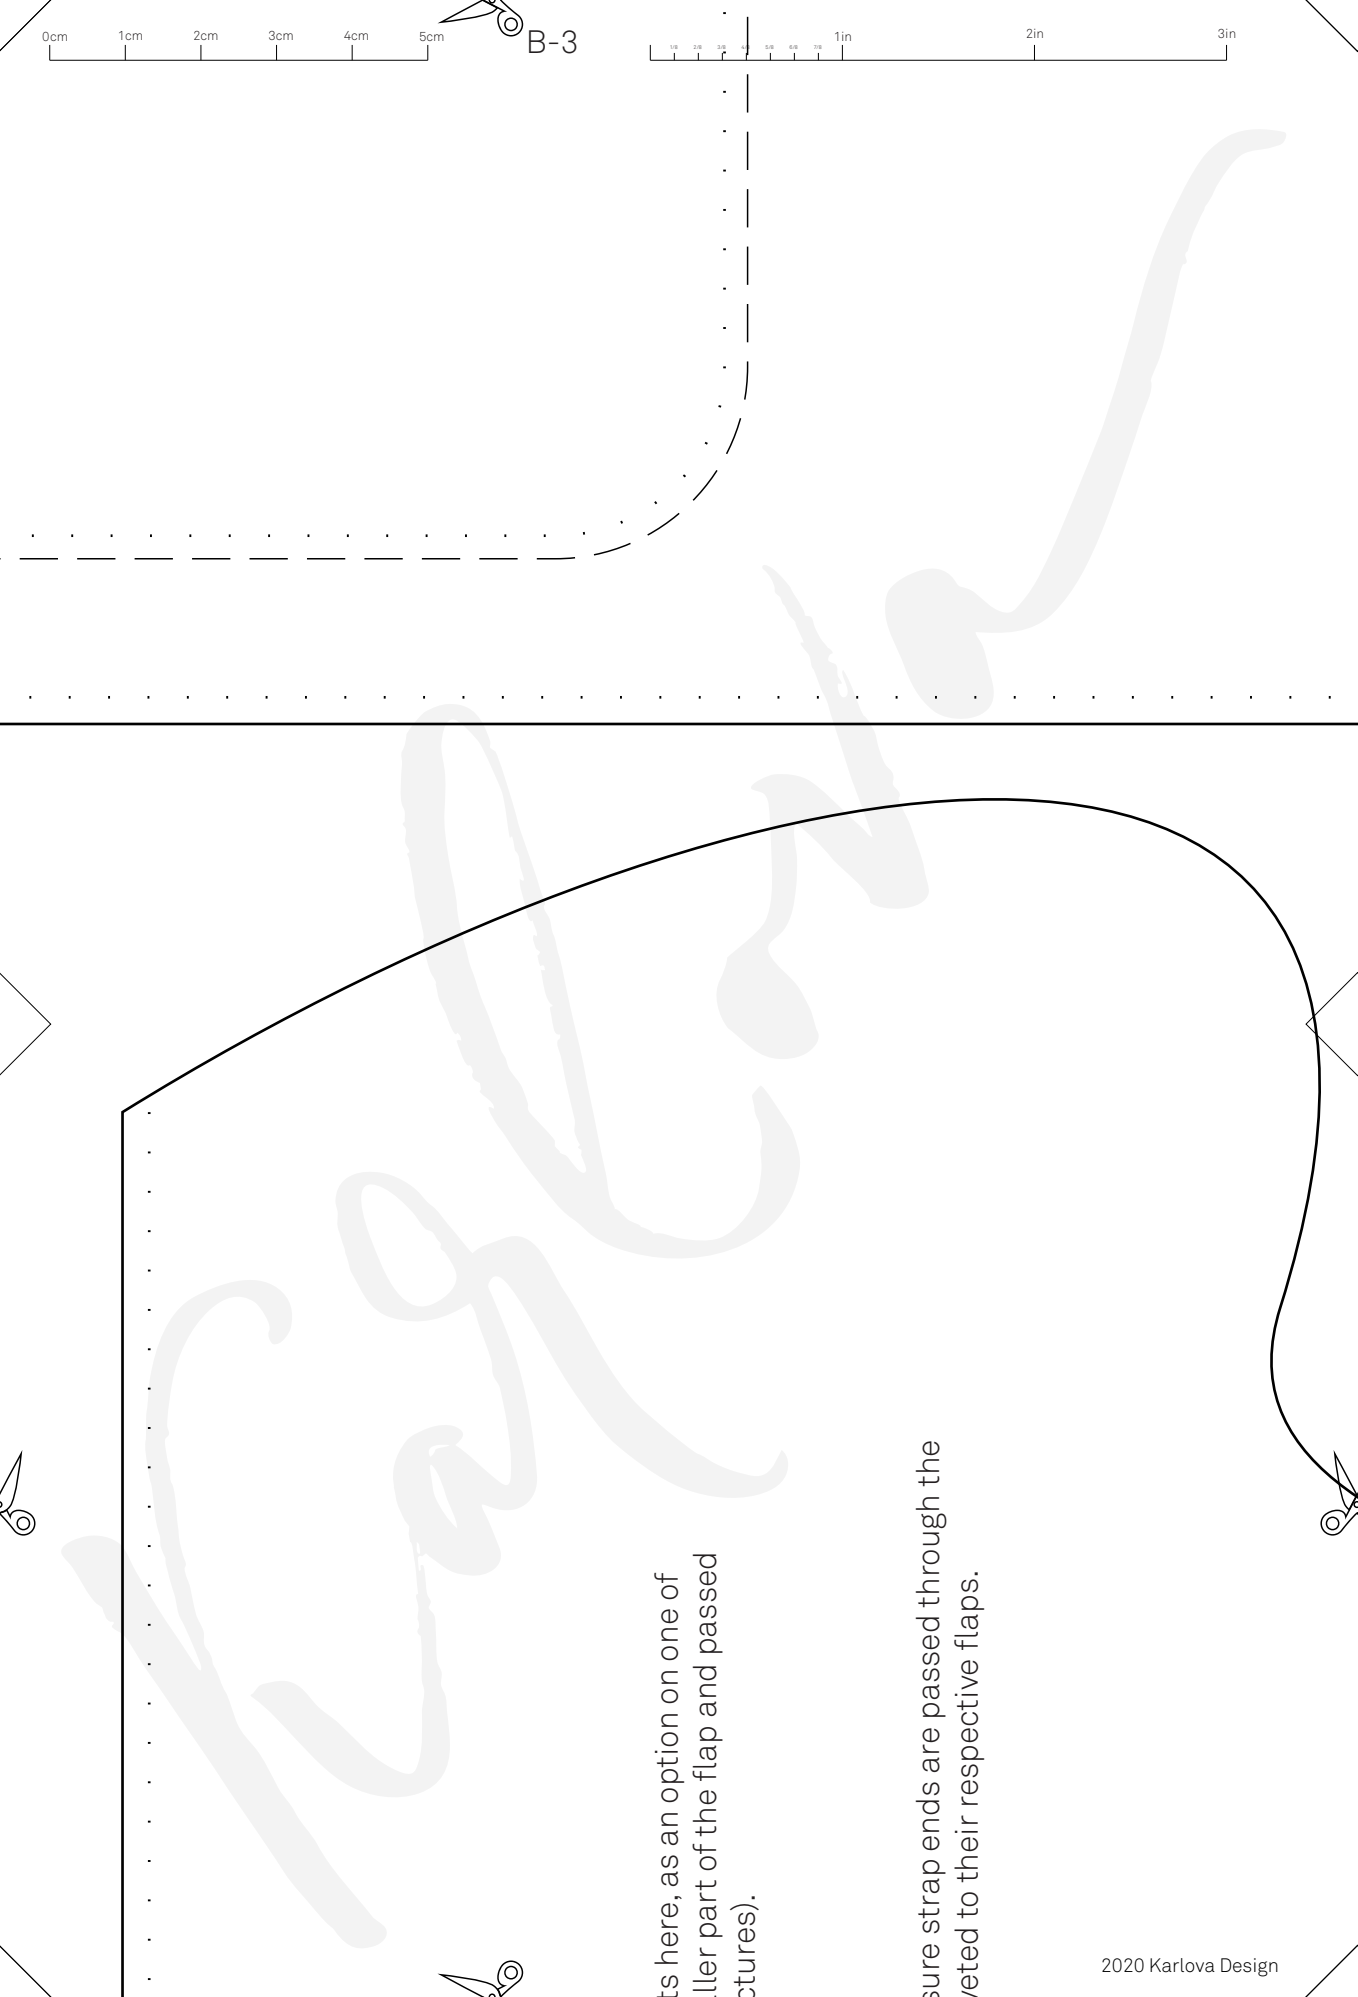


0cm 1cm 2cm 3cm 4cm 5cm

B-3

1in 2in 3in

ts here, as an option on one of
taller part of the flap and passed
ctures).

sure strap ends are passed through the
veted to their respective flaps.

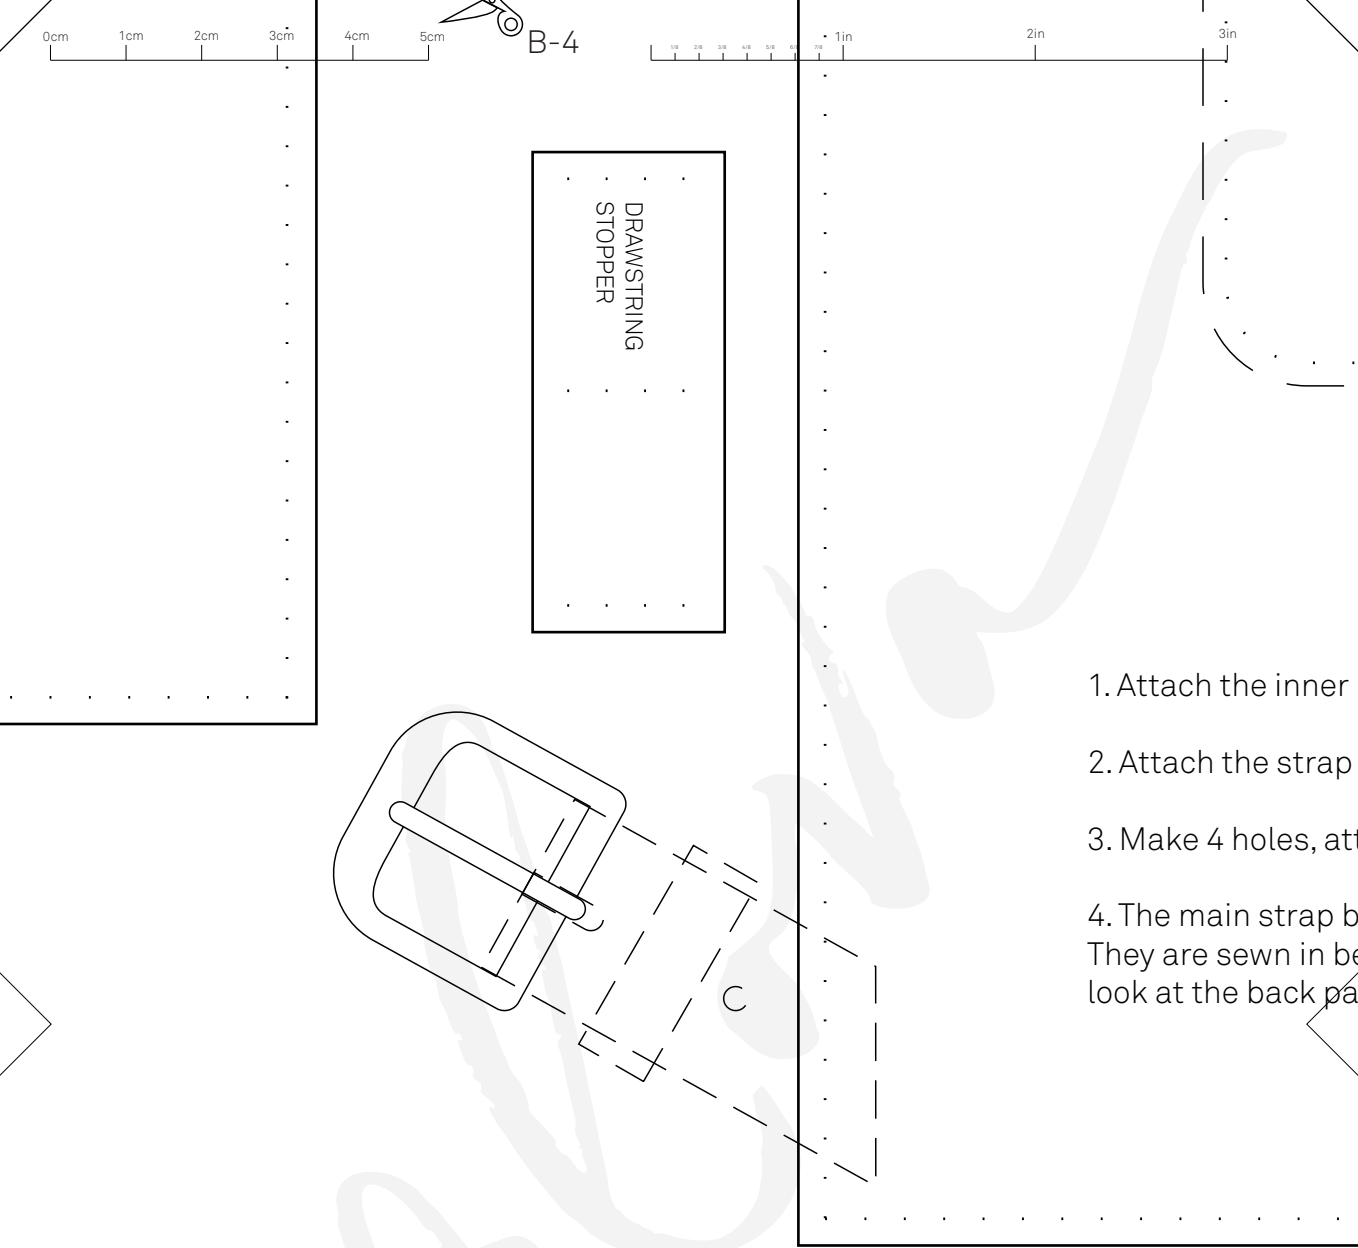

0cm 1cm 2cm 3cm 4cm 5cm

B-5

1in 2in 3in


pocket.

reinforcement.

attach the top handle and the D-ring strap holders, they share the top pair of rivets.

buckle straps are attached when the back panel is sewn together with the front panel.
between them. Here on the illustration, as the buckles are facing towards us, this is how they look
panel's flesh side.

STRAP REINFORCEMENT

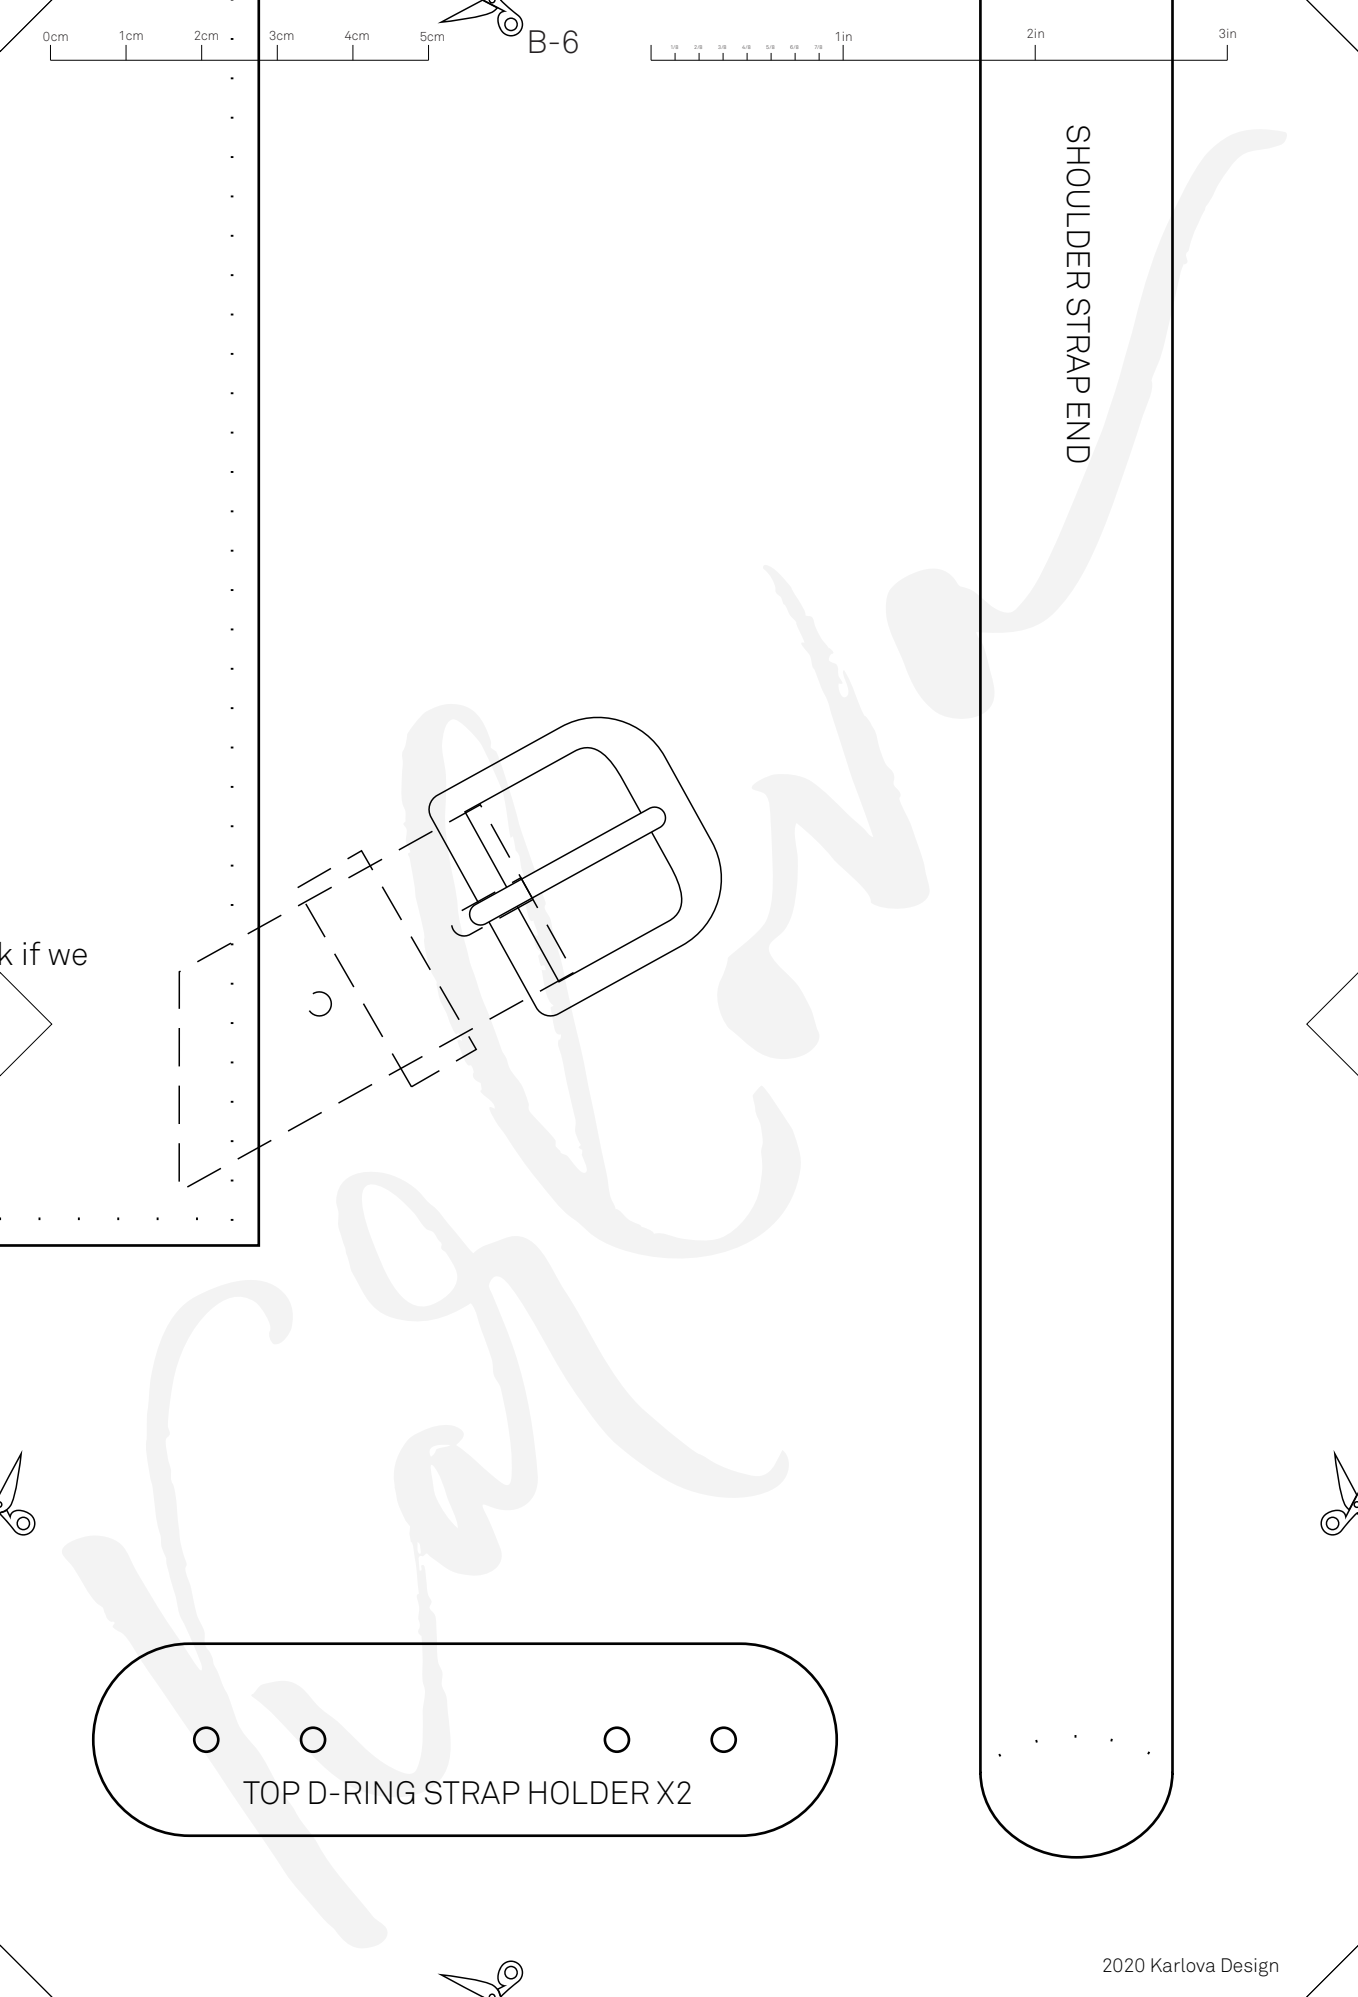

B-6


0cm 1cm 2cm 3cm 4cm 5cm

1/8 3/8 1/2 5/8 3/4 1in

2in

3in


SHOULDER STRAP END

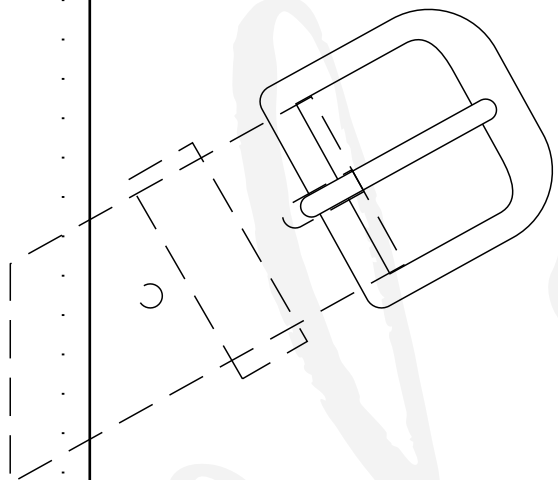


TOP D-RING STRAP HOLDER X2



BOTTOM

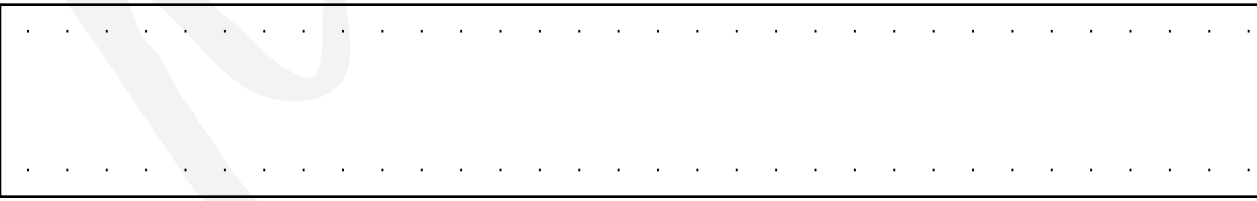

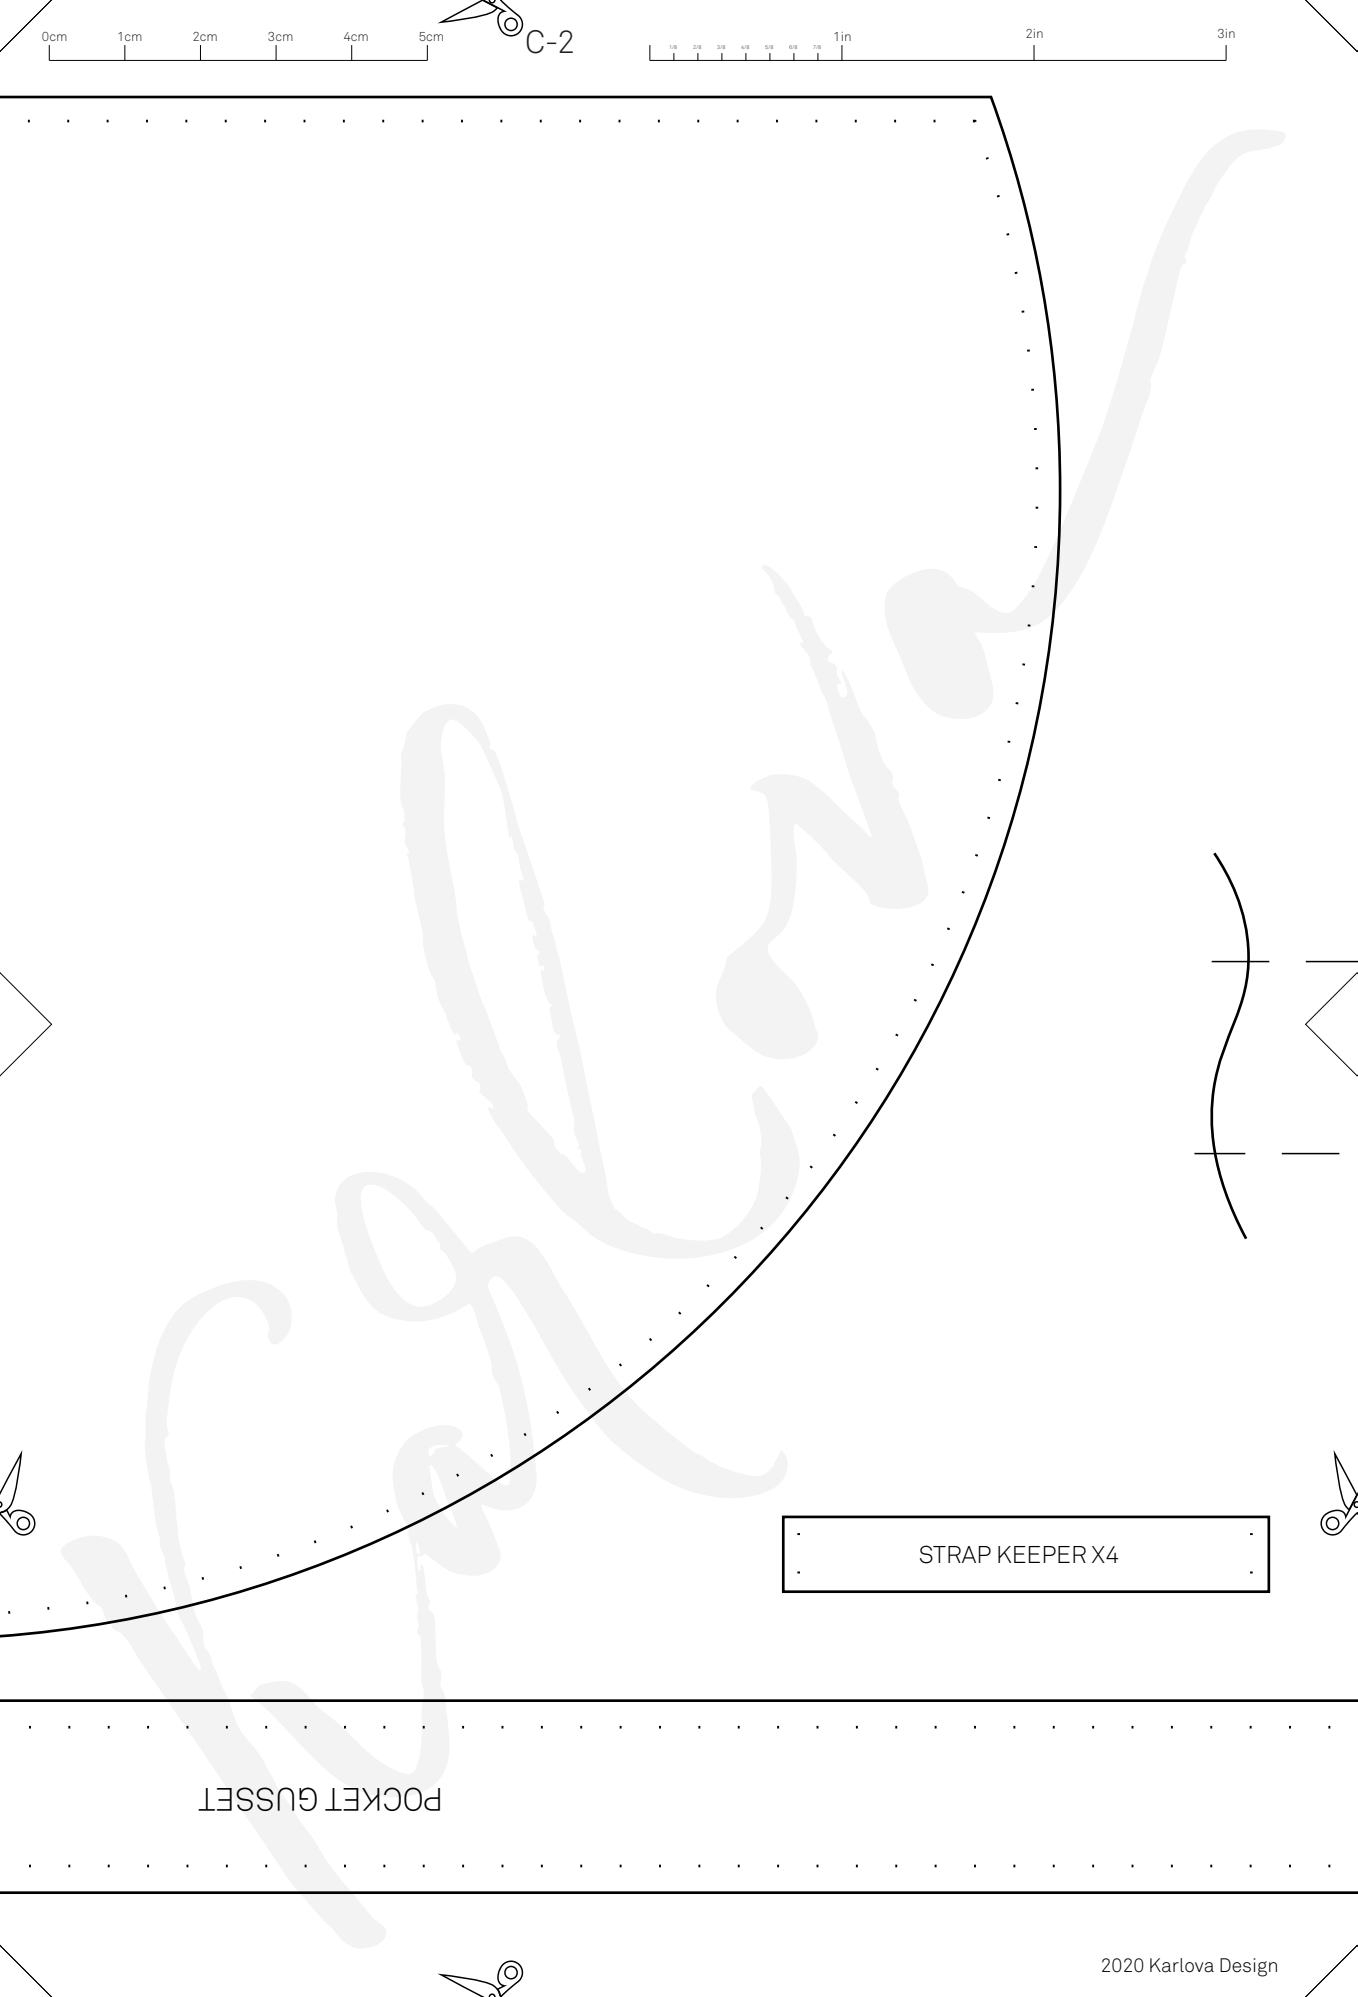


0cm 1cm 2cm 3cm 4cm 5cm

C-2

1/8 3/8 1/2 5/8 3/4 1in


2in

3in

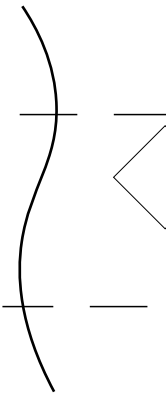

STRAP KEEPER X4

POCKET GUSSET

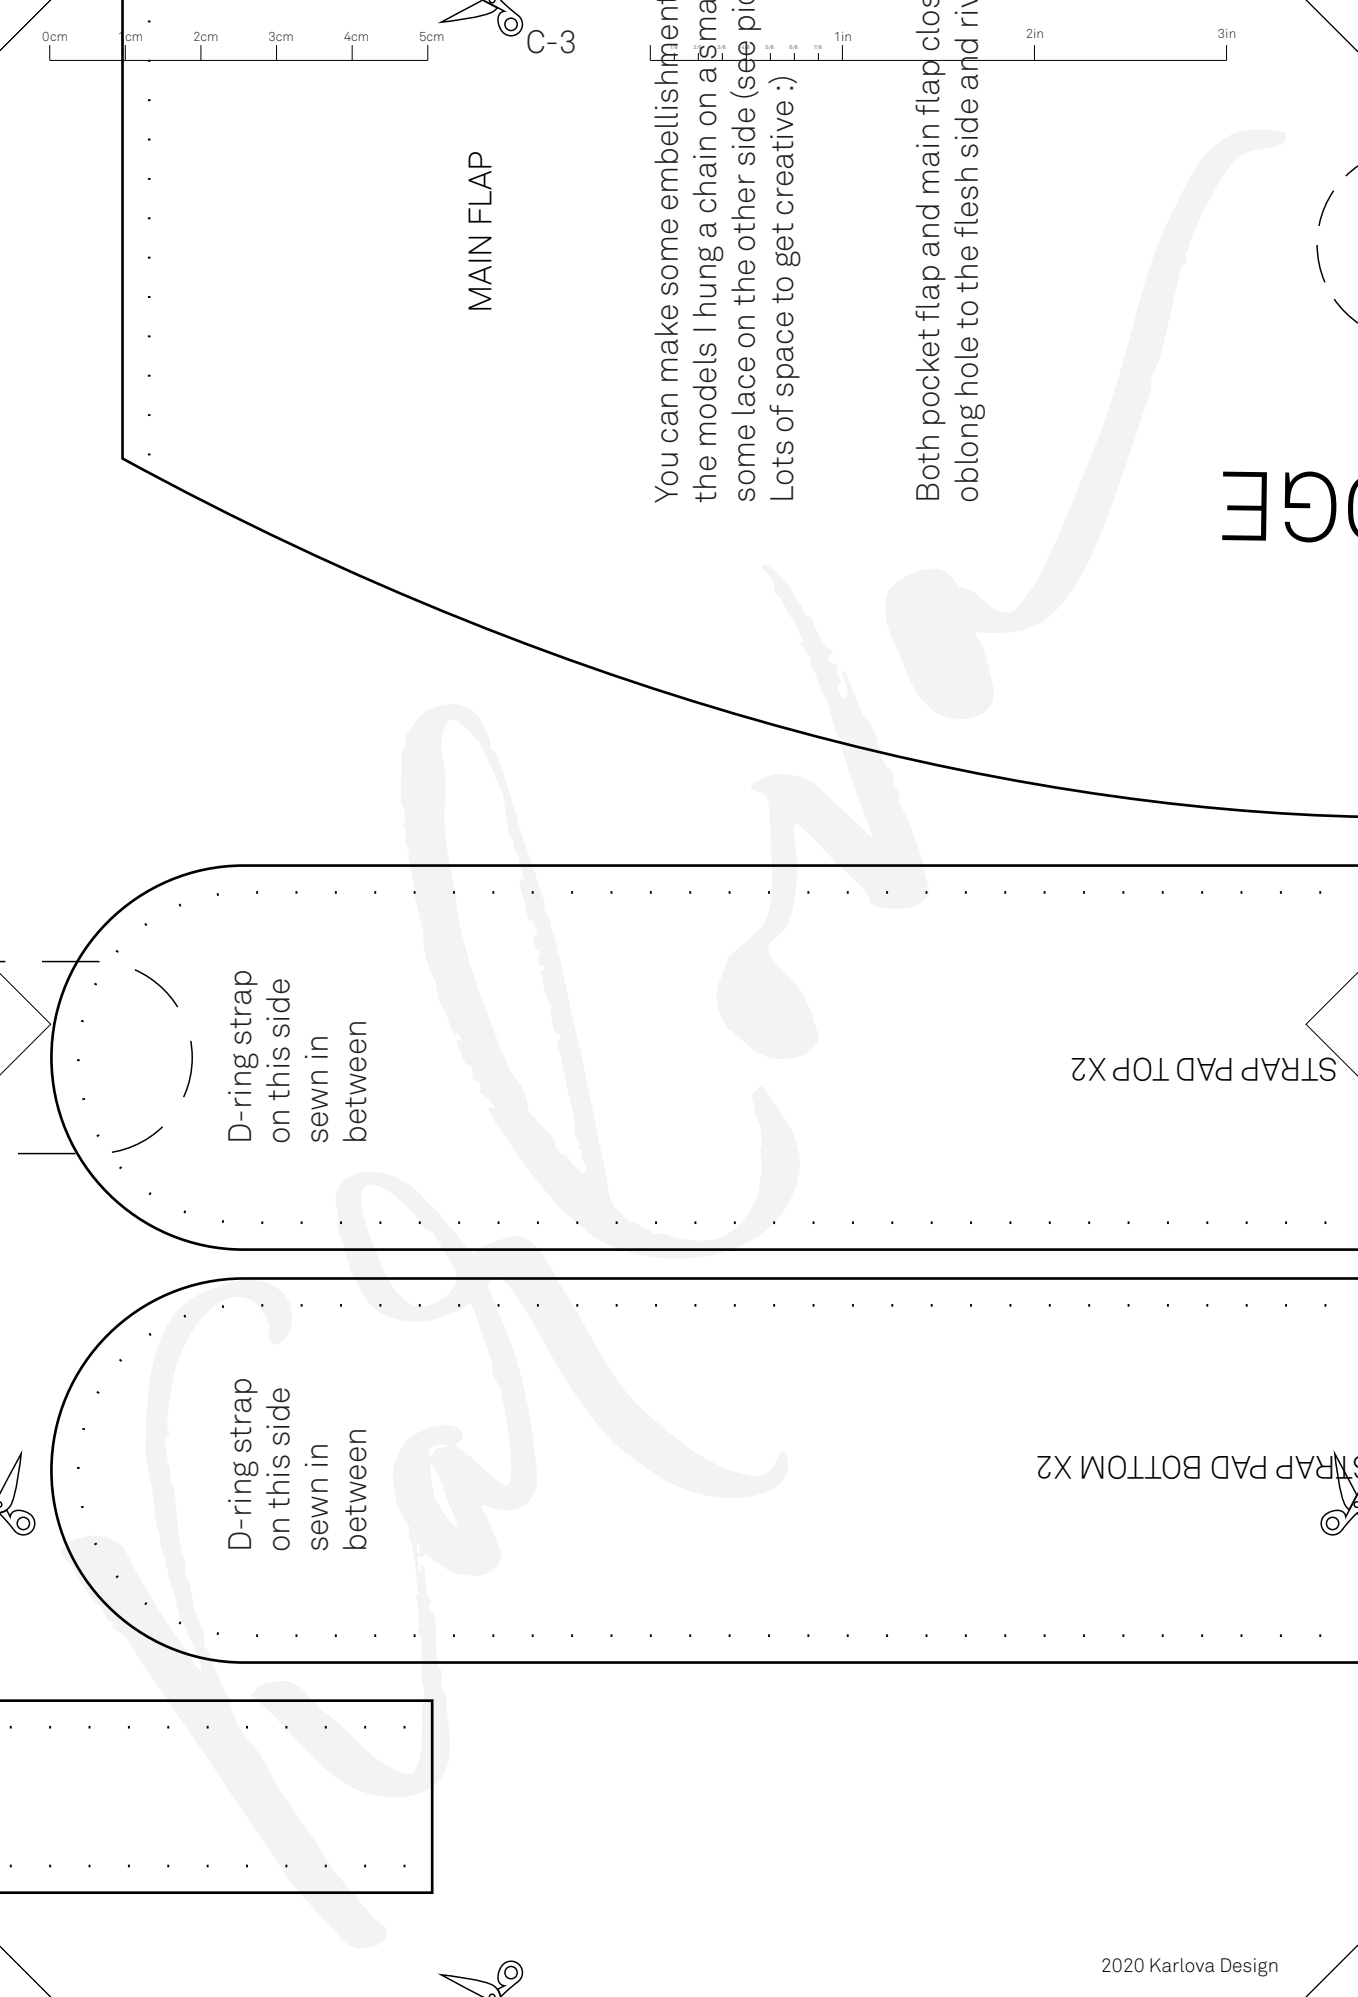

DOGE

0cm 1cm 2cm 3cm 4cm 5cm

MAIN FLAP

C-3

You can make some embellishment the models I hung a chain on a small some lace on the other side (see pic) Lots of space to get creative :)

Both pocket flap and main flap close oblong hole to the flesh side and riv


1in 2in 3in

STRAP PAD TOP X2




D-ring strap
on this side
sewn in
between

STRAP PAD BOTTOM X2

D-ring strap
on this side
sewn in
between

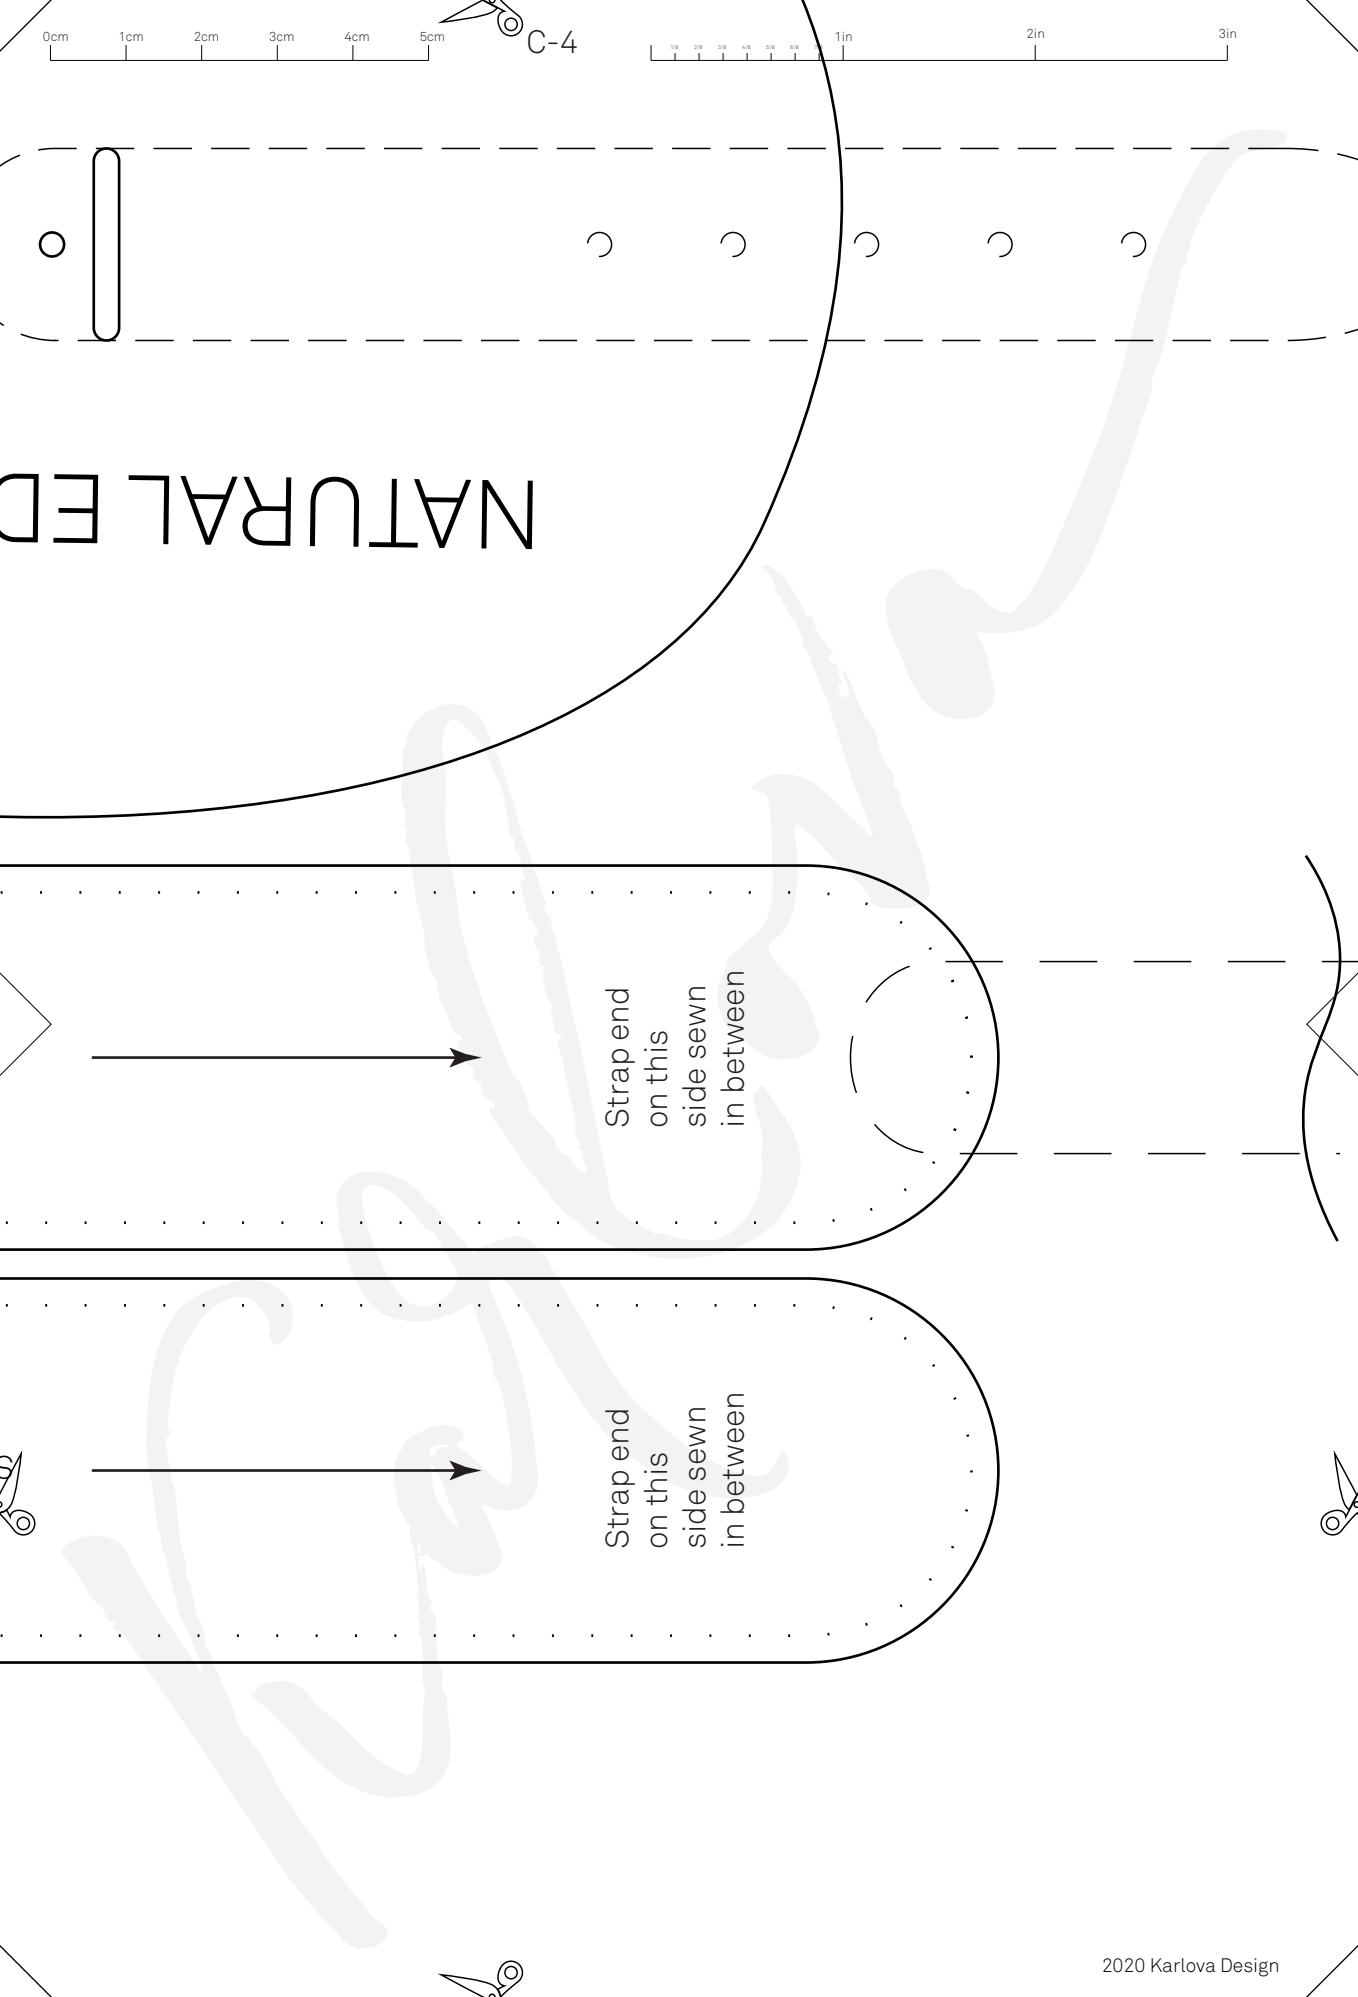

NATURAL ED

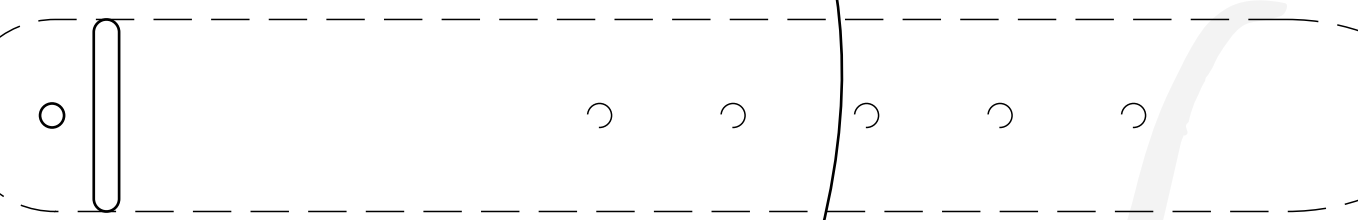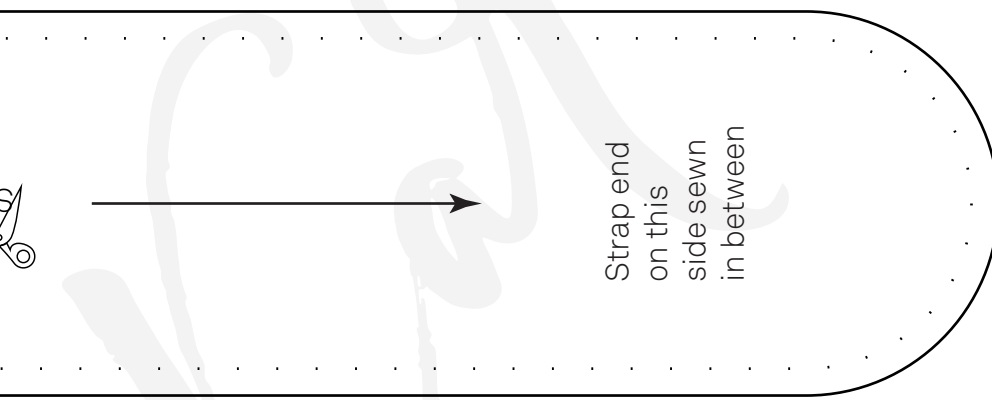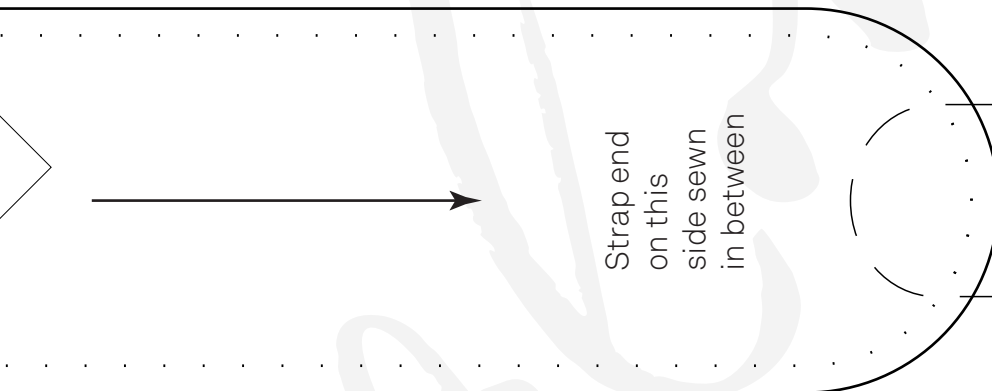

C-4

0cm 1cm 2cm 3cm 4cm 5cm

C-5

1in 2in 3in

2in

3in

