



Assembly instructions

Difficulty level: intermediate
Completion Time 12 - 16 hours

NECESSARY TOOLS

B&W Printer



Scissors or a cutter



Hole Puncher (We recommend 1.5 - 1.8 mm sized holes for this build)



Approx 9 square feet of leather. (We recommend 5-6 oz leather for this build)



Thread and needles (We recommend 1 mm waxed thread for this build)



3 x 20 mm buckles


About 40 x 7 mm rivets

1 x 5 mm Sam Browne button

4 x 30 mm swivel hooks

PRINTING THE PATTERN

Set up your paper size to A4 or Letter and choose actual size in the printer settings

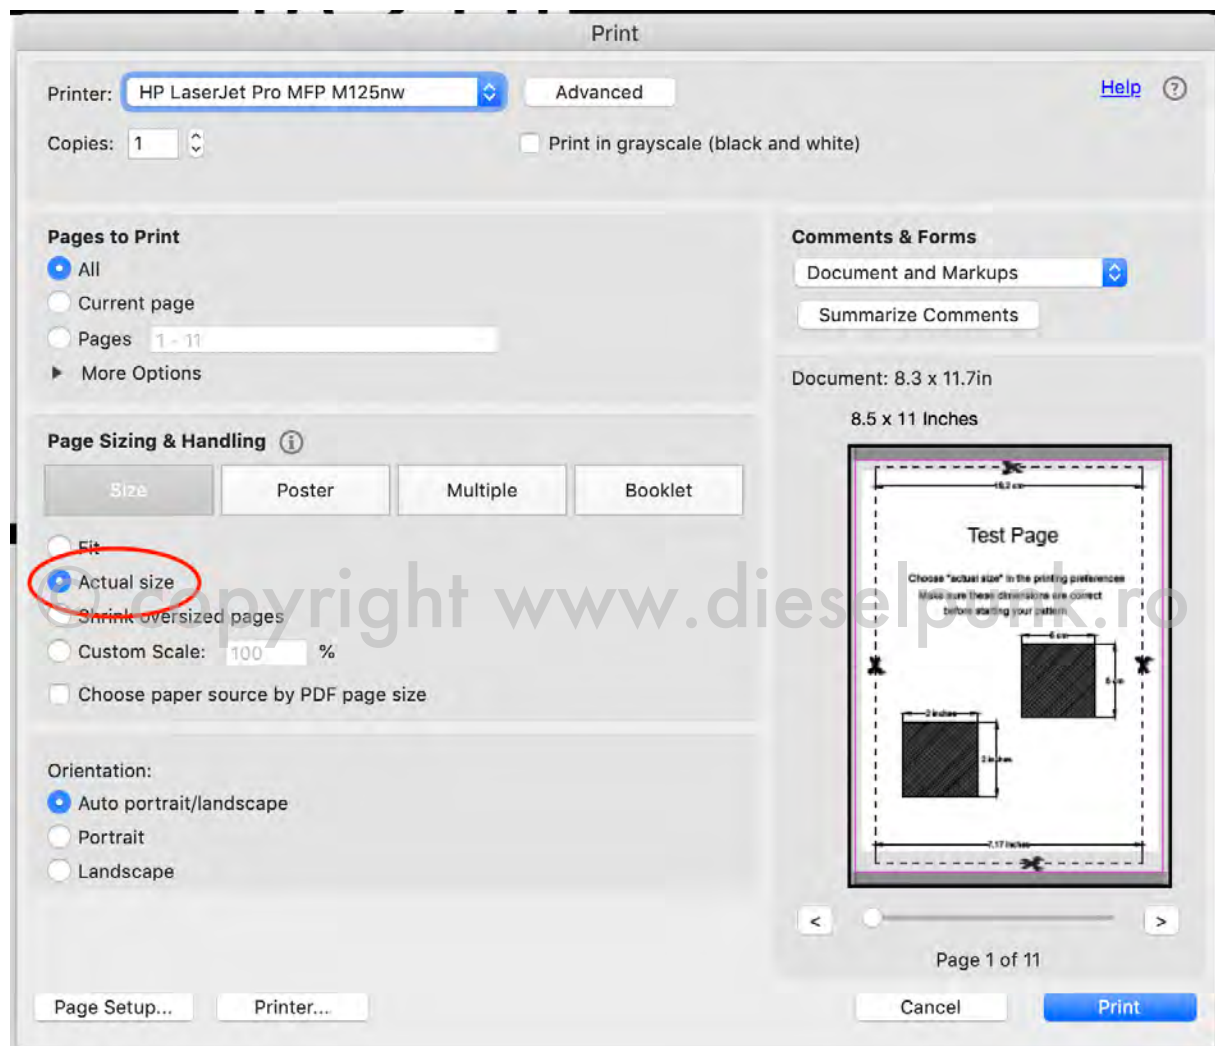


Alternatively you can use "Legal" format which is approximately the same size and will not impact the size of the print

© copyright www.dieselpunk.ro

Print all the patterns.

The first page is a measuring reference and you can use a ruler to make sure it matches the square. That means the rest of the pattern will print on the right size

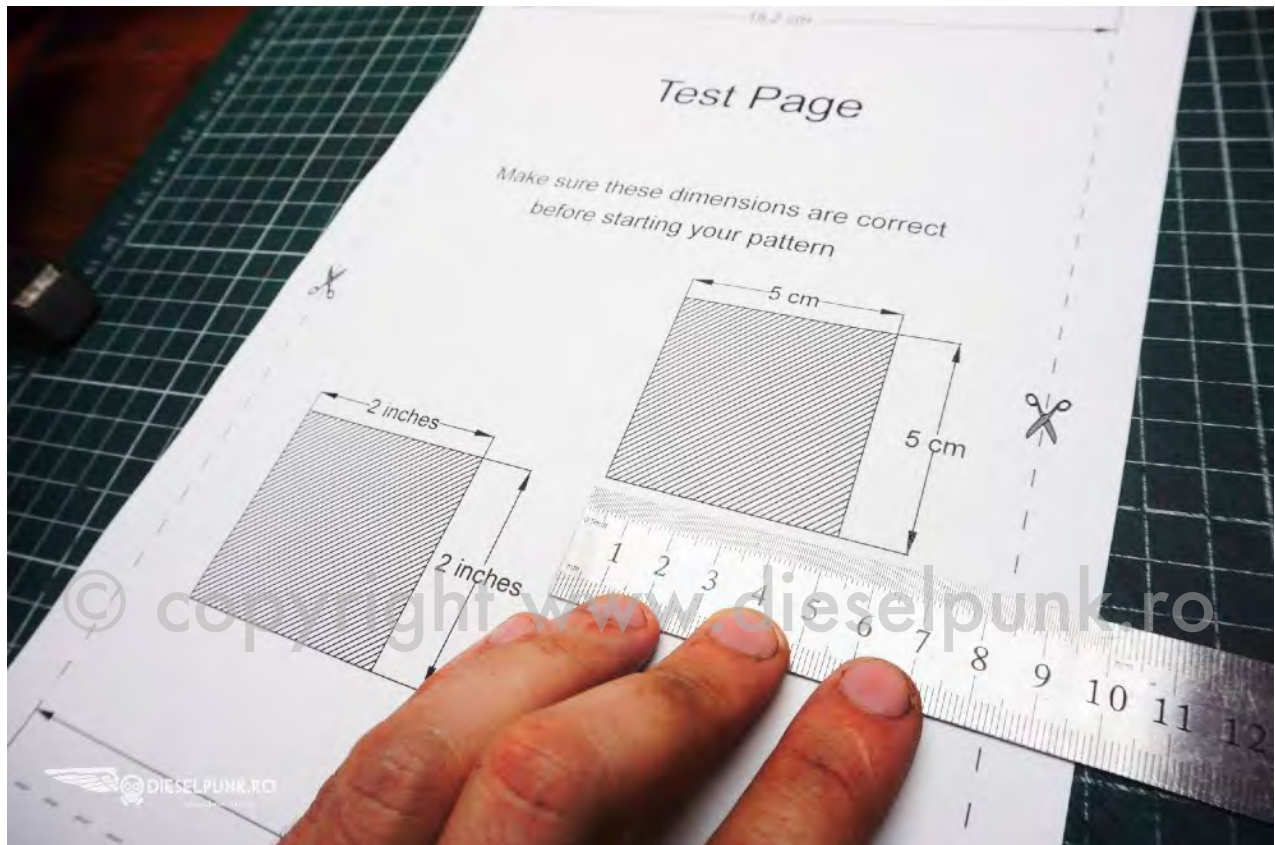

© copyright www.dieselpunk.ro

© copyright www.dieselpunk.ro

In order to further help with your build, we filmed the entire process from the start to finish.

Please access your instructional video here:

<https://youtu.be/85eqa48xKSc>

Would love to see what you did, so please share or leave a review on Etsy.

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

Thank you for constructing your backpack with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date with the latest patterns available.

Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087/>

Best Regards

Tony

© copyright www.dieselpunk.ro