



**[CLICK HERE FOR
YOUTUBE CHANNEL](#)**

**[CLICK HERE FOR
PRINTING INSTRUCTIONS](#)**

**[CLICK HERE FOR
FACEBOOK GROUP](#)**

*** F O L L O W U S ***

[Facebook](#)

[Instagram Vasile](#)

[Instagram Pavel](#)

[Pinterest Pavel](#)

[Pinterest Vasile](#)

You can sell objects based on our patterns and tutorials, promote our brand and share links to our tutorials. You can not sell or distribute our patterns and/or uploading of our videos to your channels, social media, websites without crediting us.

© 1988-2021 V&P Leather Artisans

www.vasileandpavel.com

LEATHER TOTE BAG

PDF PATTERN A4 SIZE

*This contains a pattern and written instructions for the process of making the tote bag.
Feel free to DM us on our Facebook Group.
Meanwhile visit our [Youtube Channel](#) for our informative tutorials.*

SIZE

Height 13.4" (34 cm)

Width 17.3" (44 cm)

Depth 5.9" (15 cm)

MATERIALS

Big pieces of 4-5 oz (1.8 mm) leather, around 13 sqft (1.2 sqm)

2-3 oz (0.8-1.2 mm) leather for the inside pocket

4 oz (1.5 mm) rigid leather for lining for the bottom

1.5-2oz (0.6-0.8 mm) semirigid leather for lining the lower part of the bag

80" (2 m) 3-4" (8-10 mm) piping thread cord for upholstery

1 mm waxed polyester thread

edge dye

TOOLS

cutter

1.5 mm

needles

mallet

cutting pad

paper masking tape (optional)



Thank you for buying this PDF pattern.

We would love to see your take on it, your choice of leather and colors.

You are most welcome to our leatherworking community to share your work:
<https://www.facebook.com/groups/leatherpattern3dprintedmolds>.

For any questions you can message us or DM on Instagram at @pavelcraftleather.

Best regards,

Vasile and Pavel

1.CUT AND ASSEMBLE THE PATTERN

CLICK [HERE](#) FOR THE PRINTING INSTRUCTIONS TUTORIAL

Cut and assemble the pattern using paper masking tape. You will need big pieces of 4-5 oz (1.8 mm) leather, in total 13 sqft (1.2 sqm).

The tote is lined on the bottom with 4 oz (1.5 mm) rigid leather and, on the lower part, with a semirigid 1.5-2oz (0.6-0.8 mm) leather.

You will need 2-3 oz (0.8-1.2 mm) leather for the inside pocket.





2.LINE THE BOTTOM AND THE LOWER PART OF THE TOTE


I line the bottom with 4 oz (1.5 mm) rigid leather and the lower part of the tote with a semirigid 1.5-2oz (0.6-0.8 mm) leather.



3. ASSEMBLE THE TOTE FOR PUNCHING THE HOLES USING LEATHER GLUE FINISH THE EDGES

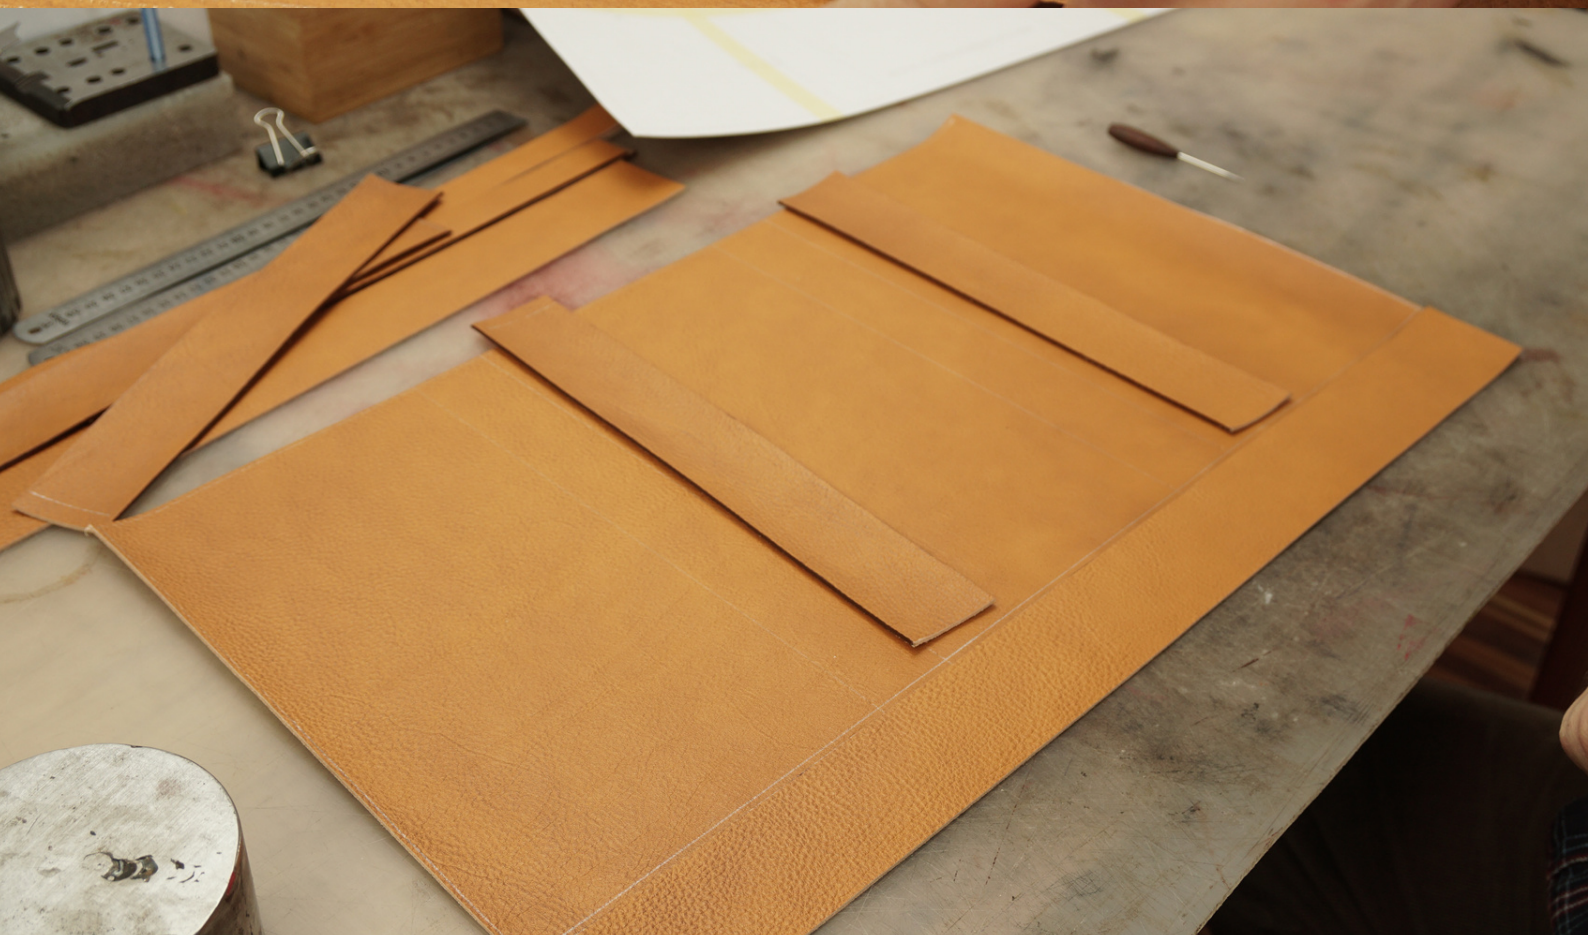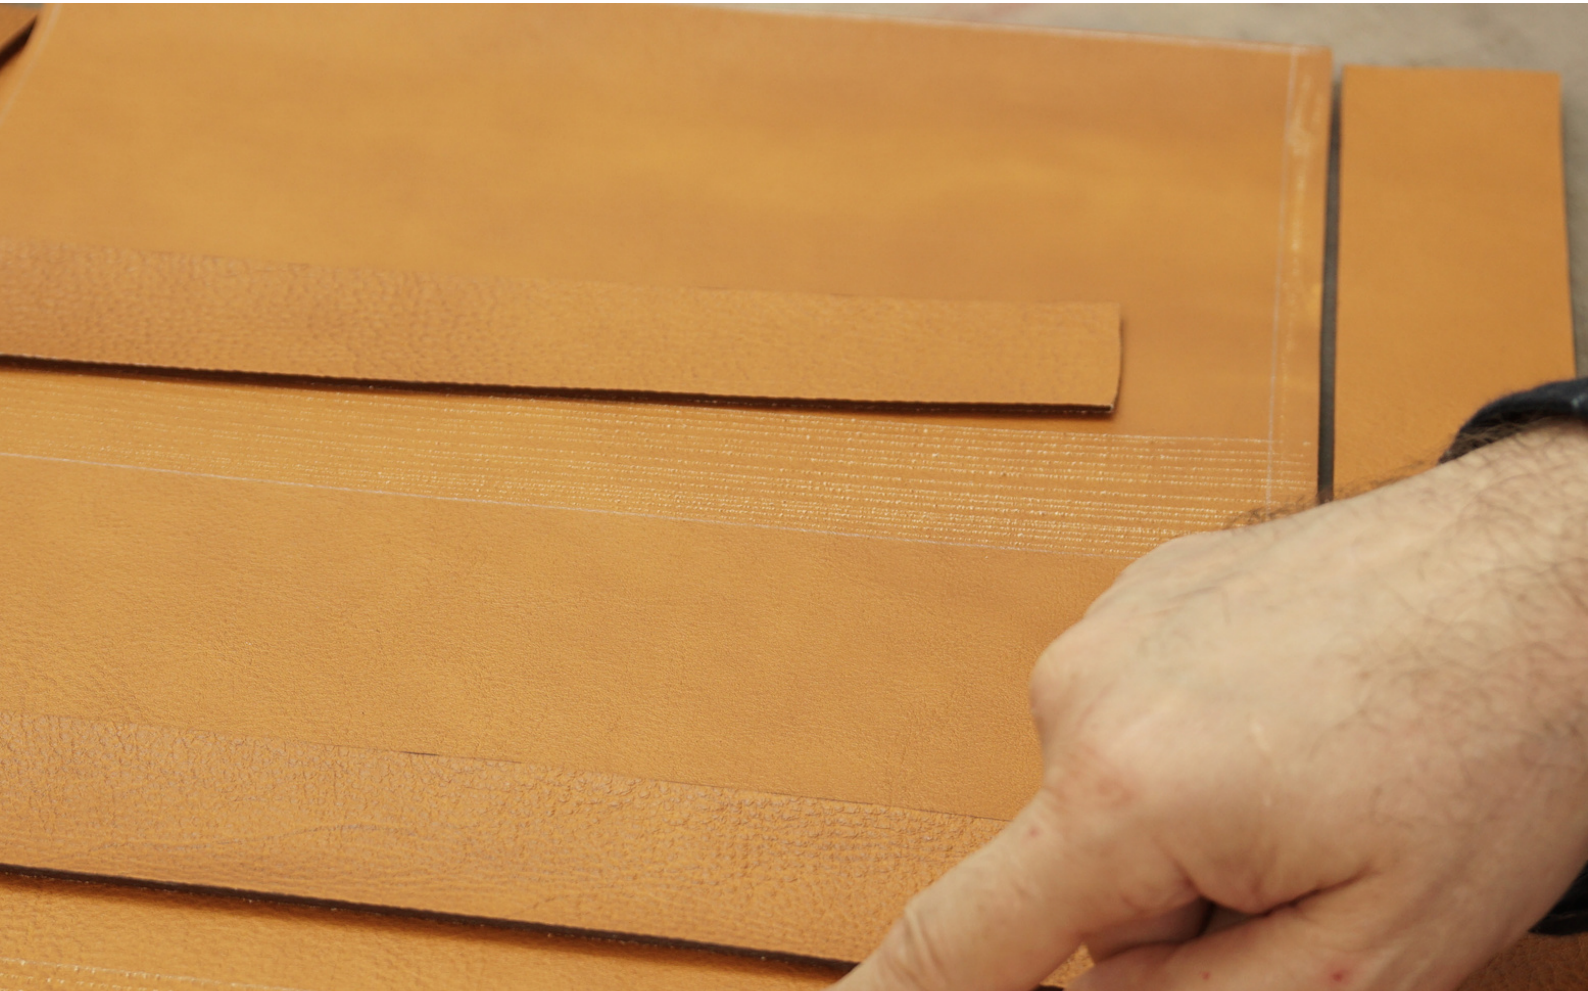

4. PUNCH HOLES OF THE BOTTOM AND THE LOWER PART OF THE TOTE

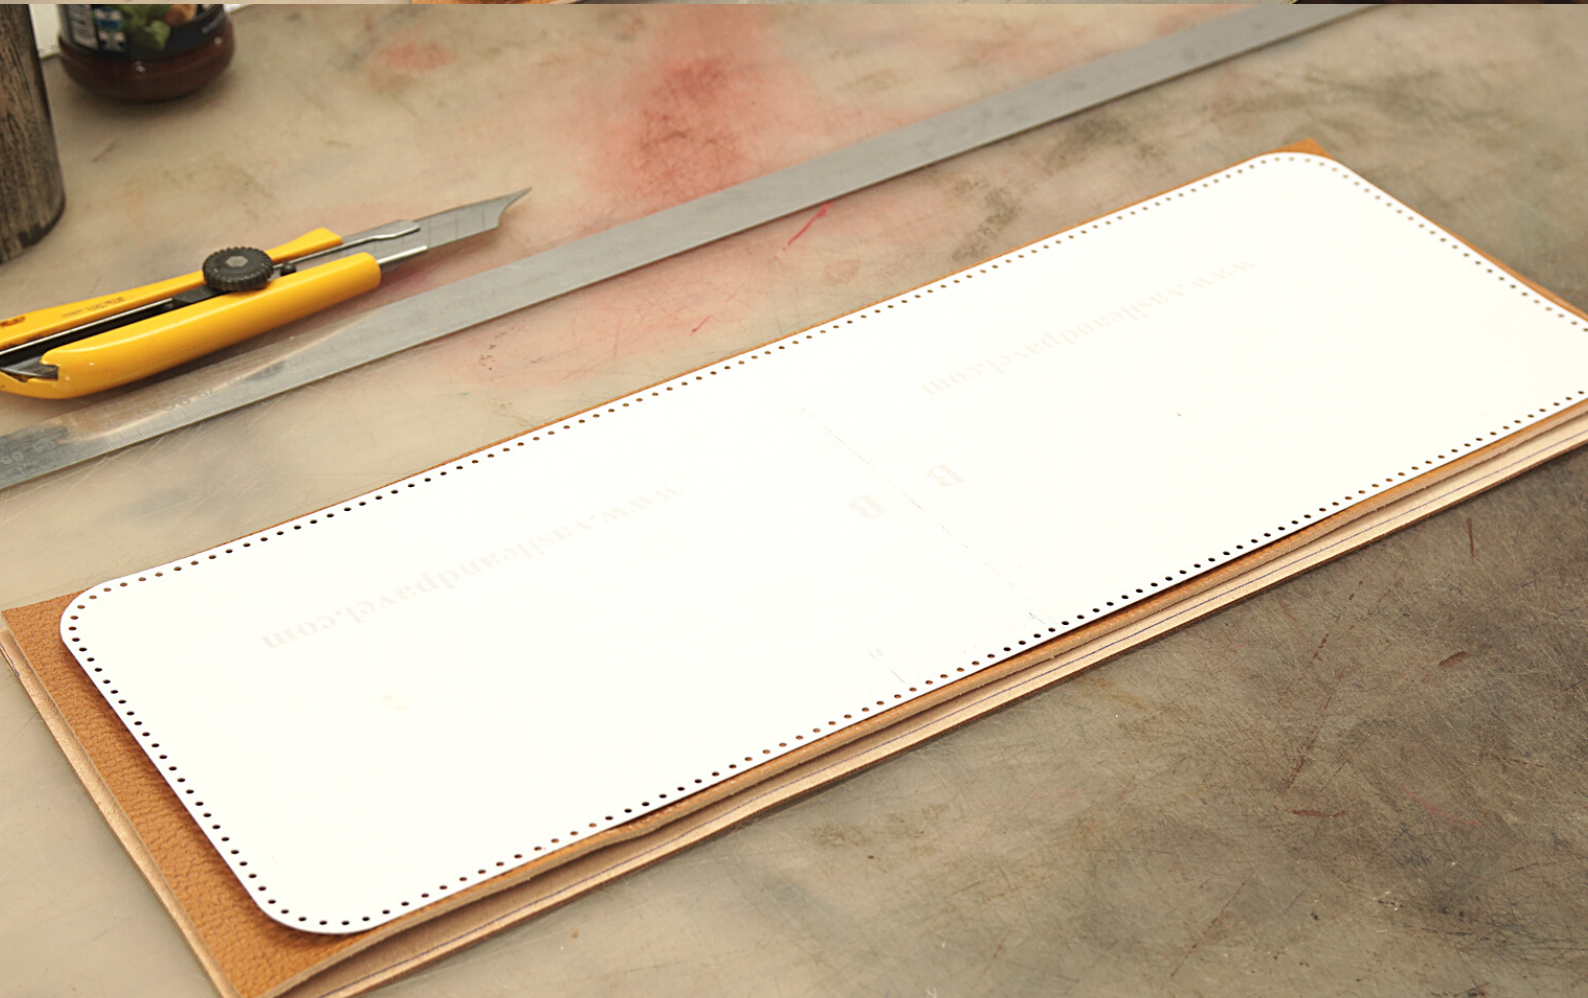


ASSEMBLE THE LOWER PART OF THE TOTE
AS INSTRUCTED IN THE PATTERN
(THE PIECES H1 AND H2).

THE SIDE STITCHED TO THE BOTTOM
HAS 114 HOLES
THE SIDE STITCHED TO THE TOP
HAS 113 HOLES



5. PUNCH HOLES IN THE REST OF THE BAG EXCEPT THE 2 LINES WHERE WE WILL ATTACH THE INSIDE POCKET

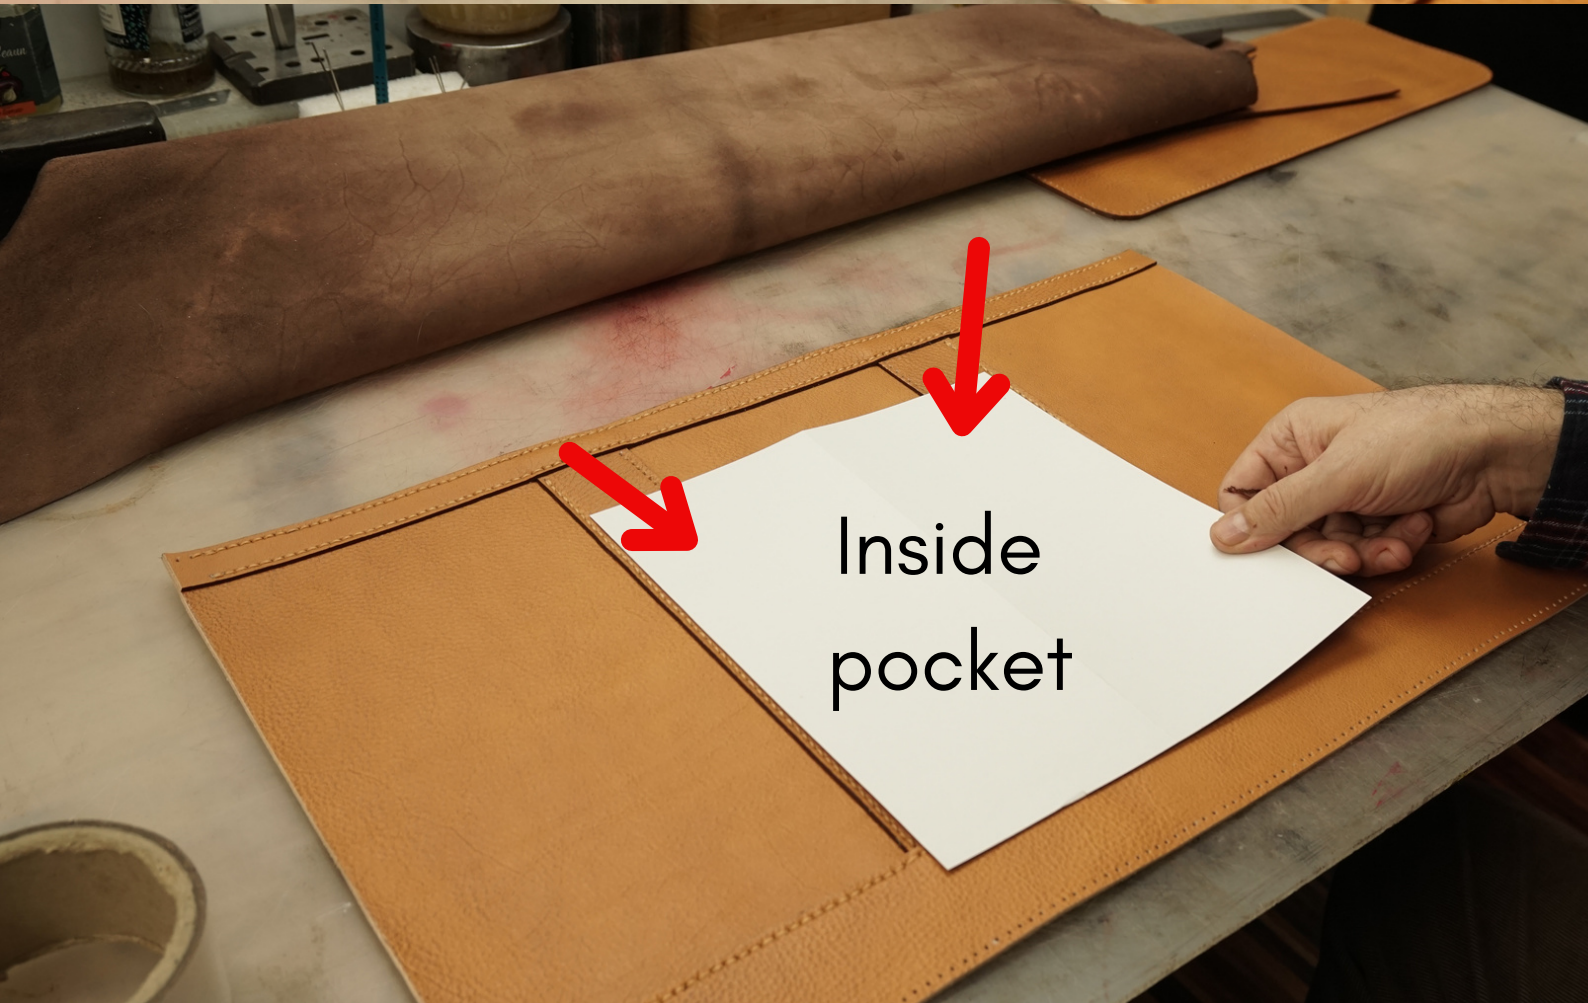

6. CUT THE INSIDE POCKET




7. PUNCH THE HOLES THROUGH THE POCKET AND THE FRONT STRIPES




8. ASSEMBLE THE INSIDE POCKET

I use double tape.

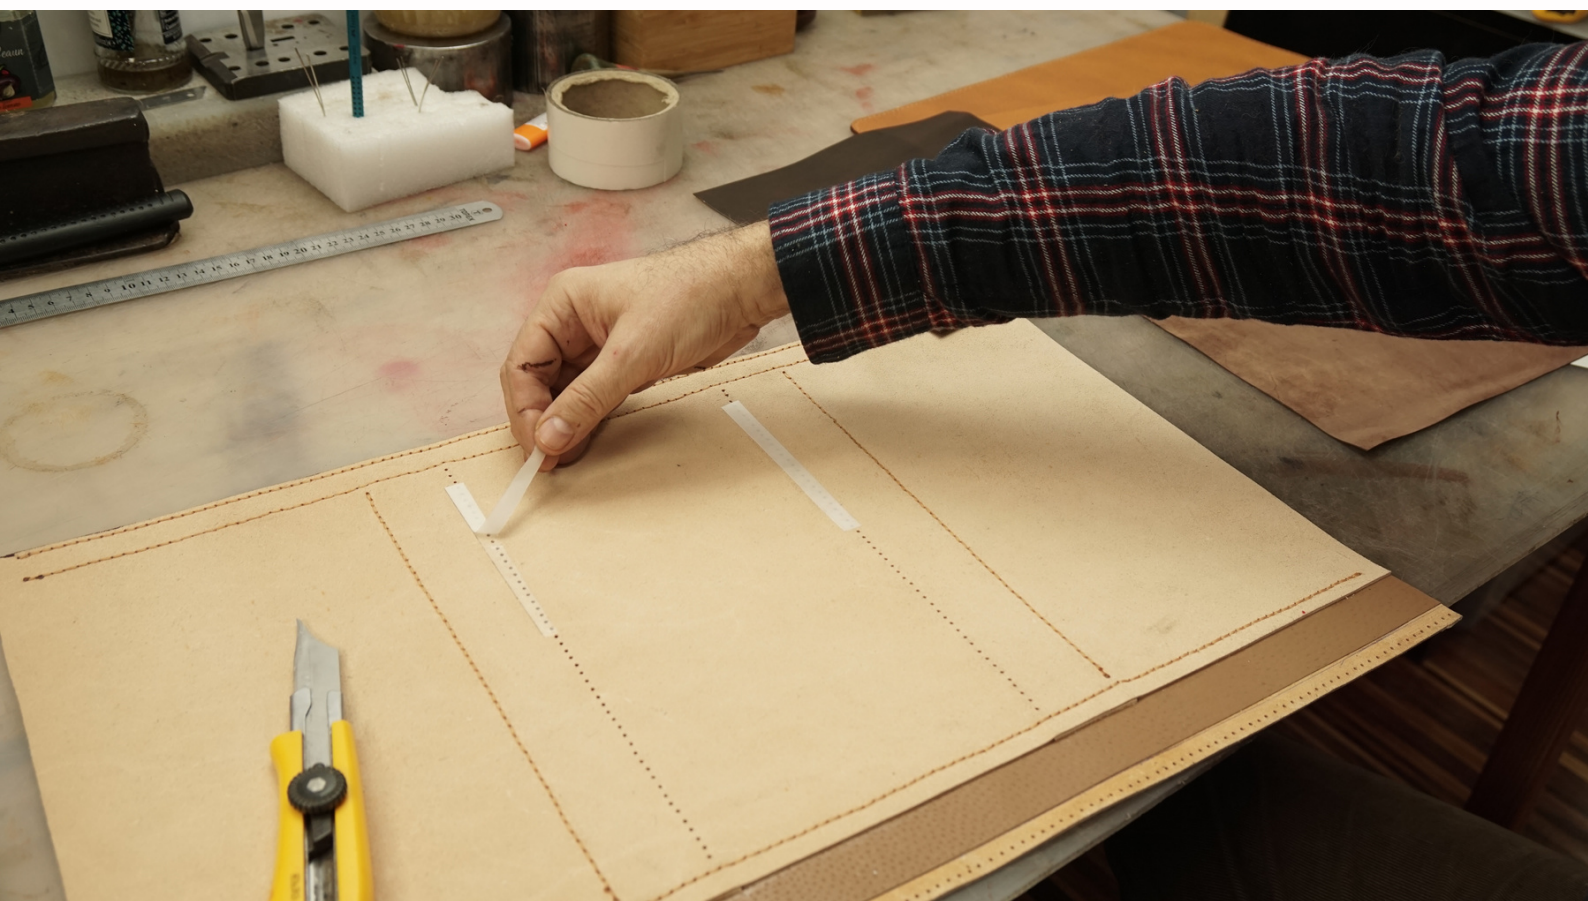


9. STITCH THROUGH THE POCKET AND STRIPES ON THE TOTE FRONT

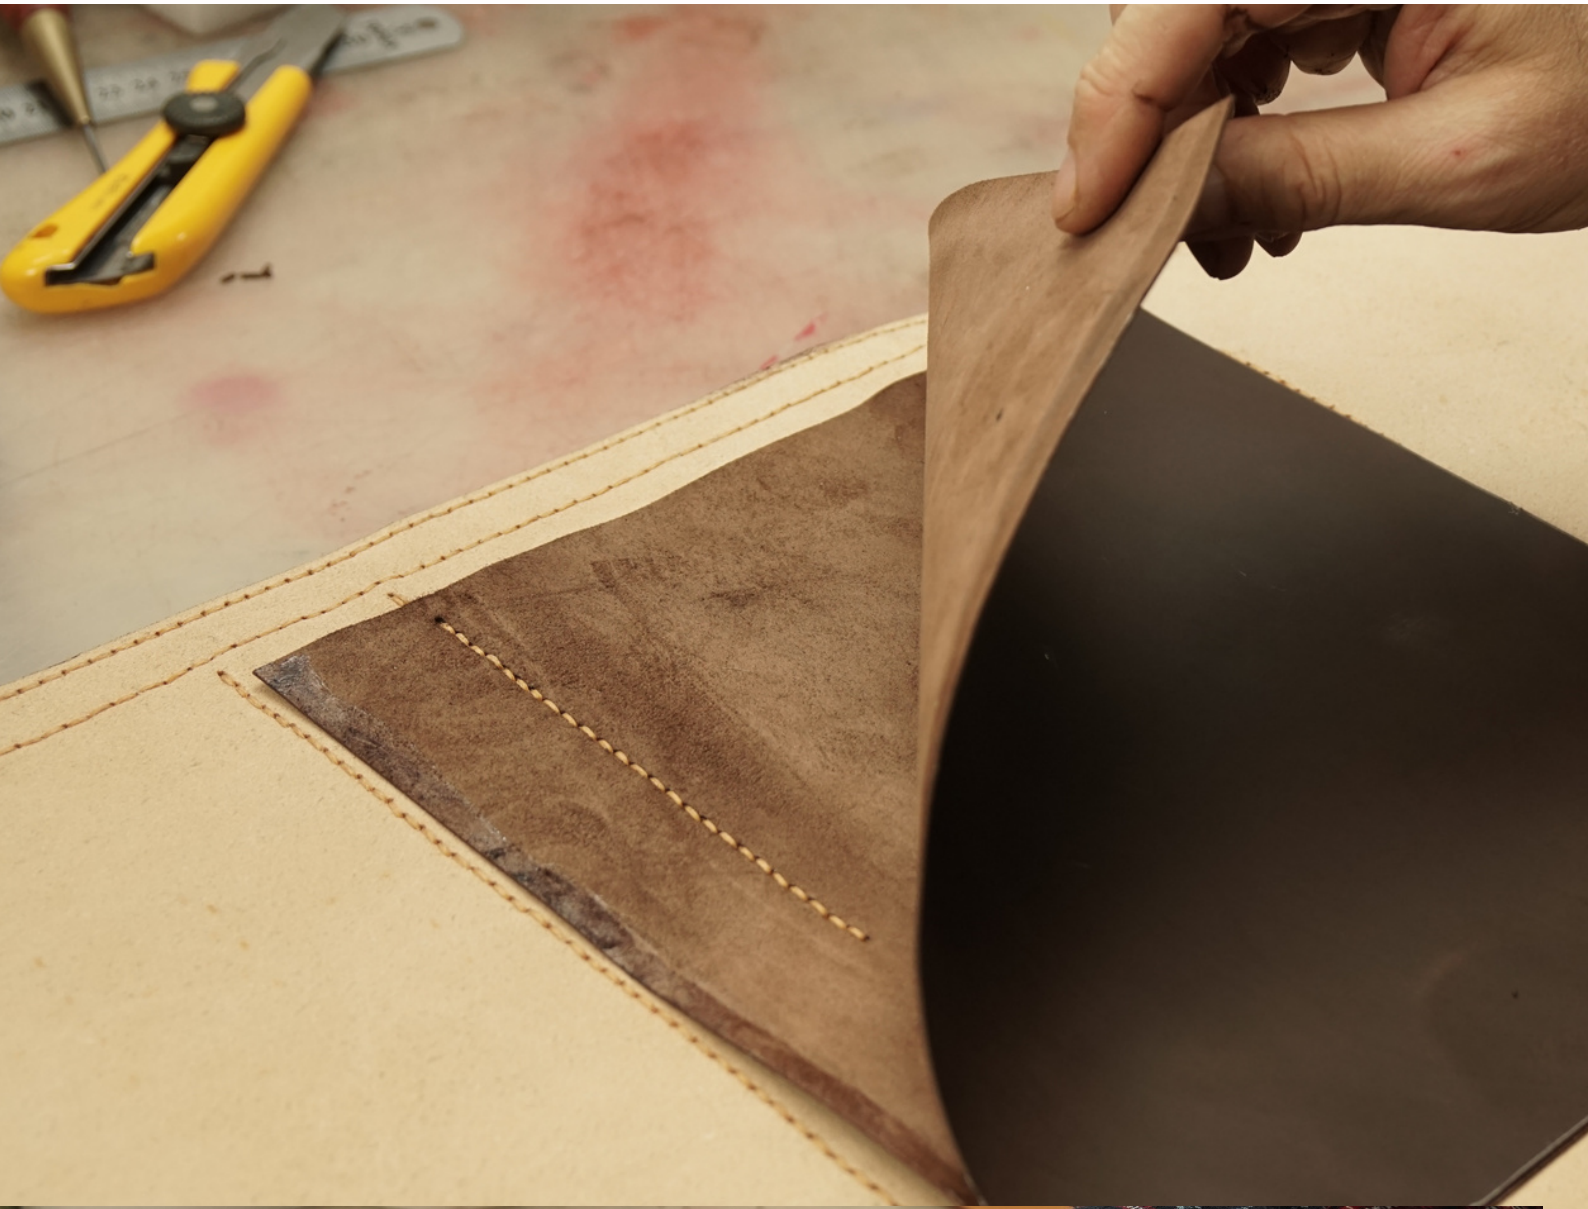

10. FINISH STITCHING THE POCKET



11. CUT THE HANDLE

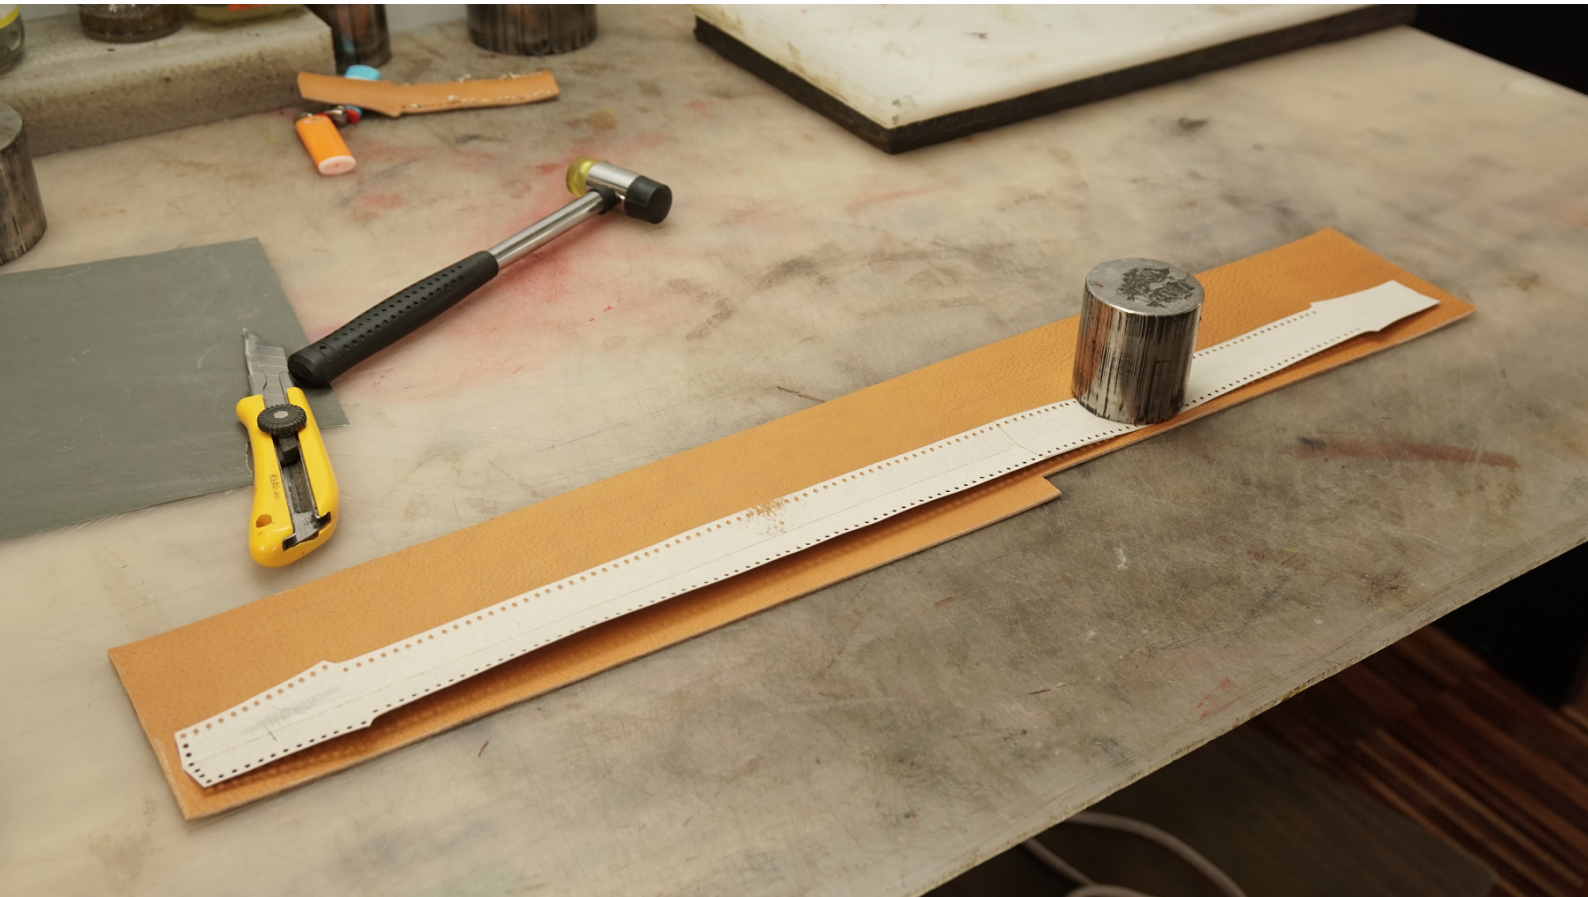

12. STITCH THE HANDLE

I put a 3-4" (8-10 mm) relatively soft piping thread cord inside the handle (cord for upholstery or curtains).



13. STITCH THE TWO NARROW STRIPES ON THE SIDE OF THE BAG AND CLOSE THE BAG



13. STITCH THE BOTTOM AND THE HANDLE TO THE BAG



14. THE FINISHED TOTE

Join our [Facebook Group](#) to share your take on this tote.
Message us if you need assistance. We are here to help you.

