



SWP-30 instruction

Step 1: Install A28 on A01 and A04 with ring.

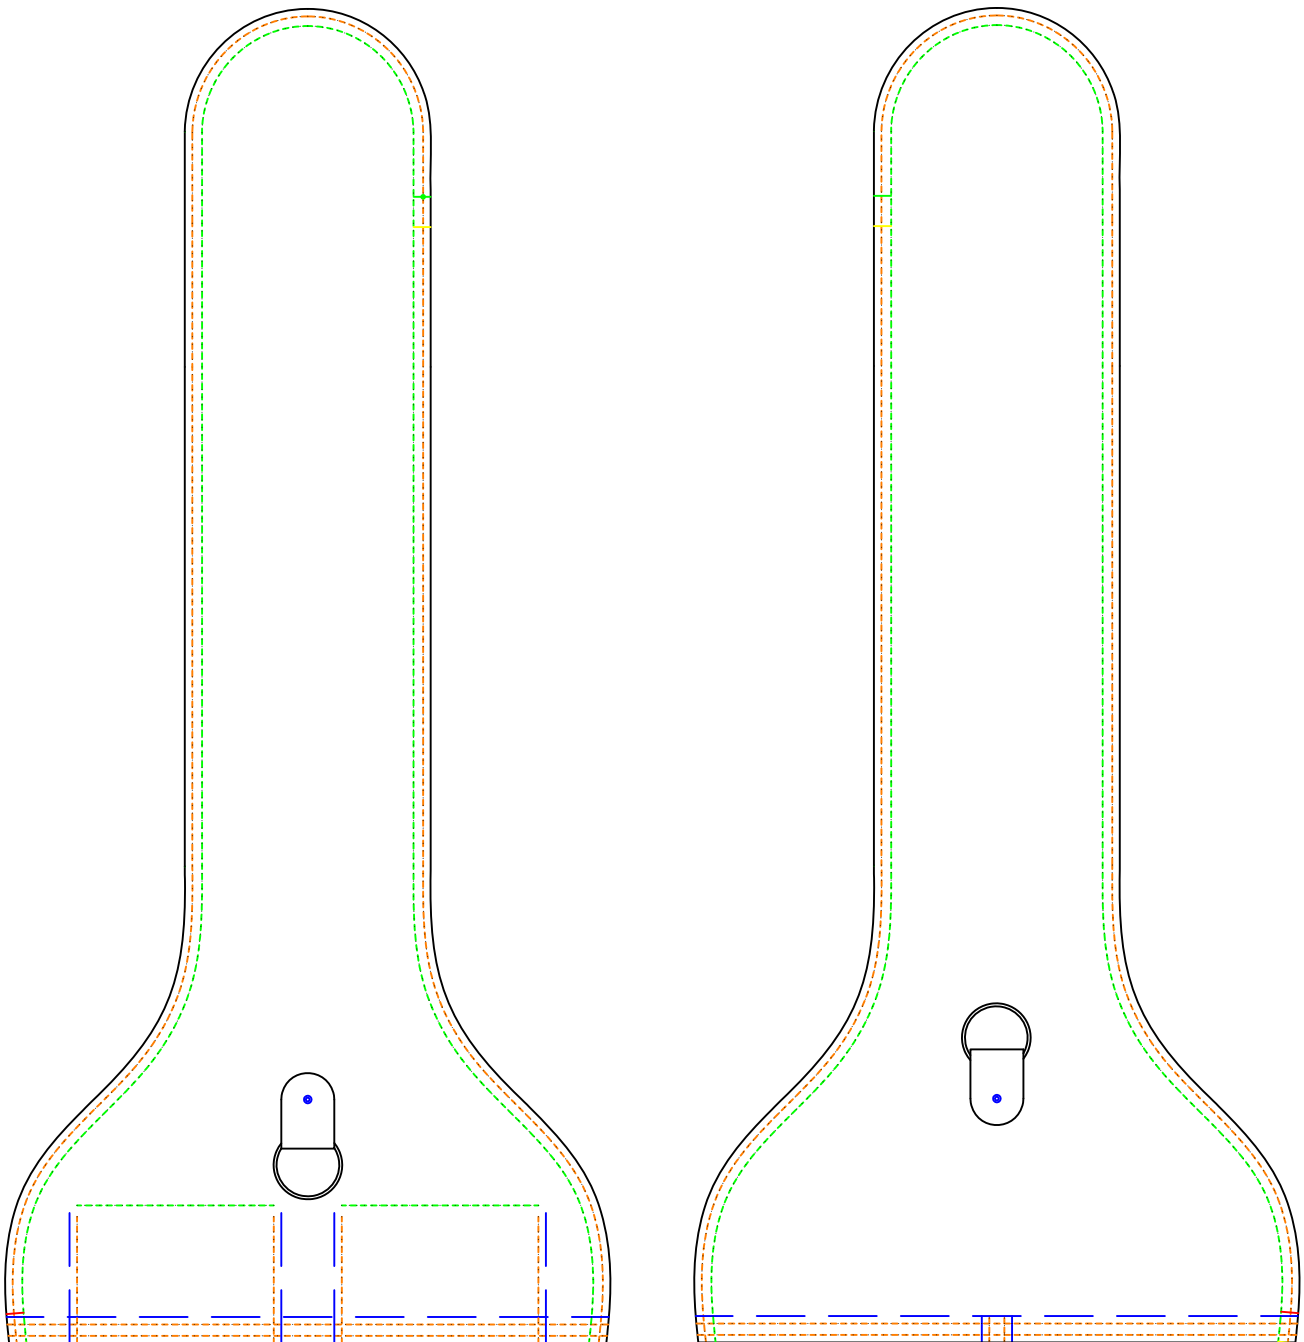


Step 2: Combine front and back piece. Don't forget get D ring on when you combine back piece.


Now key step: Cut 1.5-2cm sponge by using the front or back piece, then use compass to draw line on sponge to make it smaller, then glue the sponge on the flesh side of front and back piece, after do that, glue fabric lining on to hide the sponge.

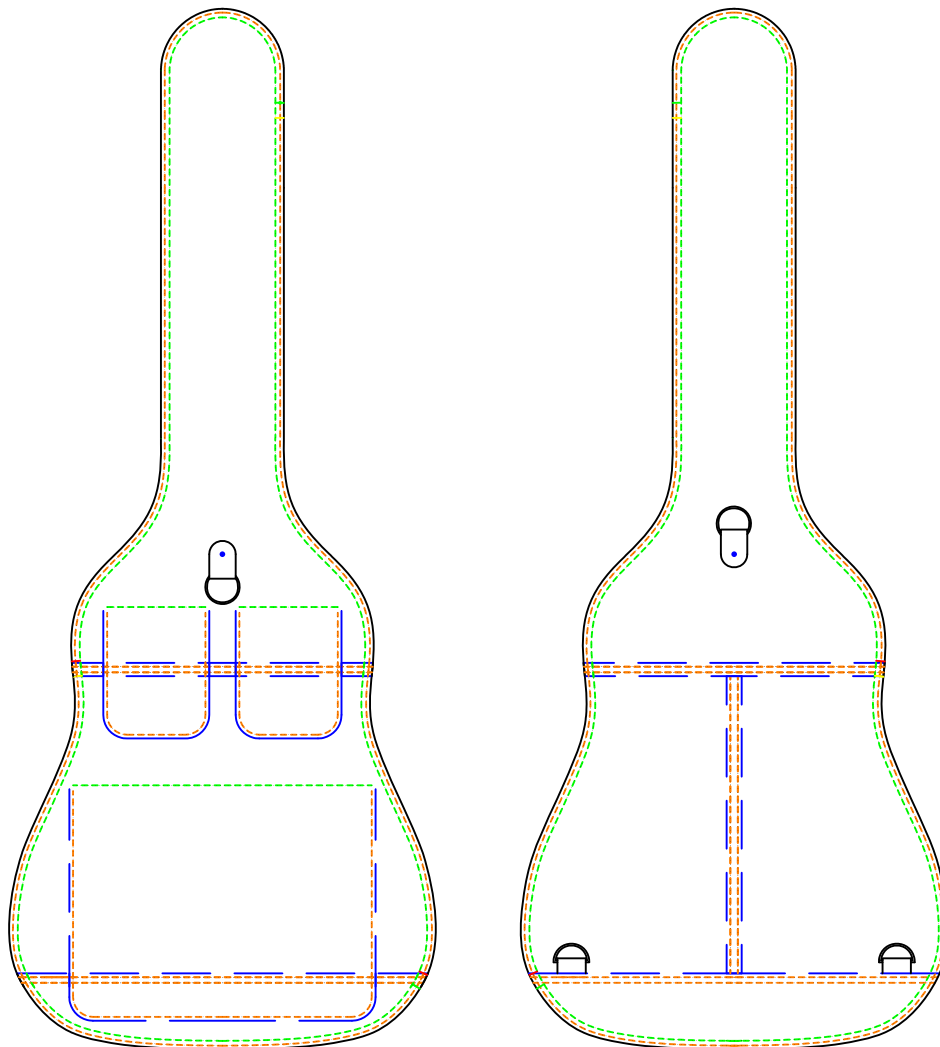

Step 3: Fold A12 with needle buckle and leather loops in. and then install A12 on A08, install A11 on A09. Then sew A10 with A08 to form the pouch. Put A09's flesh side face to you and then sew A09 on A01 along the green line. Please do the same to make the large pouch.

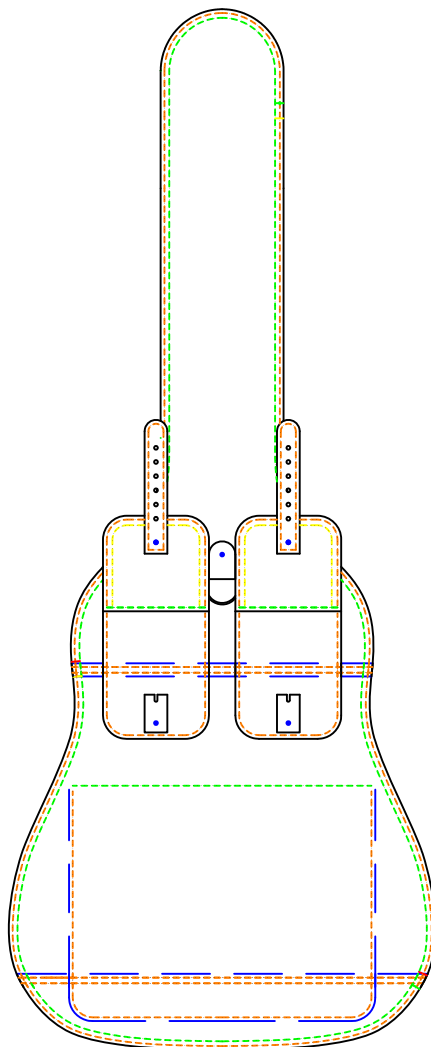


Step 4: Sew No.10 zipper on Front piece, please notice that, you should sew zipper from "visible zipper mark", please understand that, you should hide the tip of the of zipper near the yellow line. The zipper is No.10 and the total length is about 1724mm, visible part is about 1692mm.

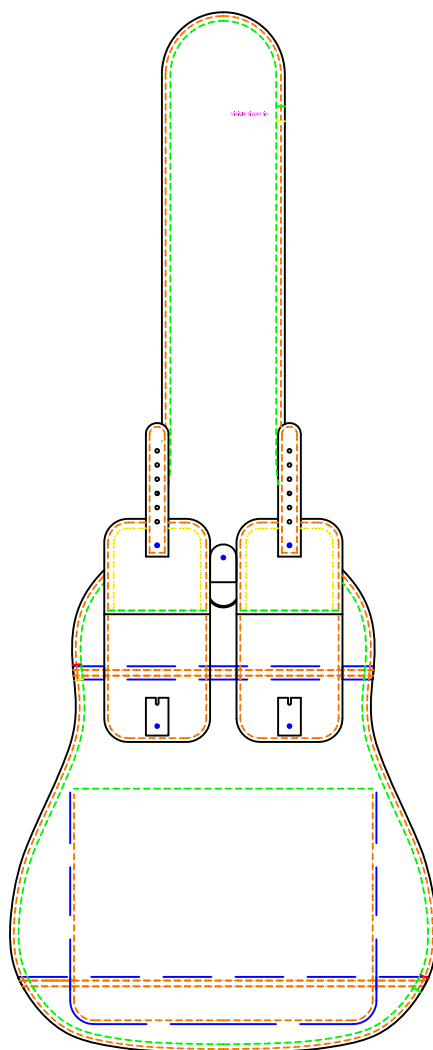


Step 5: Sew A20, A21 and A22 together, and then you can install taps on.

Also glue sponge on the flesh side and then glue lining on. Sew along the green line to fix the sponge and lining, the sponge should be smaller than the outline, you can use compass to do this.

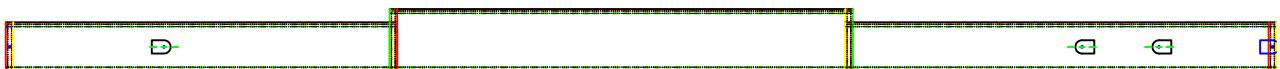

Step 6: Sew zipper on the combination (on A21 and A22), then sew the combination on A01 and A02.

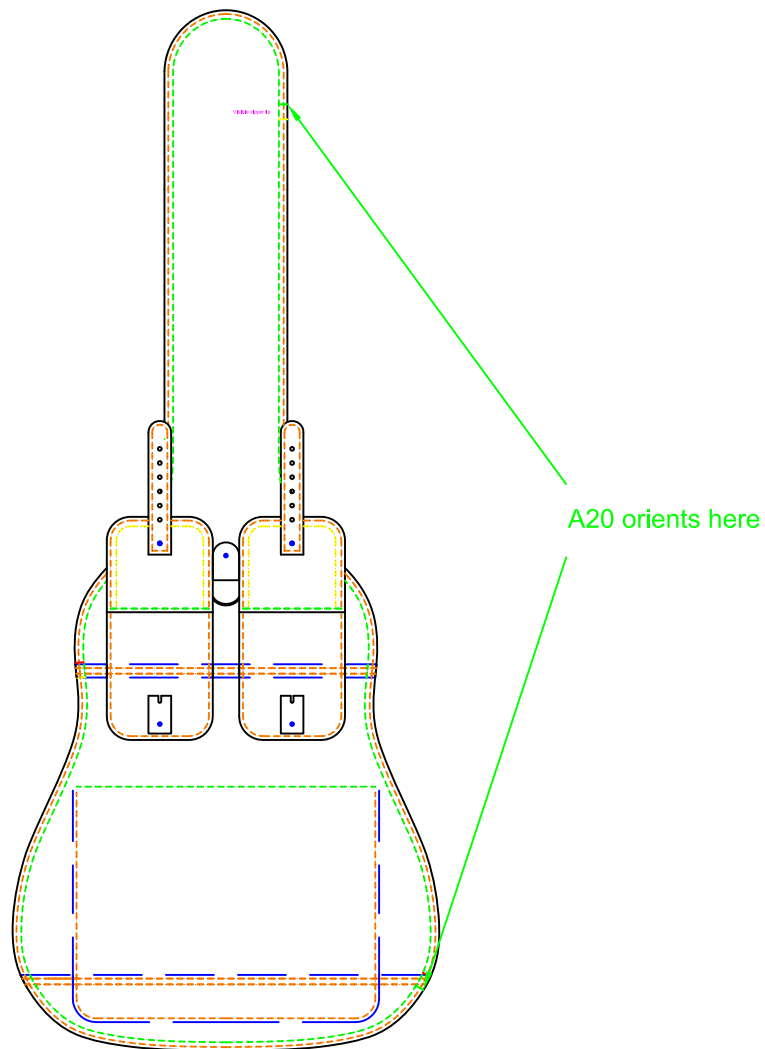

Notice:

1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;

2, 1oz=0.4mm;

3, Here is the line instruction.

