



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

The image displays two screenshots of software dialog boxes with red callout boxes and arrows providing instructions.

Print Dialog Box:

- Printer:** FUJII XEROX DocuPrint CM215 fw...
- Copies:** 1
- Pages to Print:** All (selected), Current page, Pages 1 - 16
- Page Sizing & Handling:**
 - Size:** Actual size (selected), Fit, Shrink oversized pages, Custom Scale: 100 %
 - Orientation:** Auto portrait/landscape (selected), Portrait, Landscape
- Page Setup...** button is highlighted with a red arrow and the callout: **Set the paper size**
- Select Actual size** callout points to the 'Actual size' radio button.

Page Setup Dialog Box:






- Settings:** Page Attributes
- Format For:** Any Printer
- Paper Size:** A4 (selected), 210 by 297 mm. A red arrow points to this dropdown with the callout: **Select the paper size**
- Orientation:** Portrait (selected), Landscape
- Scale:** 100 % (selected). A red arrow points to this field with the callout: **Scale 100%**
- OK** button is highlighted.



IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download



<https://get.adobe.com/reader>

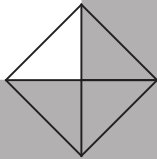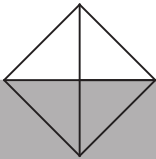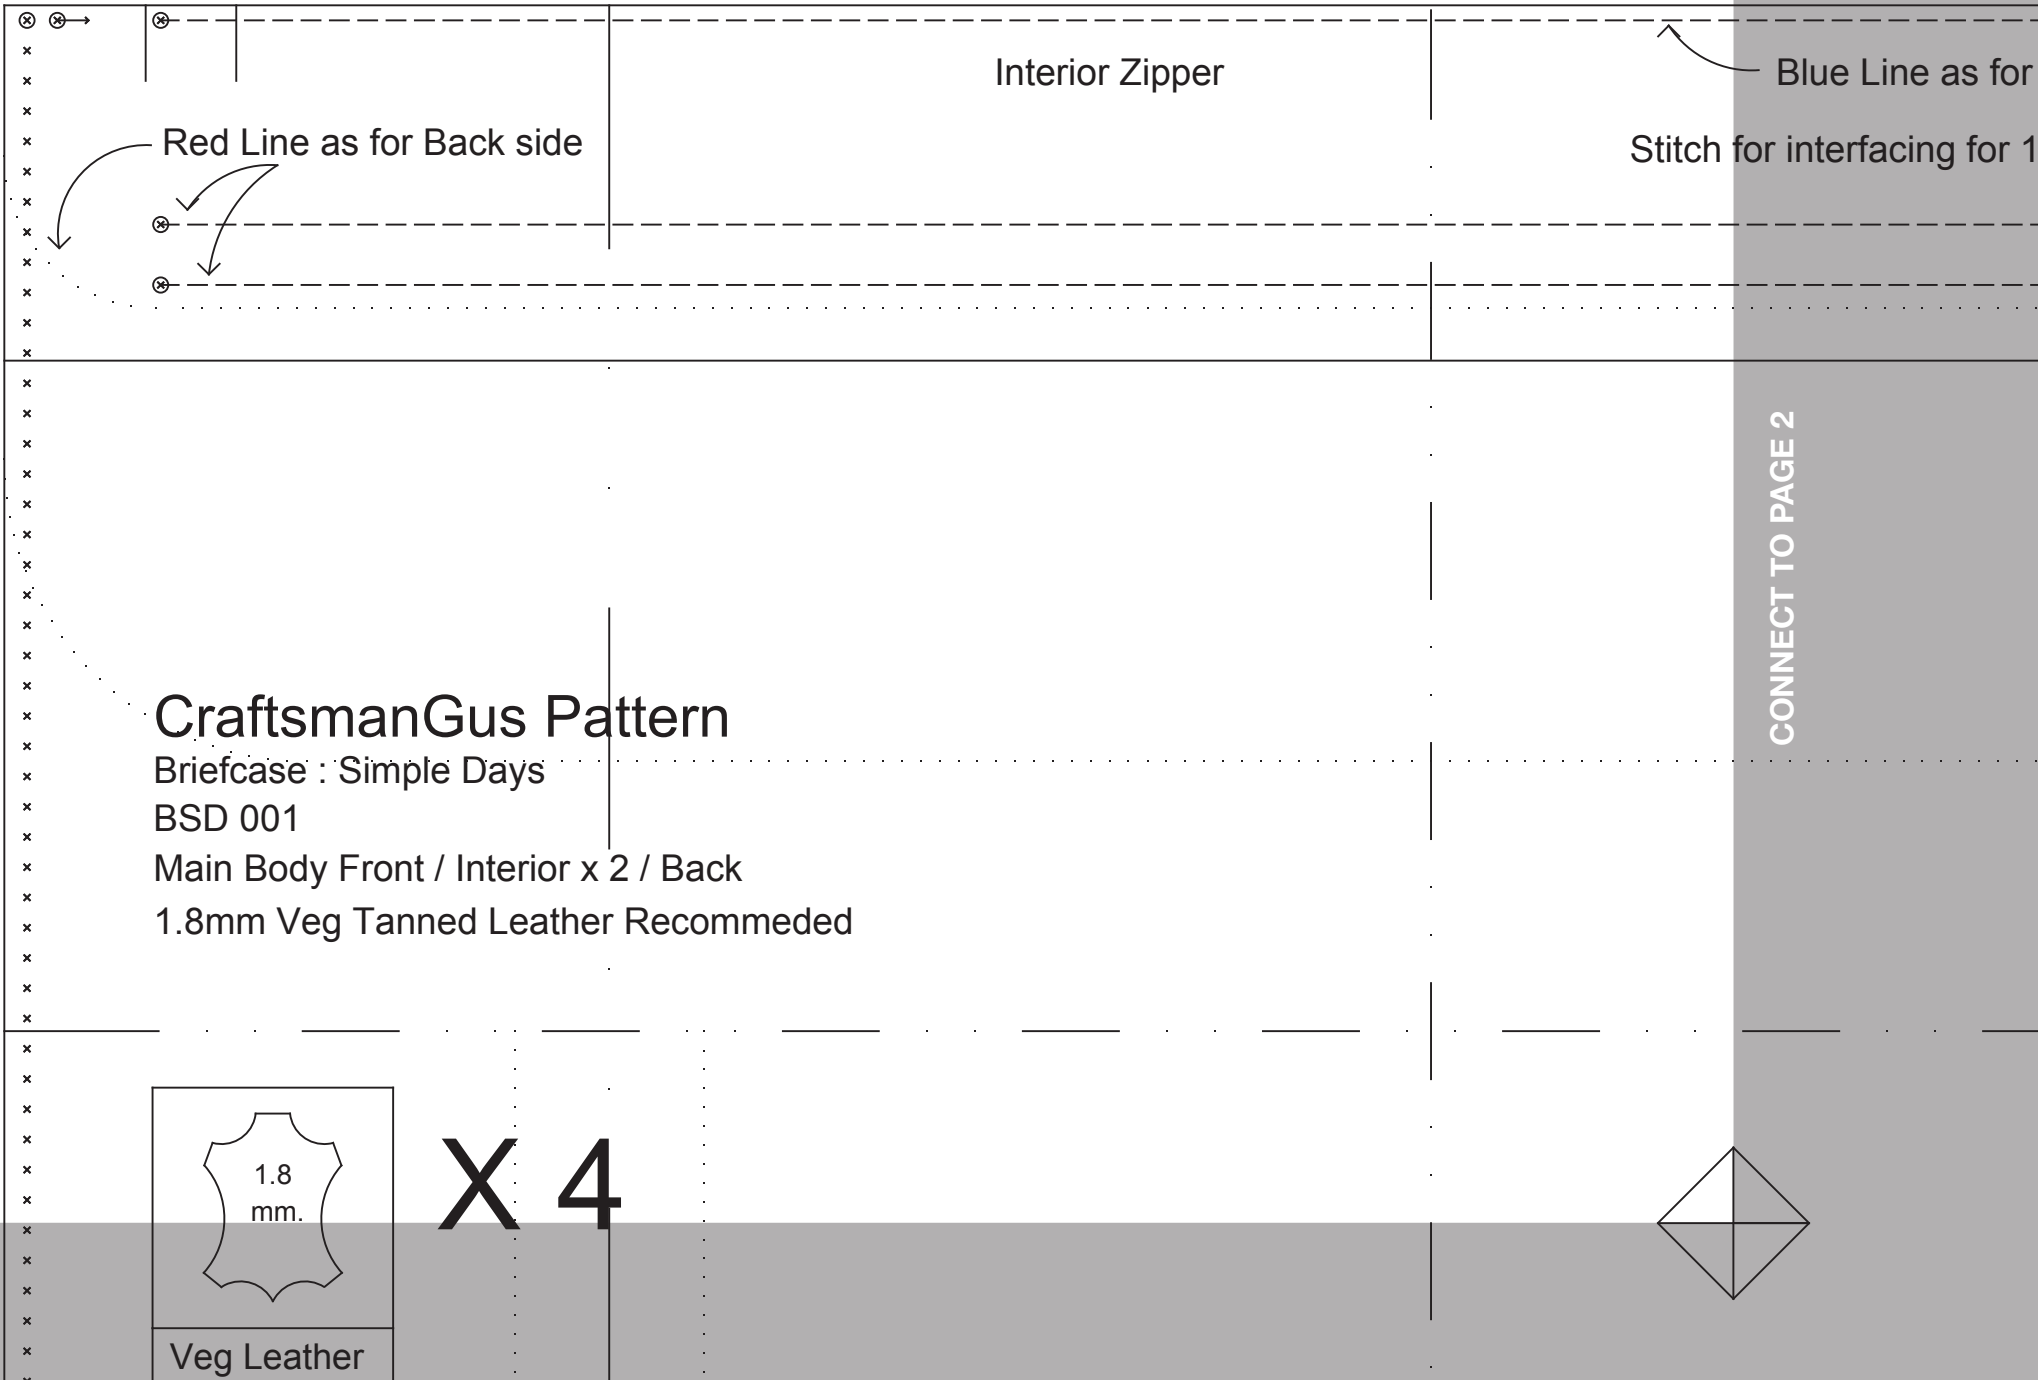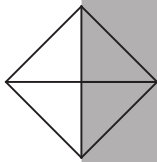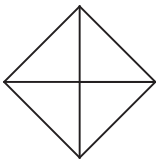

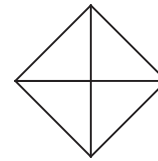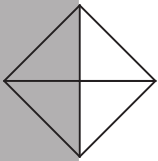

Blue Line as for 2nd & 3rd Interior Side
Stitch for interfacing for 1st & 4th(Back)' interfacing

CONNECT TO PAGE 1

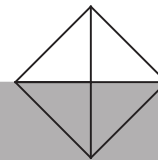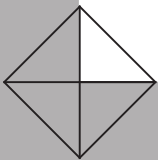

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Gusset/Side pieces

1.8mm Veg Tanned Leather Recommended

X 6

Veg Leather

1.8
mm.



X 4

CONNECT TO PAGE 1

Axis Line of Lock Straps

Center / Axis Line of Lock


CraftsmanGus Pattern

Briefcase : Simple Days


BSD 001

Bottom Gusset

1.8mm Veg Tanned Leather Recommended



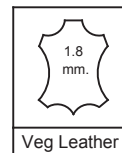





X 3

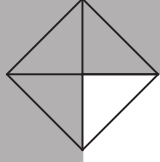


Axis Line of Lock Straps

CONNECT TO PAGE 2

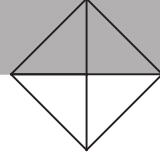
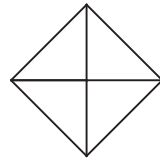
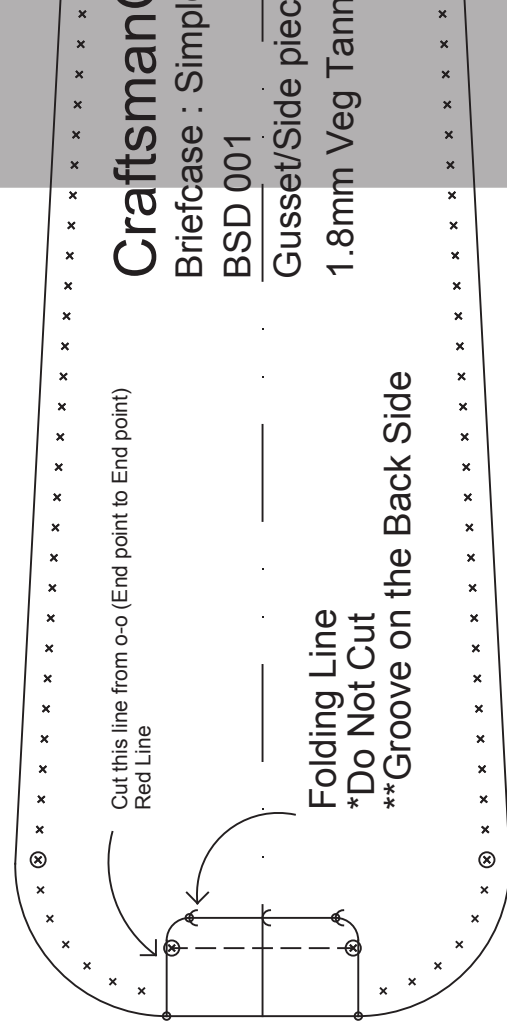


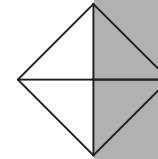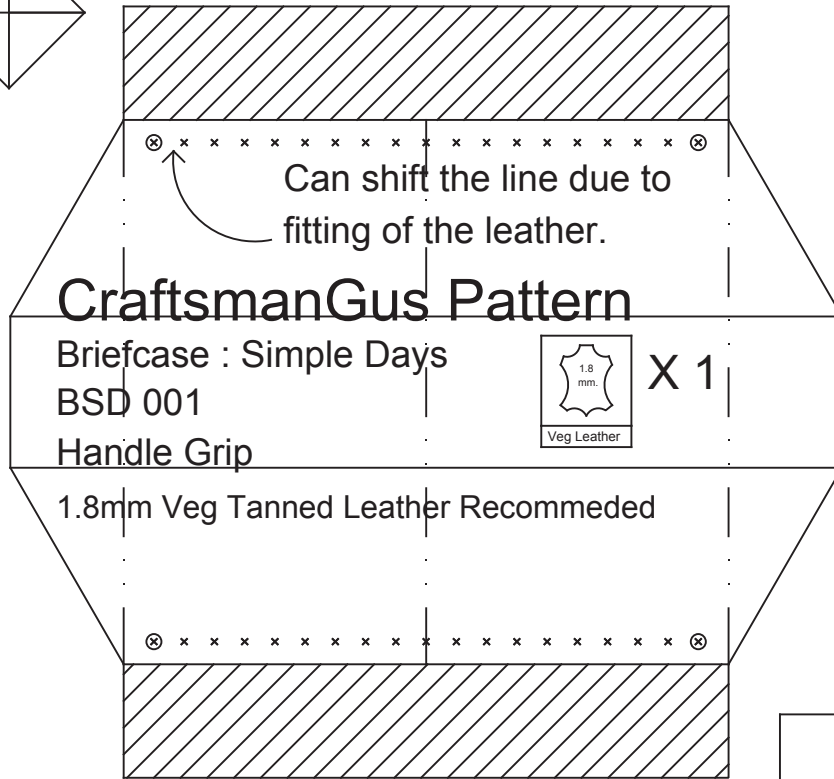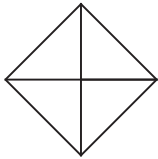

CONNECT TO PAGE 6


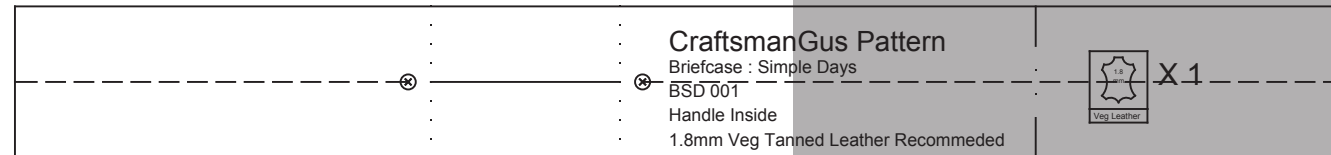


Triple Deck Briefcase
Page 5 of 11

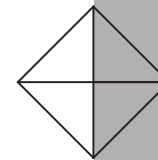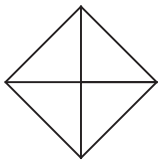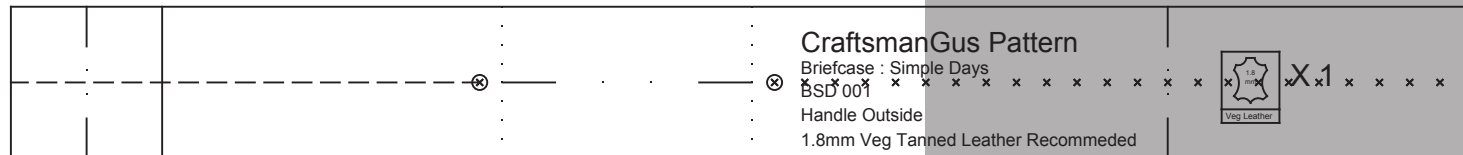





CONNECT TO PAGE 5

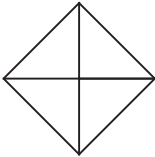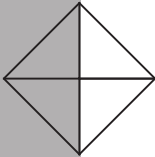


CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Spine 1.8mm Veg Tanned Leather Recommended	 X 1
--	--

CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Inside 1.8mm Veg Tanned Leather Recommended	 X 1
---	--


CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Outside 1.8mm Veg Tanned Leather Recommended	 X 1		
--	--	--	--

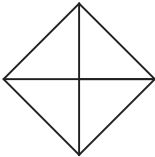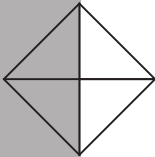

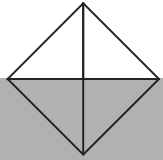


CONNECT TO PAGE 8


needed

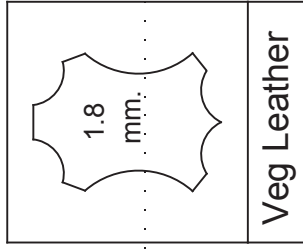


X 1

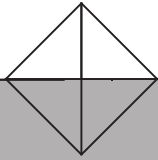

Center / Axis Line of Lock

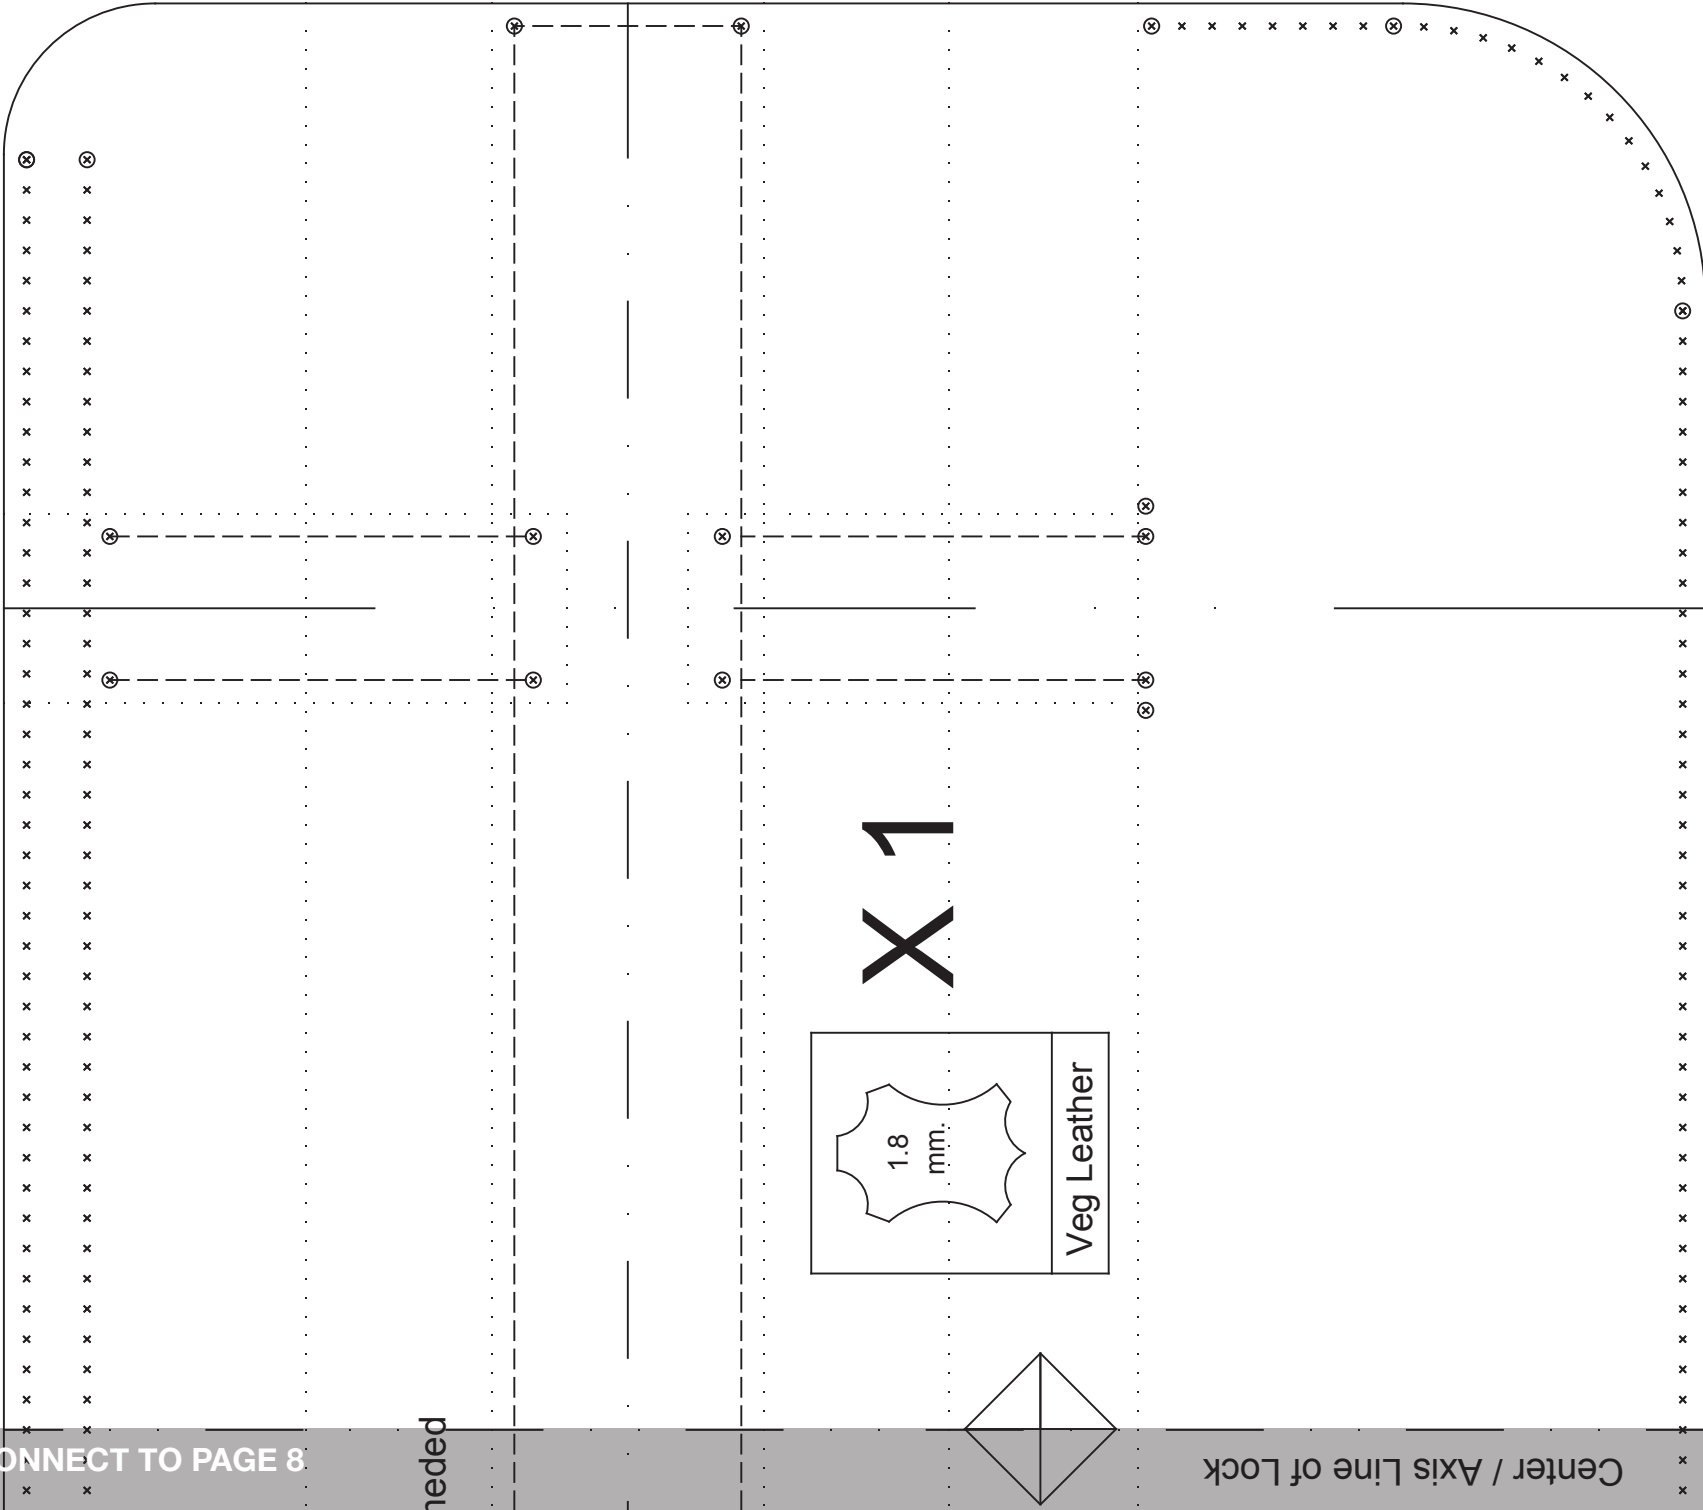

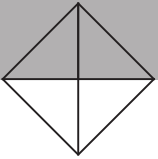

CONNECT TO PAGE 7





CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Flap

1.8mm Veg Tanned Leather Recommended

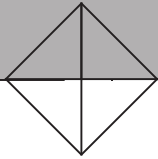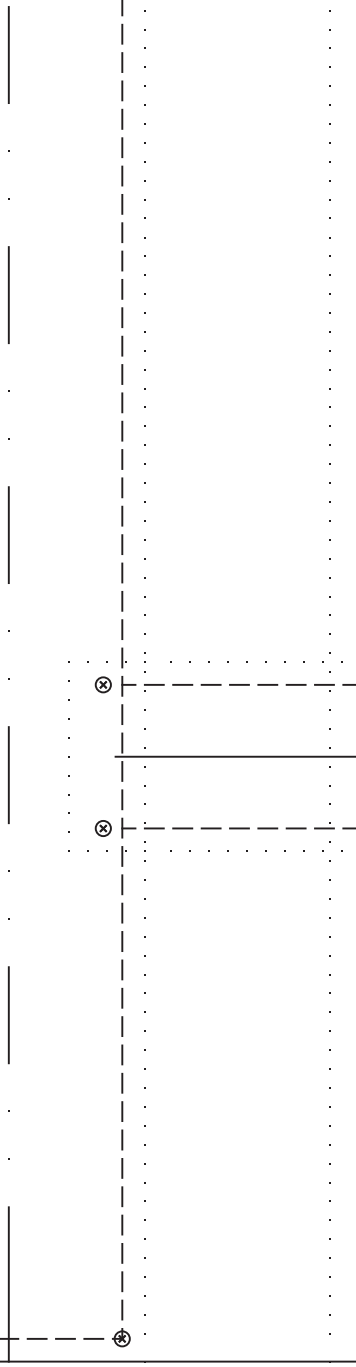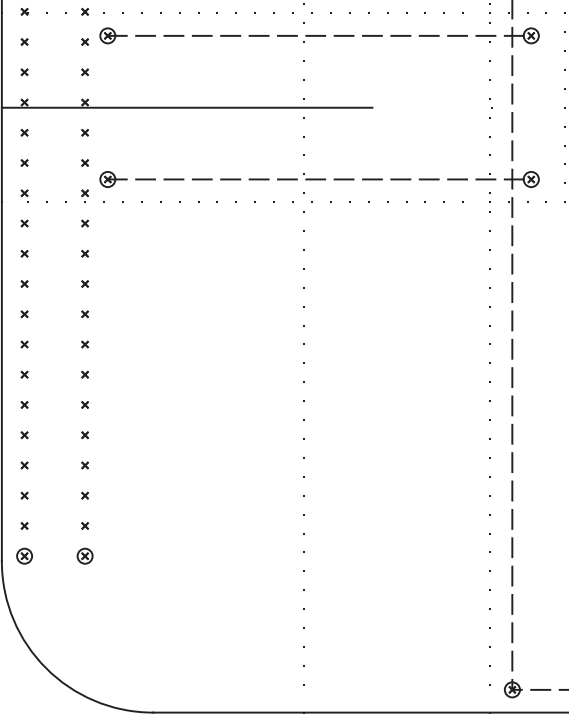

Center / Axis Line of Lock





Border of interfacing.








Triple Deck Briefcase

Page 9 of 11

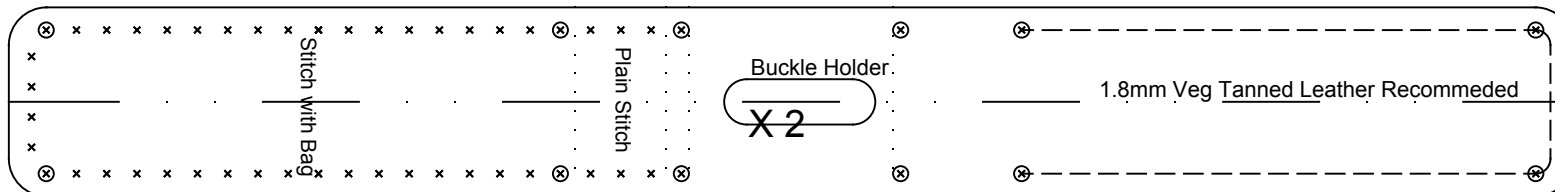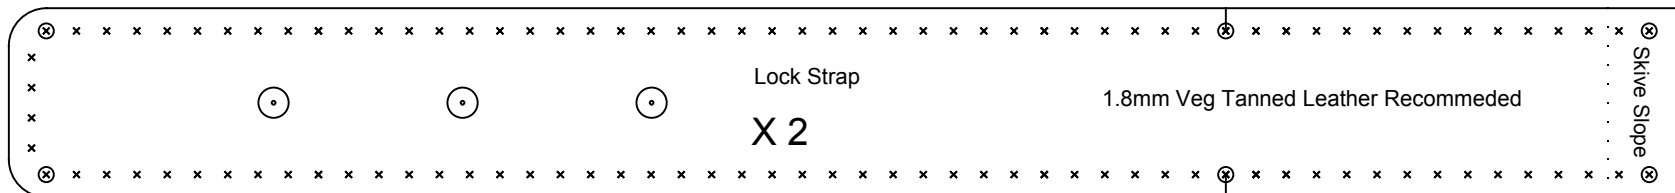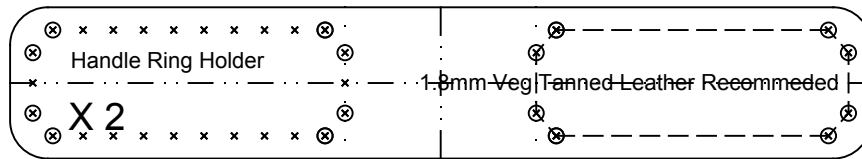


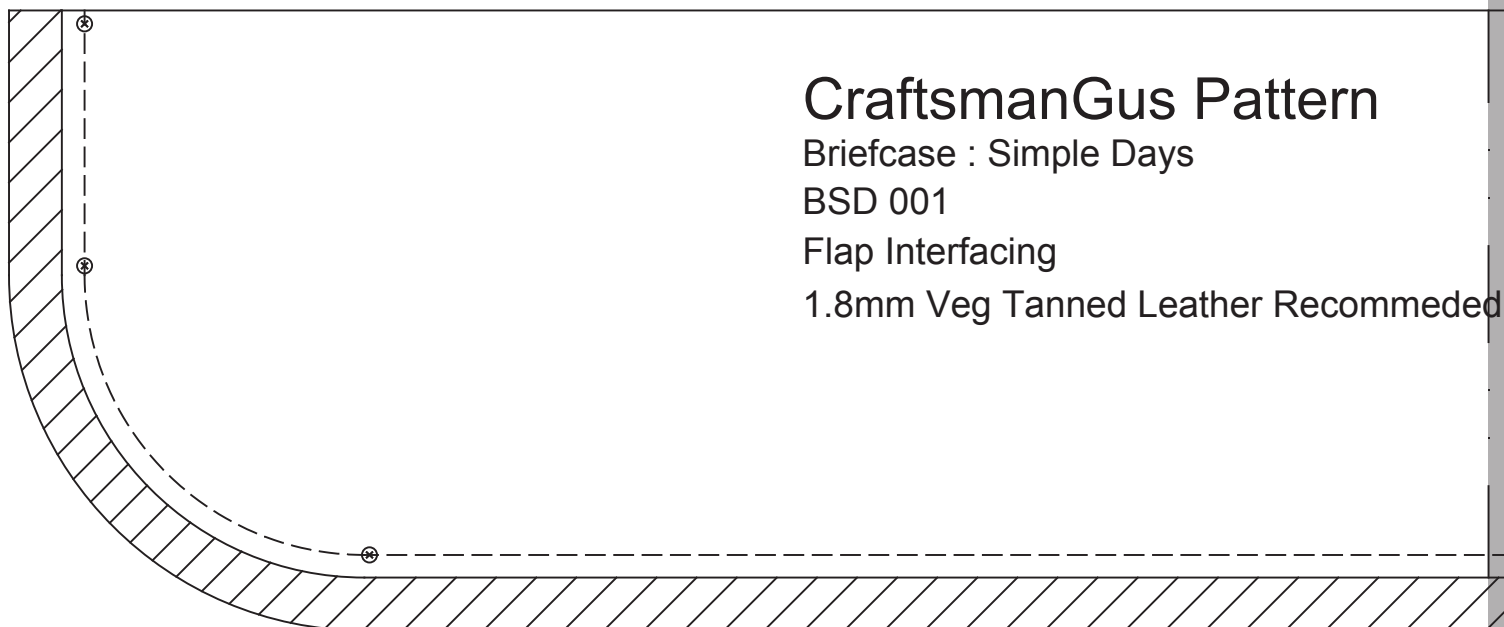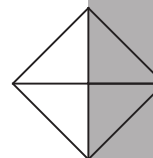

X 1

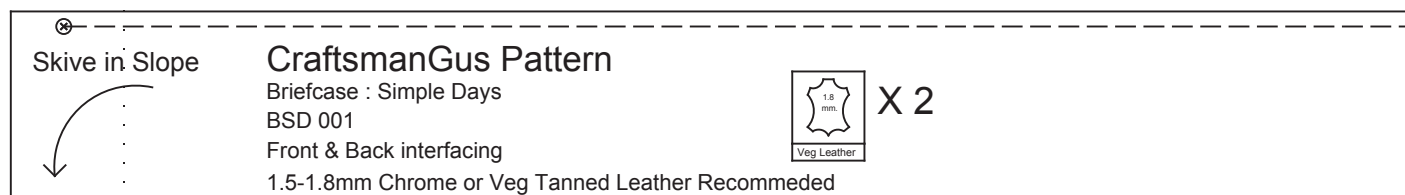


Glue all the area

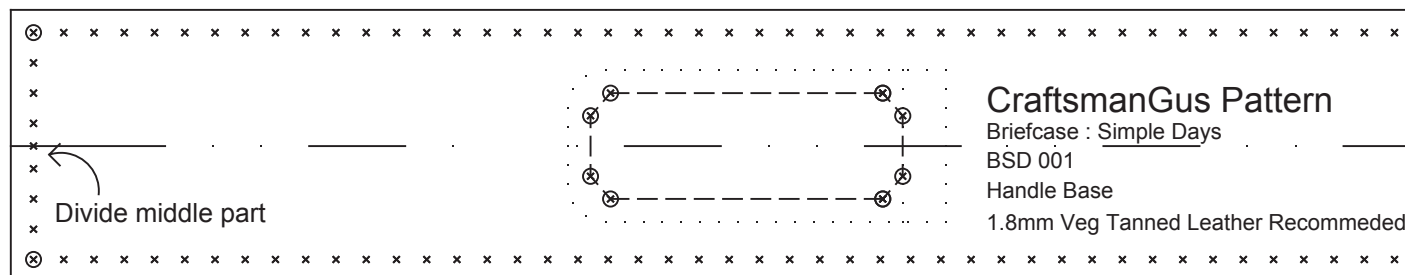


Divide middle part



X 1

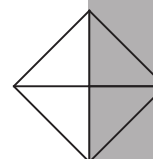

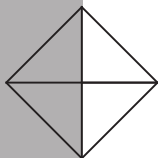

CONNECT TO PAGE 10


CraftsmanGus Pattern

Briefcase : Simple Days


BSD 001

Map Interfacing

1.8mm Veg Tanned Leather Recommended

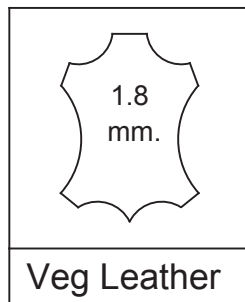

X 1


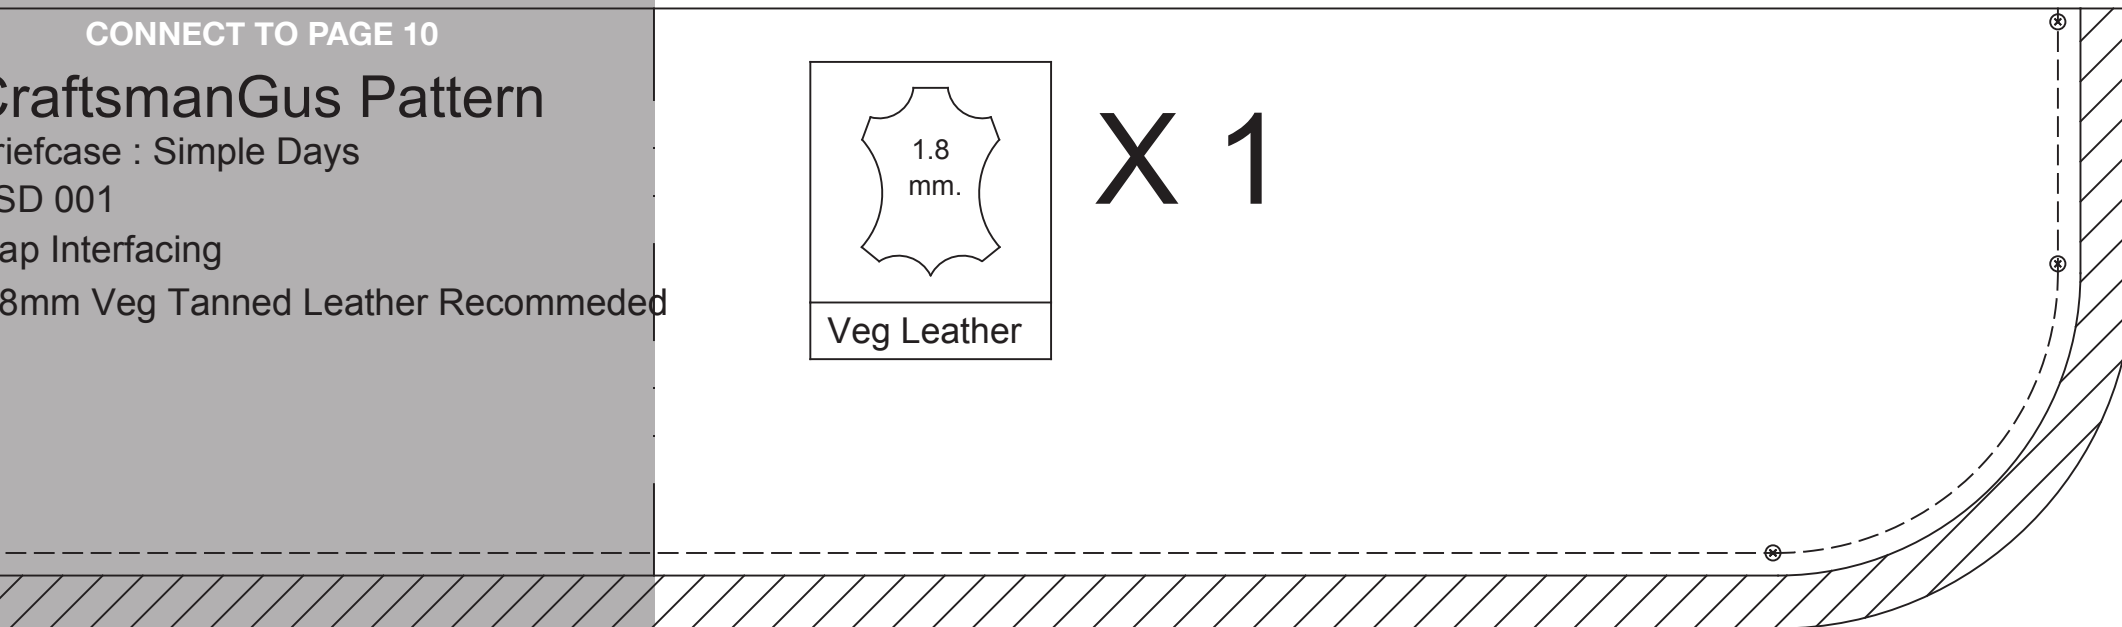


X 2

Recommended

Glue all the area

Skive in Slope

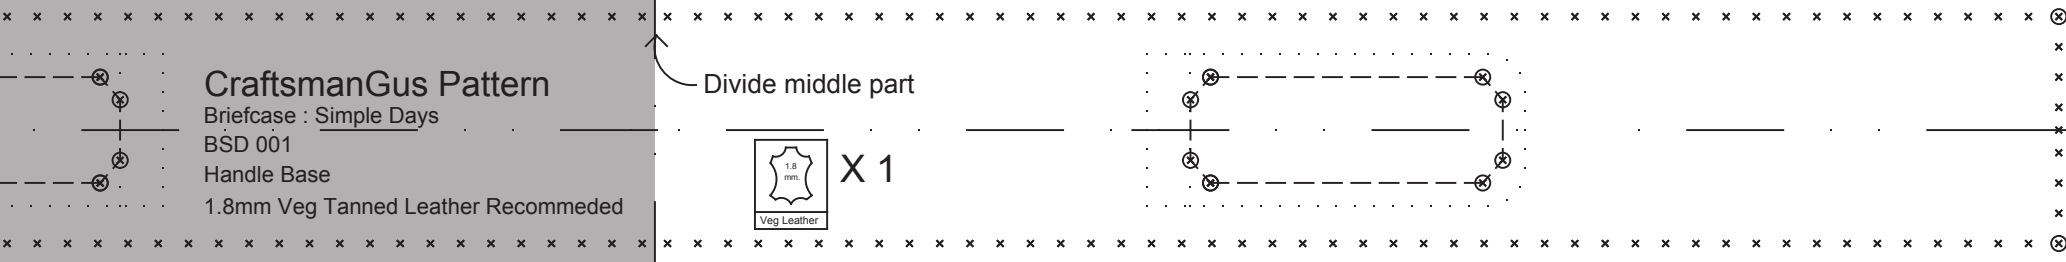

Divide middle part



X 1

CraftsmanGus Pattern

Briefcase : Simple Days
BSD 001

Handle Base

1.8mm Veg Tanned Leather Recommended

