


A4 print 1:1



9mm rivet




a

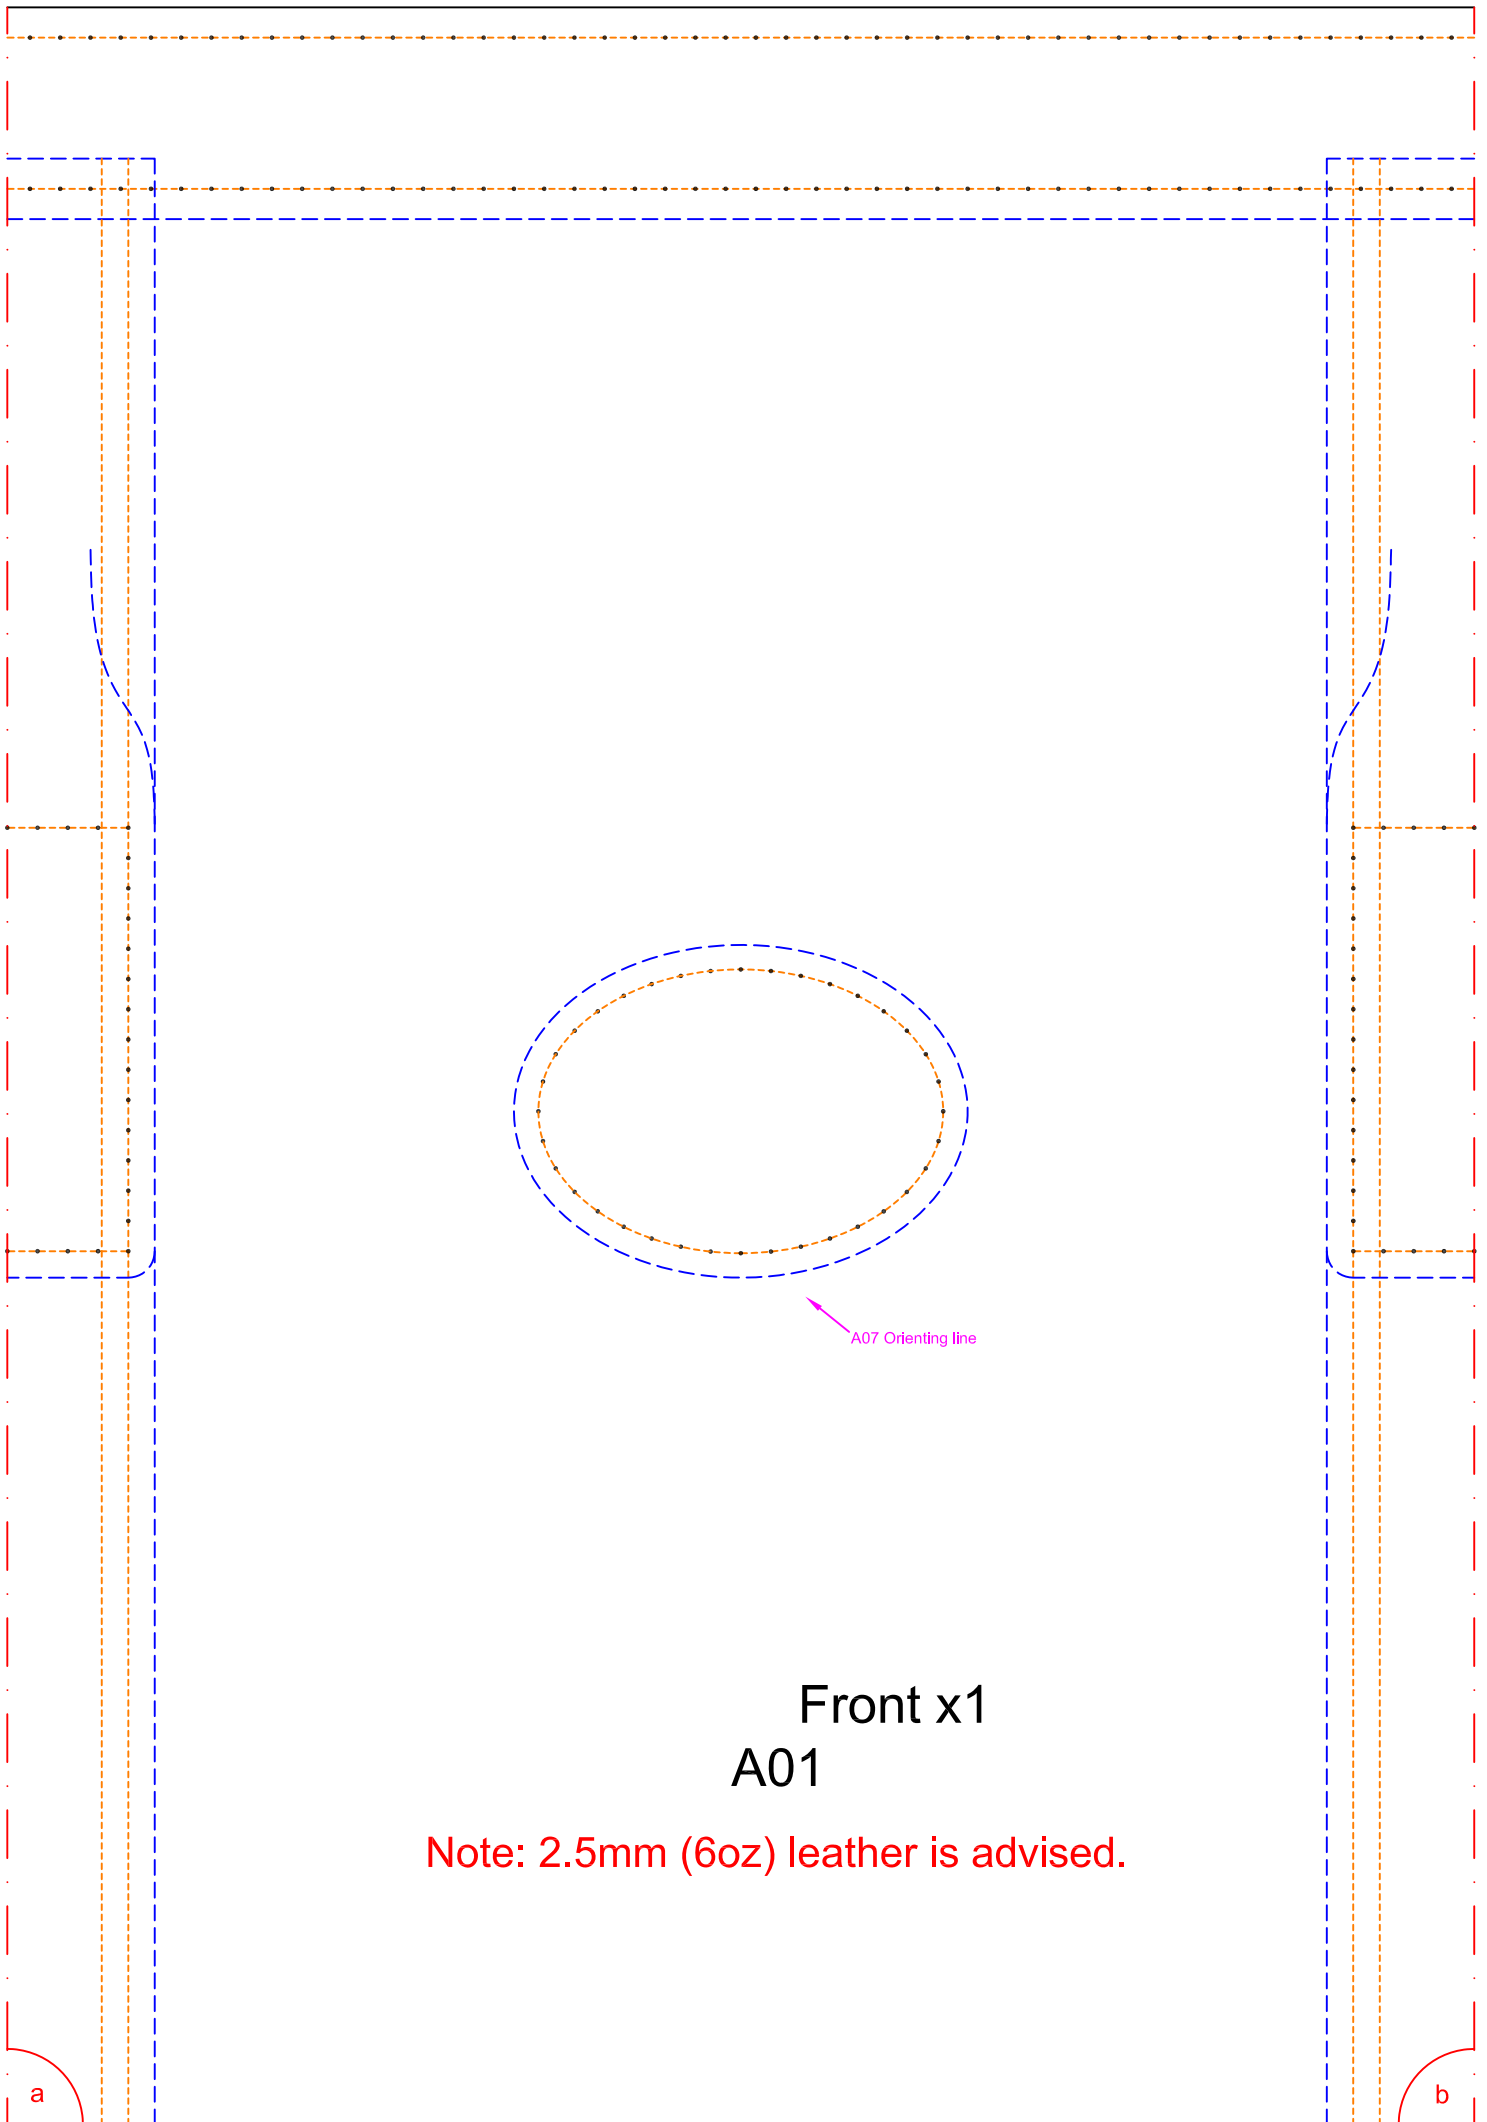

Front x1

A01

Note: 2.5mm (6oz) leather is advised.

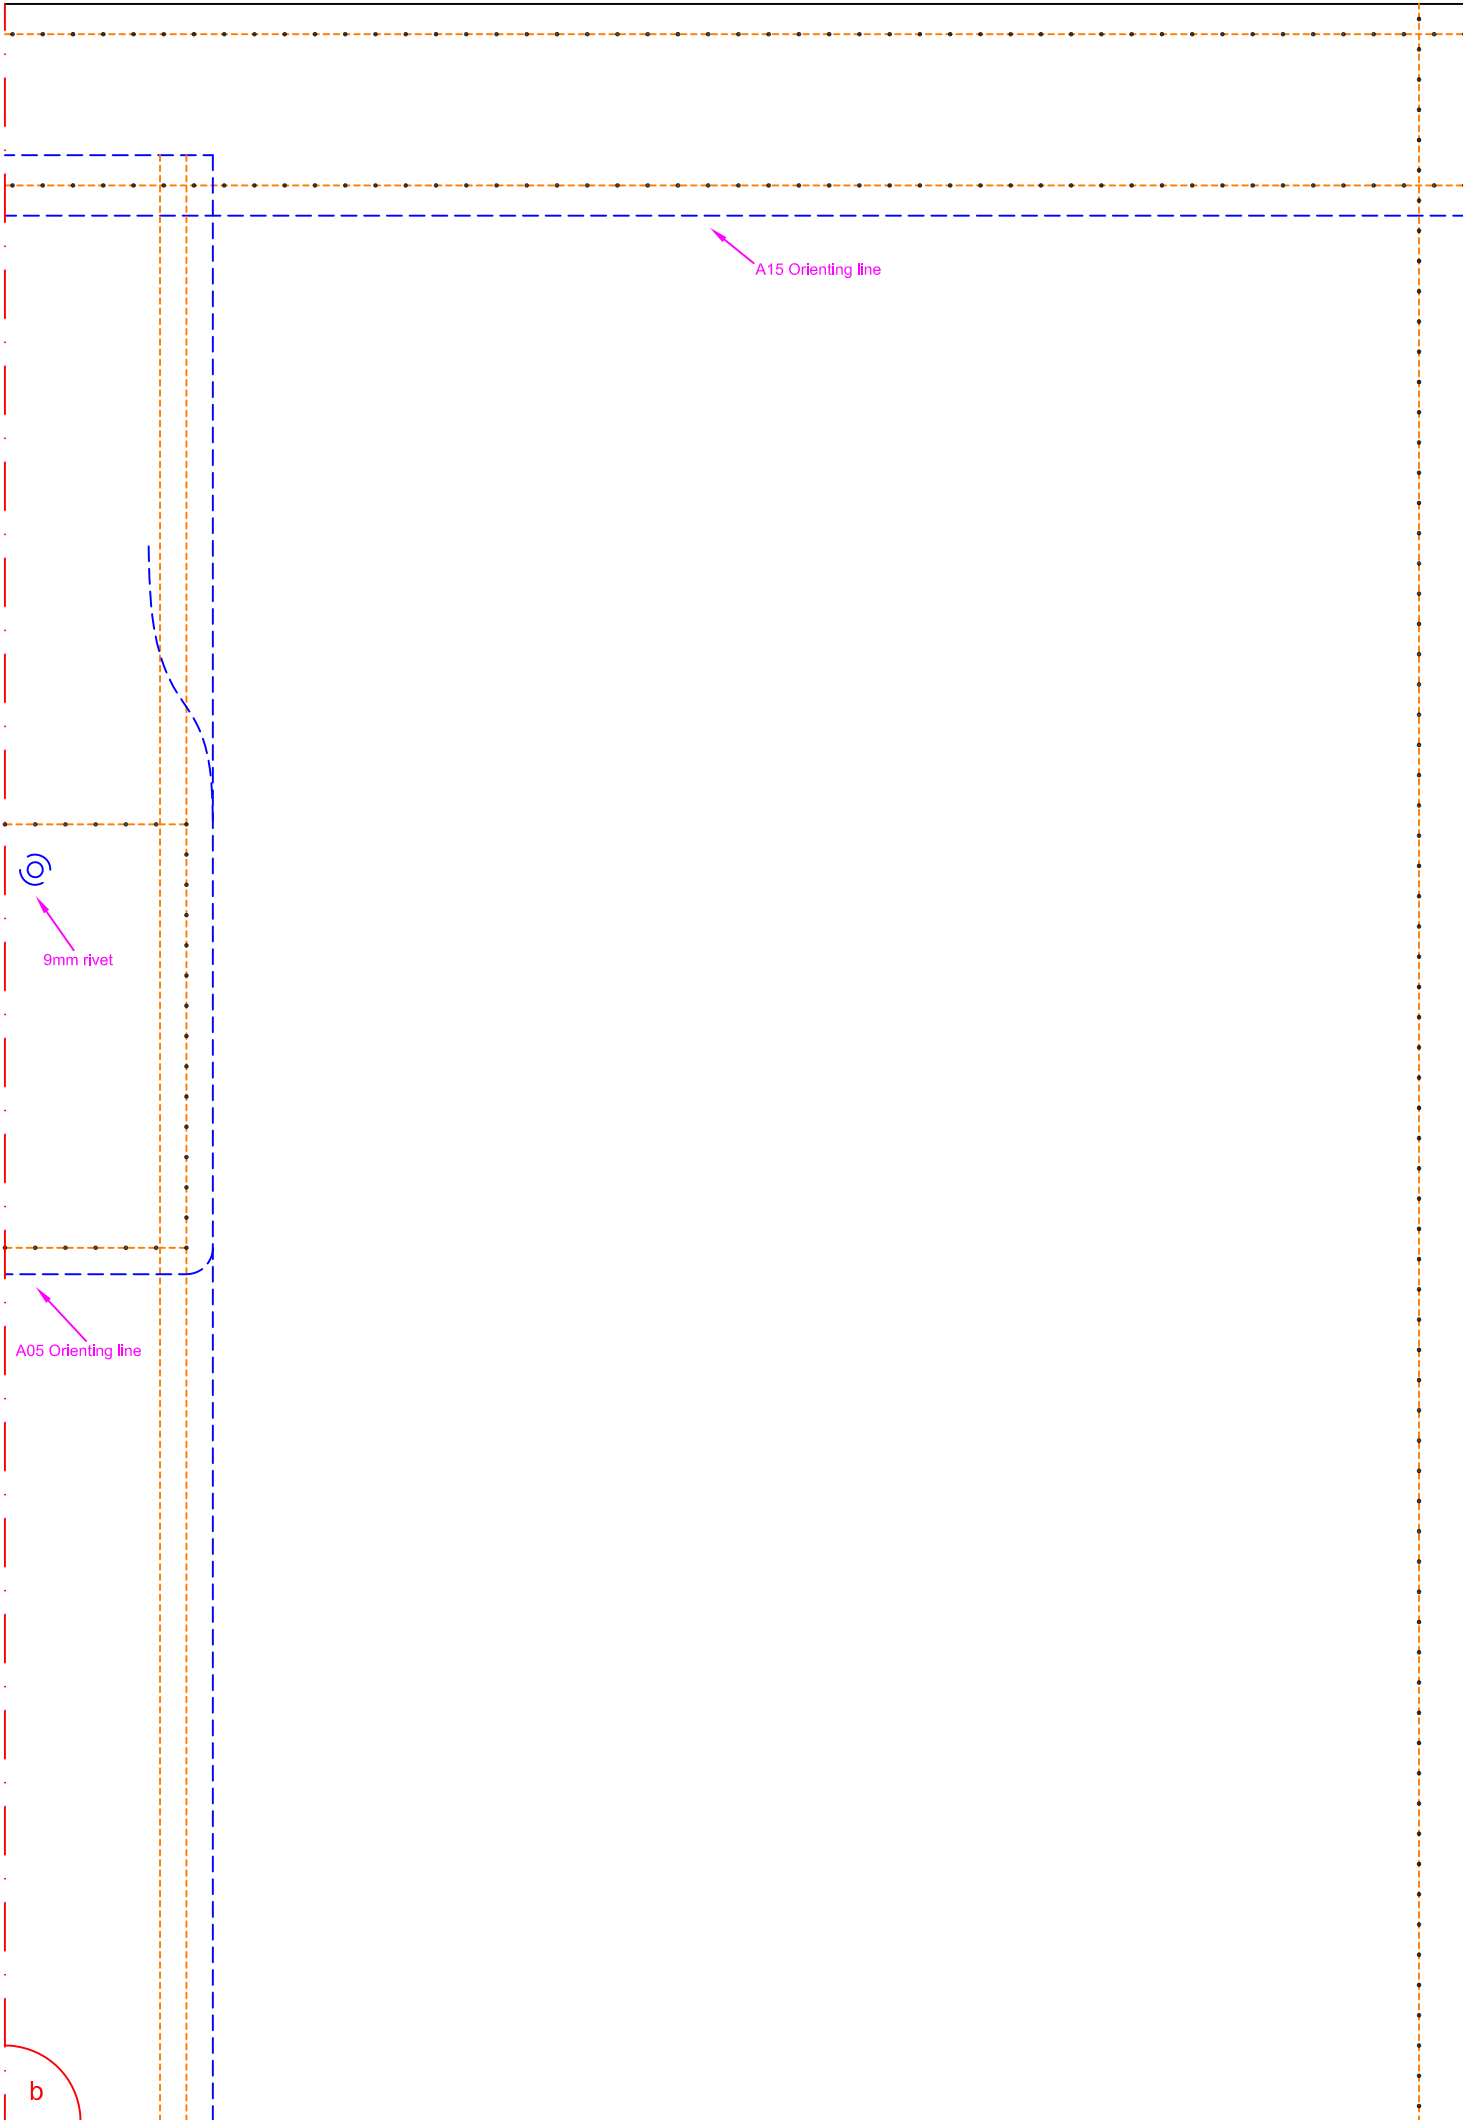


a



12mm or
15mm foot nail

Anchor point

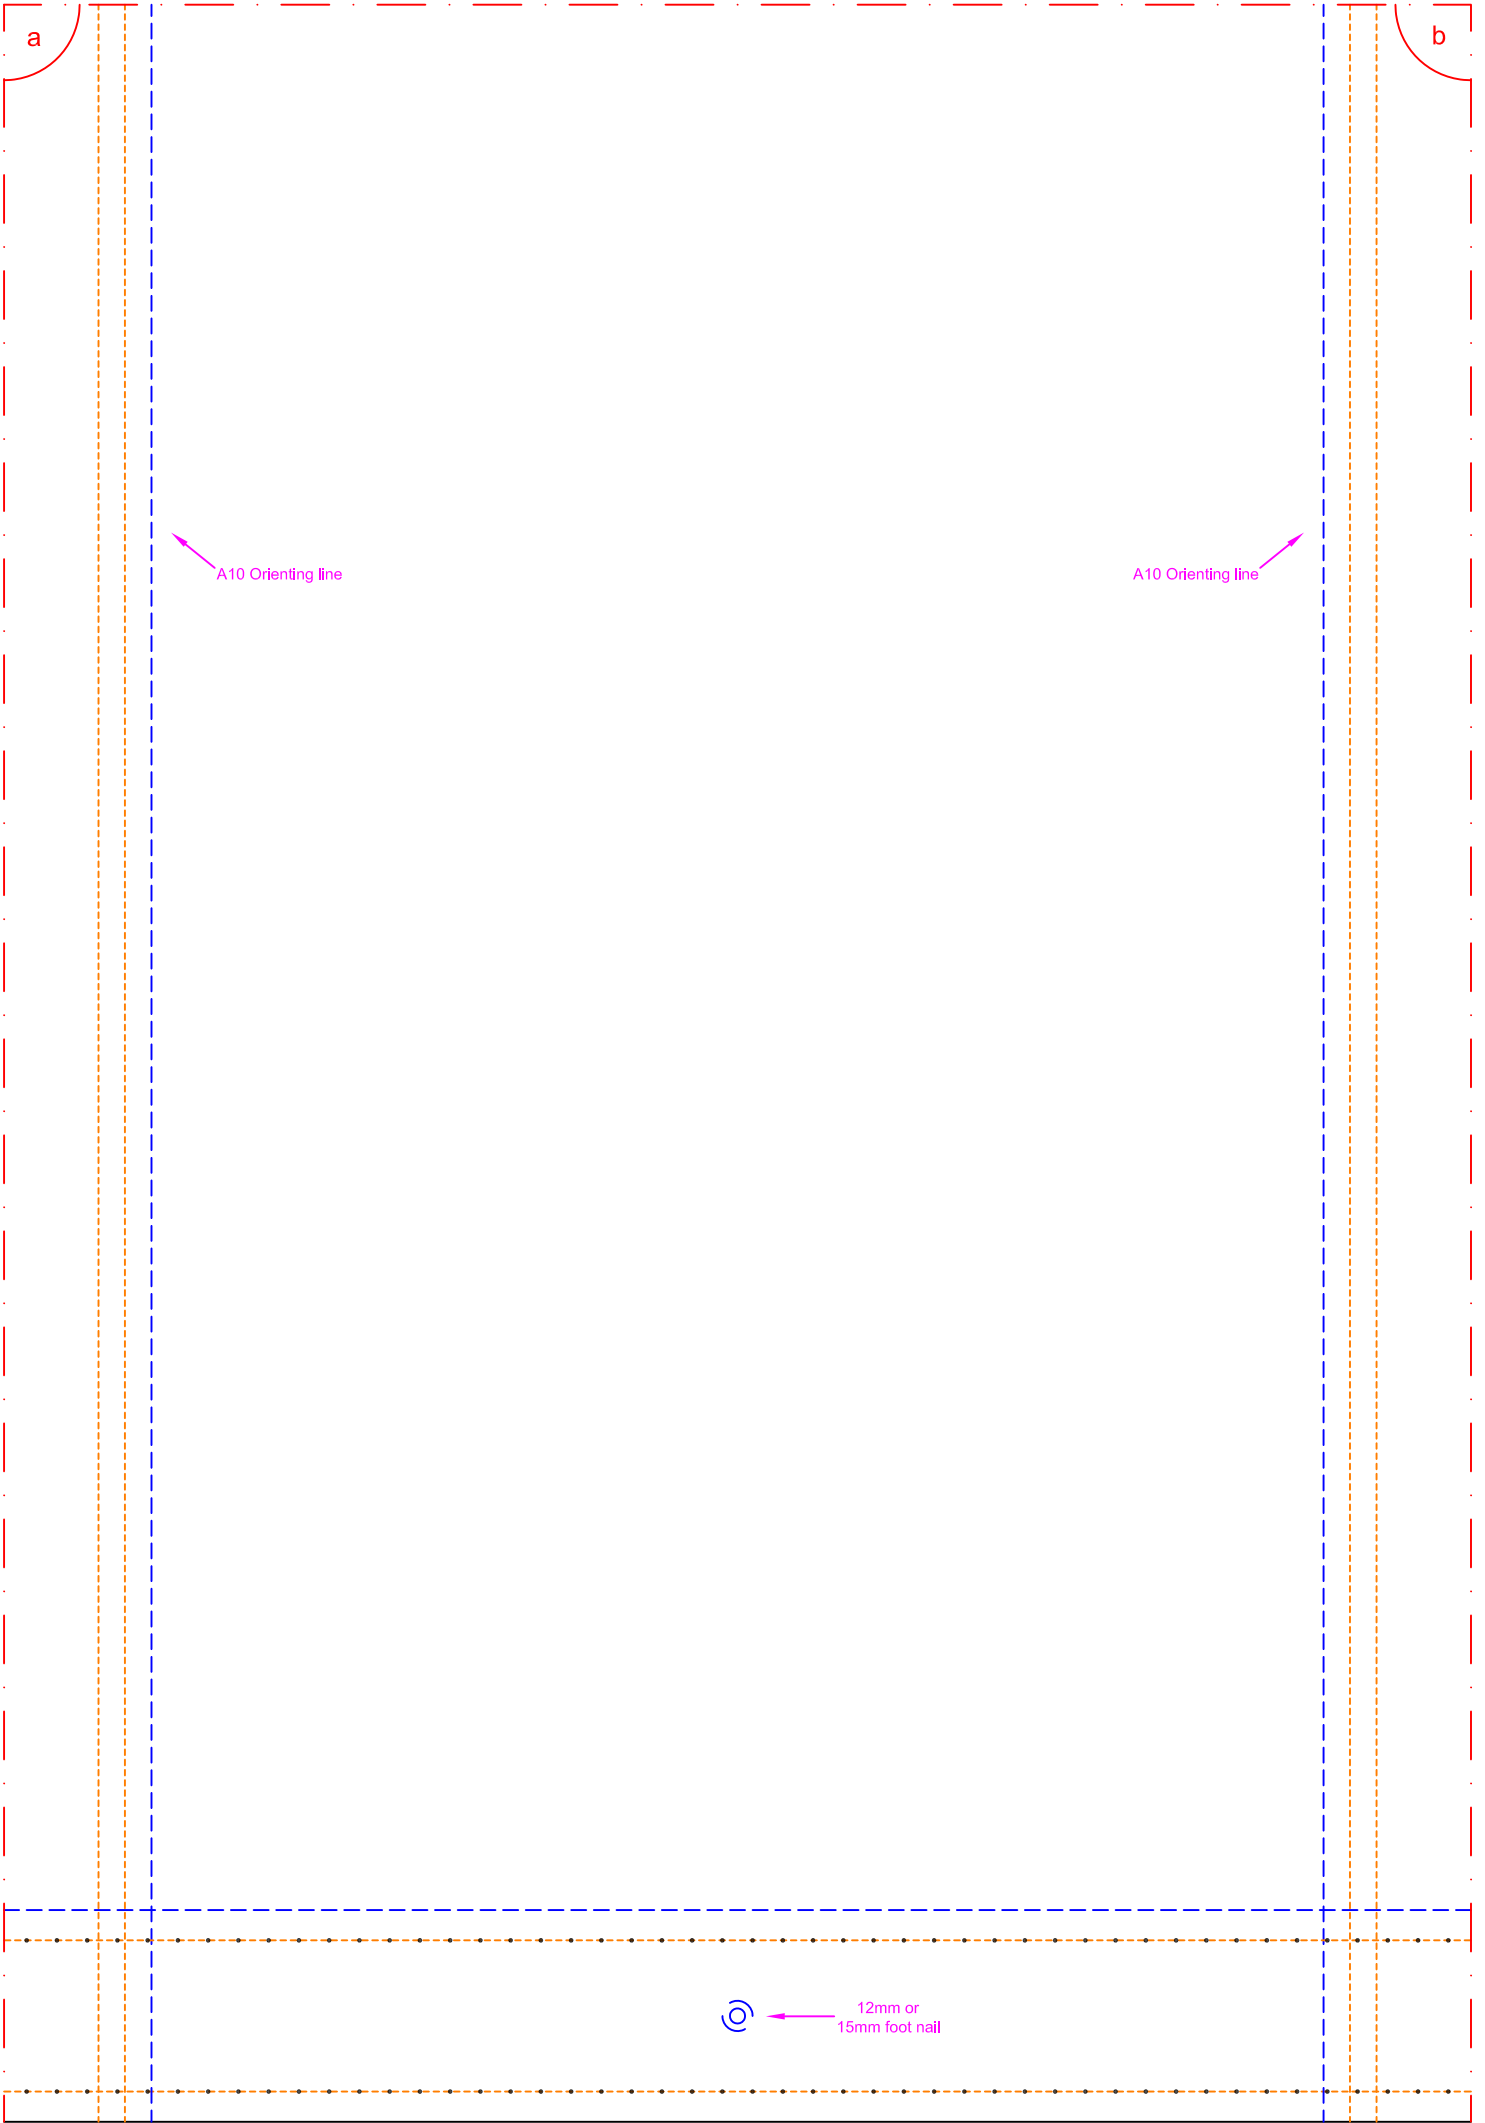


b




12mm or
15mm foot nail

Anchor point →

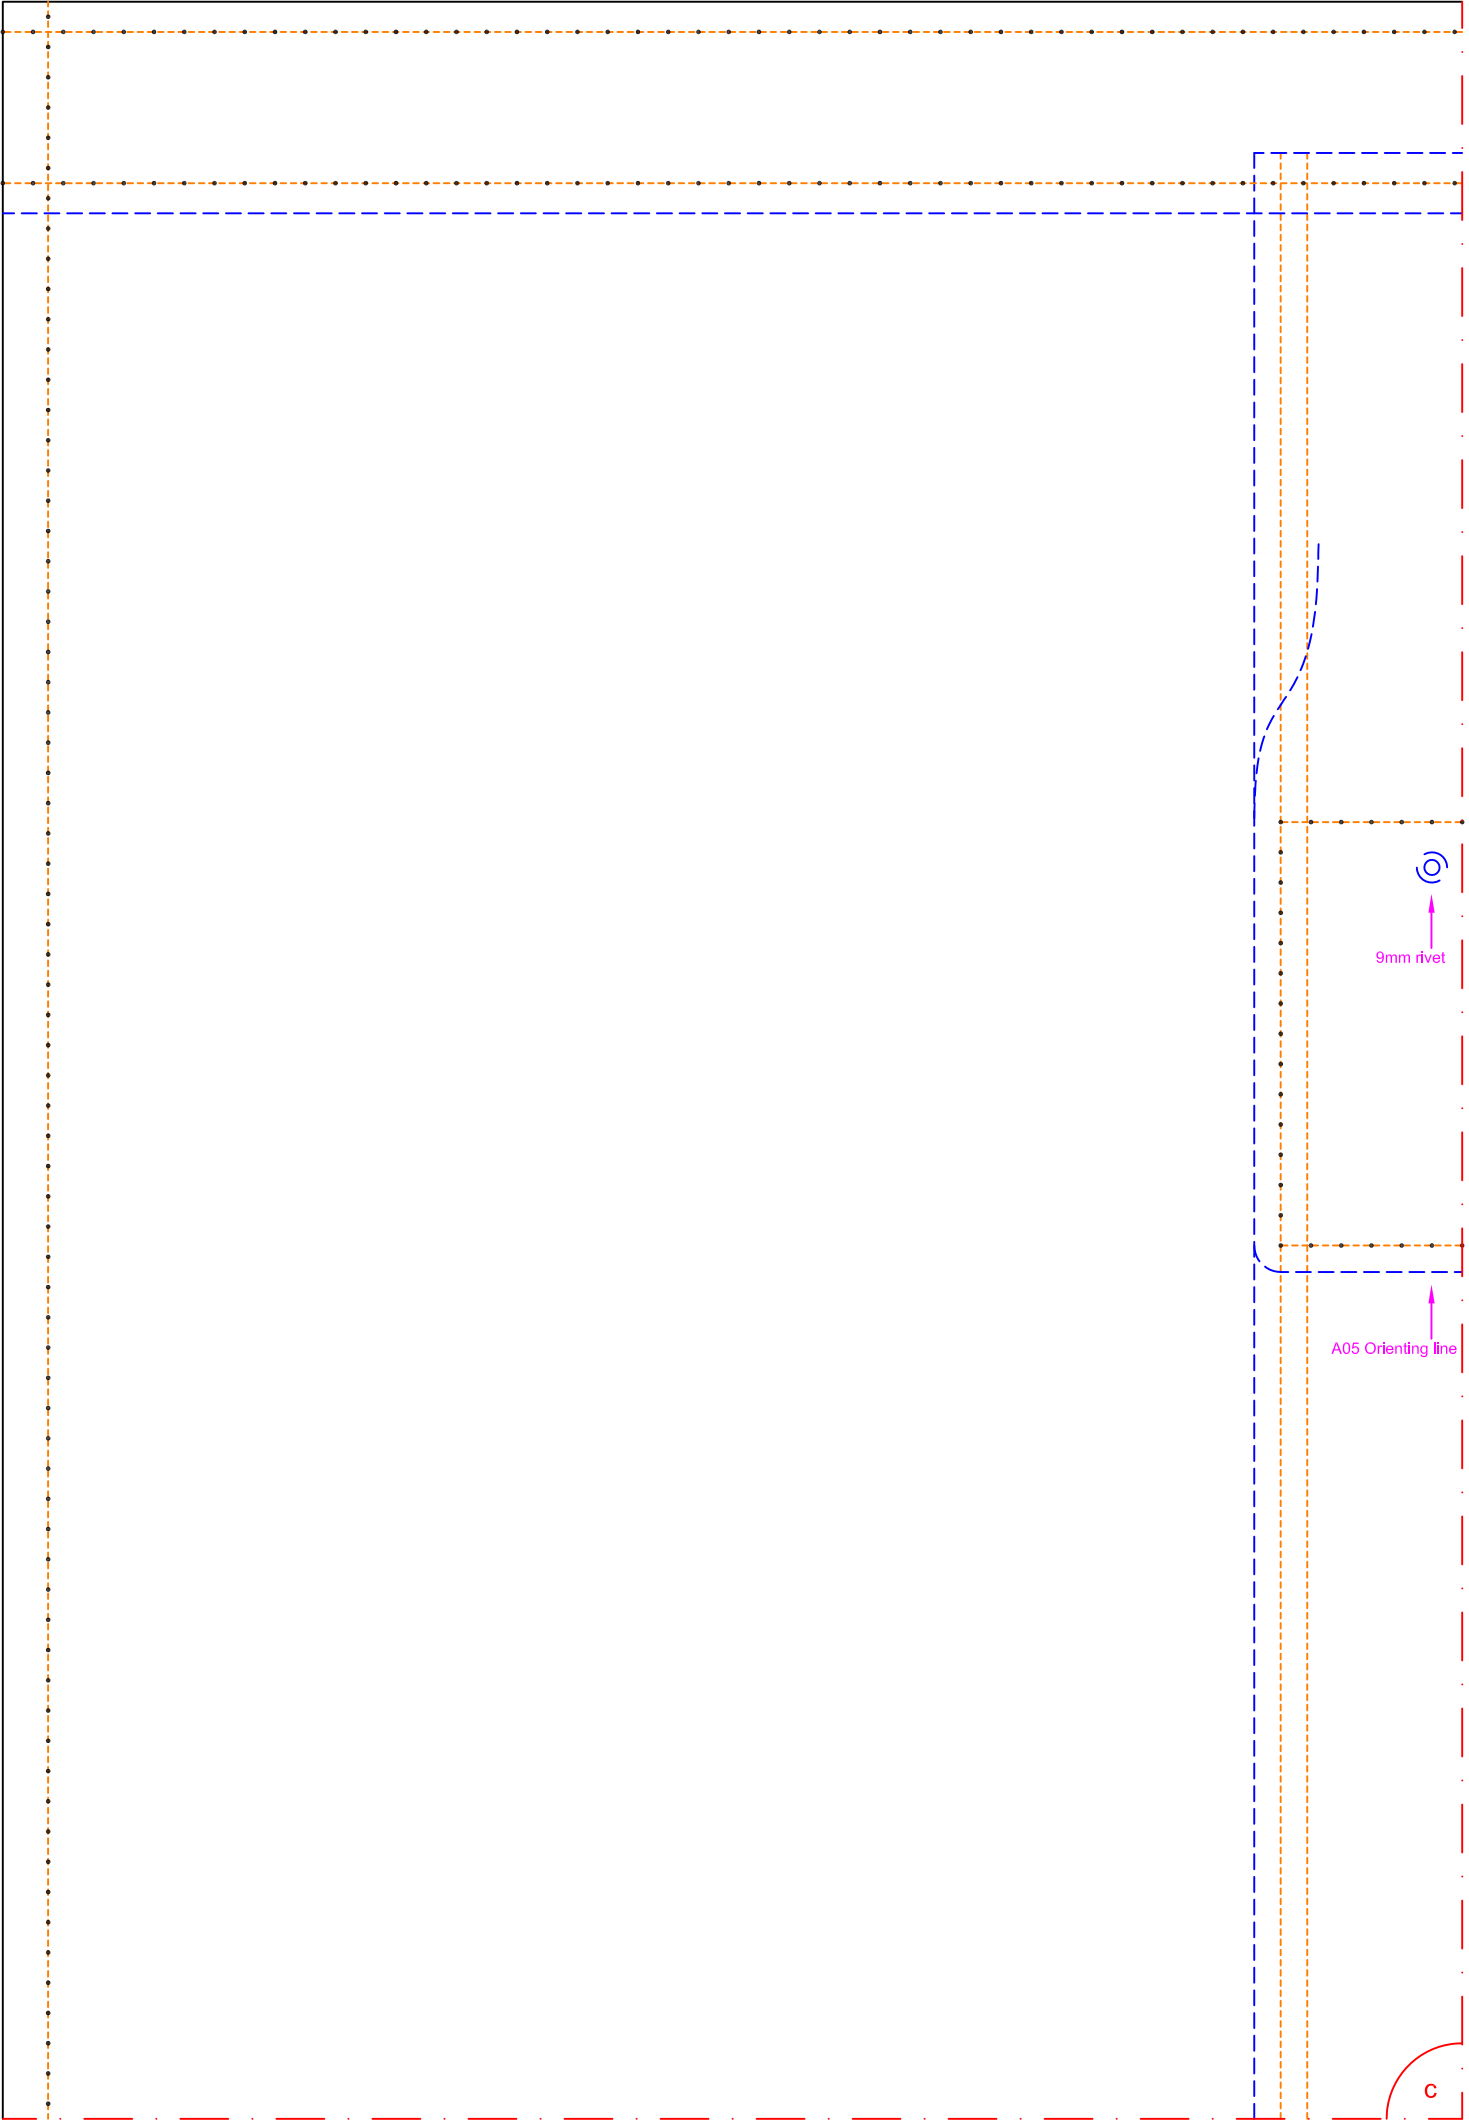

9mm rivet

A05 Orienting line

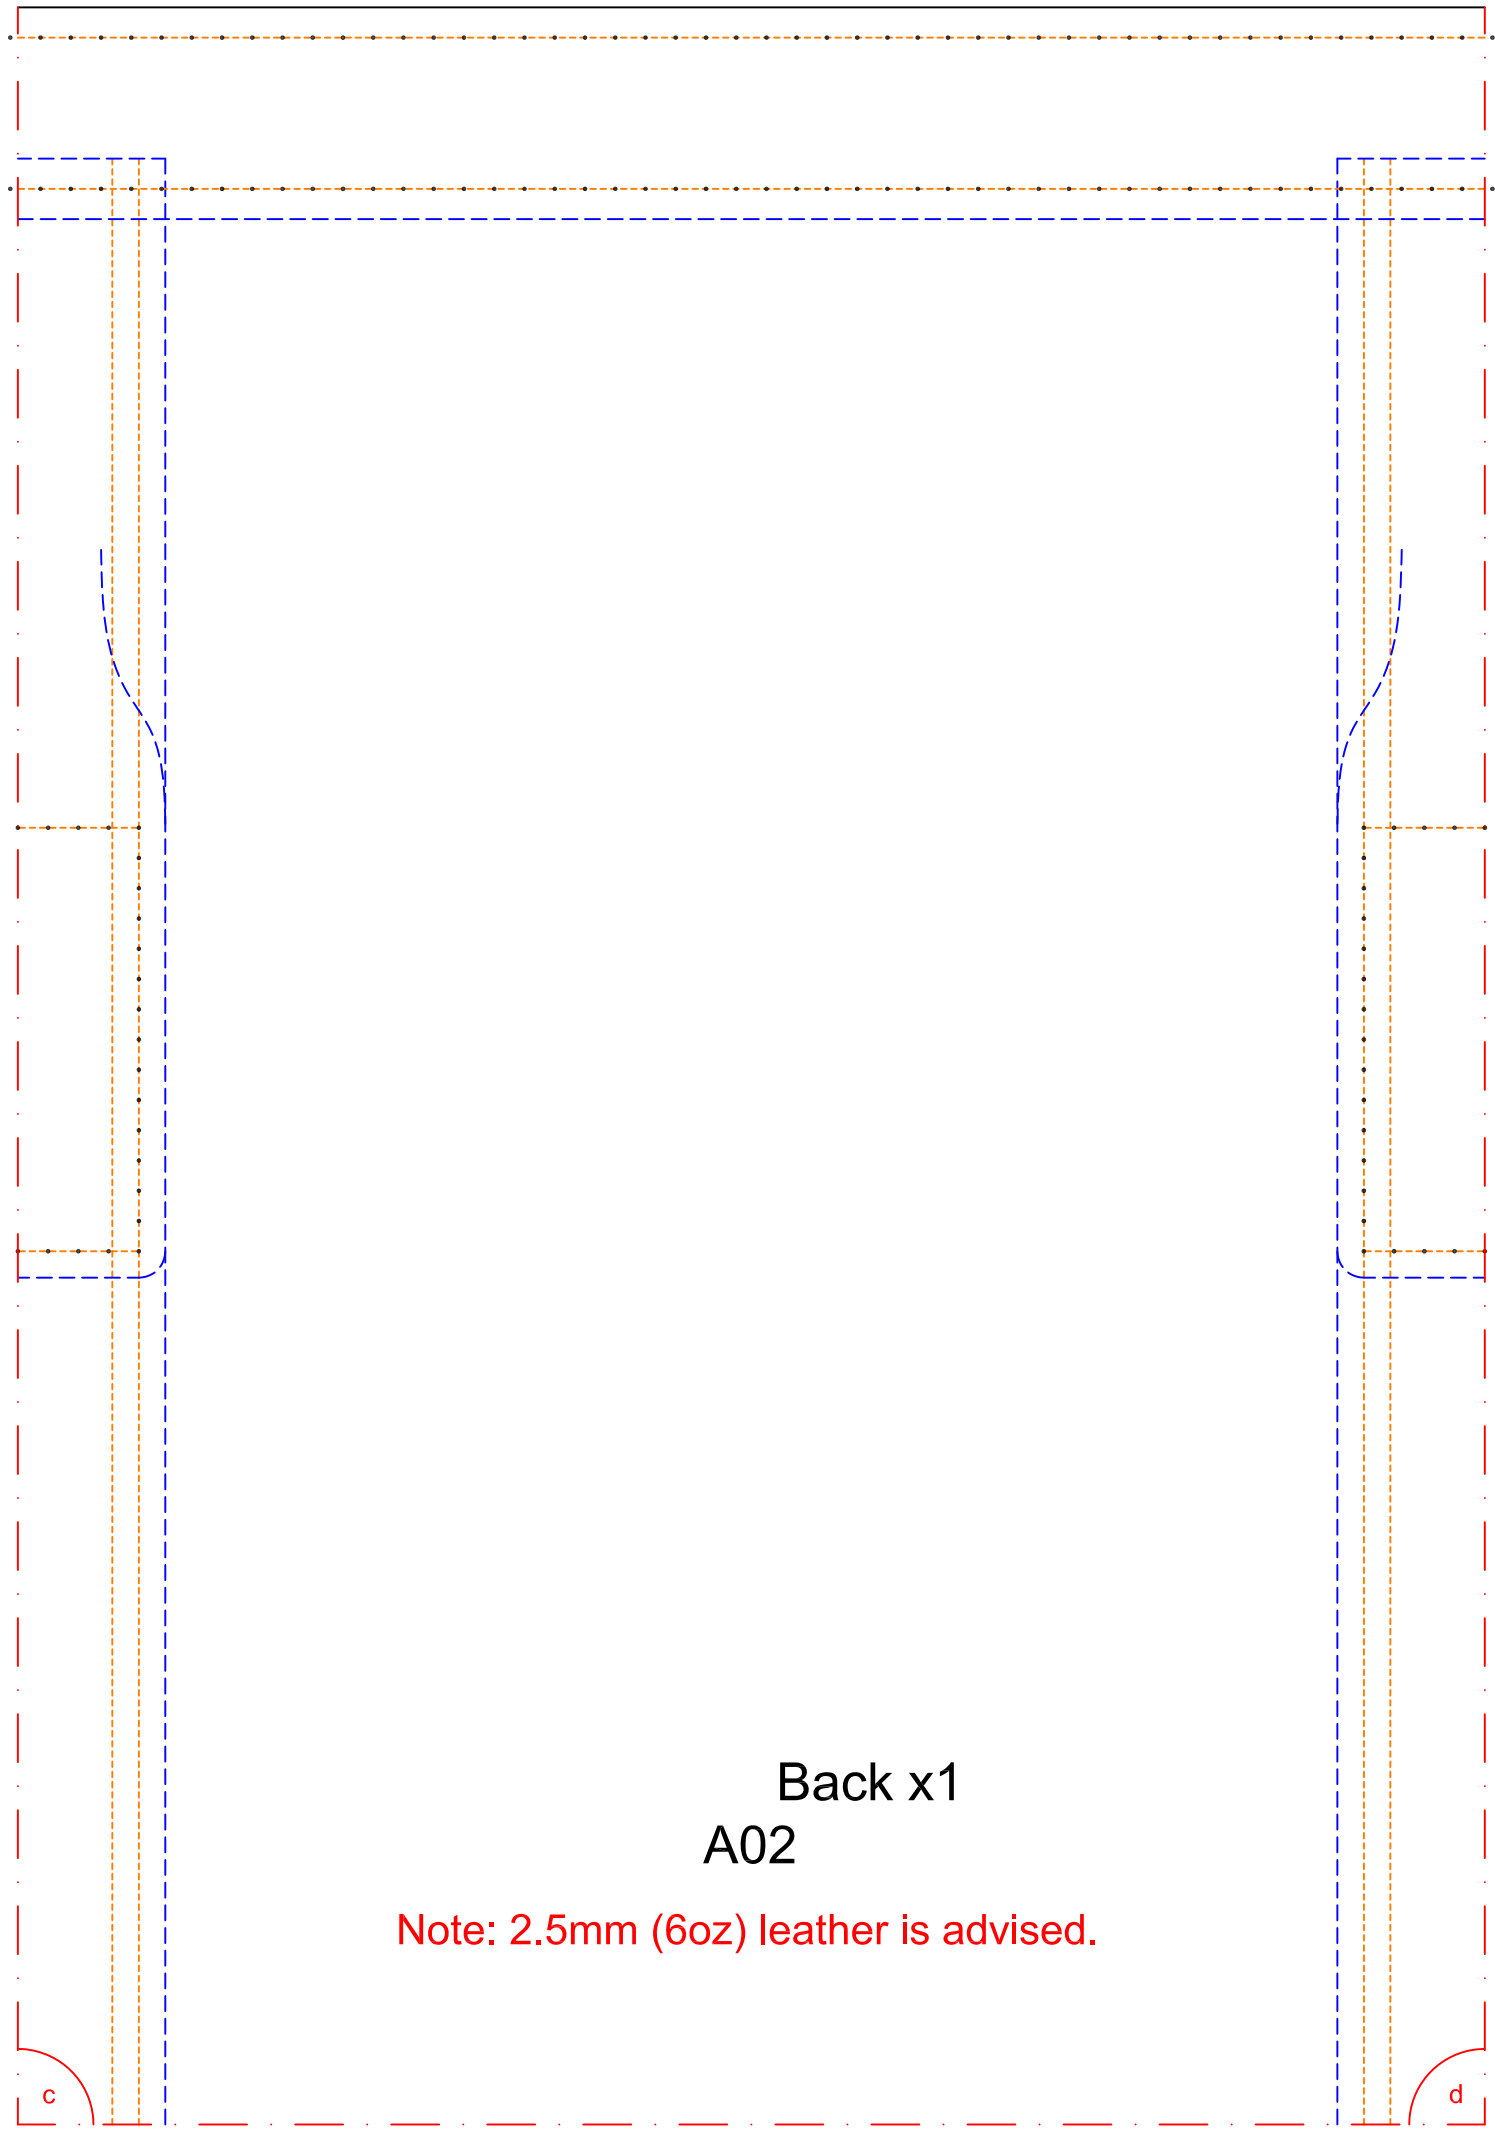


Back x1
A02

Note: 2.5mm (6oz) leather is advised.

c


d

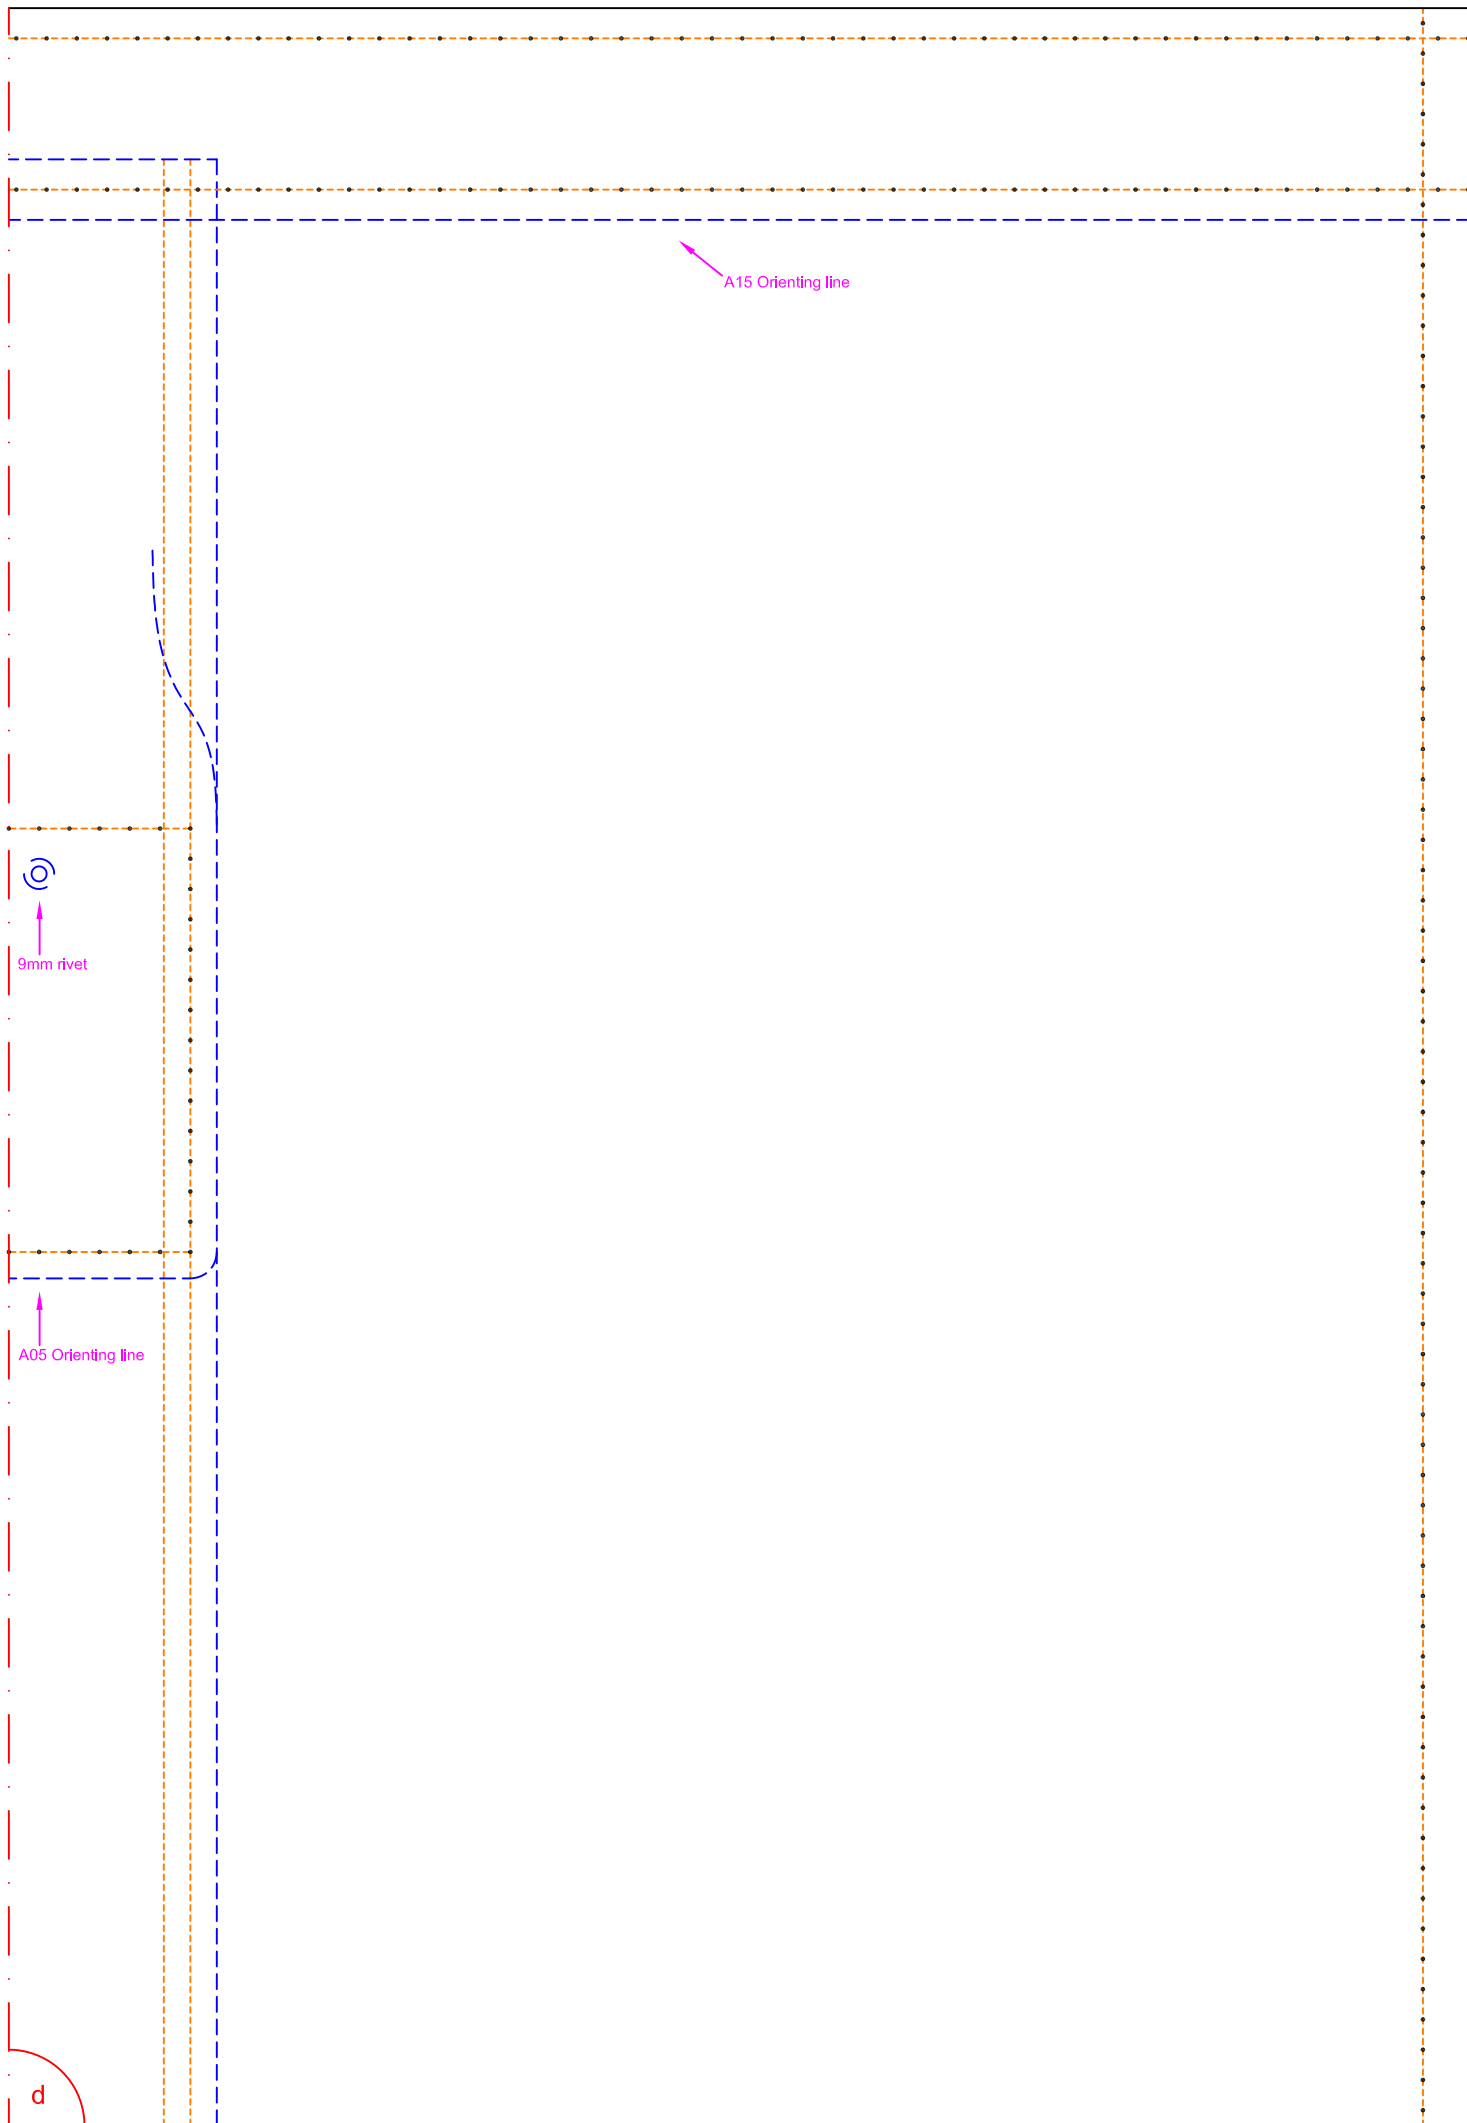



12mm or
15mm foot nail

Anchor point

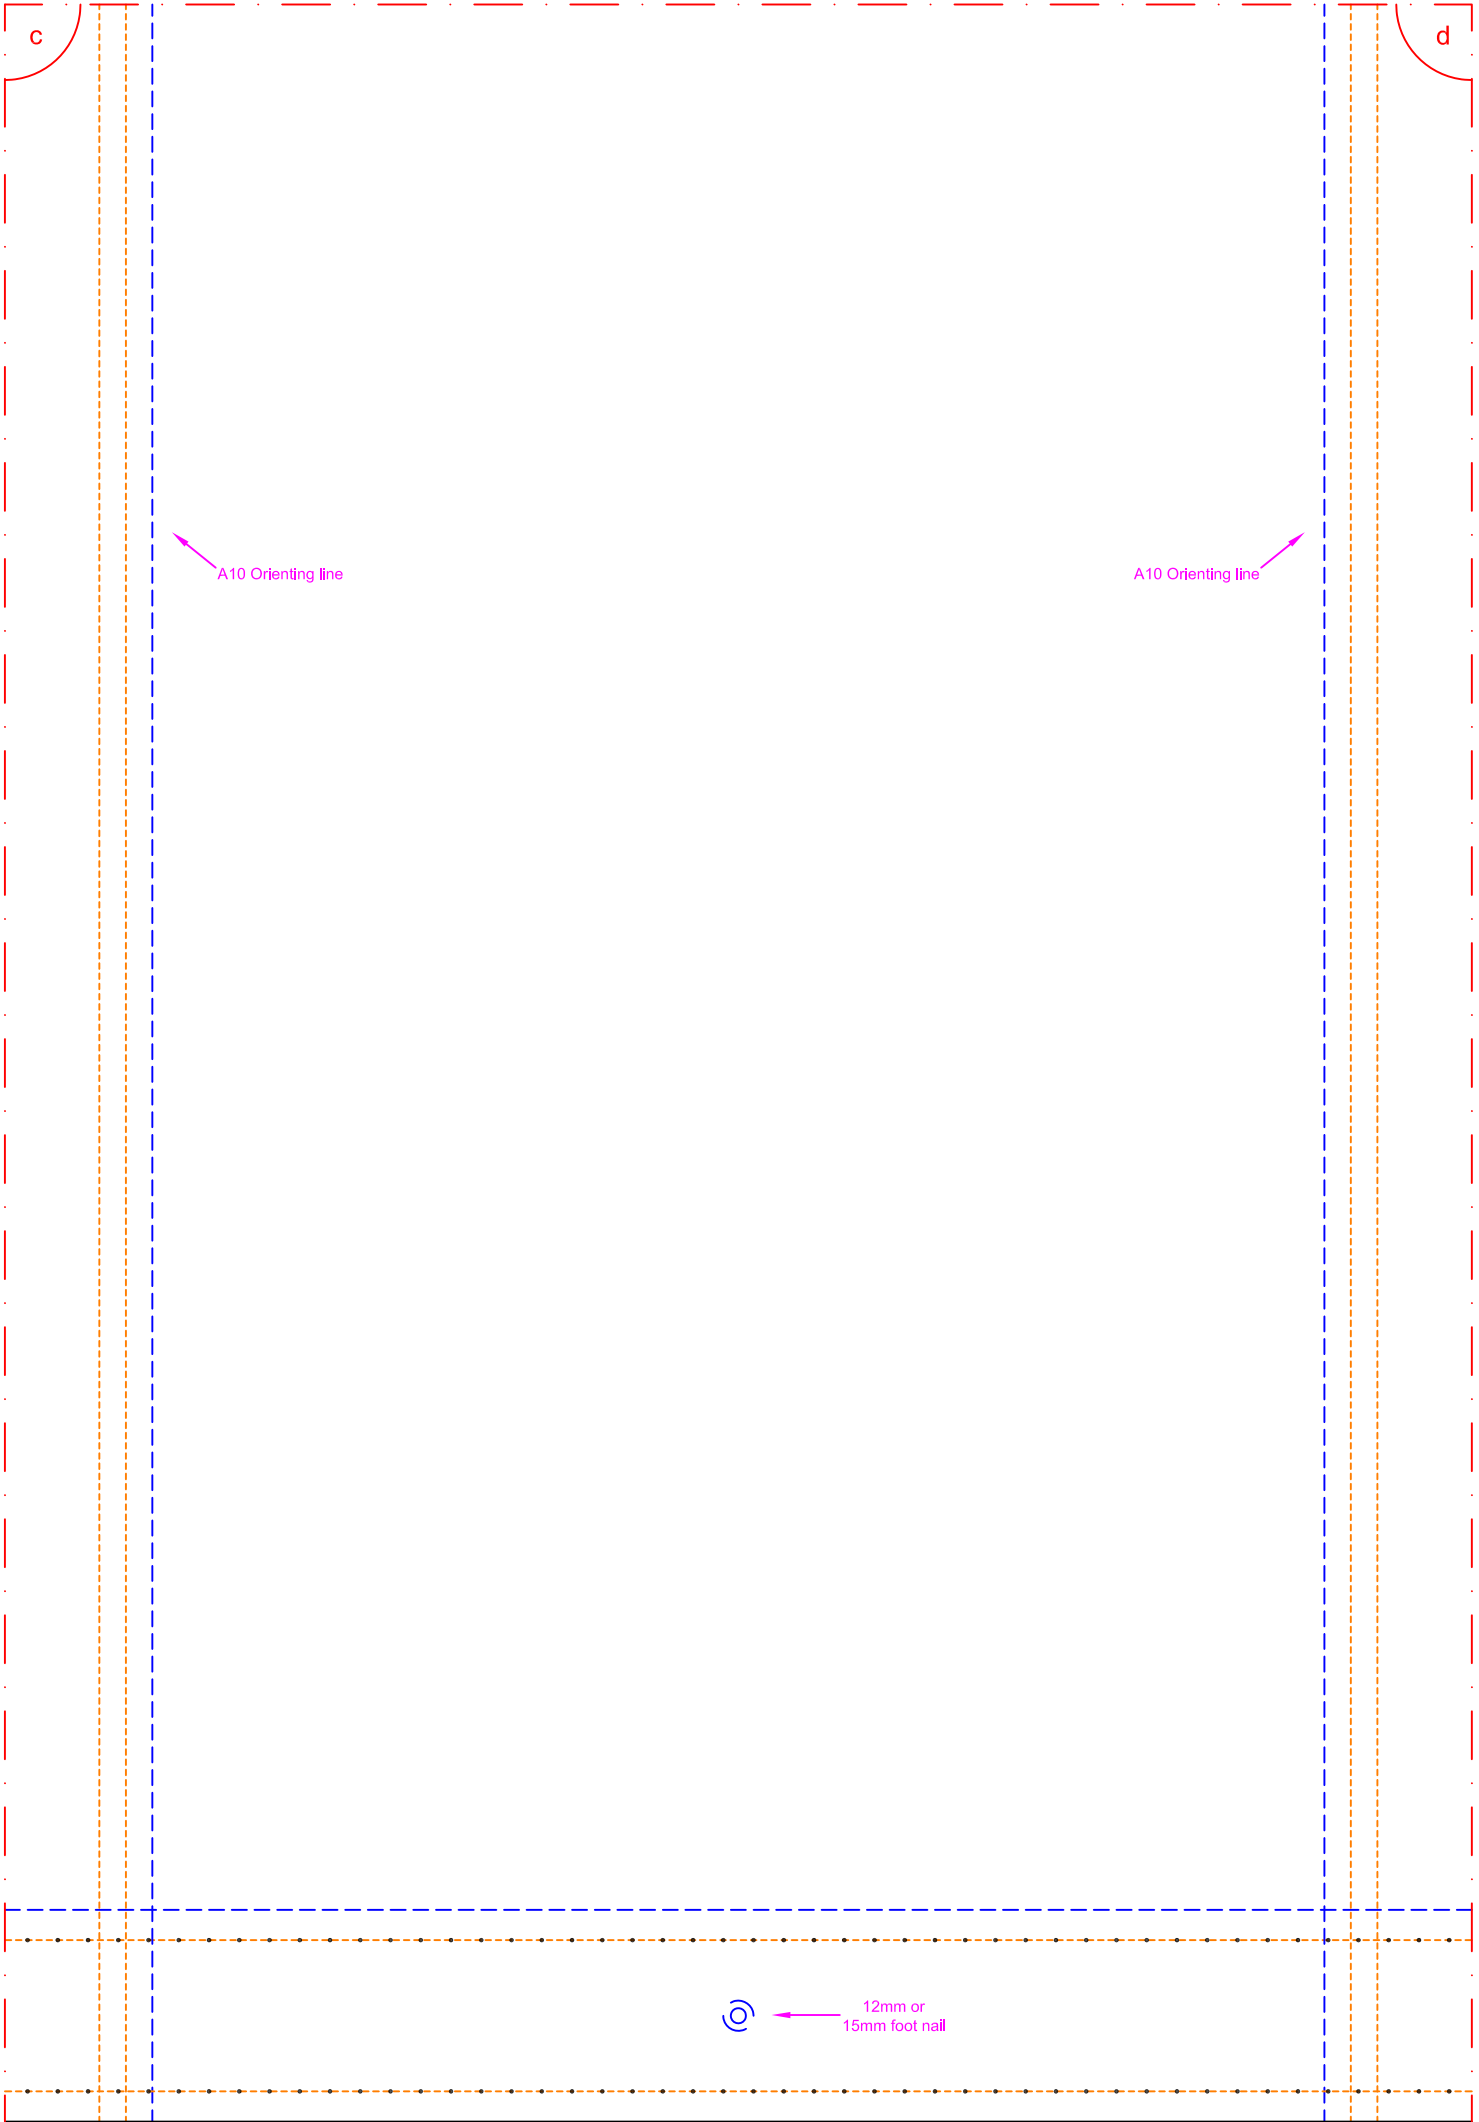

c


d


A10 Orienting line


A10 Orienting line





12mm or
15mm foot nail

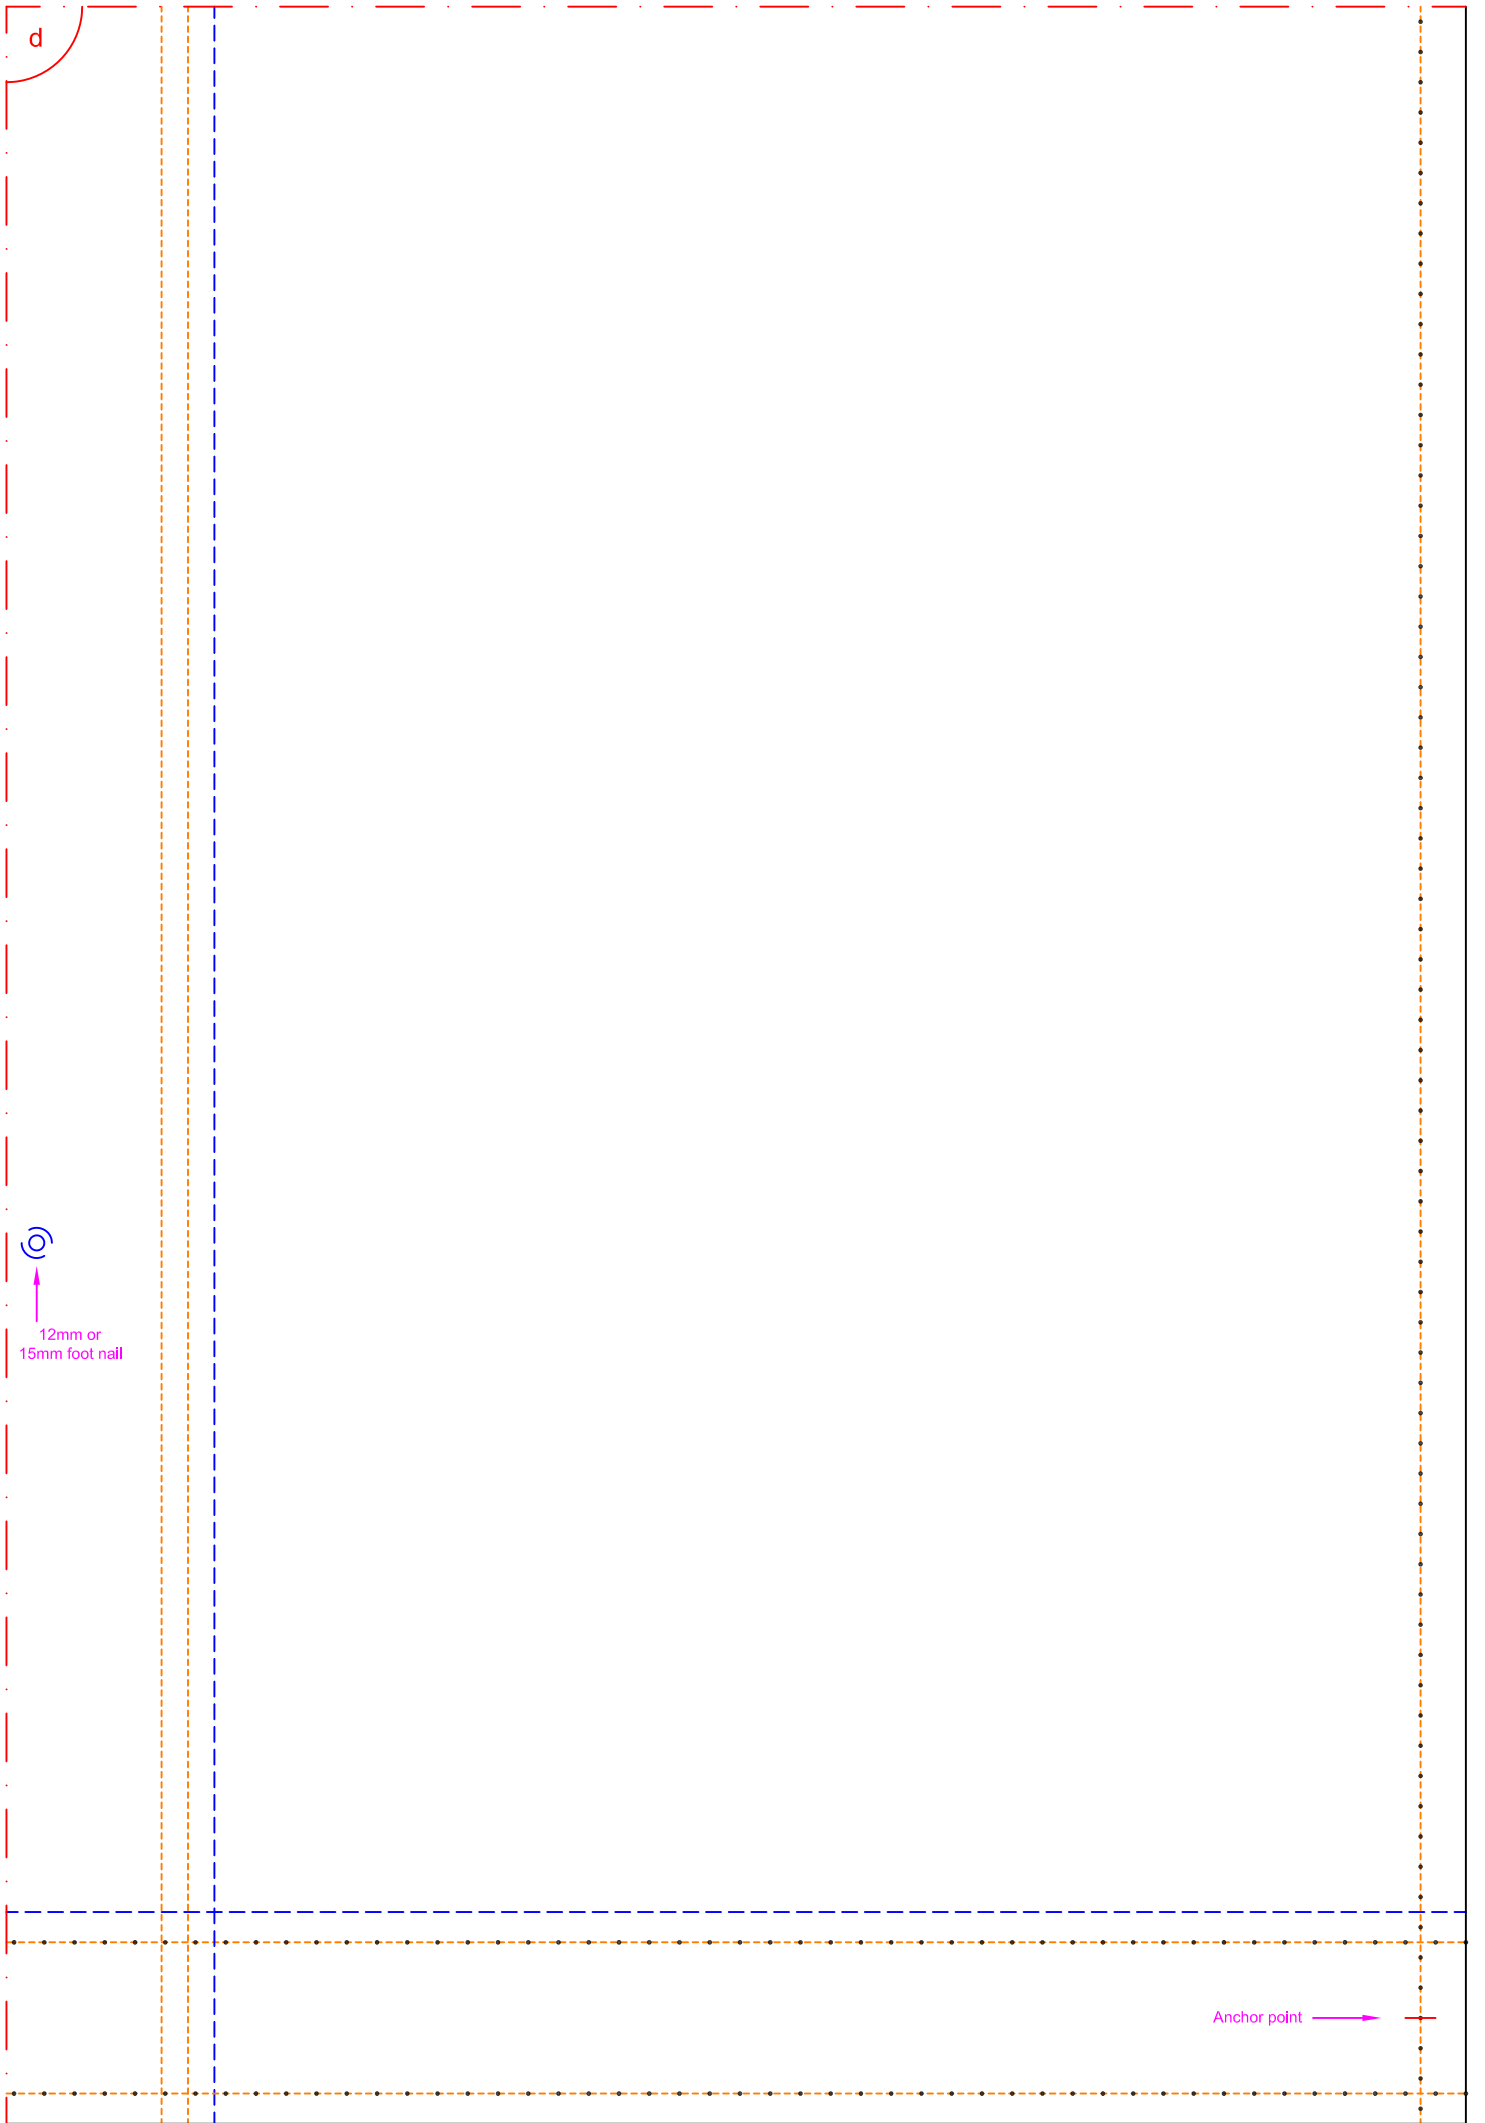

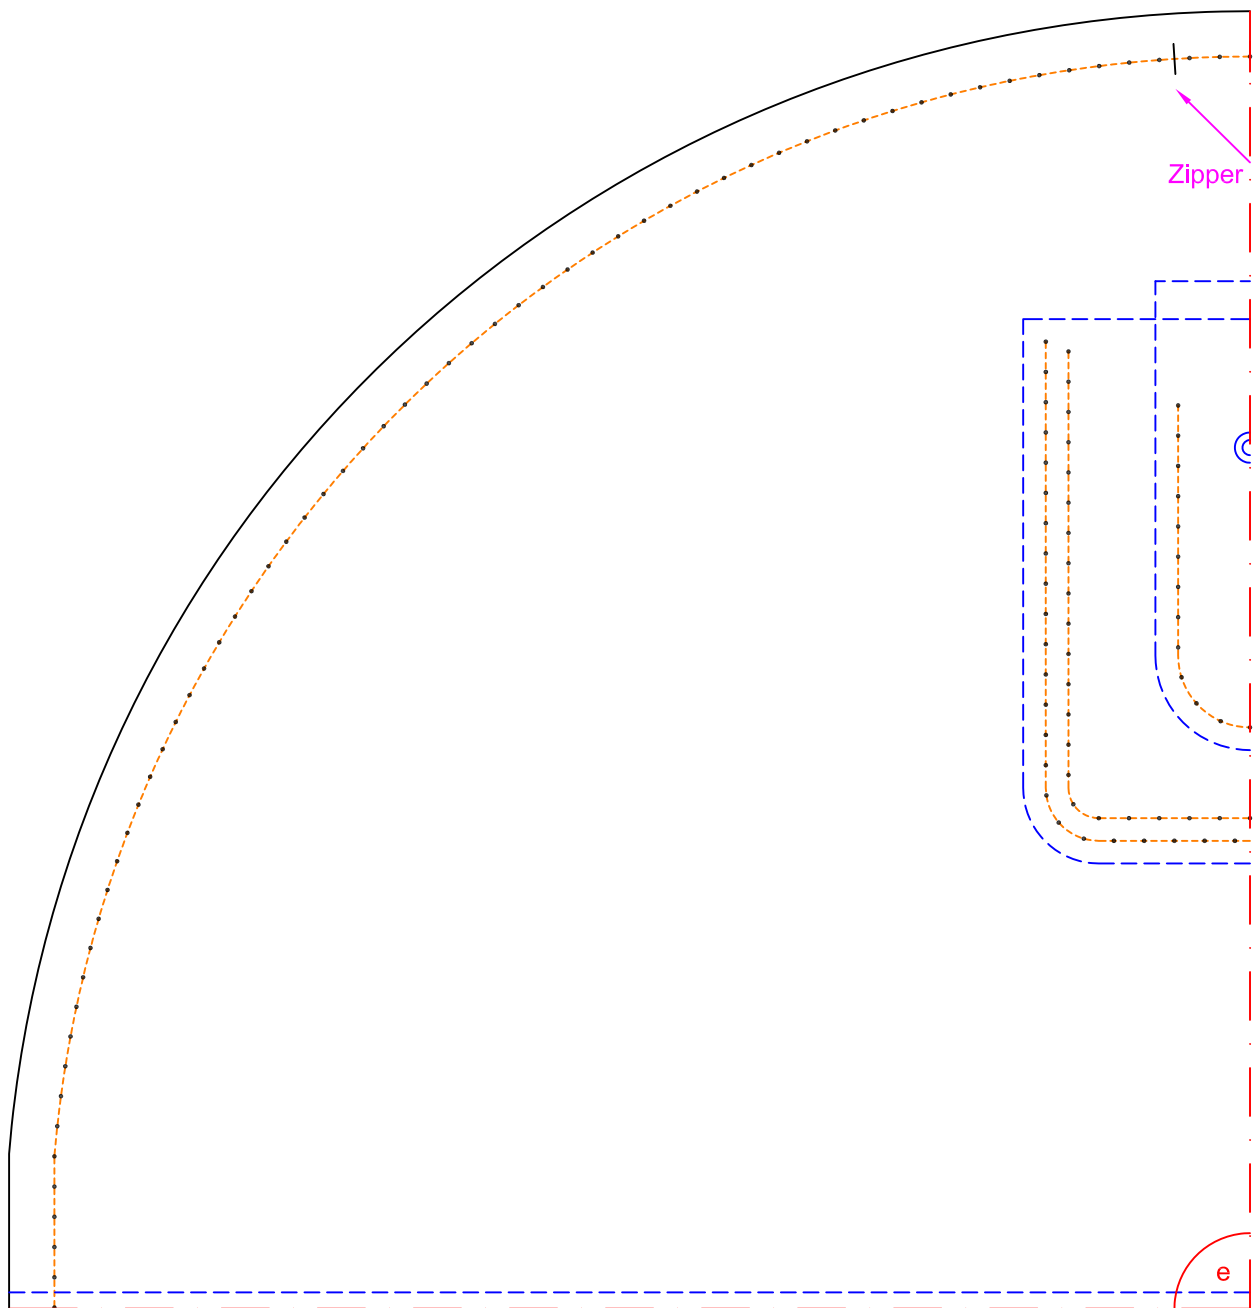

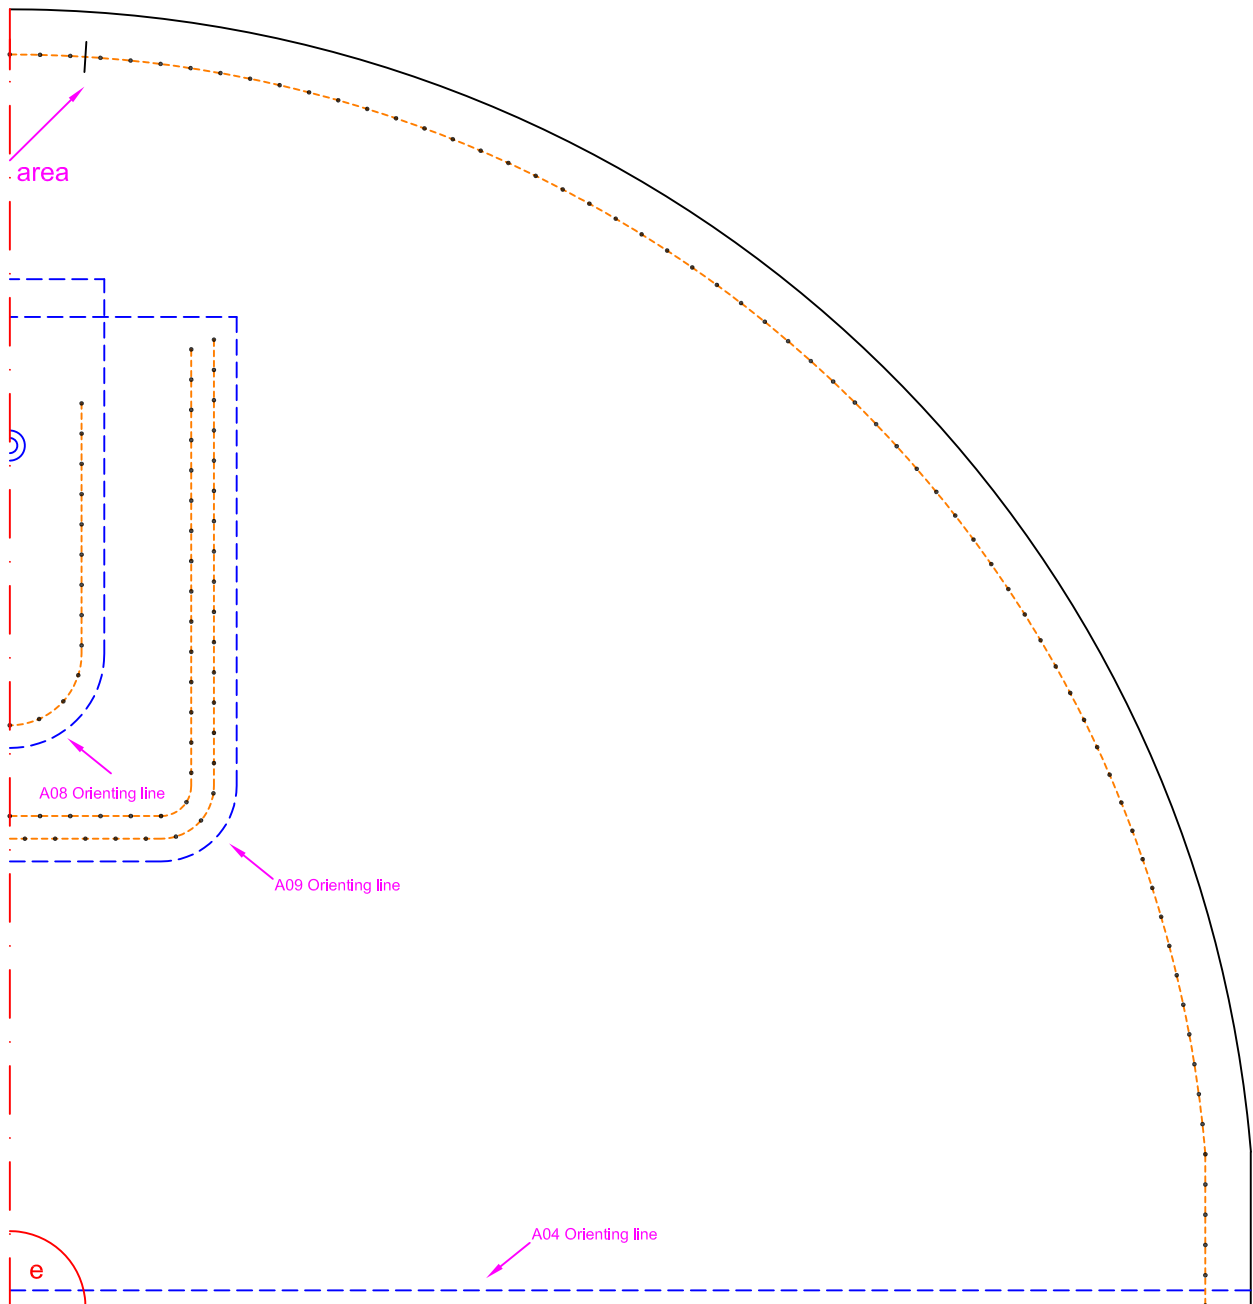

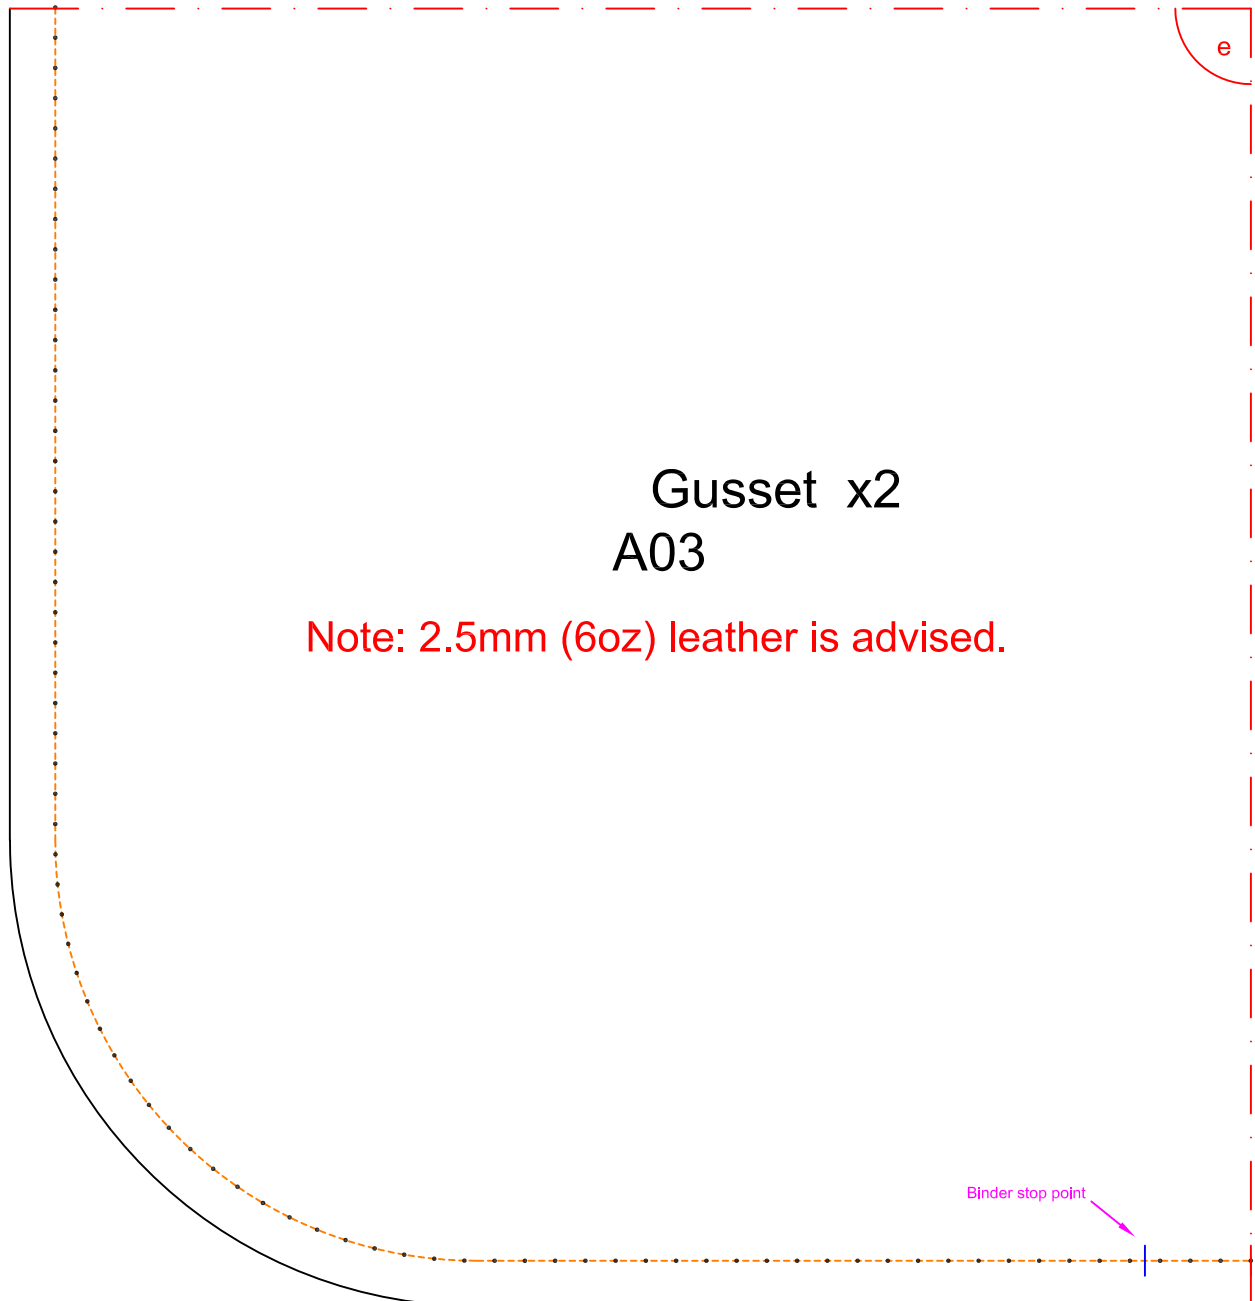

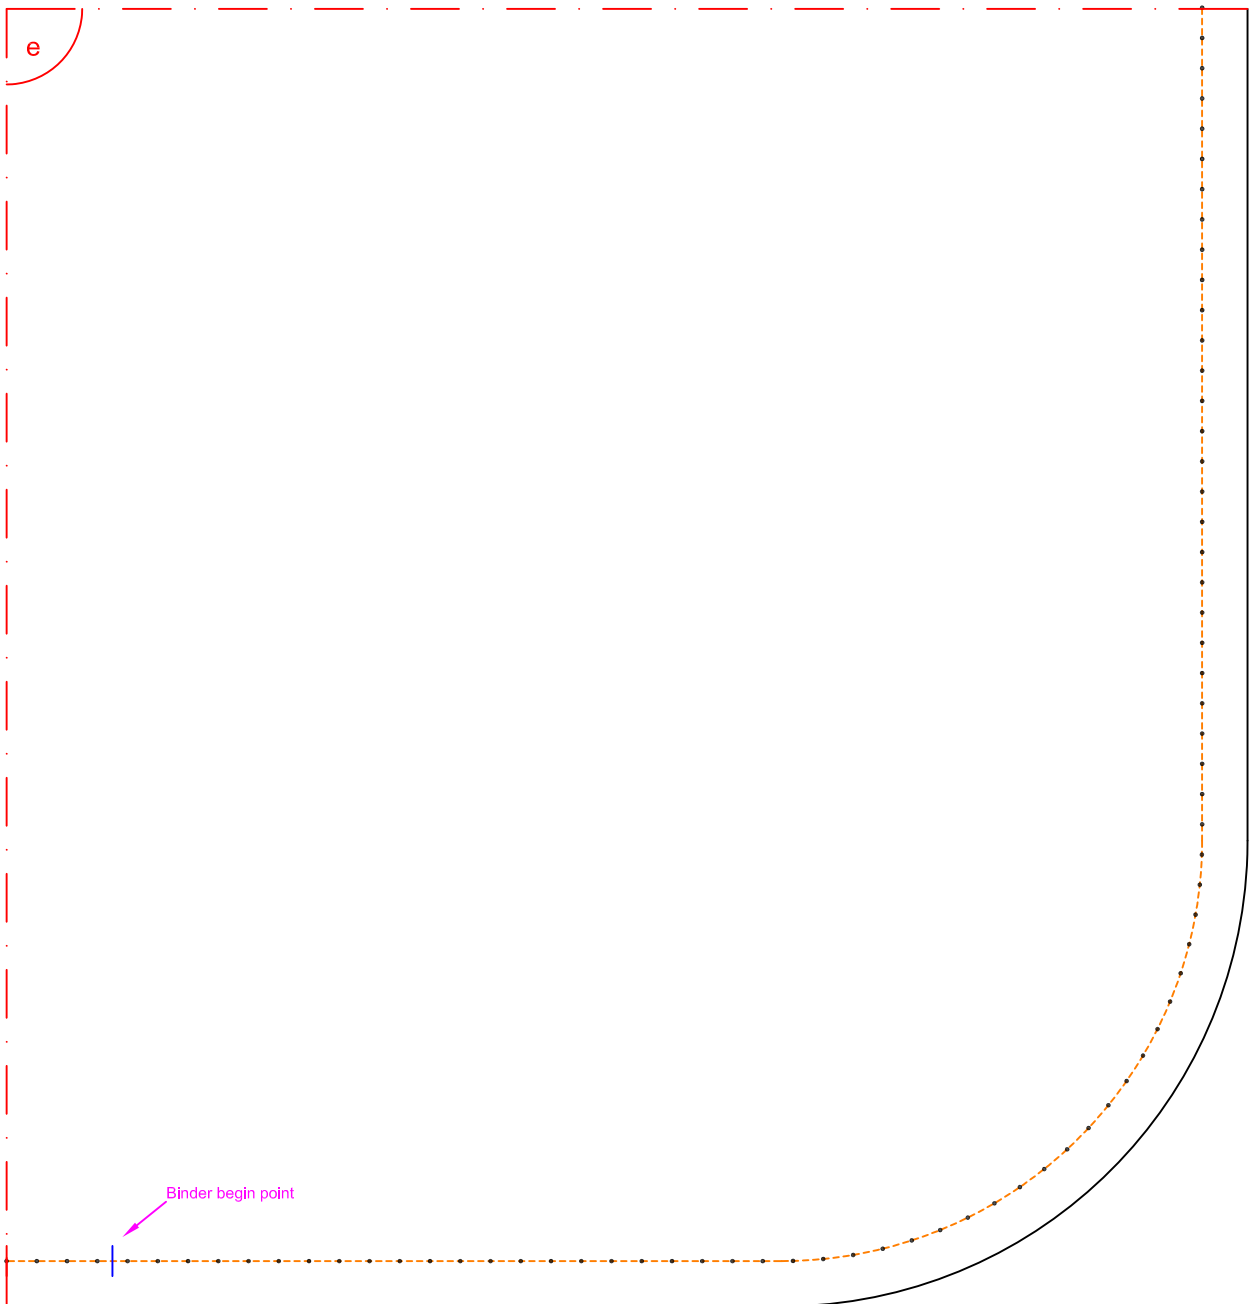



Gusset pocket x2
A04


Note: 2.0mm (5oz) leather is advised.

Joint line f


Binder stop point

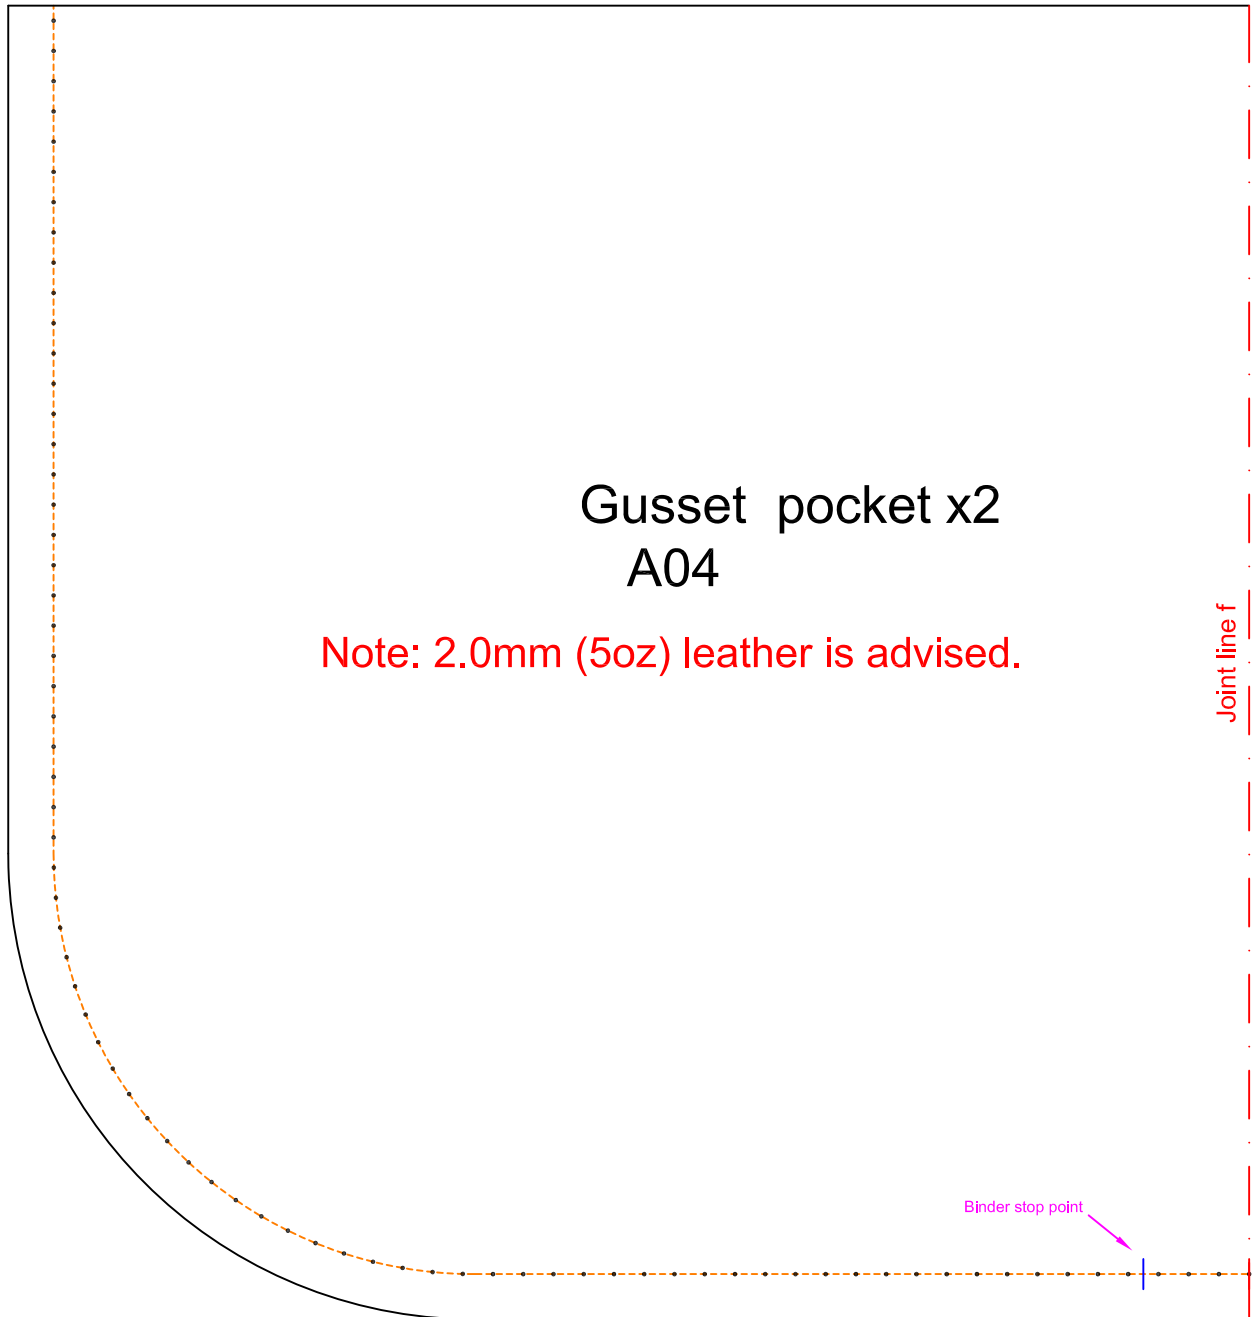

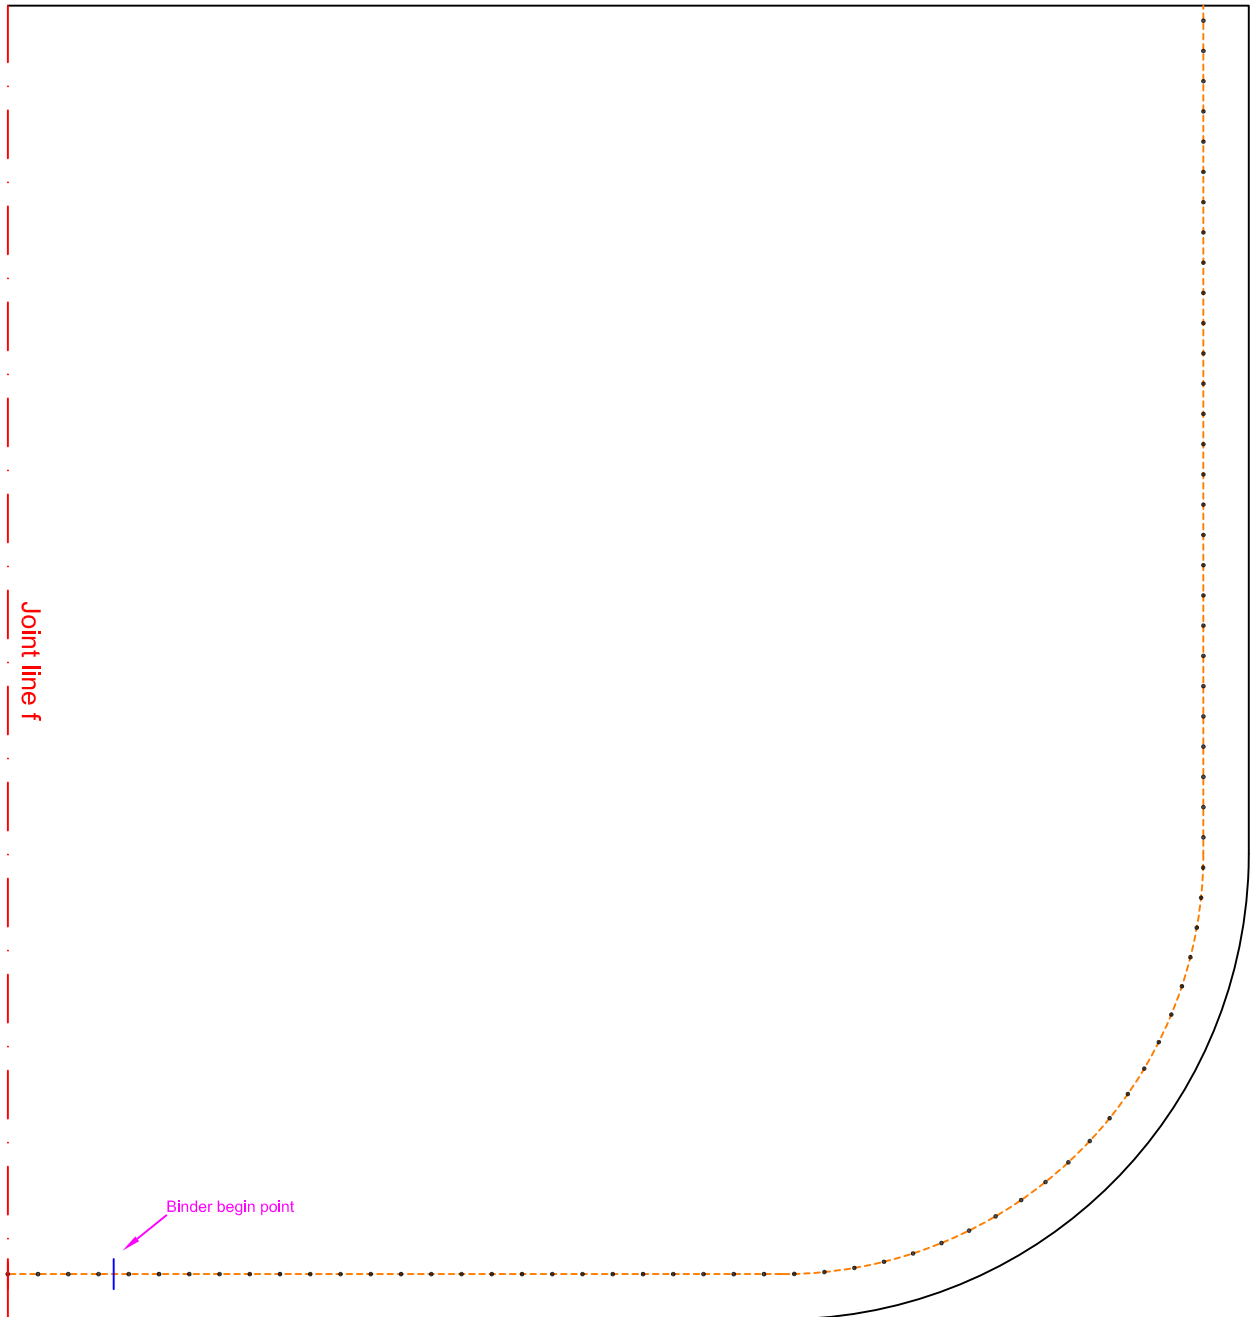

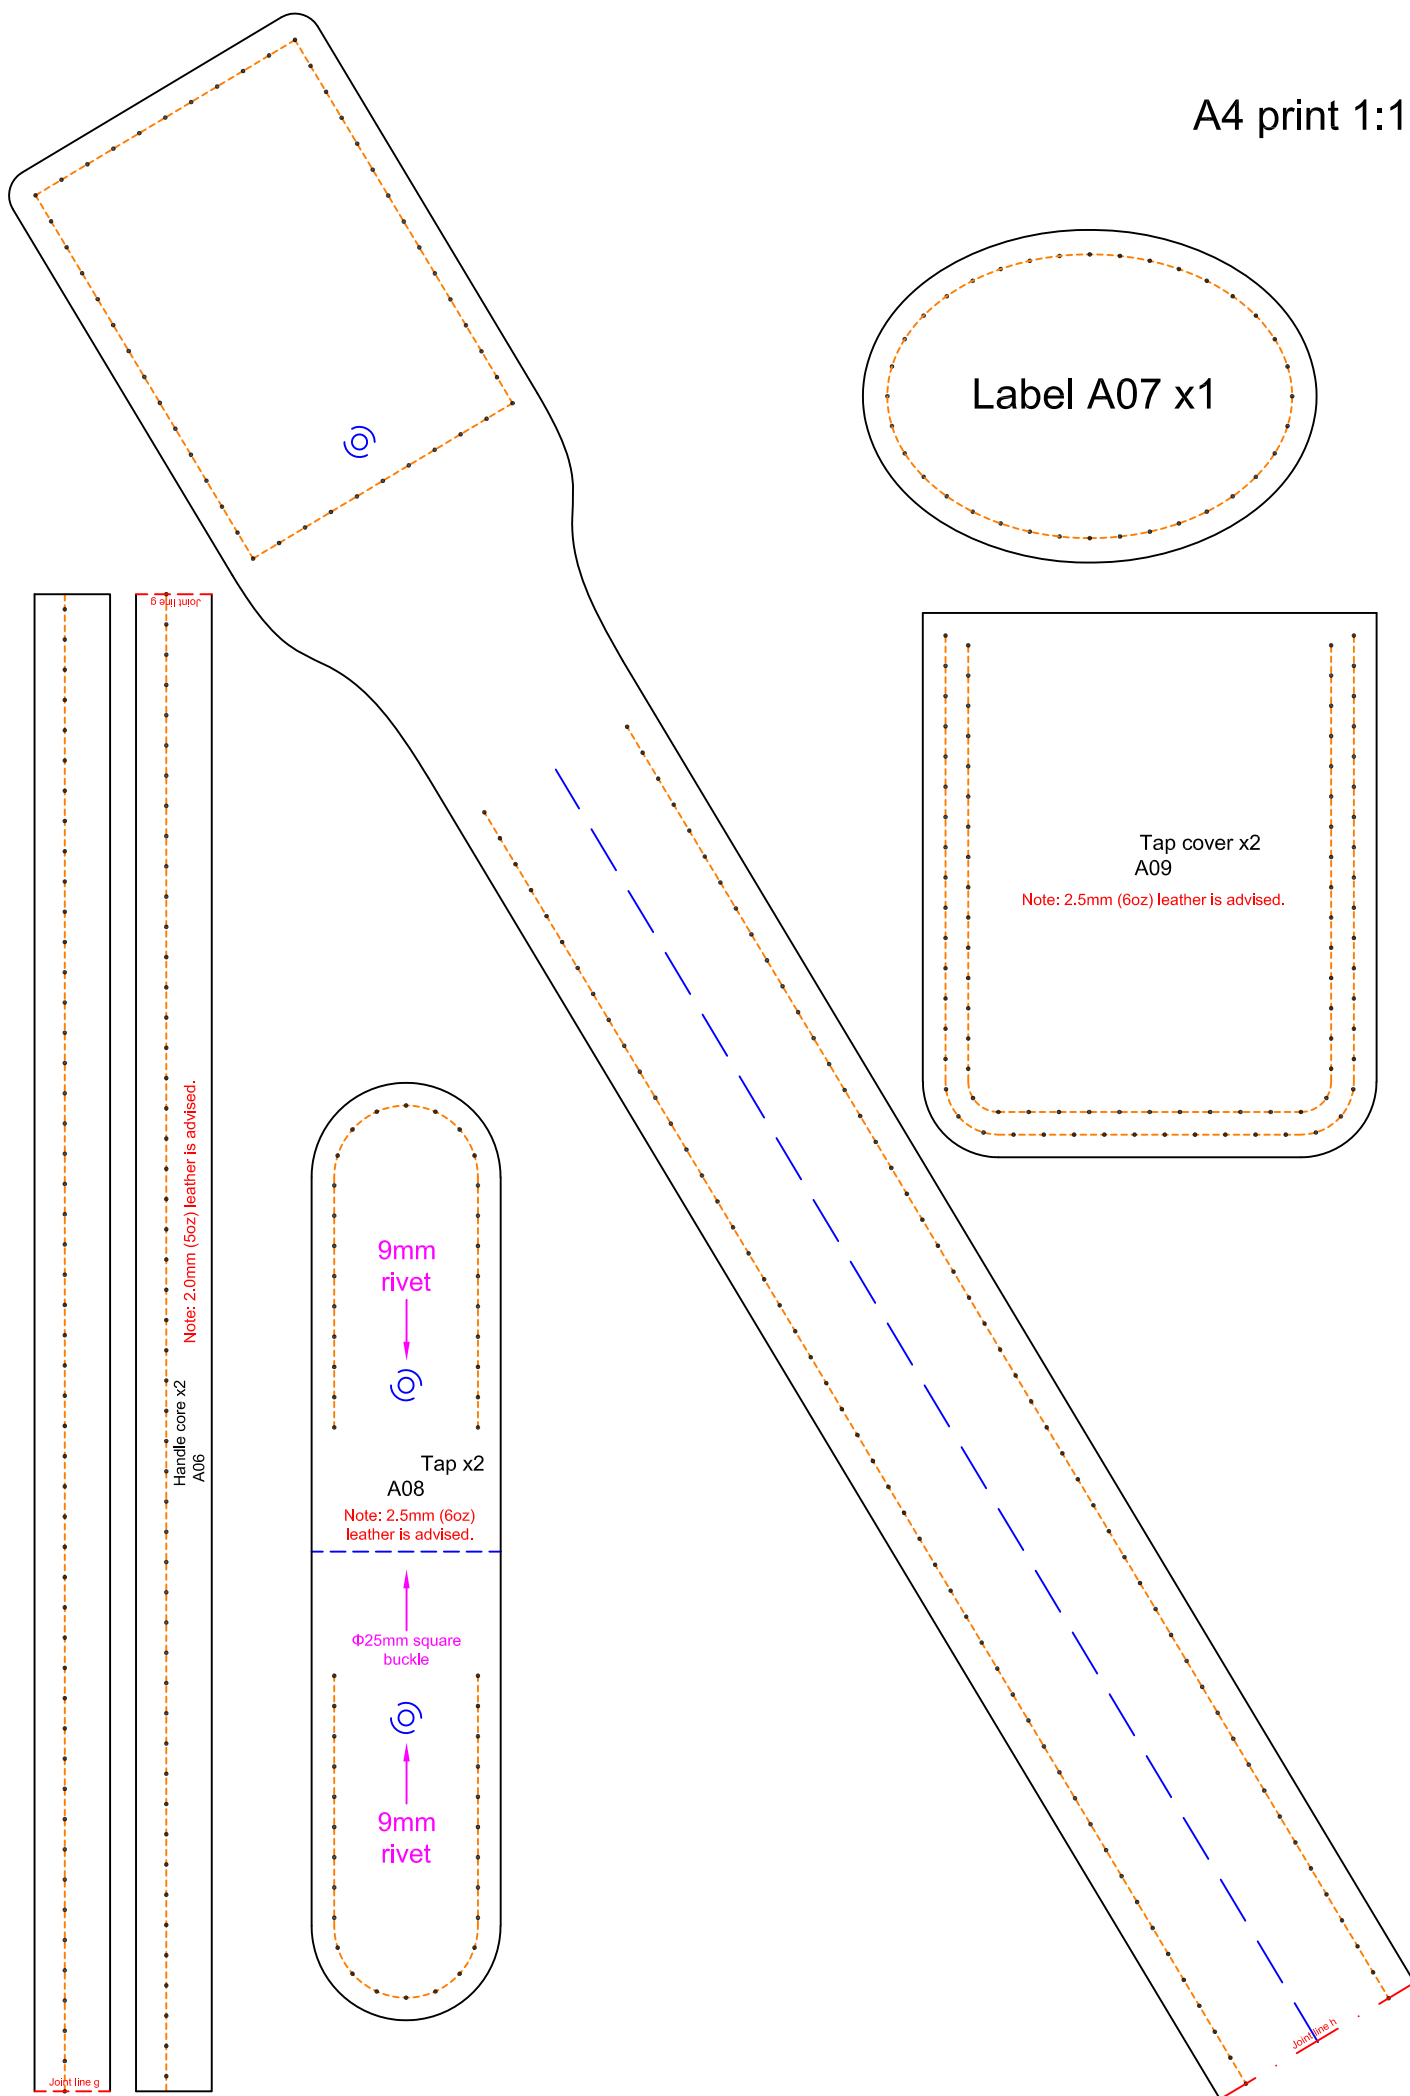

A4 print 1:1

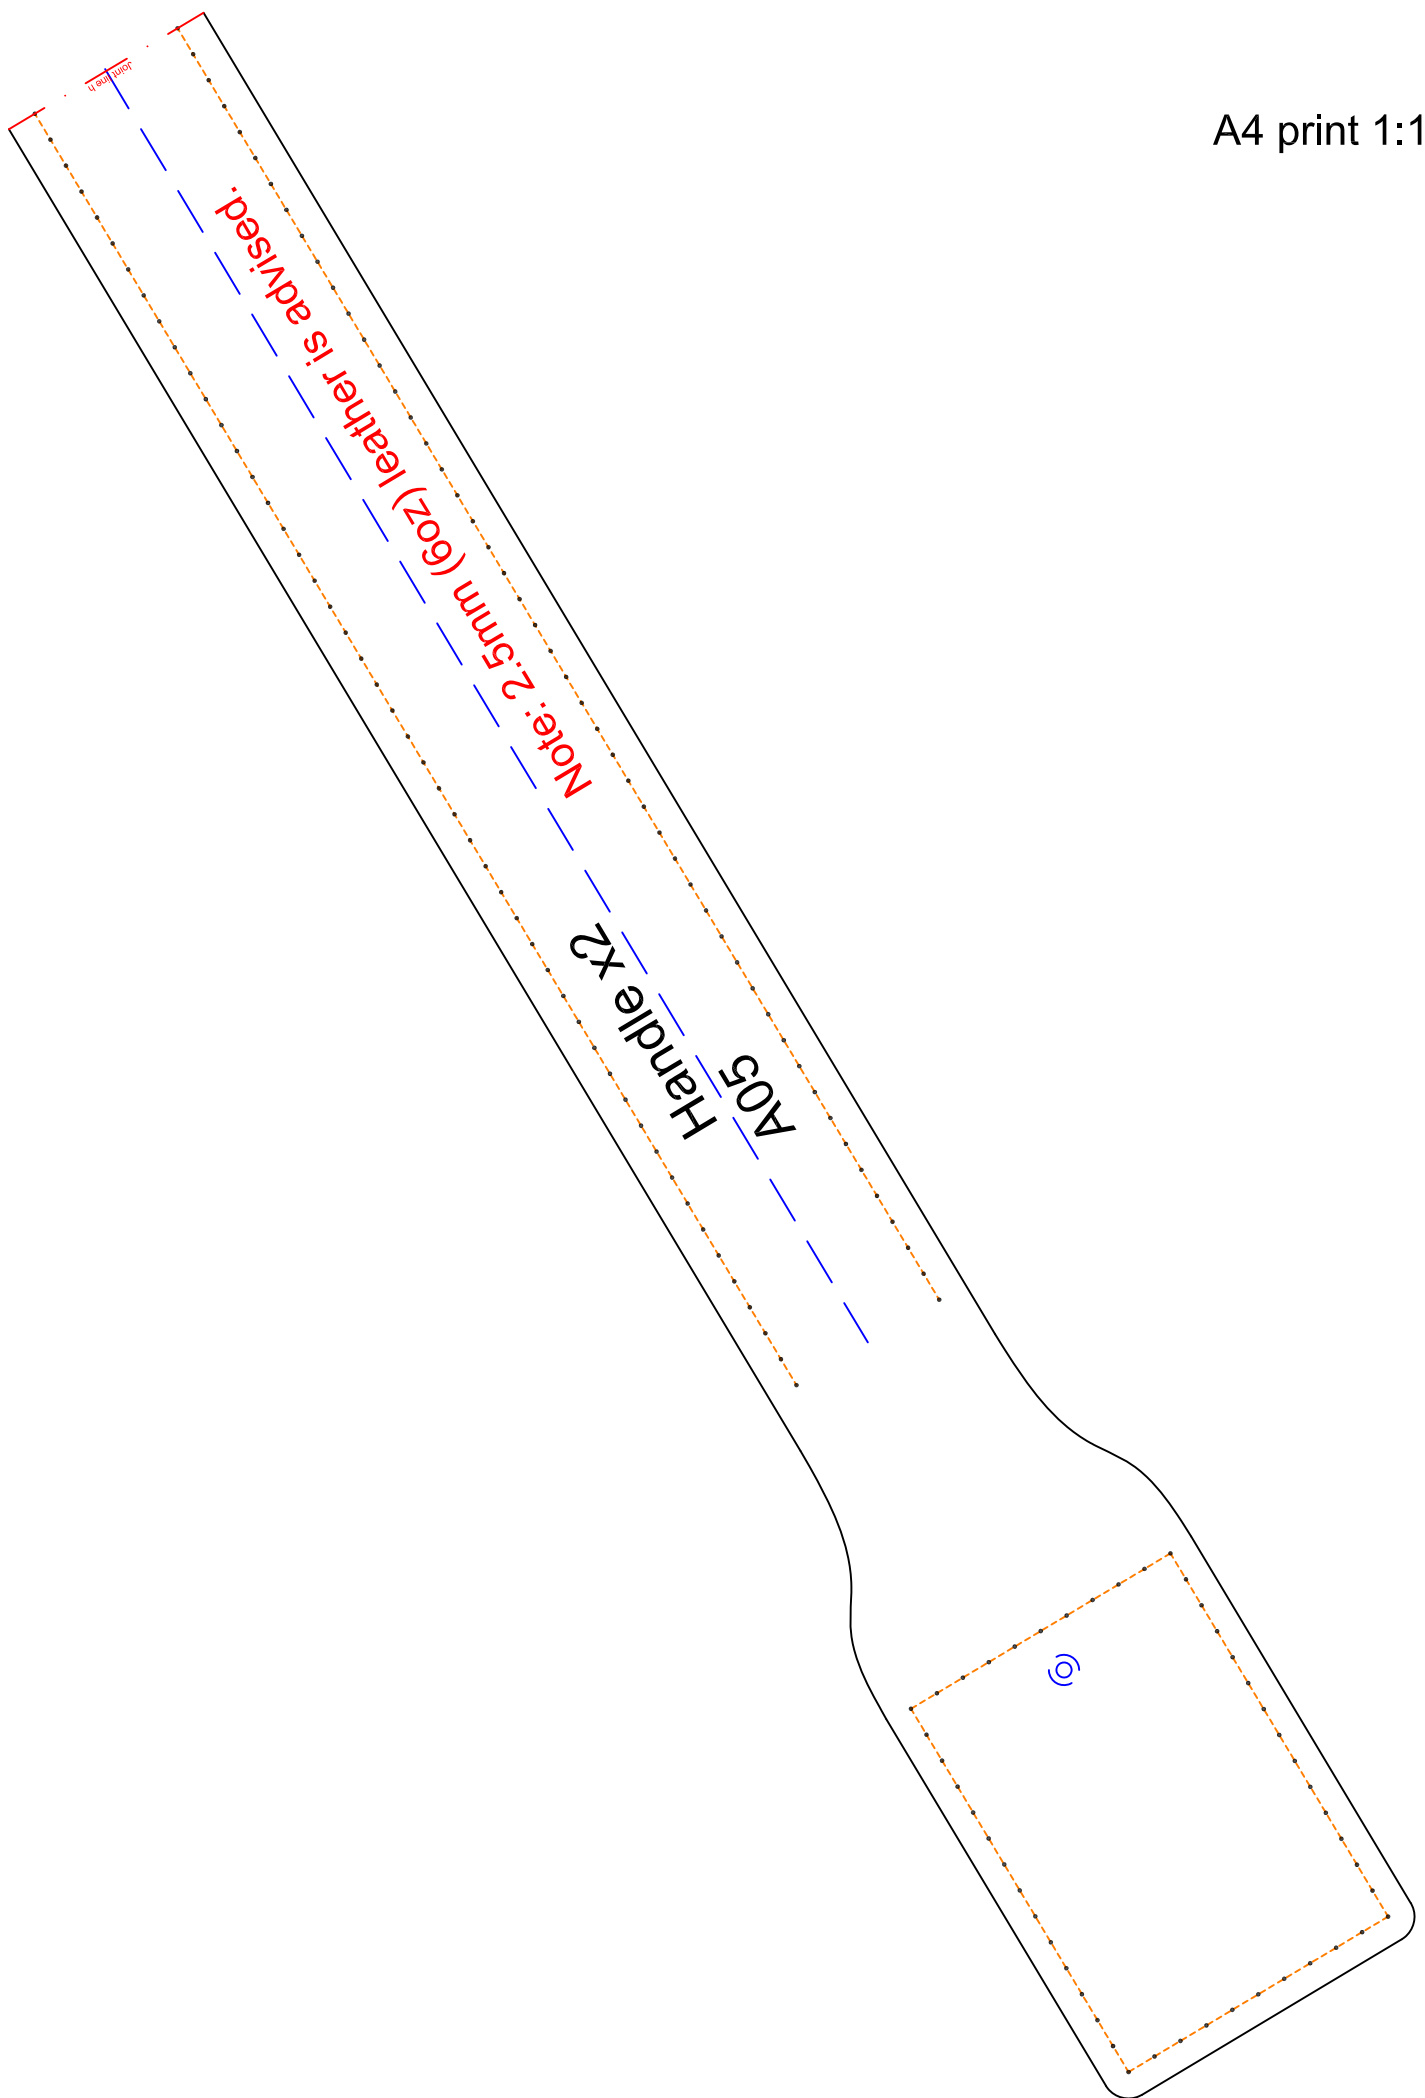

Joint line i





Joint line j

Joint line k

Note: 2.0mm (5oz) leather is advised.
This part is longer a little, because bending glue will reduce some length,
so you need to glue it on bag from tip to tip, and cut the redundant part.
After gluing, punch stitching holes by chisel.

Joint line k


Body strengthen leather x2
A10

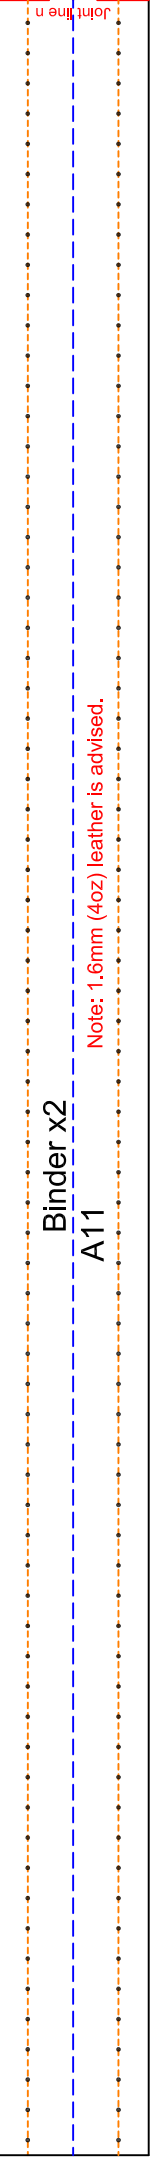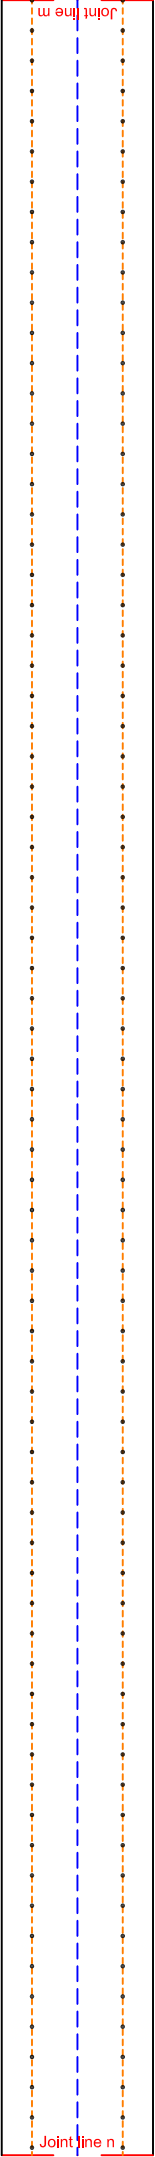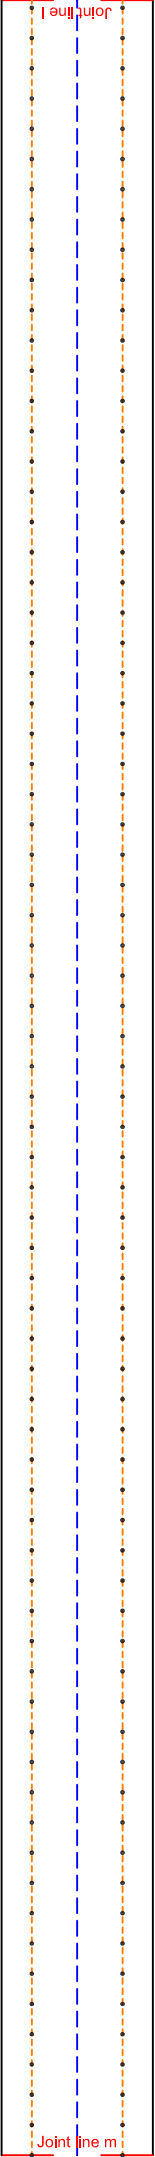
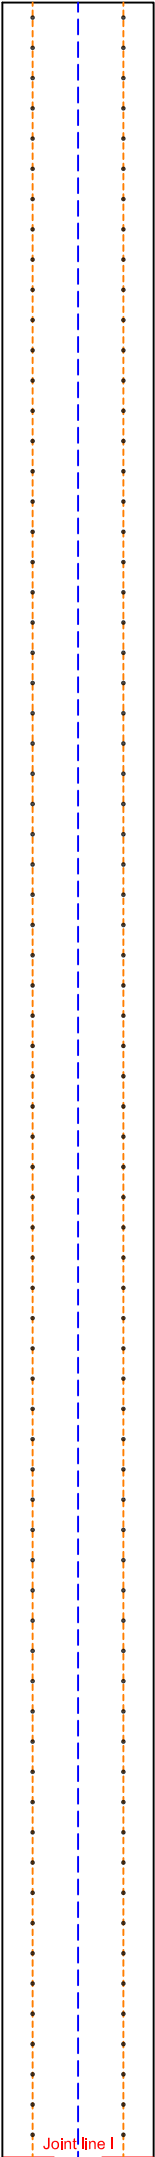




Joint line o

Inner separated bottom x1
A12

Note: 2.0mm (5oz) leather is advised.

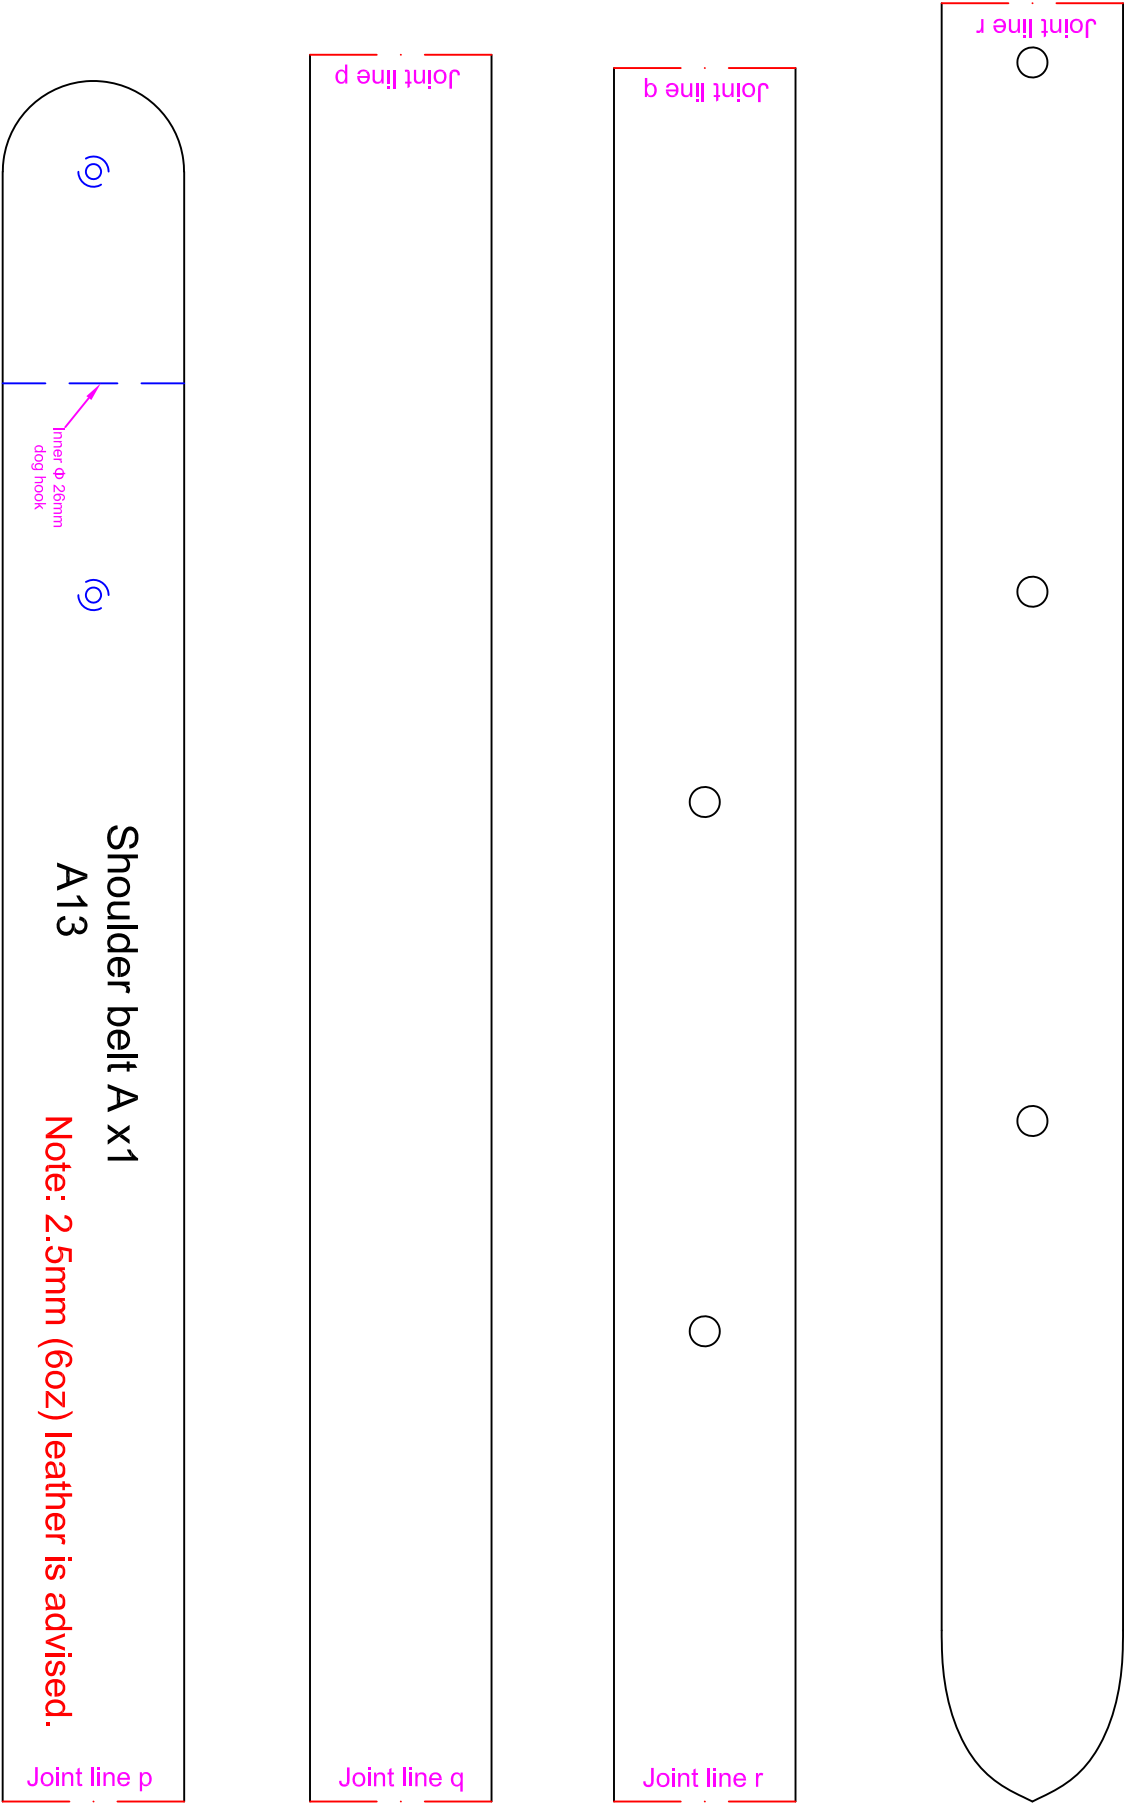

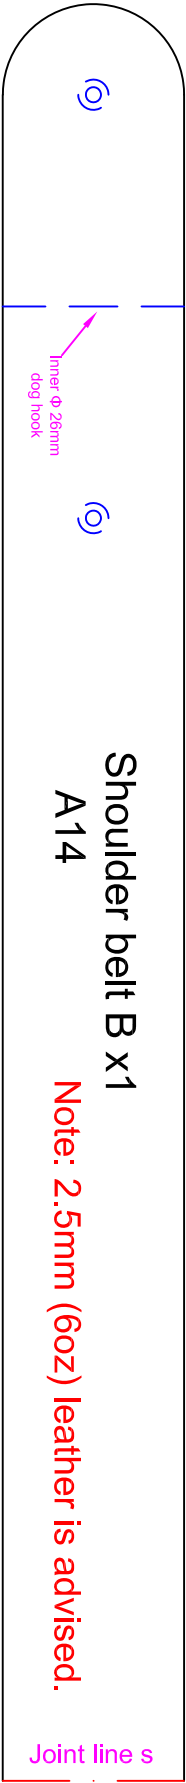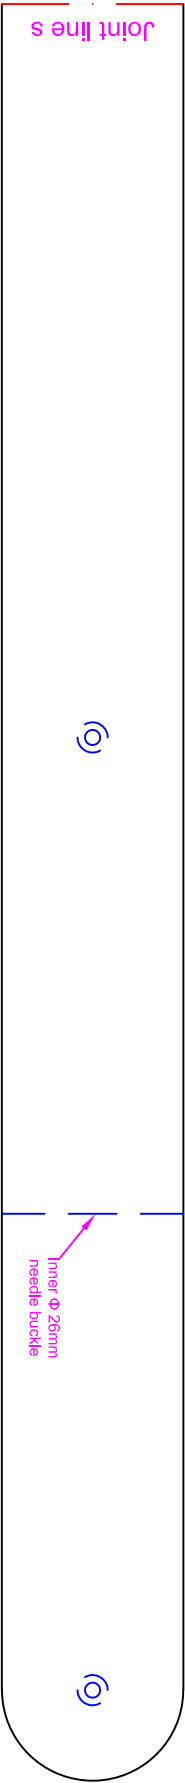

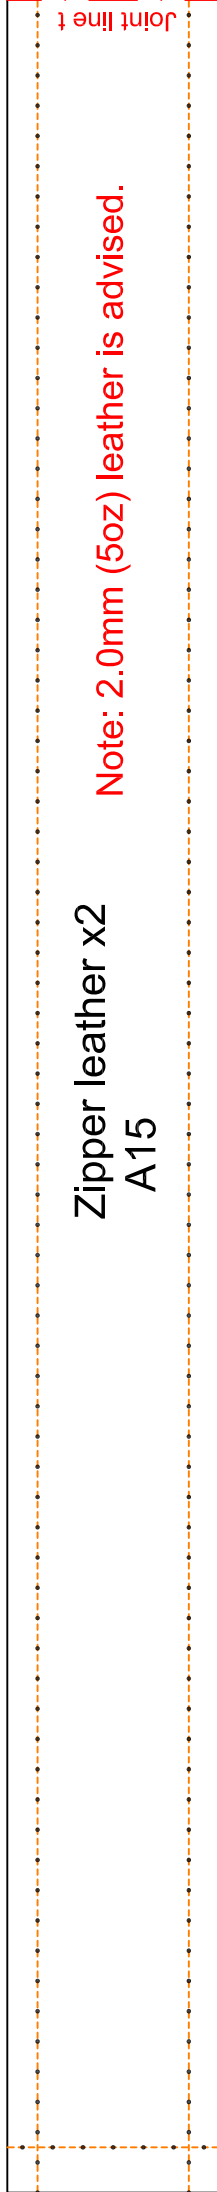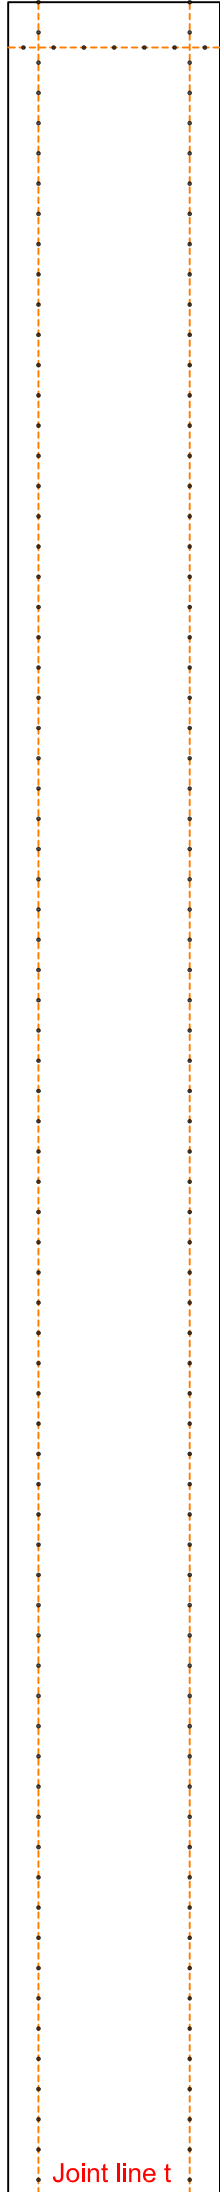

A4 print 1:1