


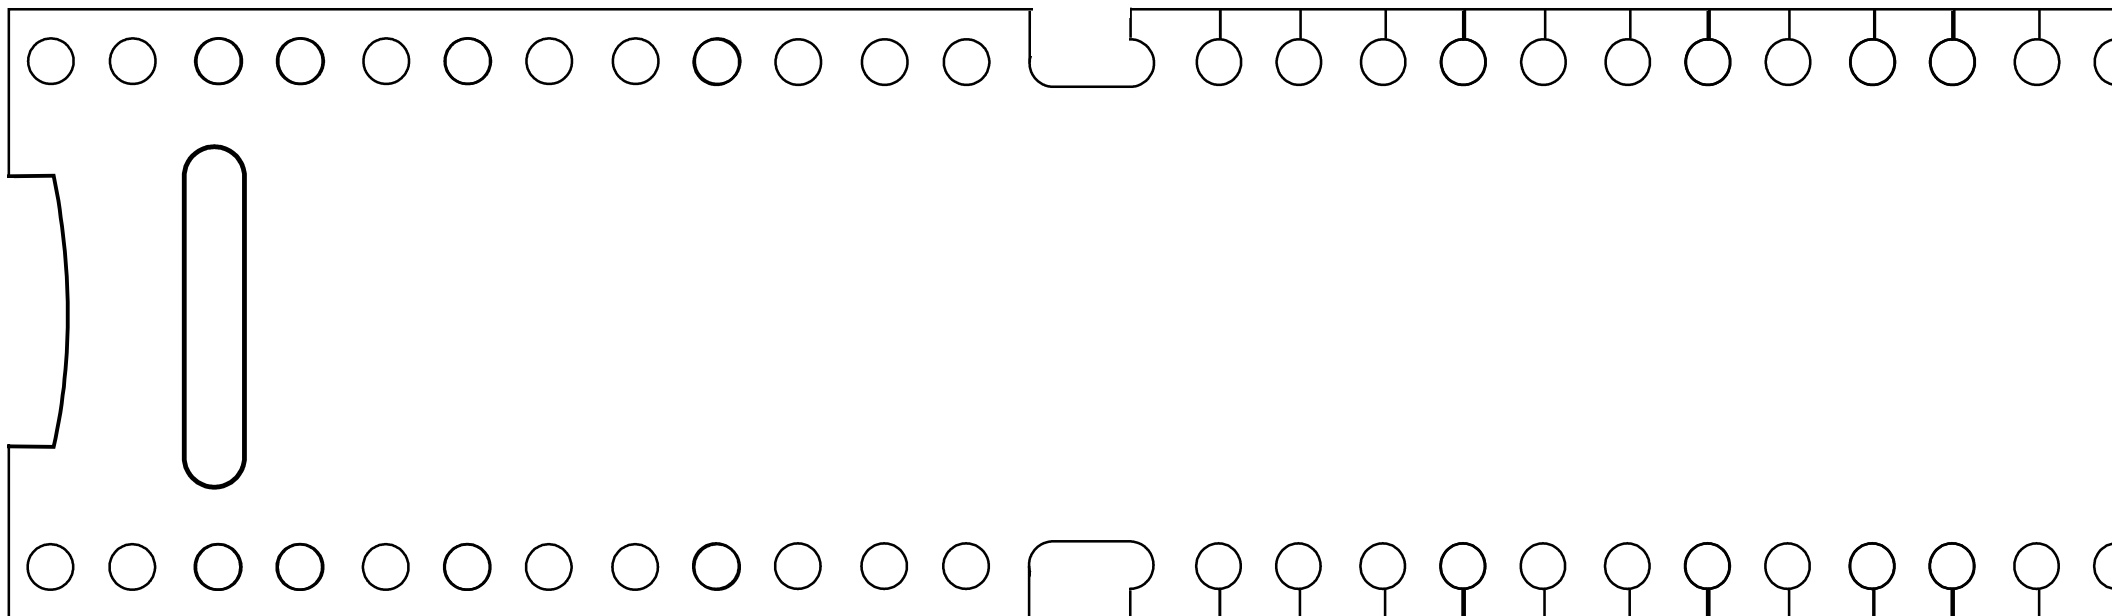

Join at the dotted line to complete the pattern.

Use 2mm stiff leather e.g. top grain or enameled leather

Use a 6mm punch for the holes

