



ACC-125 Instruction


Step 1: Sew zipper on A05, and sew A05 with A04 flesh side to flesh side.

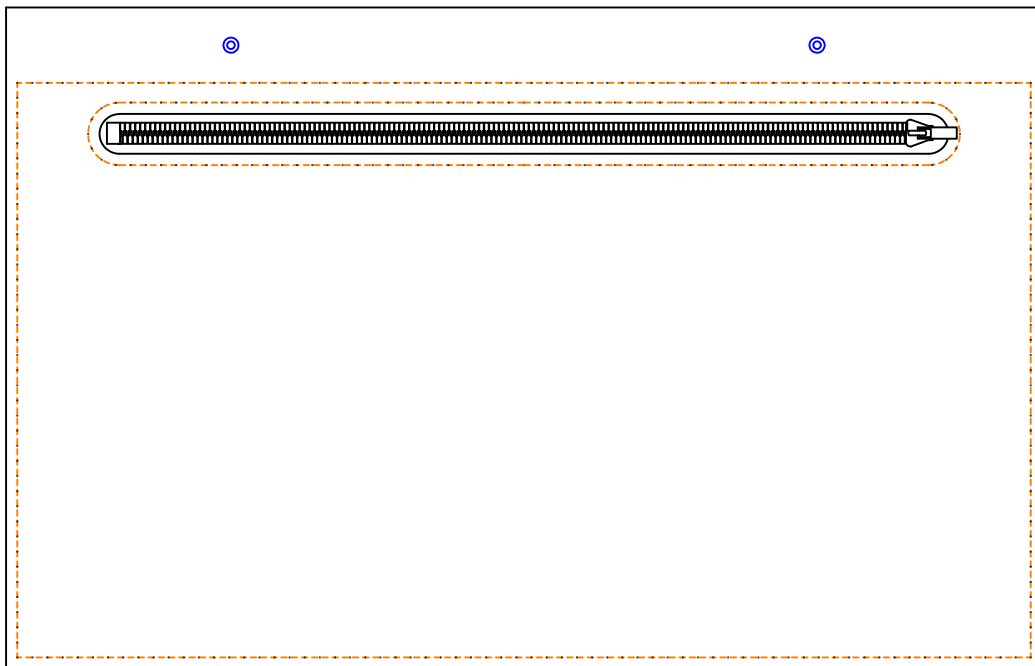

Step 2: Sew A01 and A02 together, and sew A08, A06 and 2 pieces of A13 on right places. When install A08, Don't forget install Step1's combination on the flesh side.

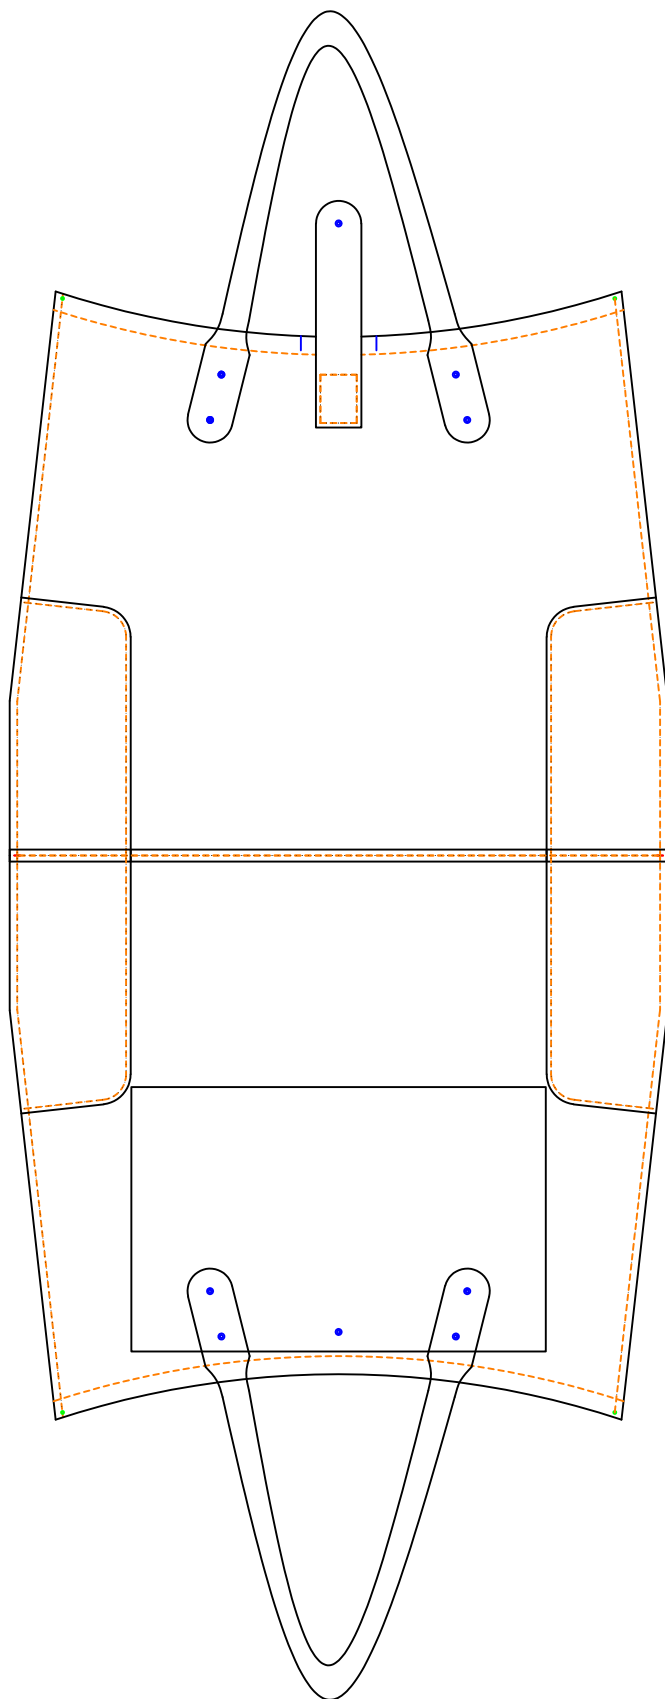

Step 3: Install 2 pieces of A07 with D-rings on A03.
Here Please DO notice that: all rivets places should have
A10 on flesh side as stiffener.
Sew with Step 2's combination by flesh side outside,
after sewing, converse grain side outside.

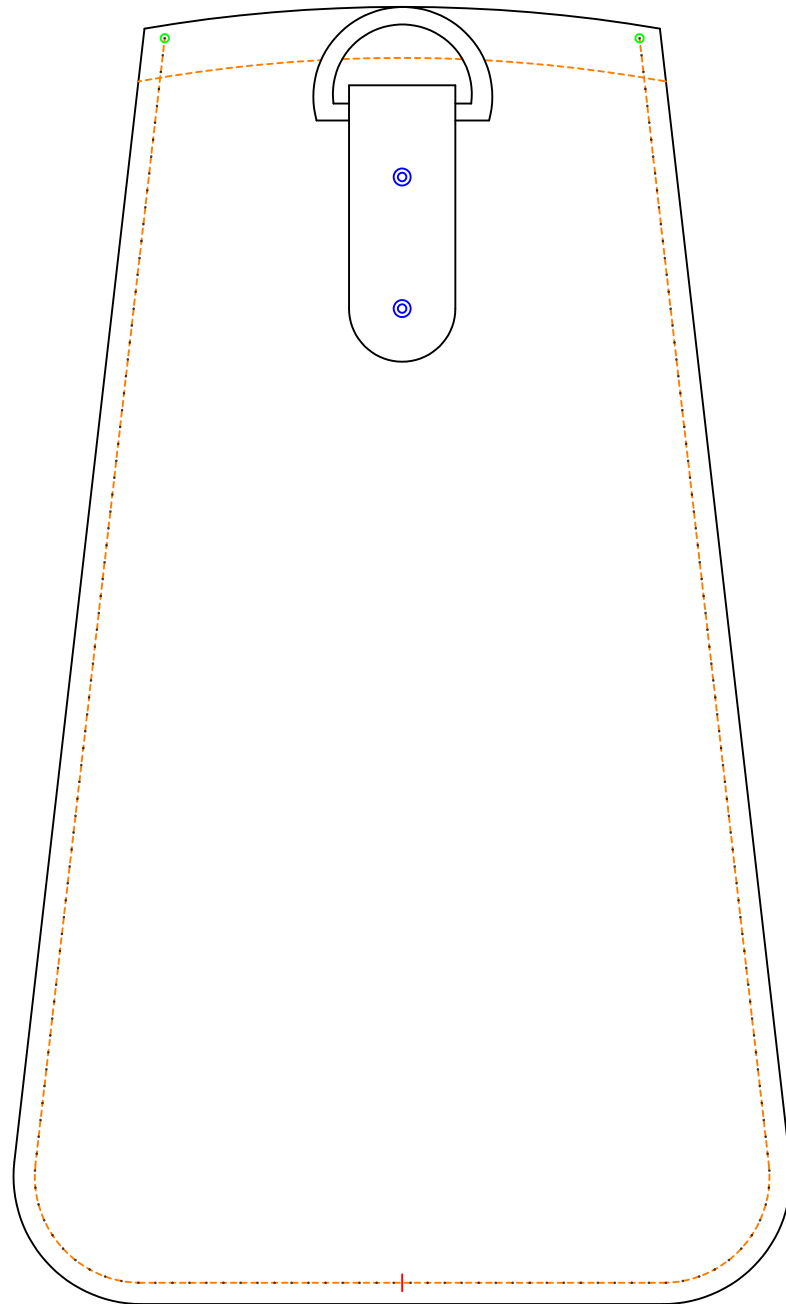


Step4: Fold A12 in the middle and glue it around top opening, from begin point and stop on begin point, when sew it, don't forget wrap a piece of A10 in the middle of top opening on back surface.

Notice:

- 1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;
- 2, Thin the edge before sewing is always advised;
- 3, 1oz=0.4mm;
- 4, Here is the line instruction.

Note

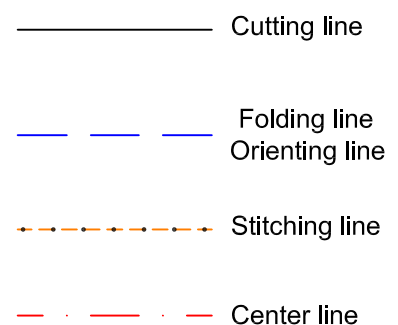- 
- Cutting line
 - Folding line
 - Orienting line
 - .-.-.-.- Stitching line
 - .-.-.-.- Center line