



Assembly instructions

Difficulty level: beginner
Completion Time 5-8 hours

Copyright Dieselpunk.ro 2019
 DIESELPUNK.RO

NECESSARY TOOLS

Copyright Dieselpunk.ro 2019

B&W Printer



Scissors or a cutter



Hole Puncher (We recommend 1.5 - 1.8 mm sized holes for this build)



Between 4.5 and 8 square feet of leather depending on the size you go for. (We recommend 4-6 oz leather for this build)



Thread and needles (We recommend 1 mm waxed thread for this build)




1 x 5 mm Sam Browne button

Copyright Dieselpunk.ro 2019

Before you start working **please watch this short video** to see how to print and use your pattern correctly:


<https://youtu.be/-LfRFG5PtW0>

Copyright Dieselpunk.ro 2019

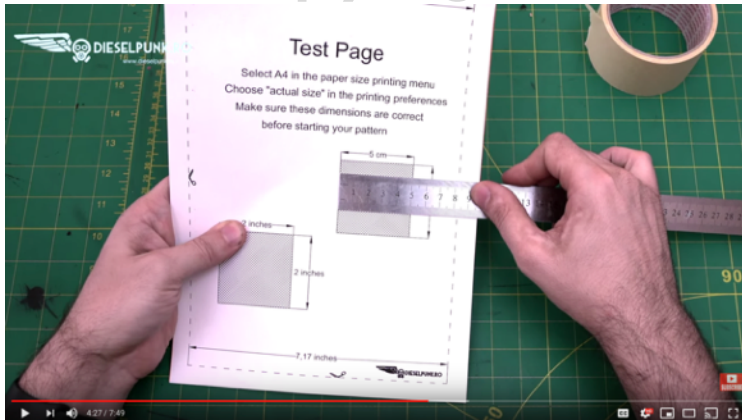


You will learn how to print at correct scale,


... how to assemble the large pieces of the pattern correctly ...

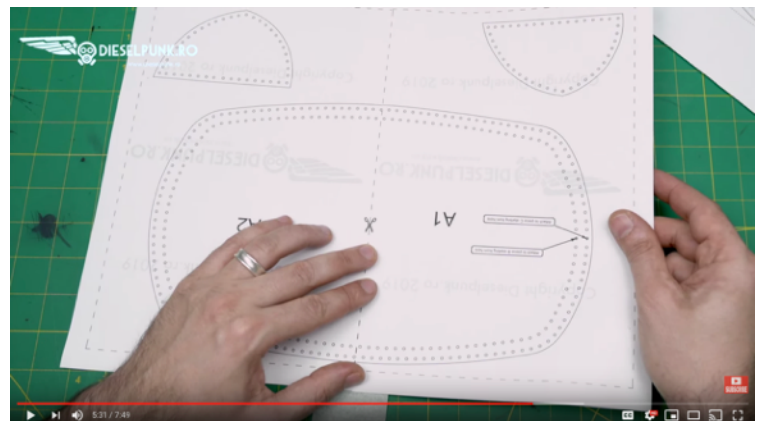

... and how to use the paper pattern to cut all the leather pieces you need for your design

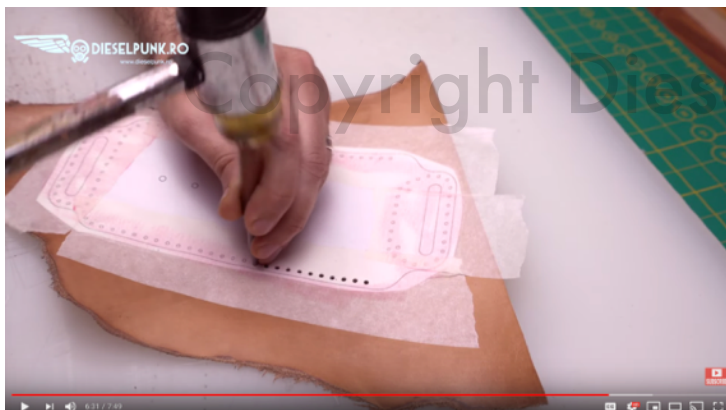

PRINTING THE PATTERN

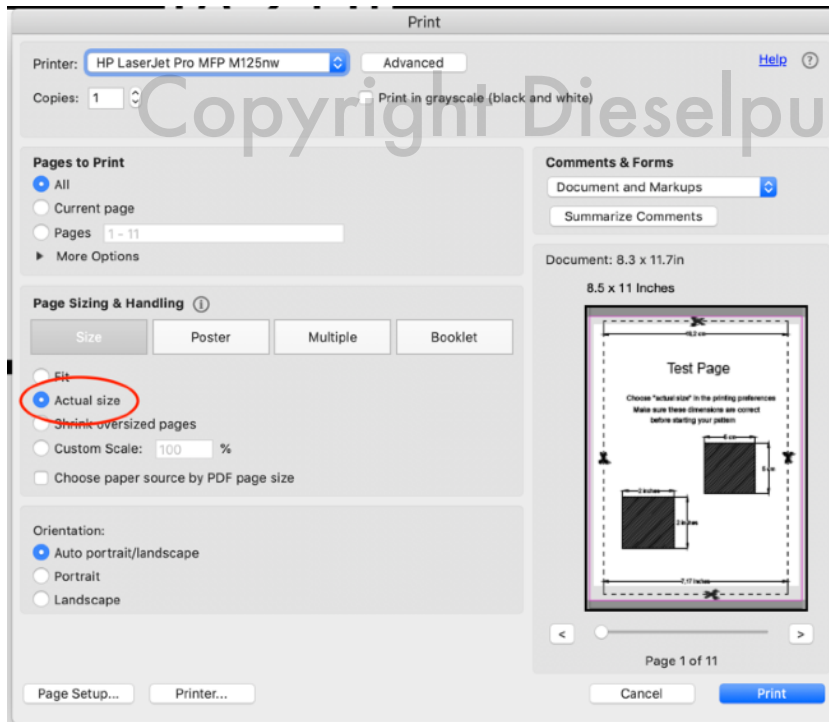

Set up your paper size to A4, Letter or Legal and **choose actual size** in the printer settings

Please access your instructional video here:

[HTTPS://YOUTU.BE/35UEHLESYOM](https://youtu.be/35UEHLESYOM)





Would love to see what you did, so please share or leave a review on



Stuck and need help? go ahead and send us a message
We are always happy to help

Thank you for constructing your leather cover with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date with the latest patterns available. (mention the order number to be approved immediately)

Please follow the link below to join.
<https://www.facebook.com/groups/1434028716724087/>



Best Regards
Tony

Copyright Dieselpunk.ro 2019