





NO.52 | VERTICAL WALLET

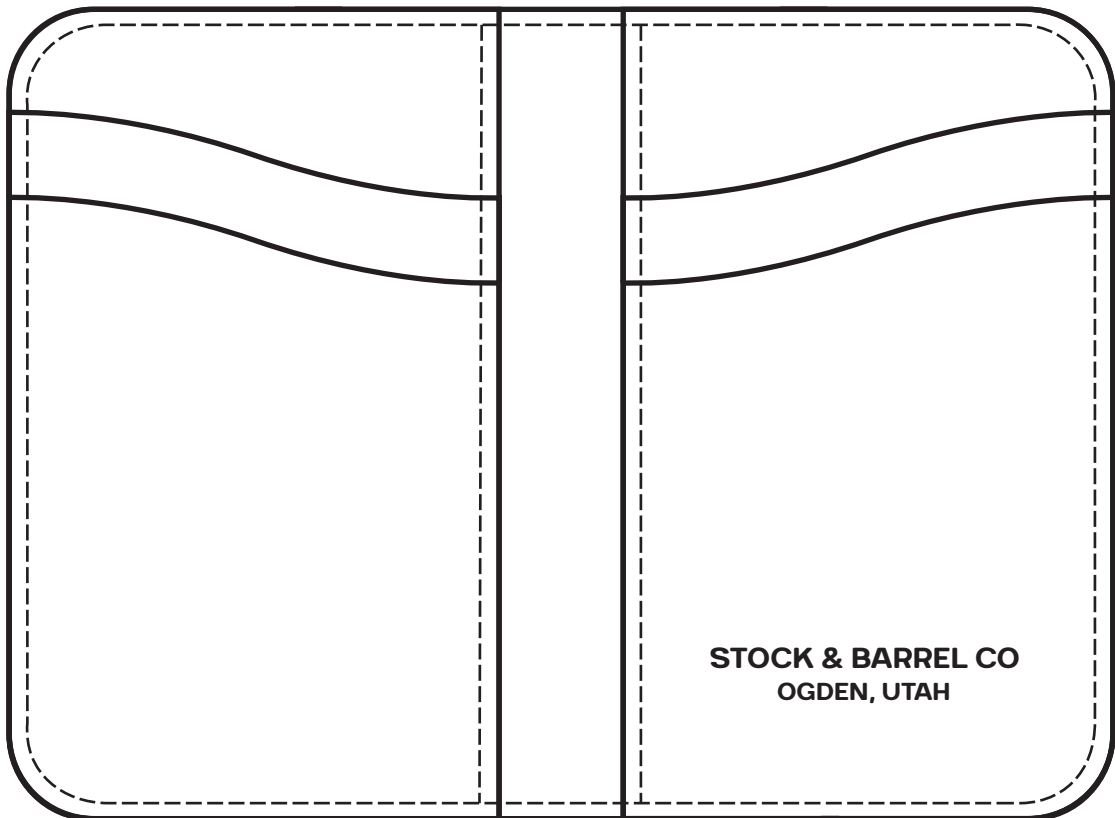

WWW.STOCKANDBARRELCO.COM

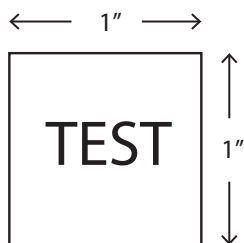

WHAT TO DO

1. Print the .pdf file on standard 8.5" x 11" paper
2. Measure the 1" box to make sure the size is accurate, if not, adjust your printer settings and try again
3. Glue the pattern pieces to heavier stock paper like oak tag, poster board, etc...
4. Cut out on the black lines using a precision knife and use to trace out patterns onto the leather.
5. For reference of "step by step" assembly, watch the full video on Youtube here:
https://youtu.be/FSWEnPI_Mwc

Notes:

- We recommend using 3/4oz vegetable tanned leather. If possible use 2/3oz for the pocket pieces to reduce bulk. You can also skive down the bottom section of the T-slot if you don't have the option of buying 2 different leather weights.
- The stitching can be done by hand using chisel punches, needle and thread, or by a heavy duty walking foot industrial sewing machine.
- The stitch line should be about 1/8" away from the edge

HELPFUL RESOURCES

Leather

- <https://bit.ly/35gdCjn>

Recommended Sewing machine for wallets

- <https://bit.ly/3ljqsD9>

Starter tool kit

- <https://amzn.to/3n6ghlO>

Contact adhesive

- <https://amzn.to/3ncl9Fa>


Edge paint

- <https://bit.ly/2GLmfJo>

Paint roller

- <https://amzn.to/2GLly2K>

Some of these links are affiliate links, so we'll get a little kickback if you decide to use them. We always appreciate your support:)

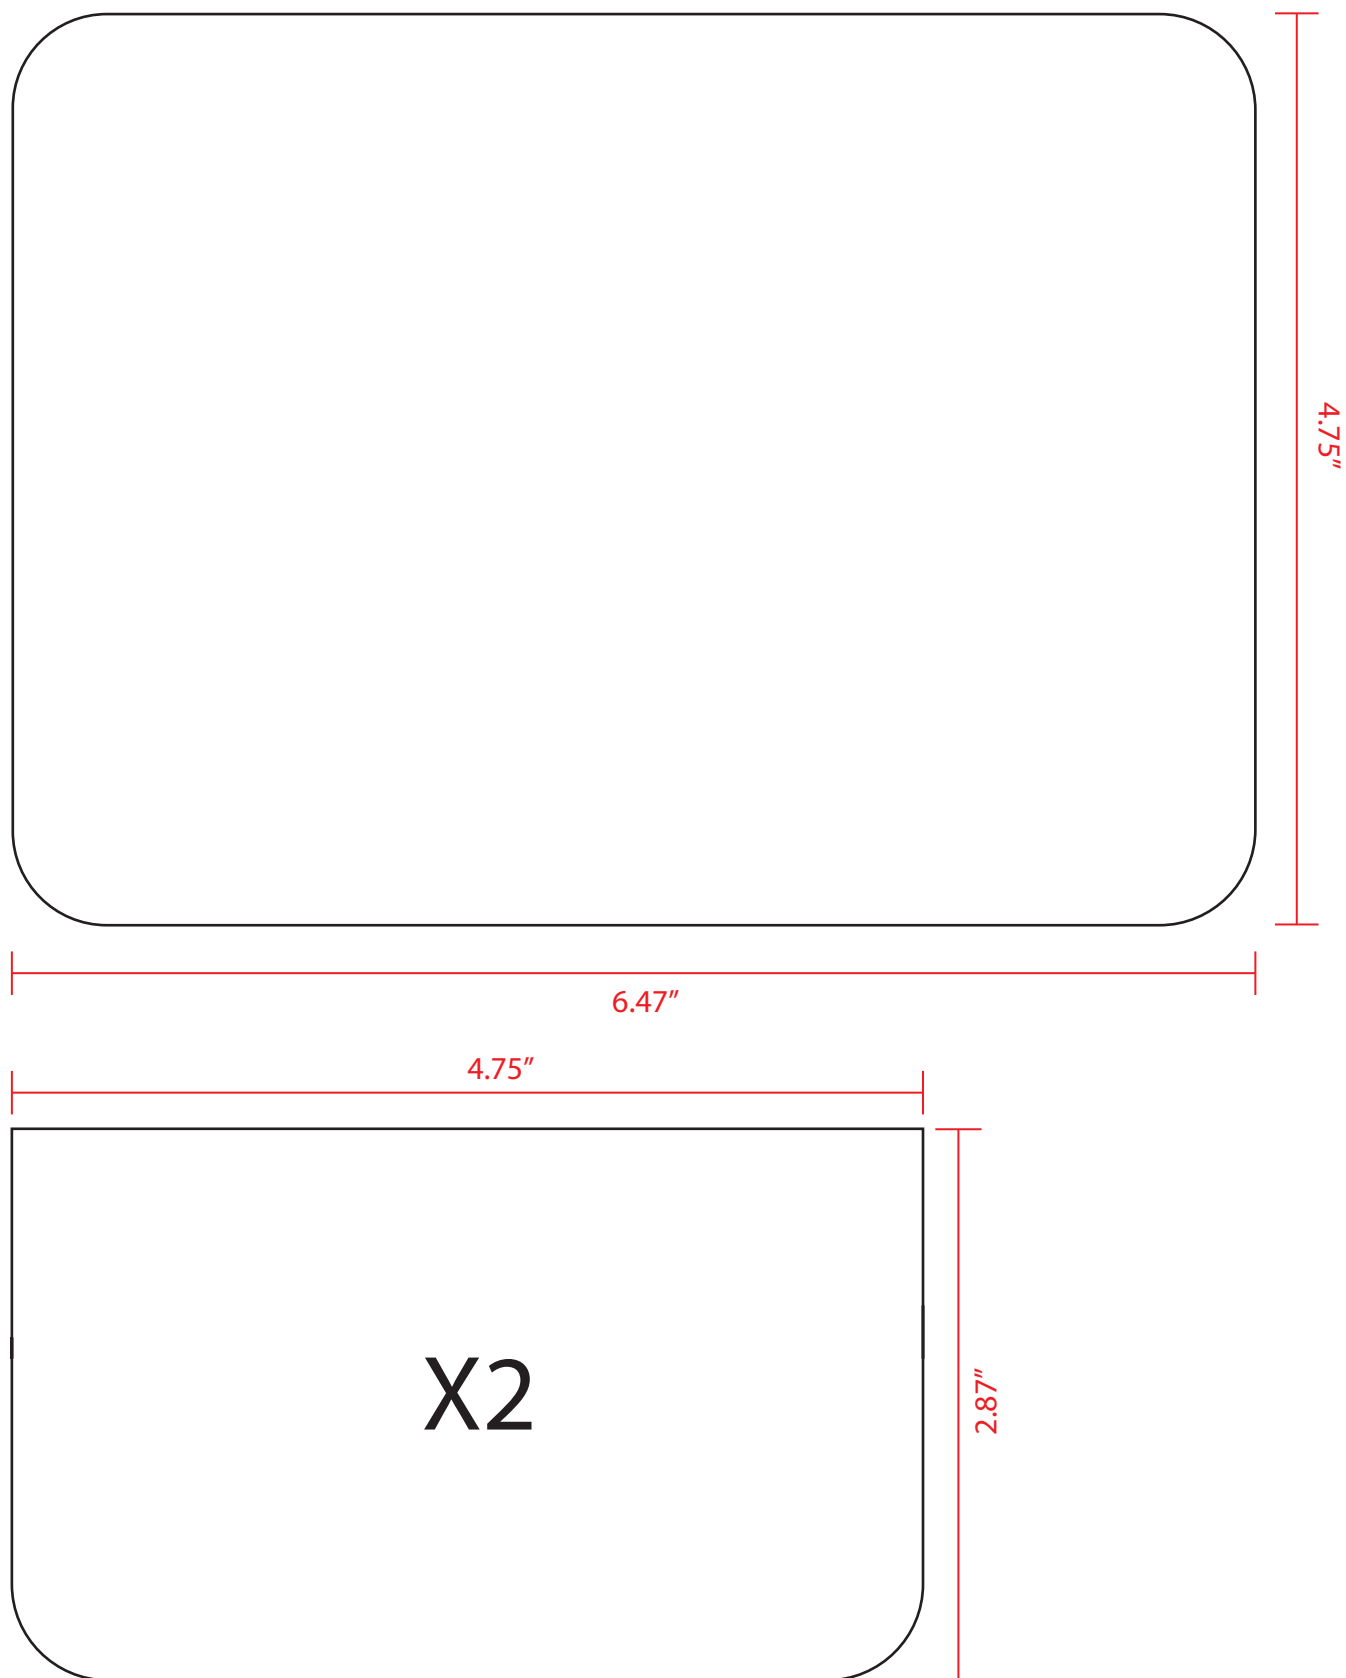

You only need to cut this piece out once as a pattern but trace it twice onto the leather, one for each side of the wallet

