



Long Wallet

Print out your template.

Ensure you print it out at 100% scale.

Roughly cut out the shapes and tape them down to your leather (I like to use 2 different colours here, but you do you)

Cut out the shapes and punch the holes (I've marked where the holes go but you should still just kind of test fold the pieces to make sure they are in the right place for you. Different thickness leathers may need some alterations)

Bevel/Sand/Burnish all of the pocket tops, the flap on the coin pocket, and the Strap

Skive the T-Slot down to reduce some bulk

Glue the T-Slot to the Card Slot Body (the bottom of the T-Slot should be somewhere around $\frac{3}{4}$ " up from the bottom of the Card Slot Body, but you should test this by placing the Bottom Pocket over top to make sure everything is in the right place)

Punch holes and stitch the bottom of the T-Slot

Glue the Bottom Pocket in place

Measure half way on the card slots and punch a vertical stitching line to separate it into 2 rows of card slots (make sure you don't punch through the stitching on the bottom of the T-Slot) and stitch it up

On the Coin Pouch Body set the female side of a line snap

On the Coin Pouch Front set the male side of the snap

Glue the Coin Pouch Front to the Coin Pouch Body

*****If Using My Method From the Video for Thick Leather/Stitching Punches*****

Punch your stitching holes around the edges of both the card and coin pockets

On the Wallet Body draw stitching lines with your wing divider on the grain side where the pockets will go

Flip the Wallet Body over and place the pockets on it

Using your awl push holes straight down through the stitching holes to mark the start, end, and corners of your stitching line

Flip the wallet body over and punch the stitching holes according to the marks you just made

On one end of the Strap set the female side of a line snap

On one end of the Wallet Body set the male side of the snap

Rivet the Strap to the other end of the Wallet Body

Glue the card and coin pockets in place making sure the holes line up properly

Proceed to the saddle stitch steps

*****If Using the Normal Method*****

On one end of the Strap set the female side of a line snap

On one end of the Wallet Body set the male side of the snap

Rivet the Strap to the other end of the Wallet Body

Place your card and coin pockets in place on the Wallet Body

Mark and punch your stitching holes (be mindful of the strap when punching your holes)


Saddle stitch the pockets onto the wallet body

Sand edges to get them all nice and flush


Bevel/Sand/Burnish all edges (try to sand to a pretty fine grit here - I go to 1000)

Give it a rub down with your favourite balm and that's it!

When printing, make sure to print the true size. Measure below to ensure the image hasn't been scaled:

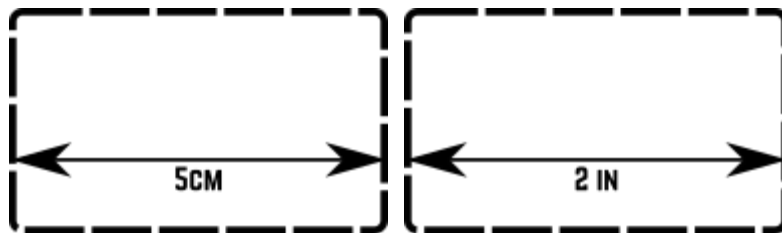



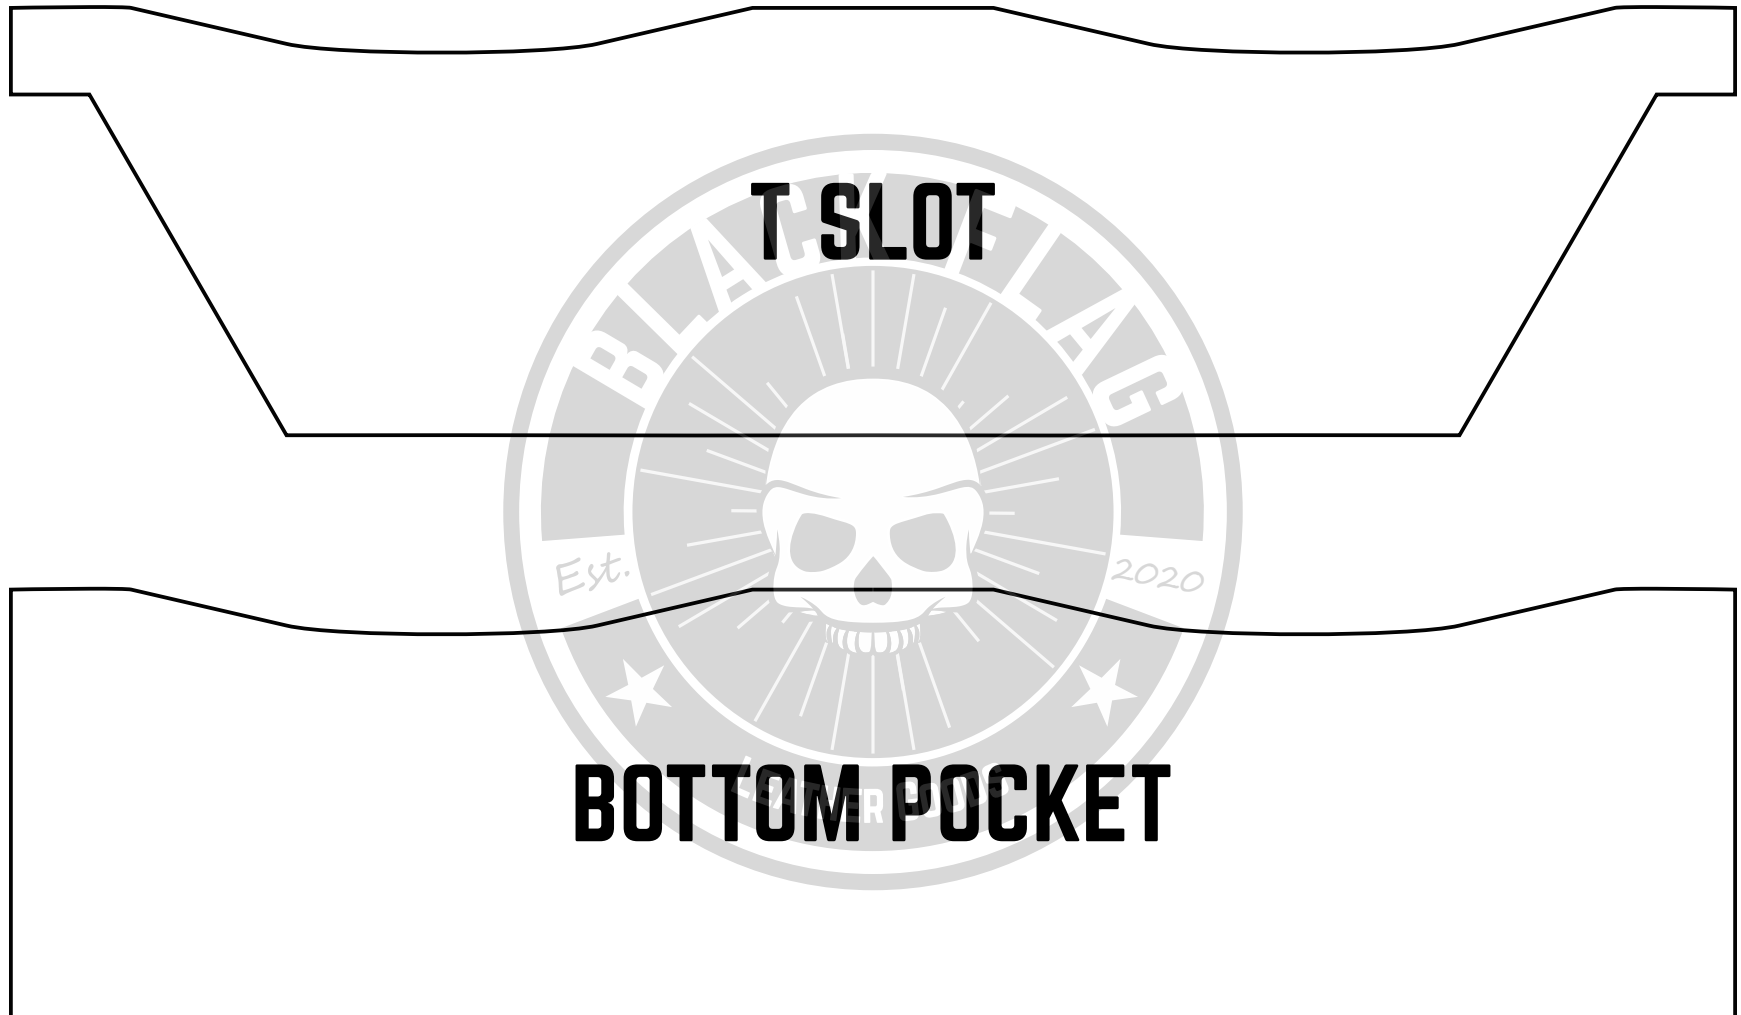

T SLOT

BOTTOM POCKET

◦ **STRAP** ◦



○
COIN POCKET FRONT

CARD SLOT BODY