



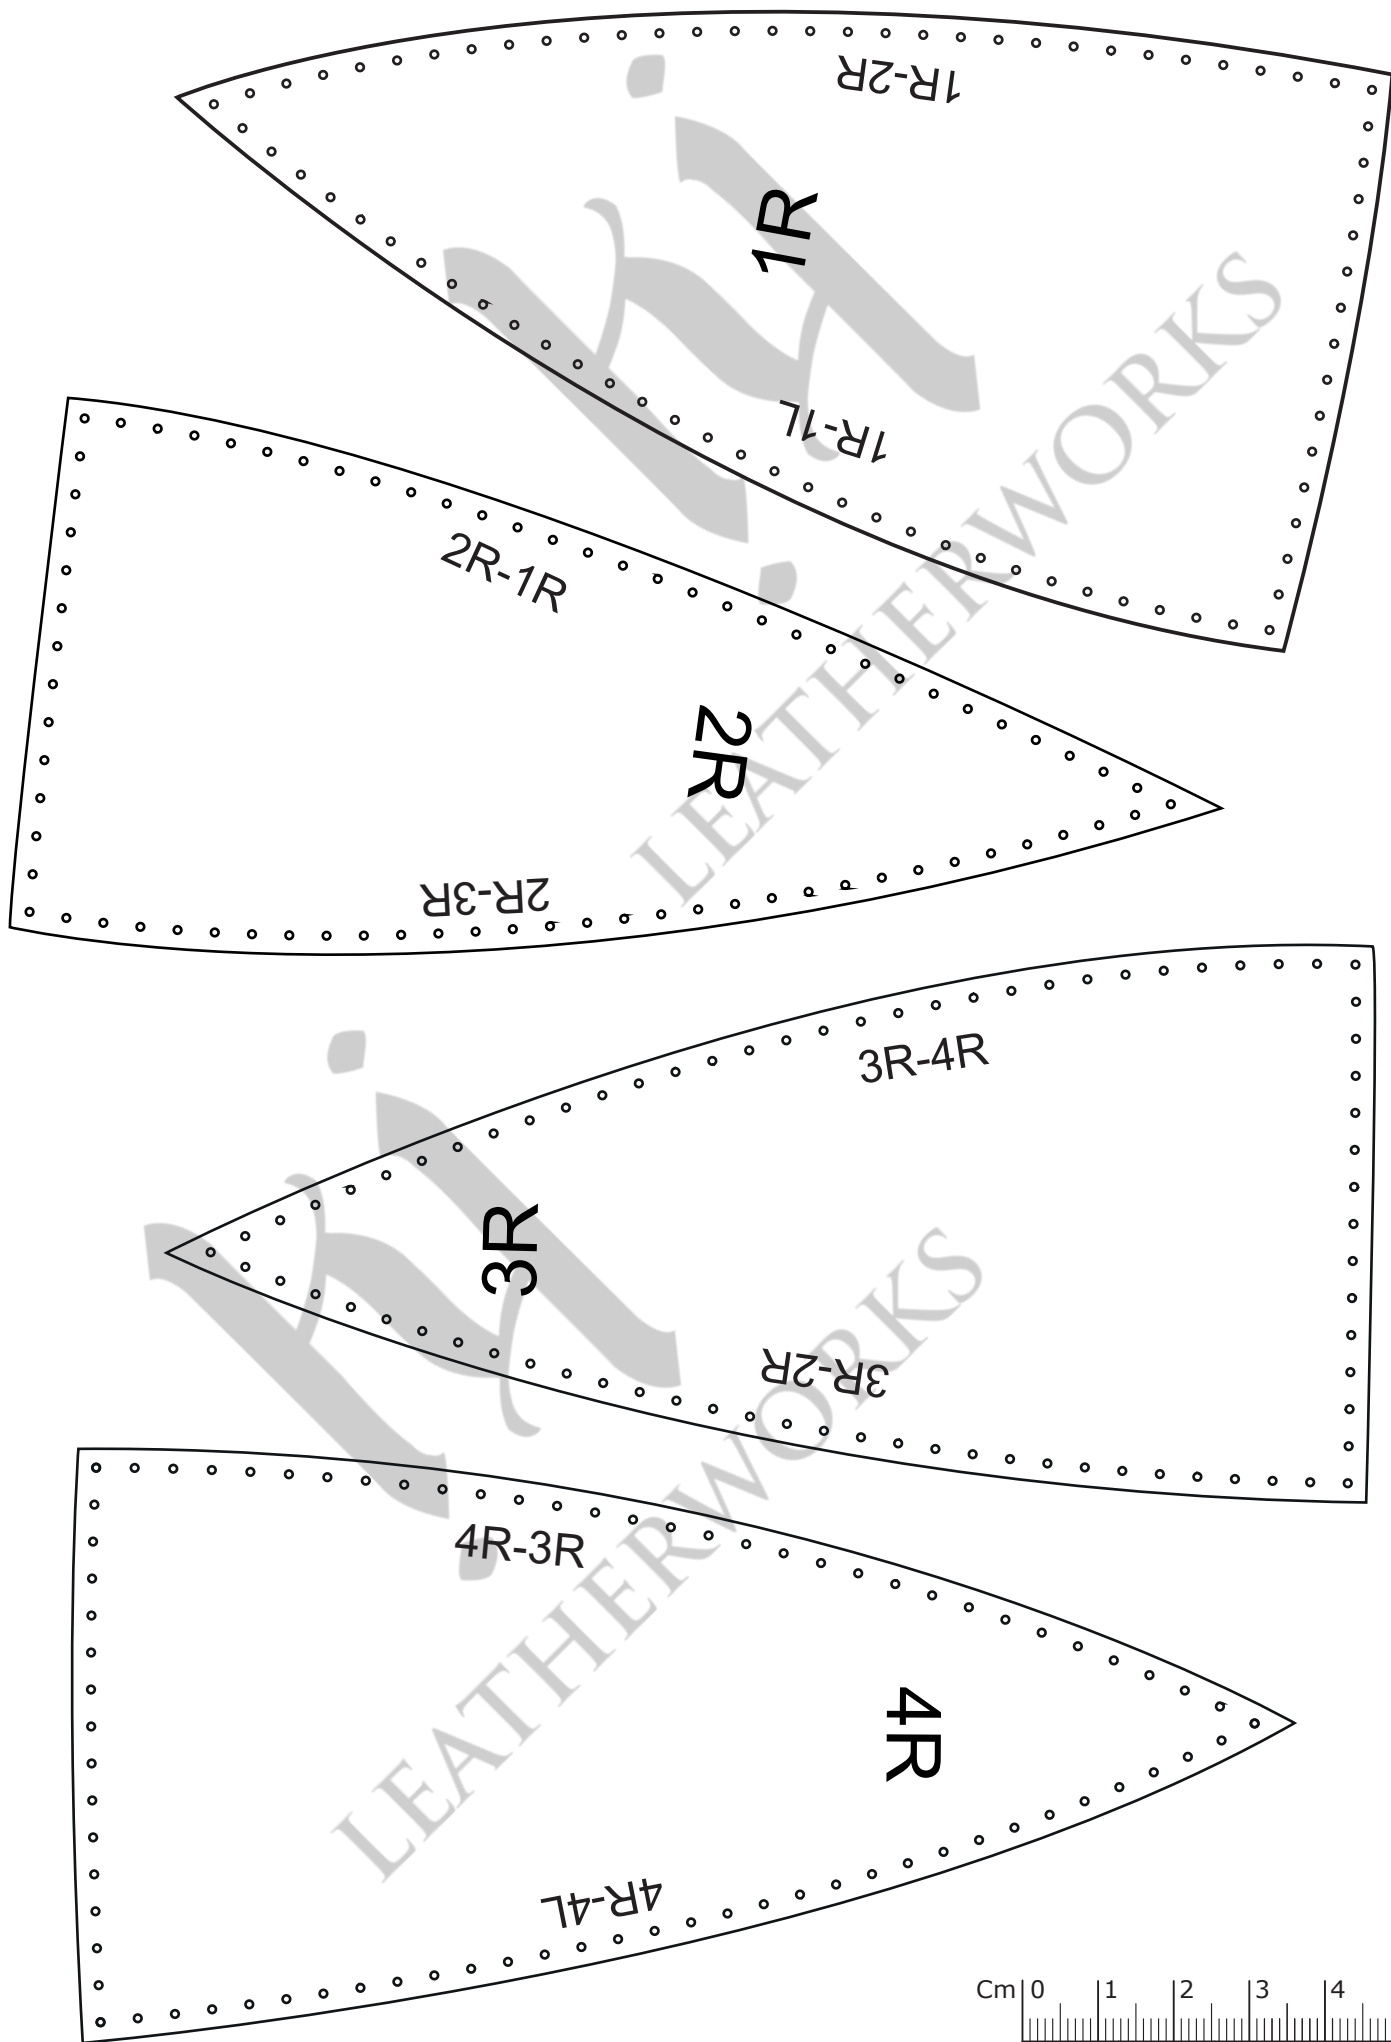
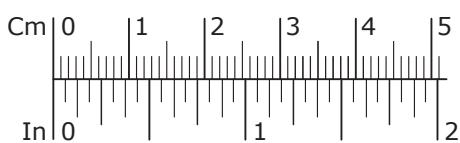
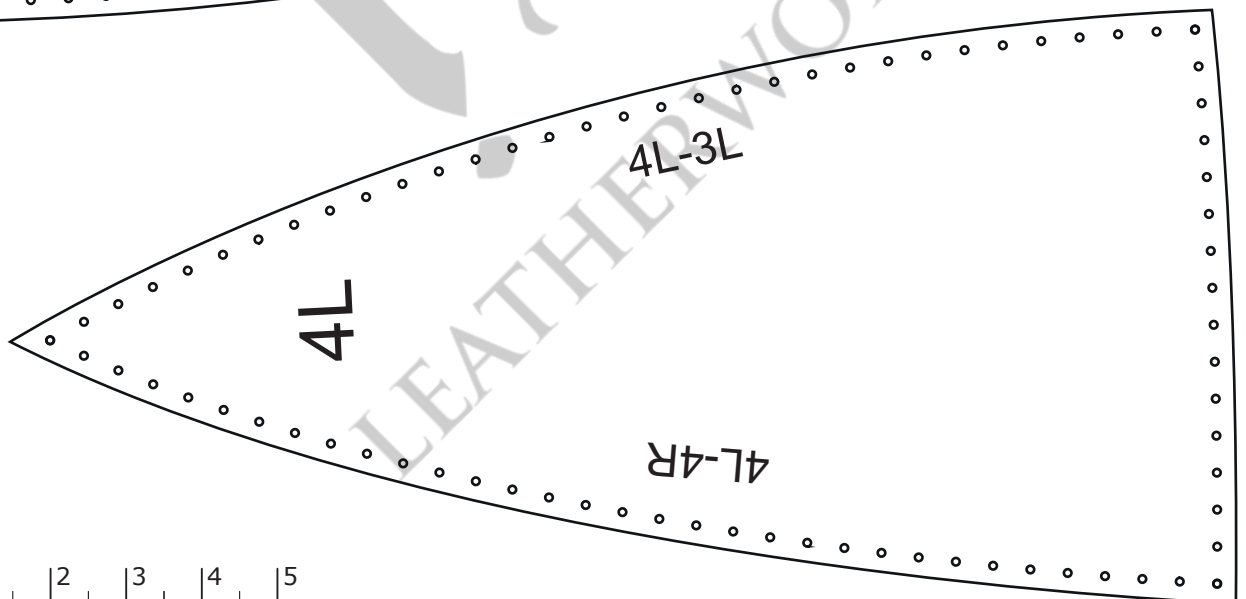
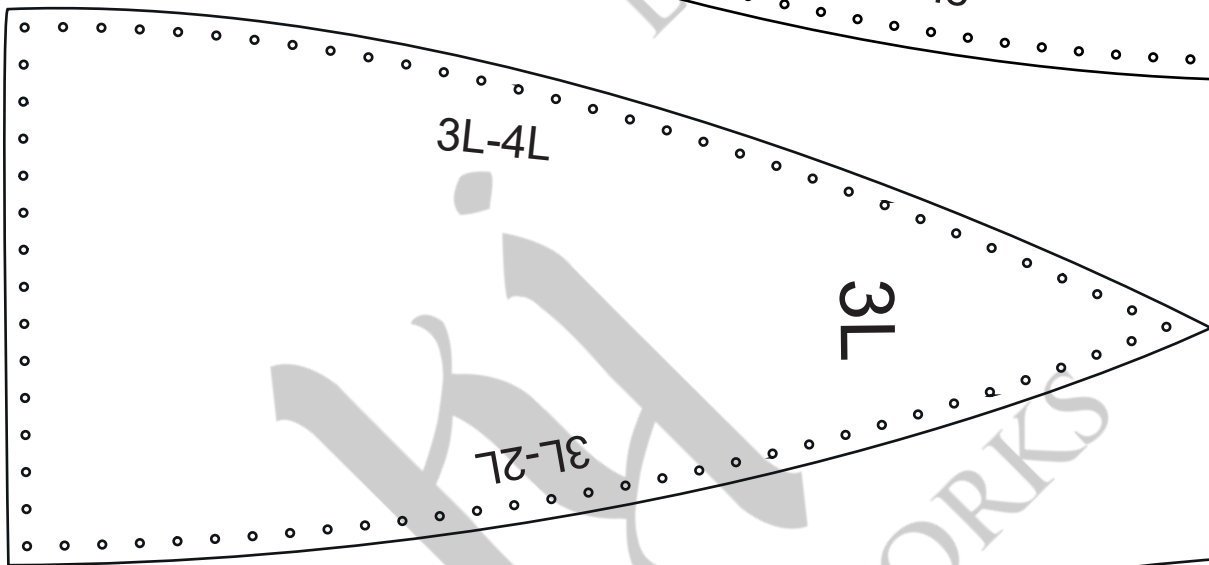
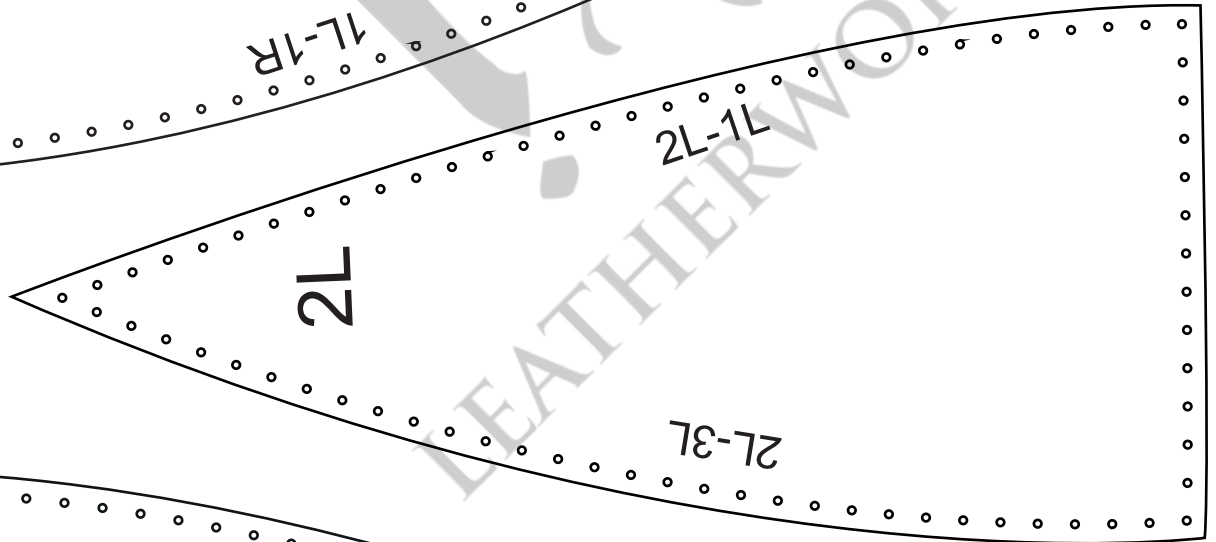
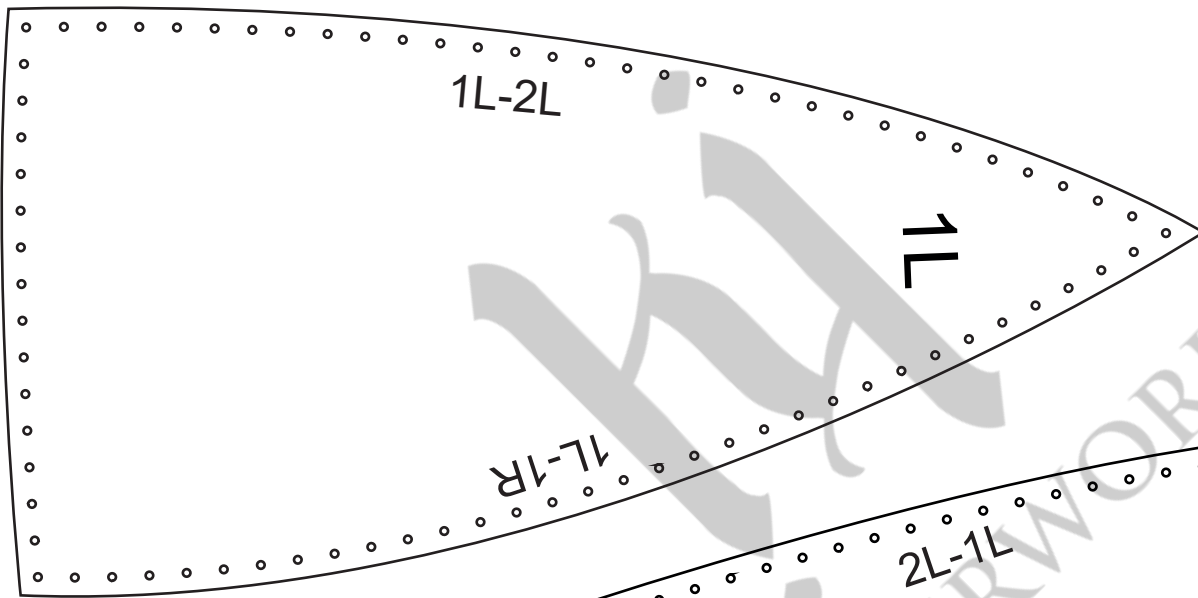
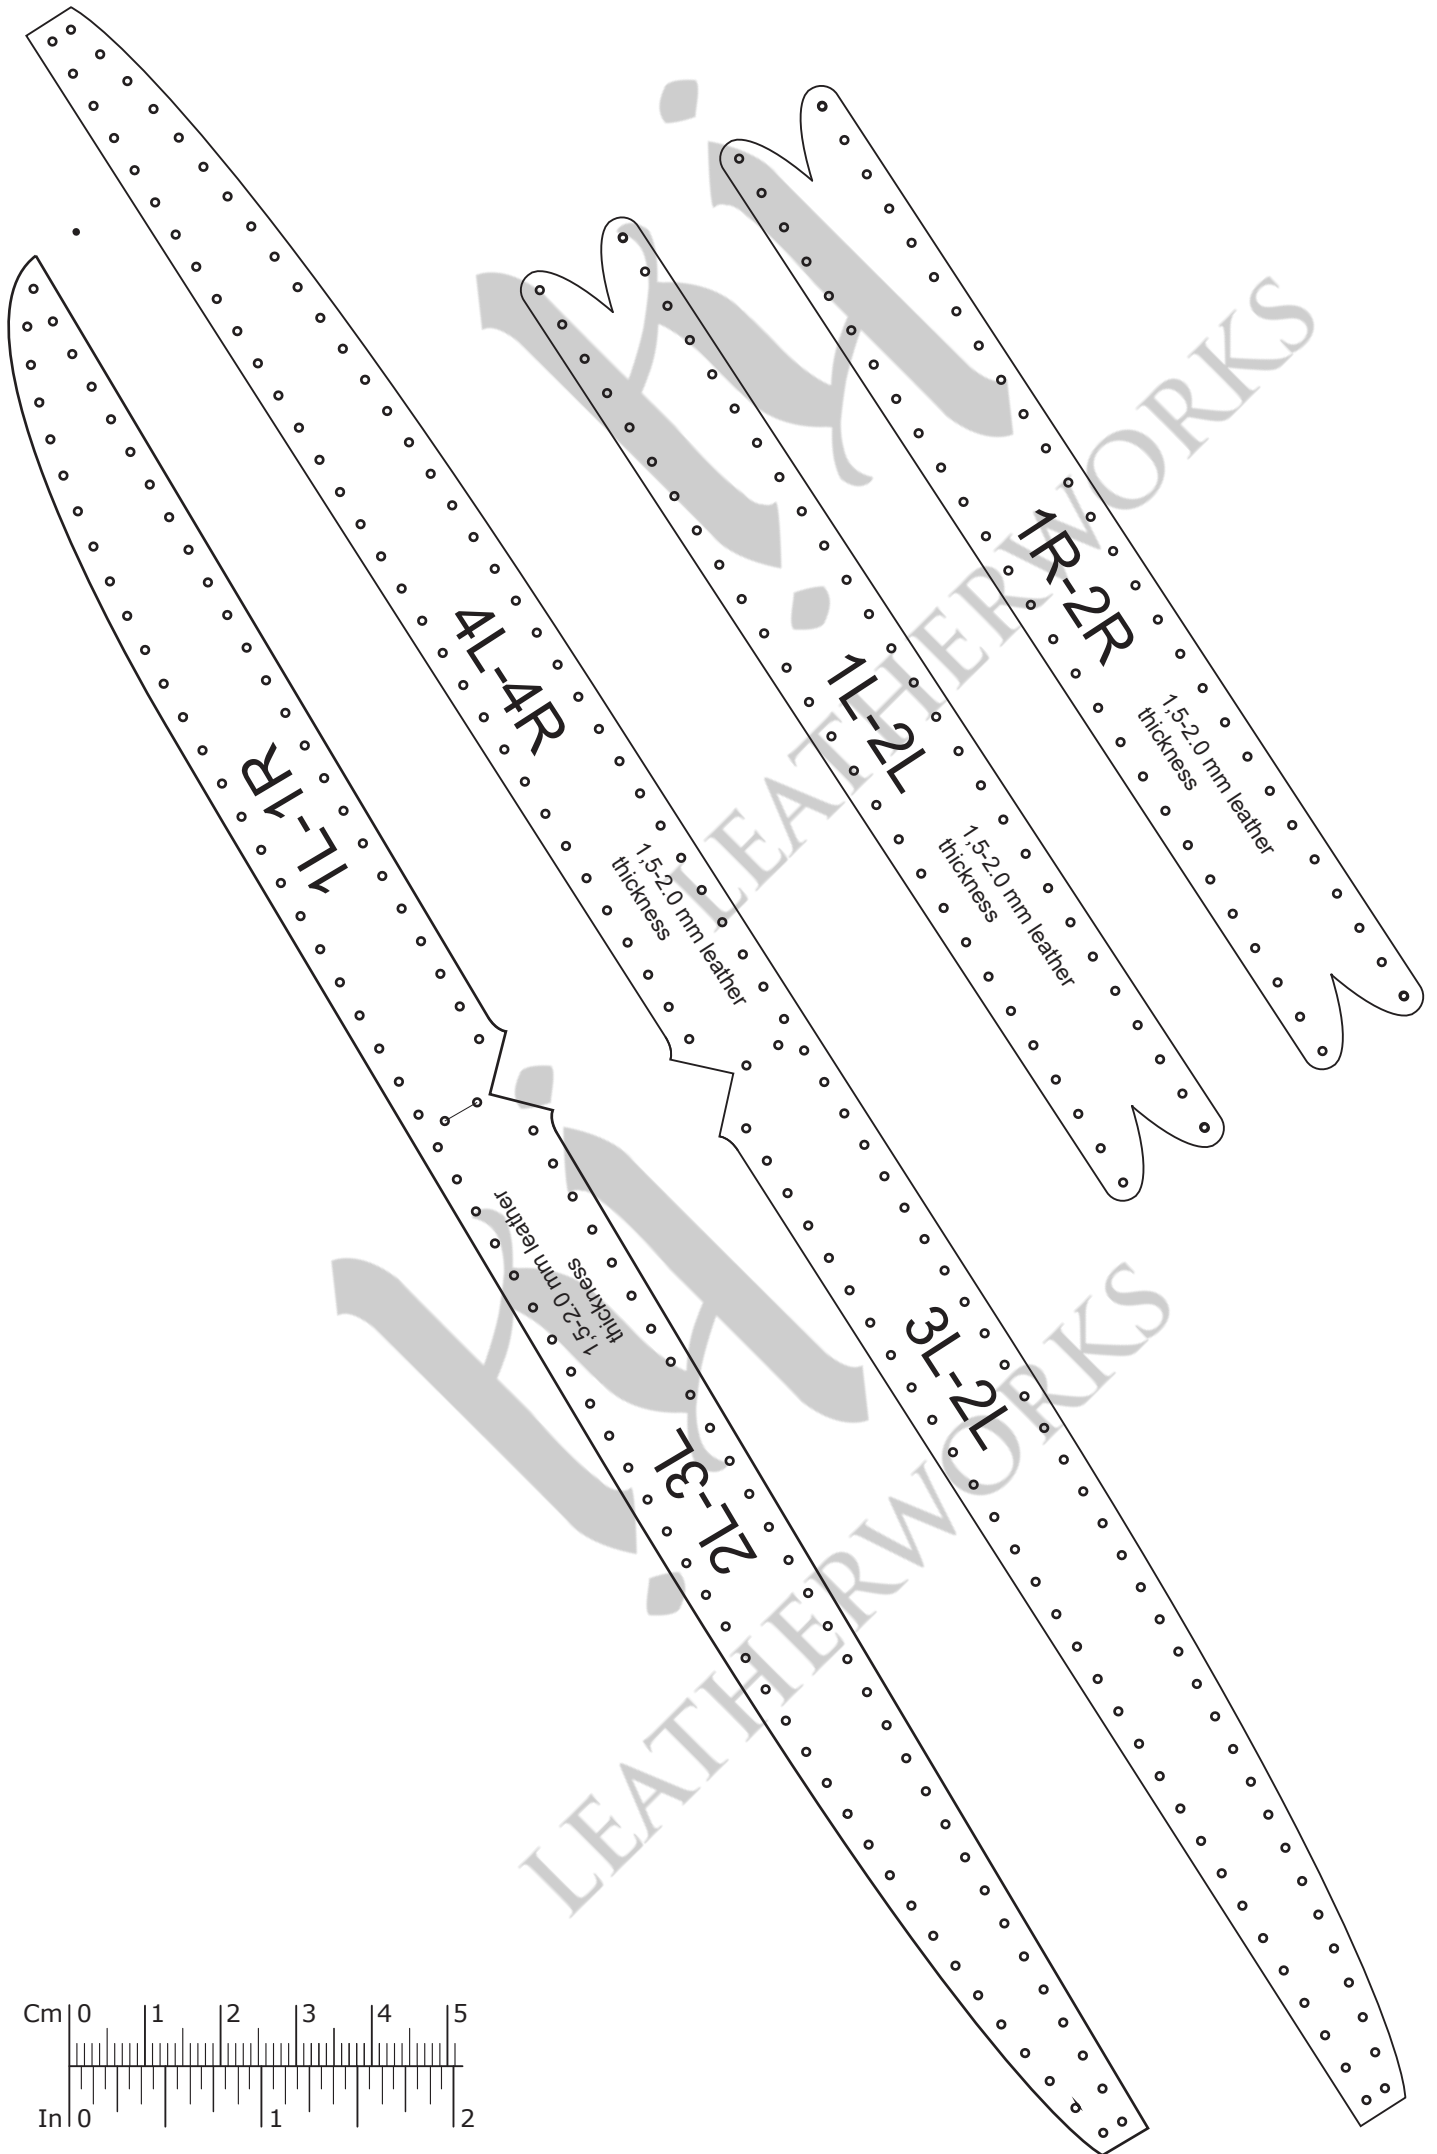


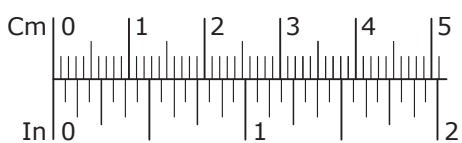

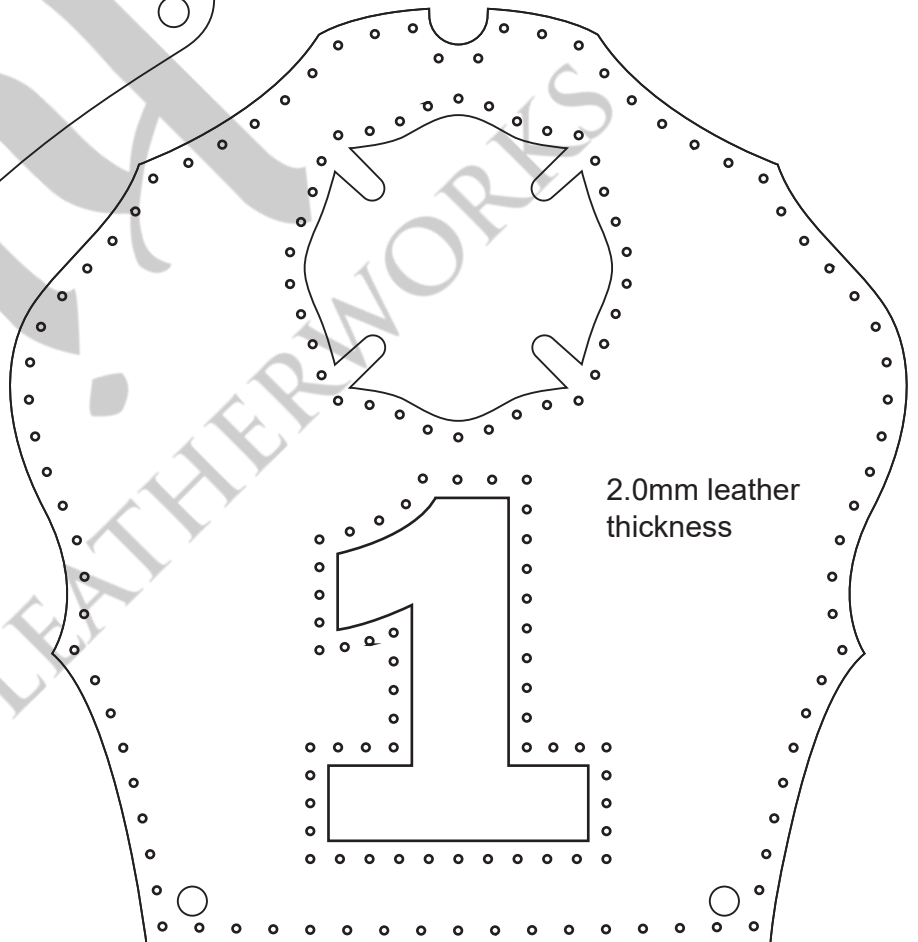

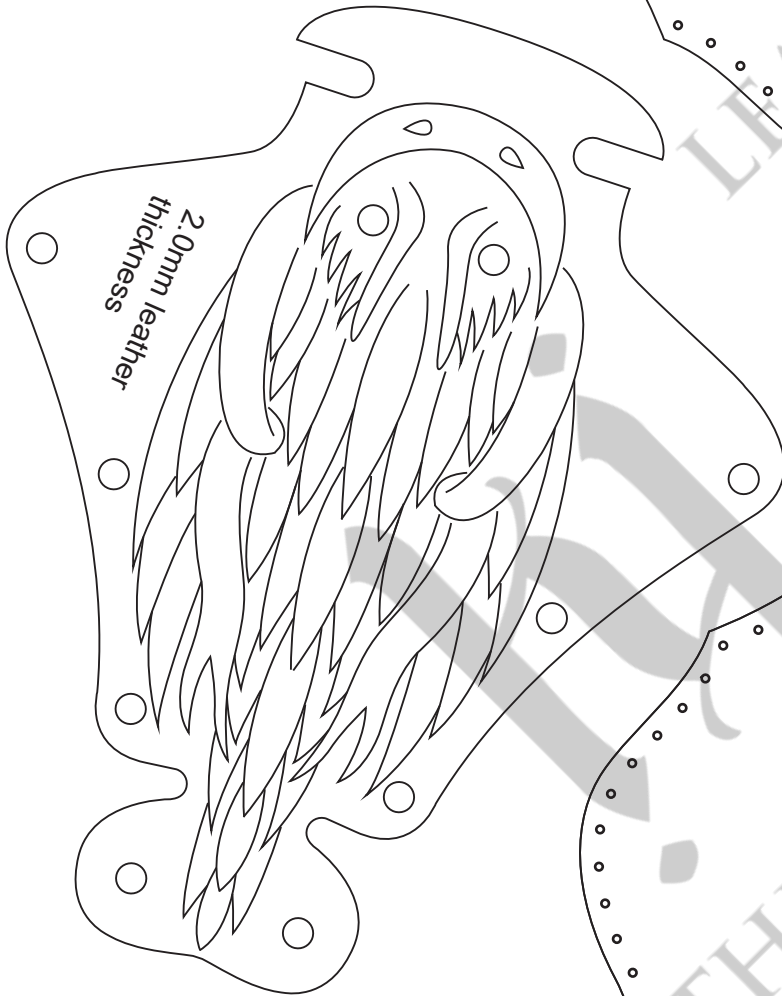

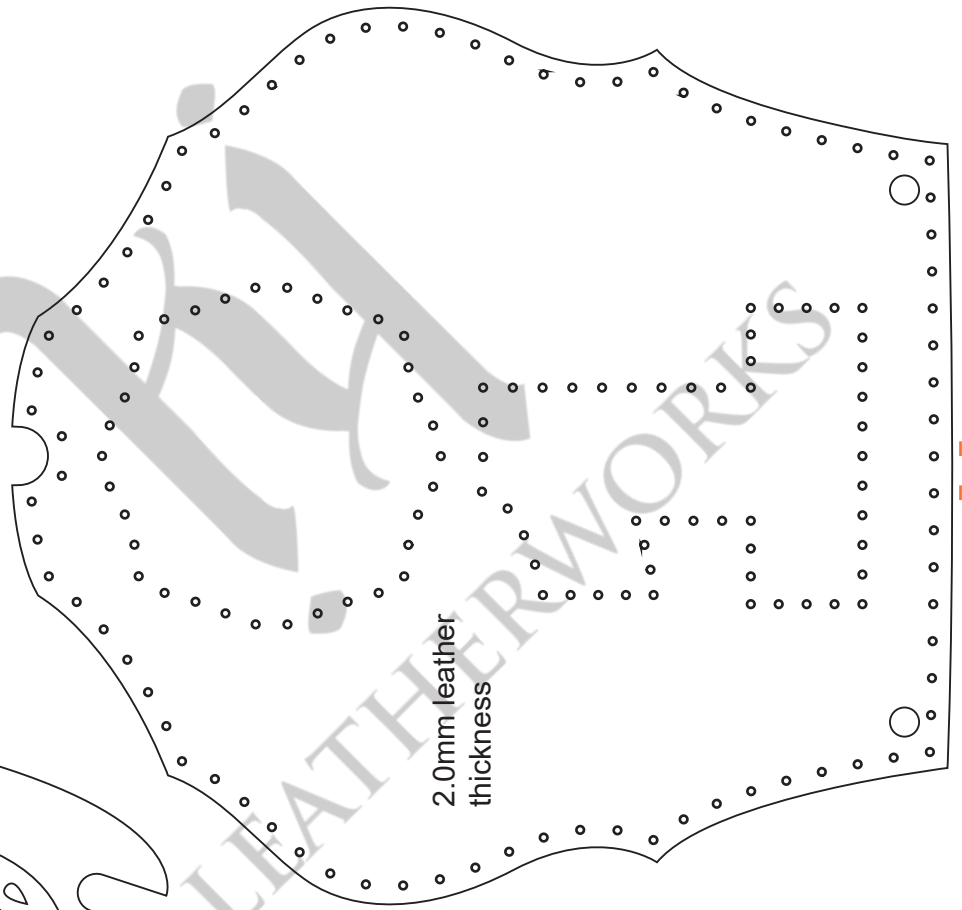

1.0-1.5 mm Leather Thickness	WELT 1A																				Tape with part 2A

1.0-1.5 mm Leather Thickness	WELT 2A																				Tape with part 1A

1.0-1.5 mm Leather Thickness	WELT 1A																				Tape with part 2A

1.0-1.5 mm Leather Thickness	WELT 2A																				Tape with part 1A




Connect with the
second part of the brim.

Connect with the
second part of the brim.

BRIM

2.0-2.5 mm
leather thickness

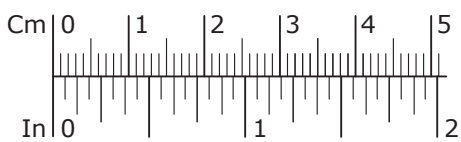

Connect with the
second part of the brim.

Connect with the
second part of the brim.

Landmark point - start
sewing the brim to helmet
from this point

BRIM
2.0-2.5 mm
leather thickness

