






































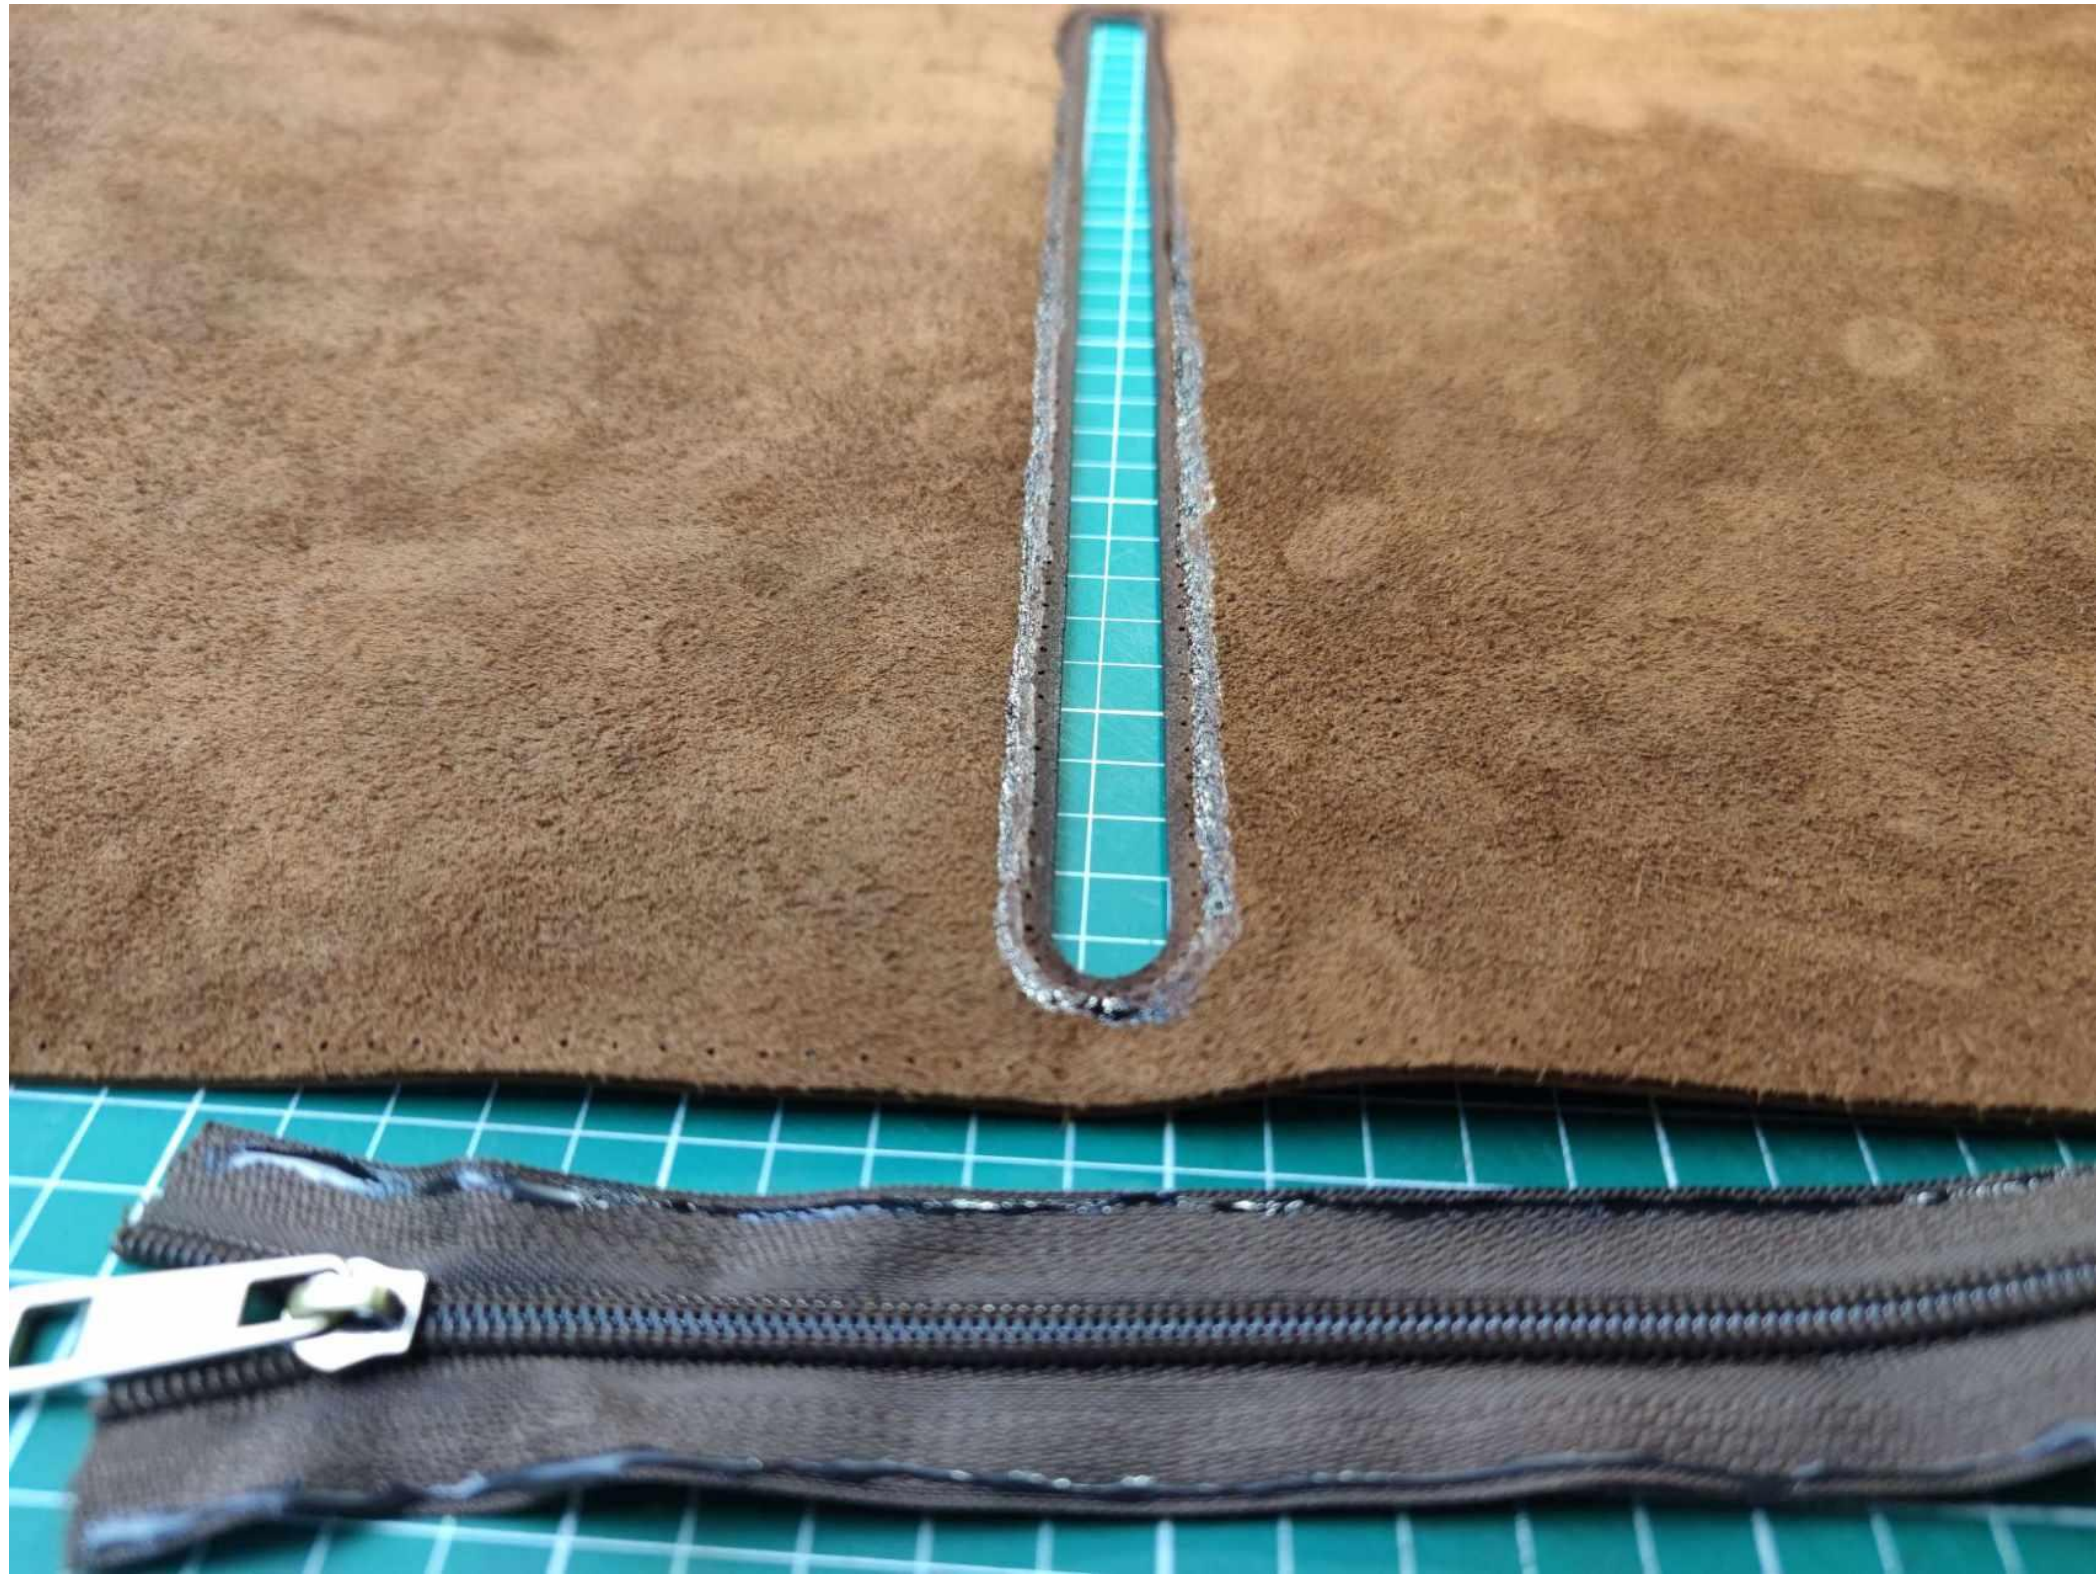



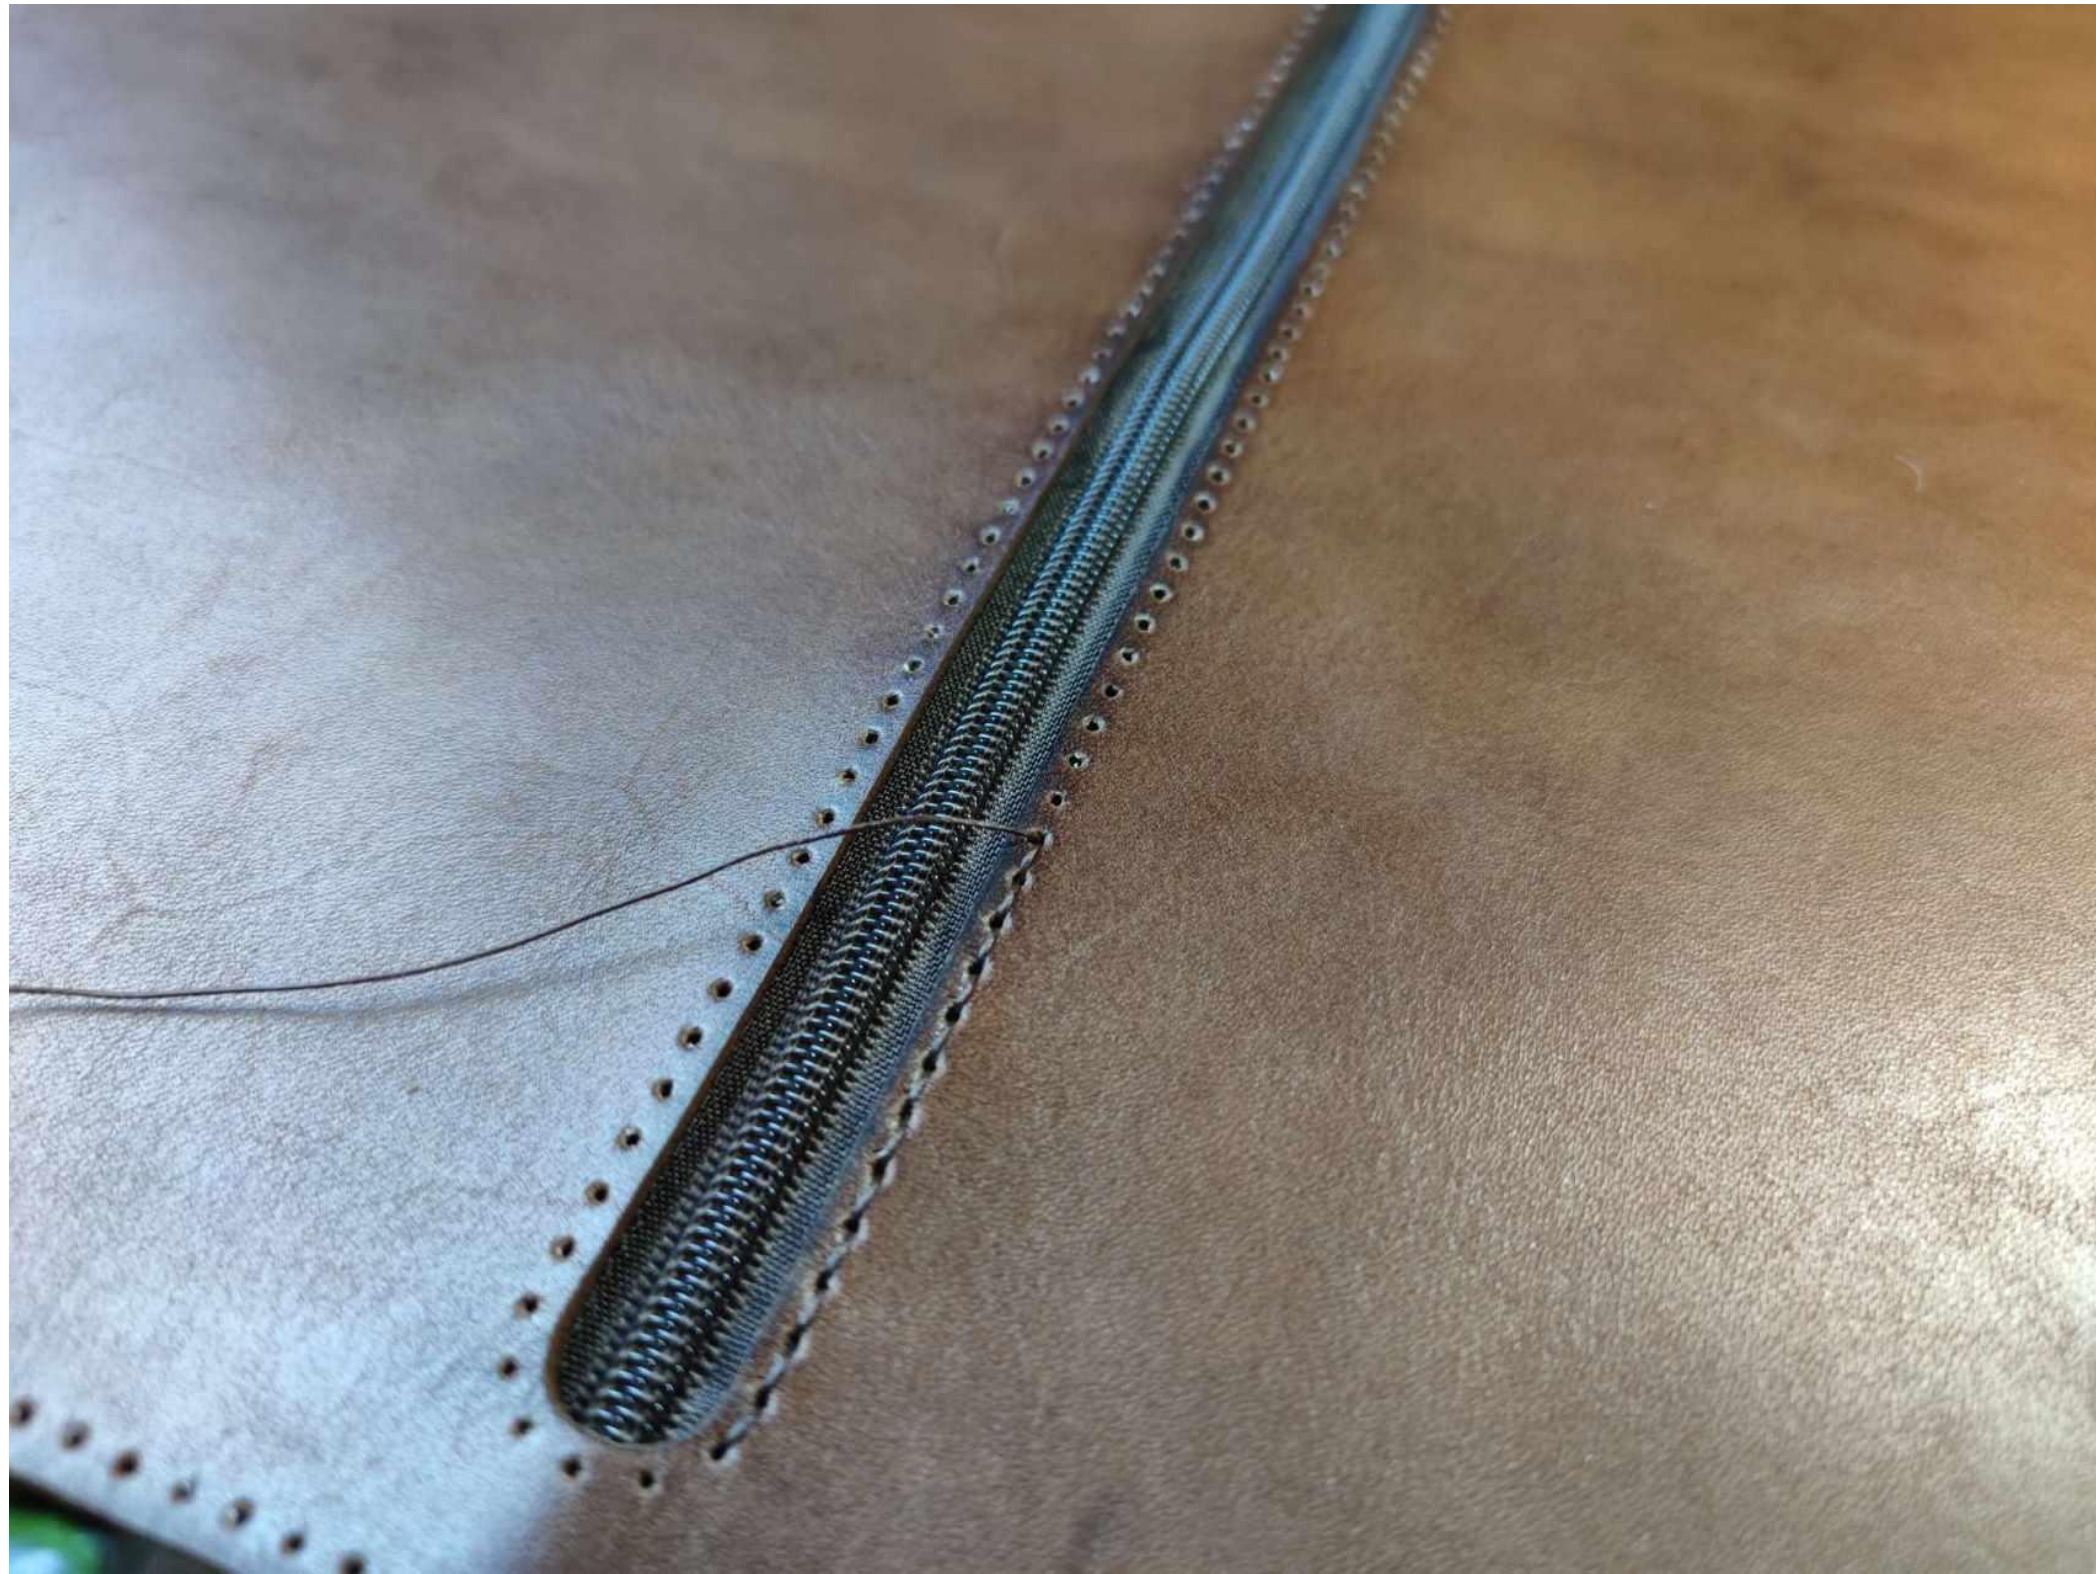

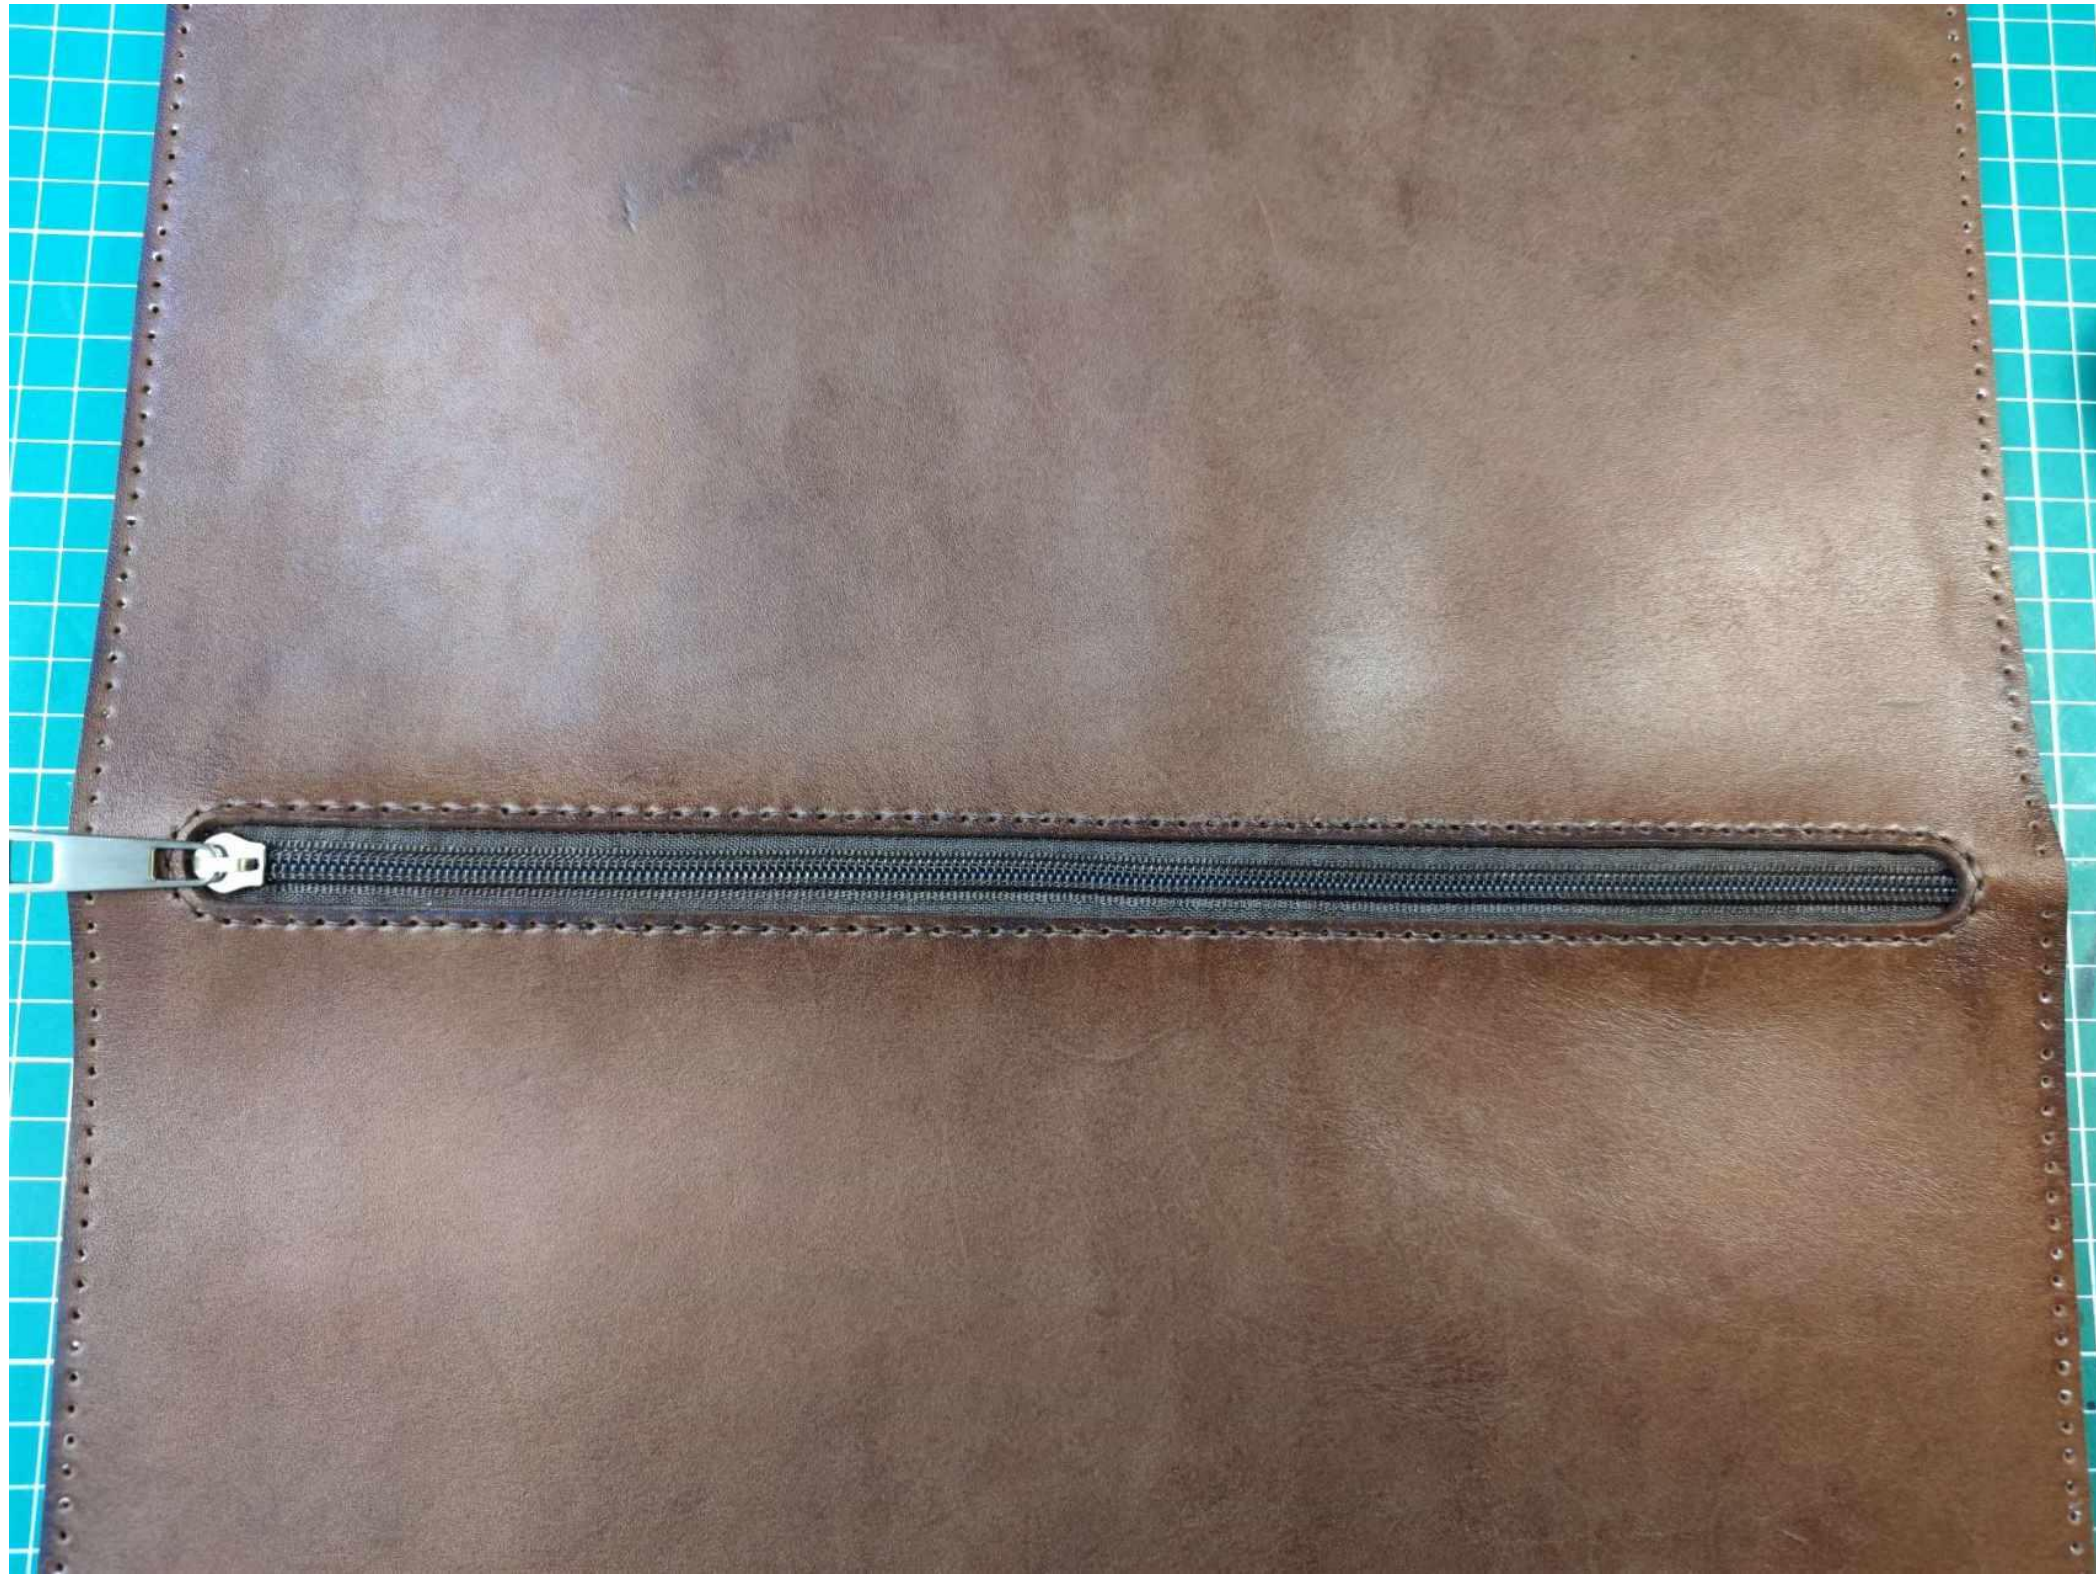


















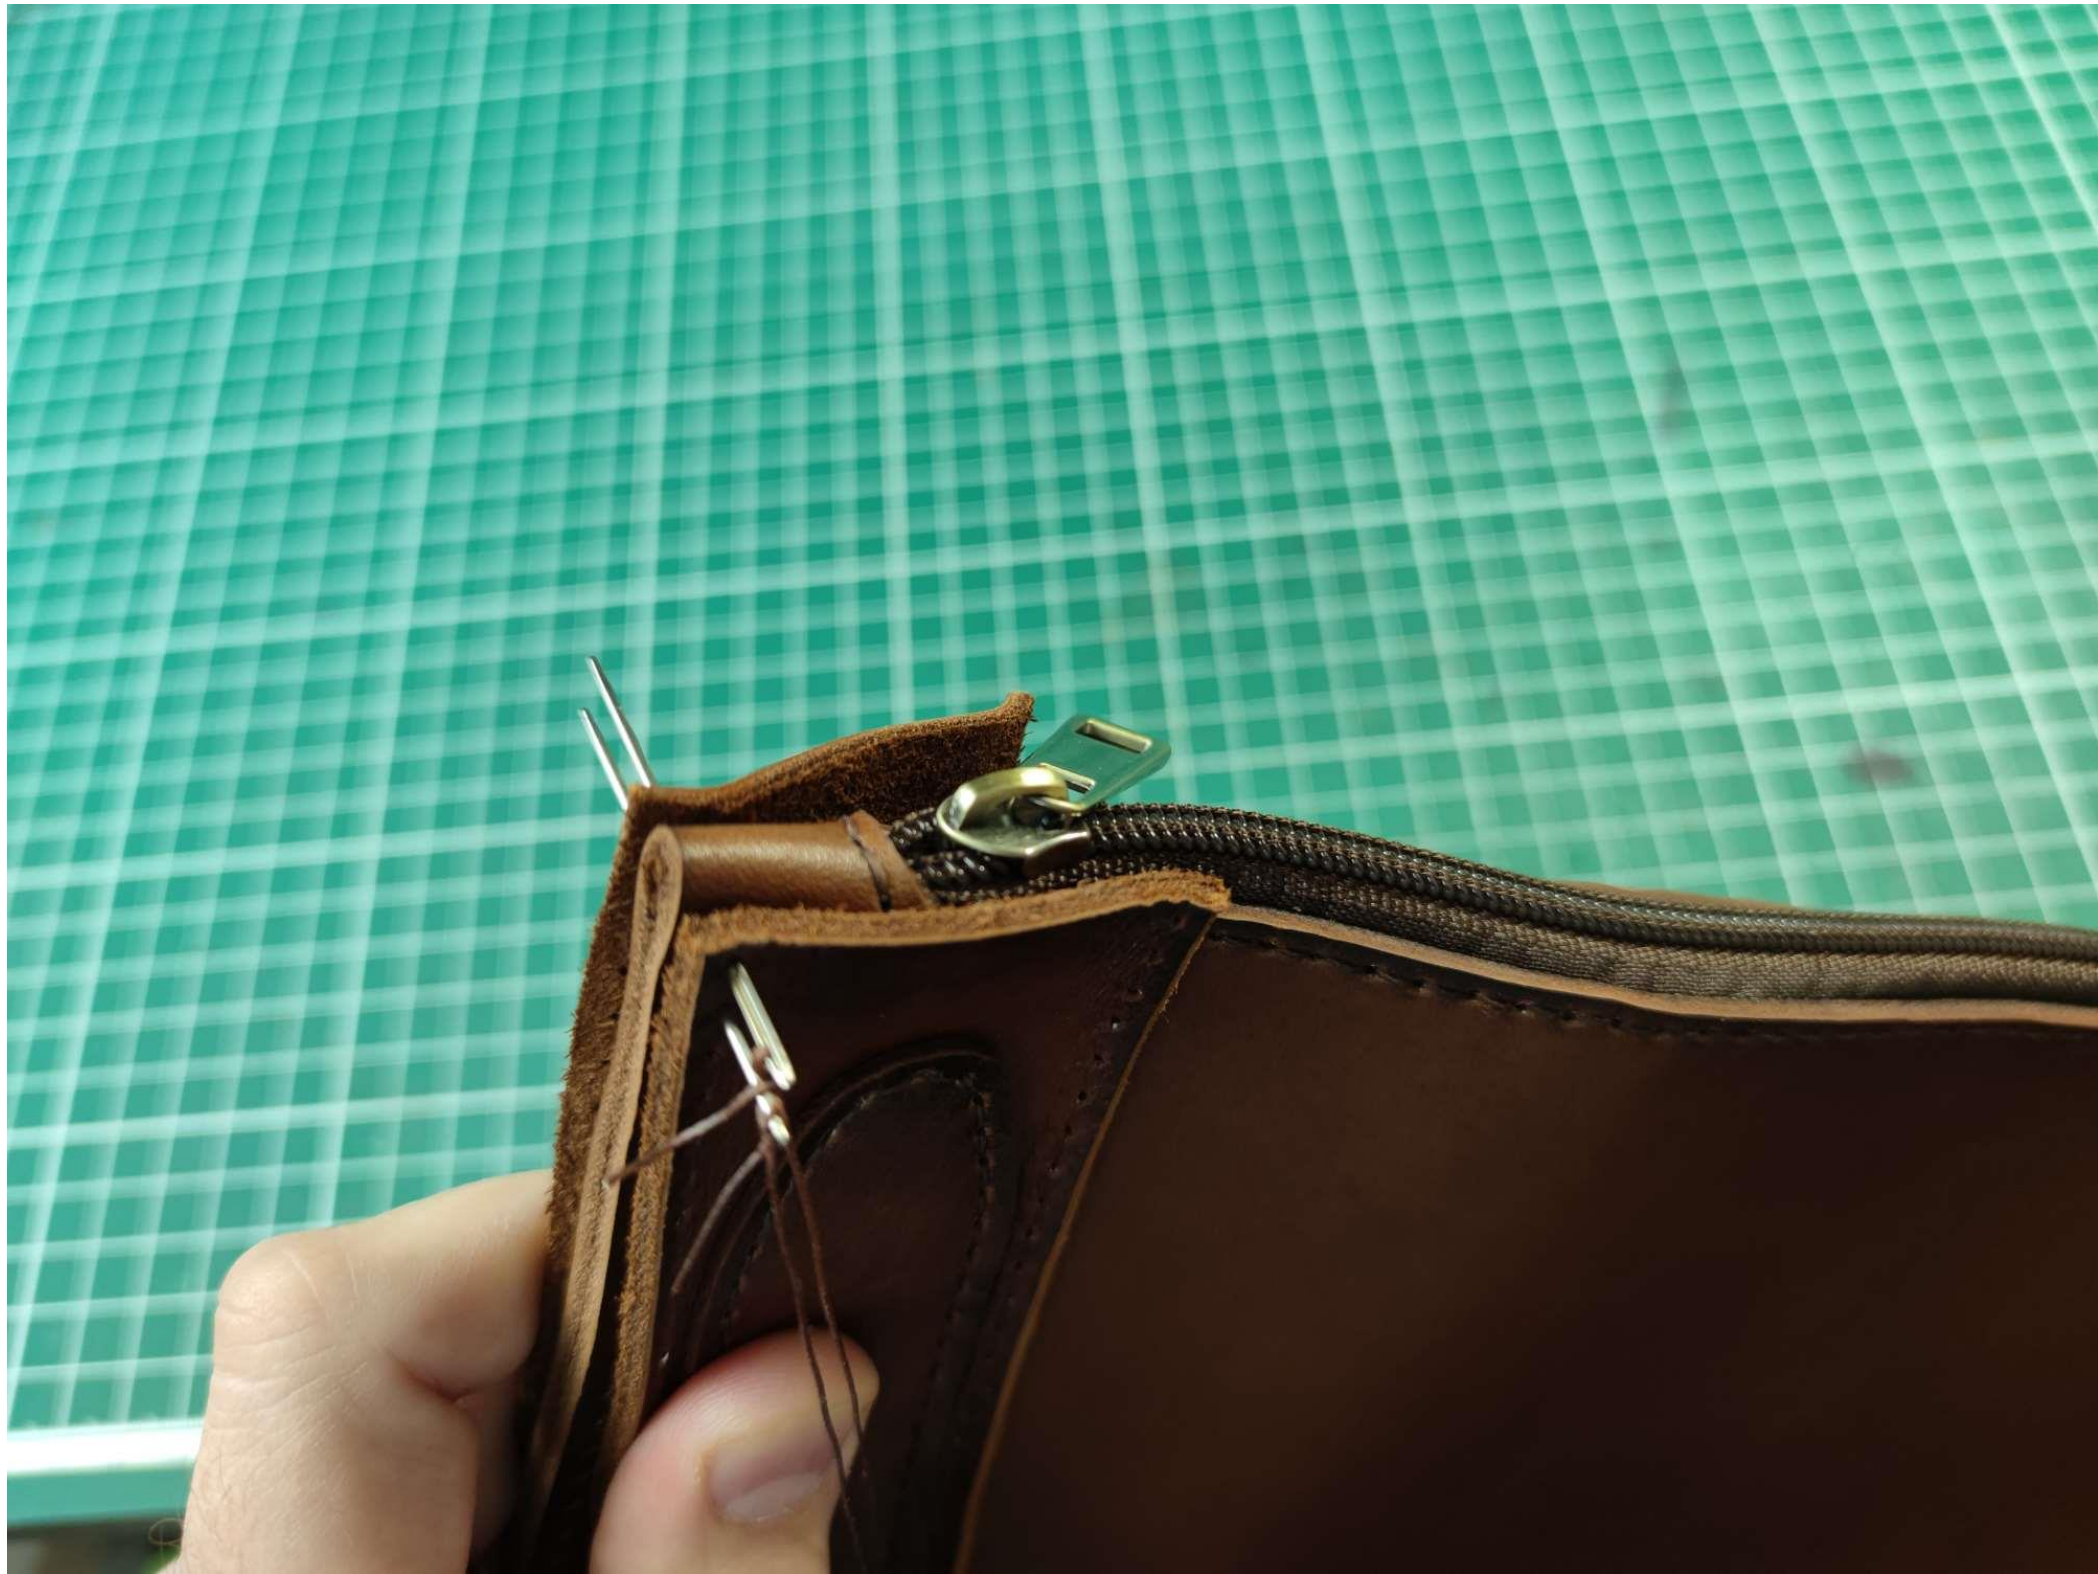






























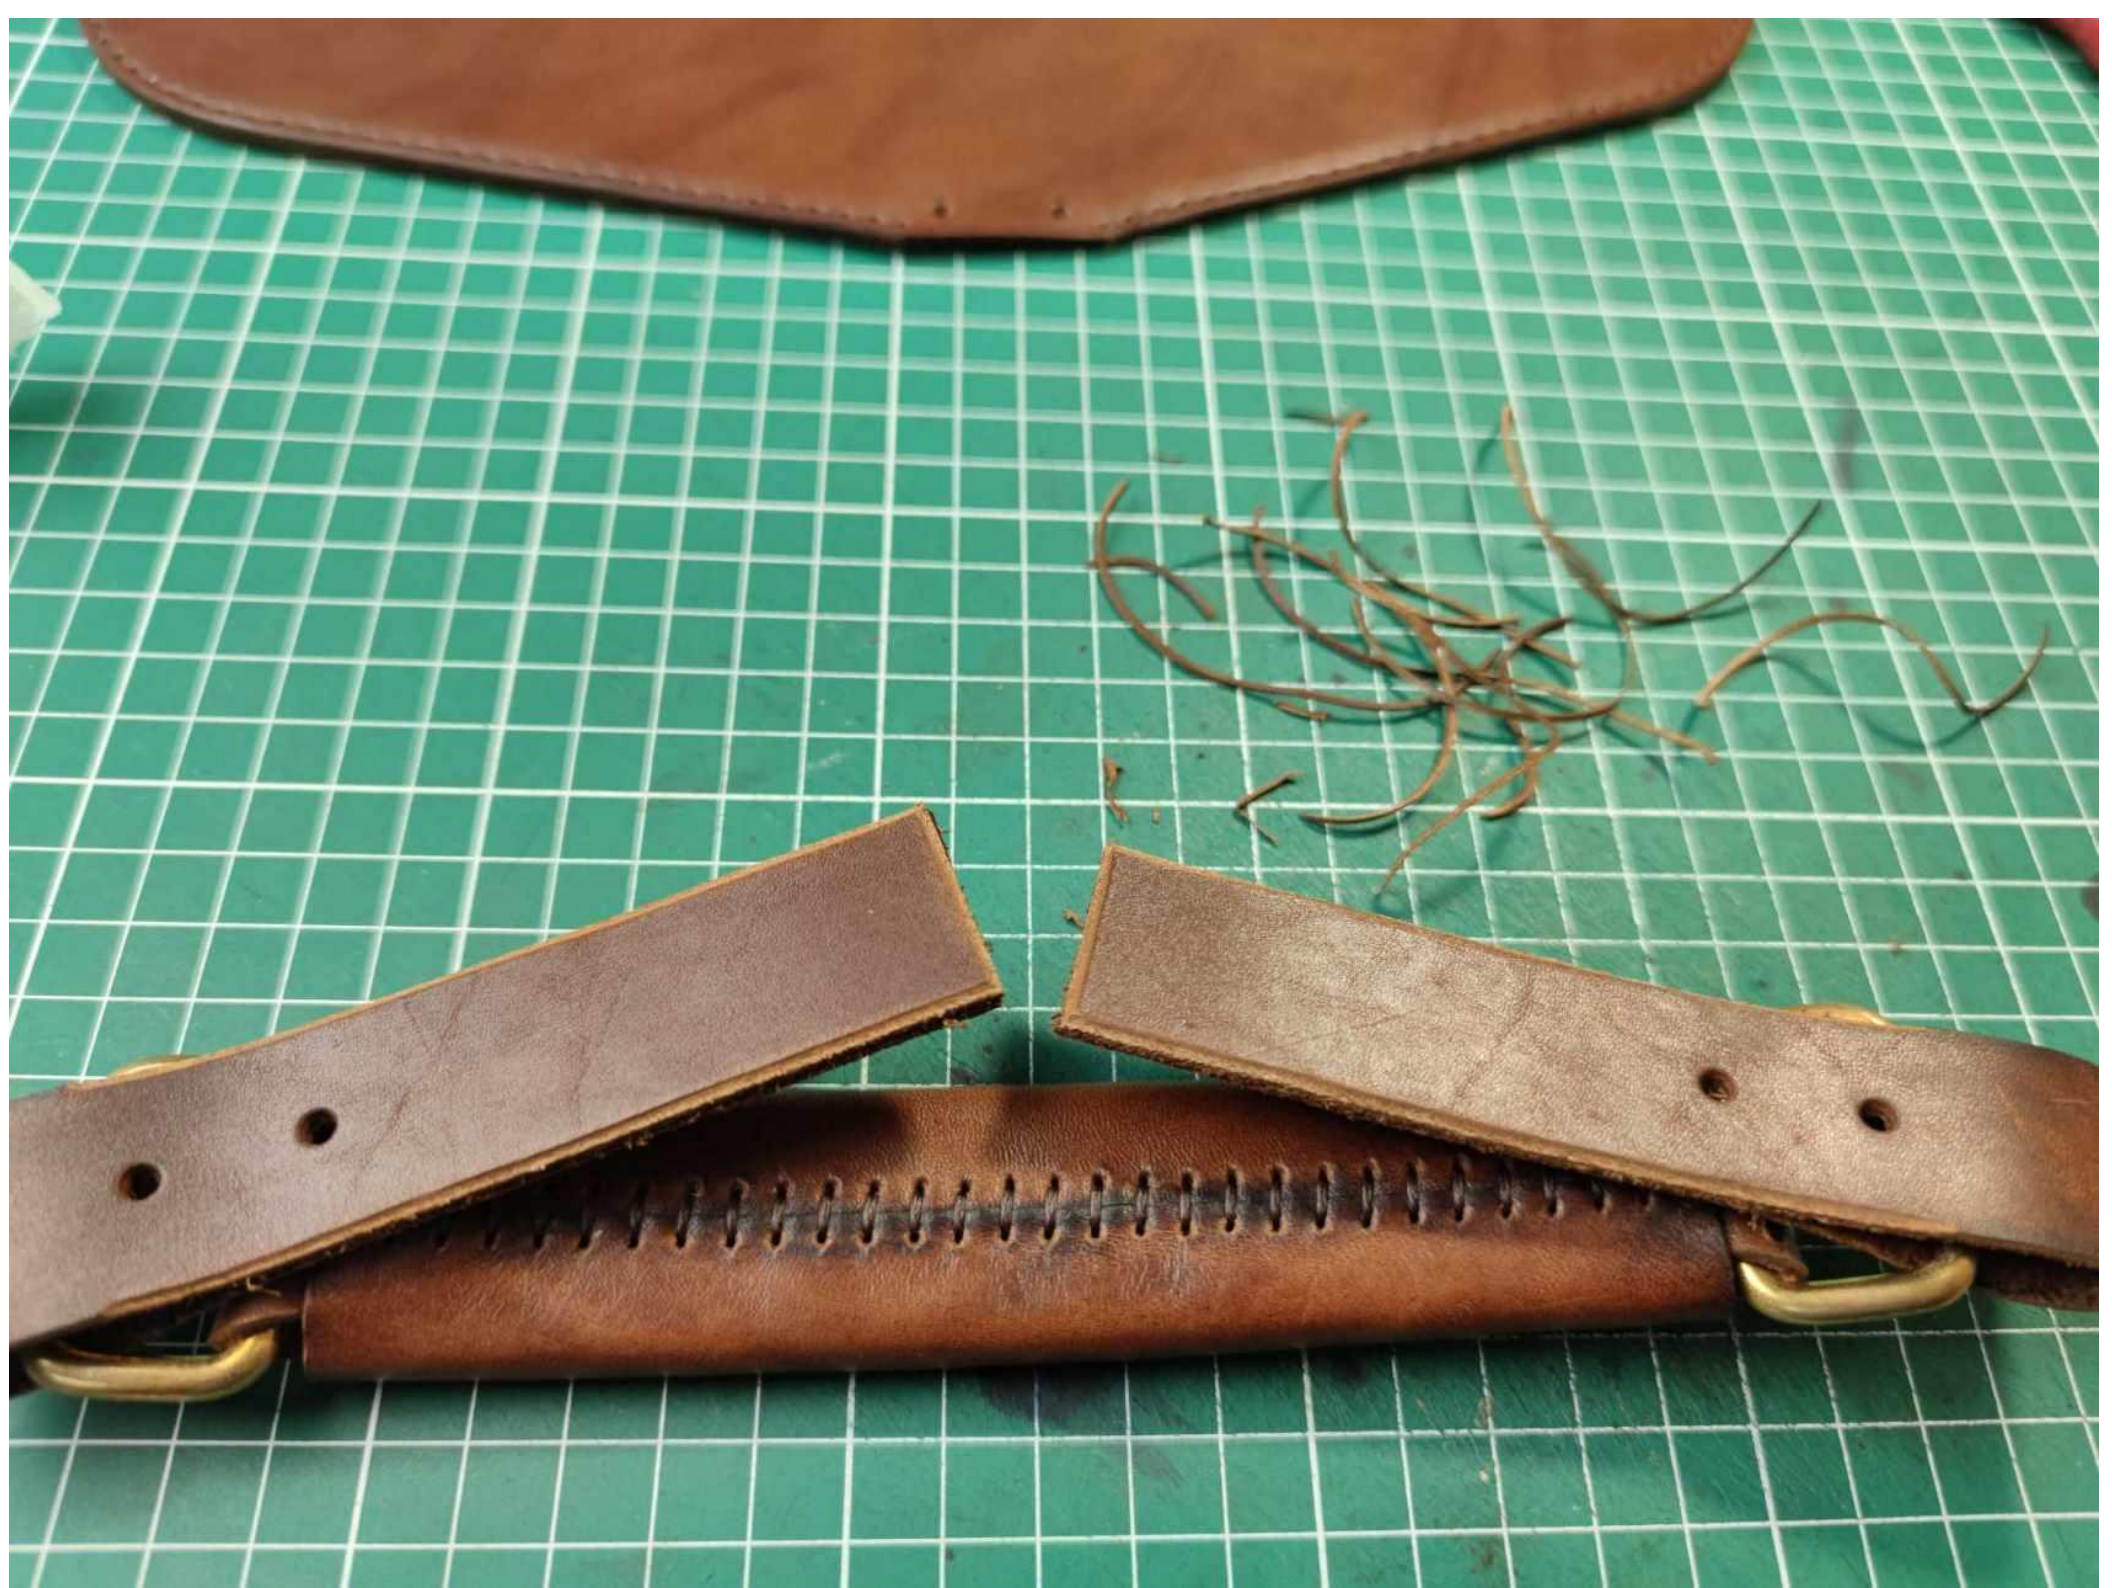


I conducted testing and found out that Ordinary Rivets are unsuitable in this Briefcase, here it is necessary to use only Flat Head Screw Rivets!









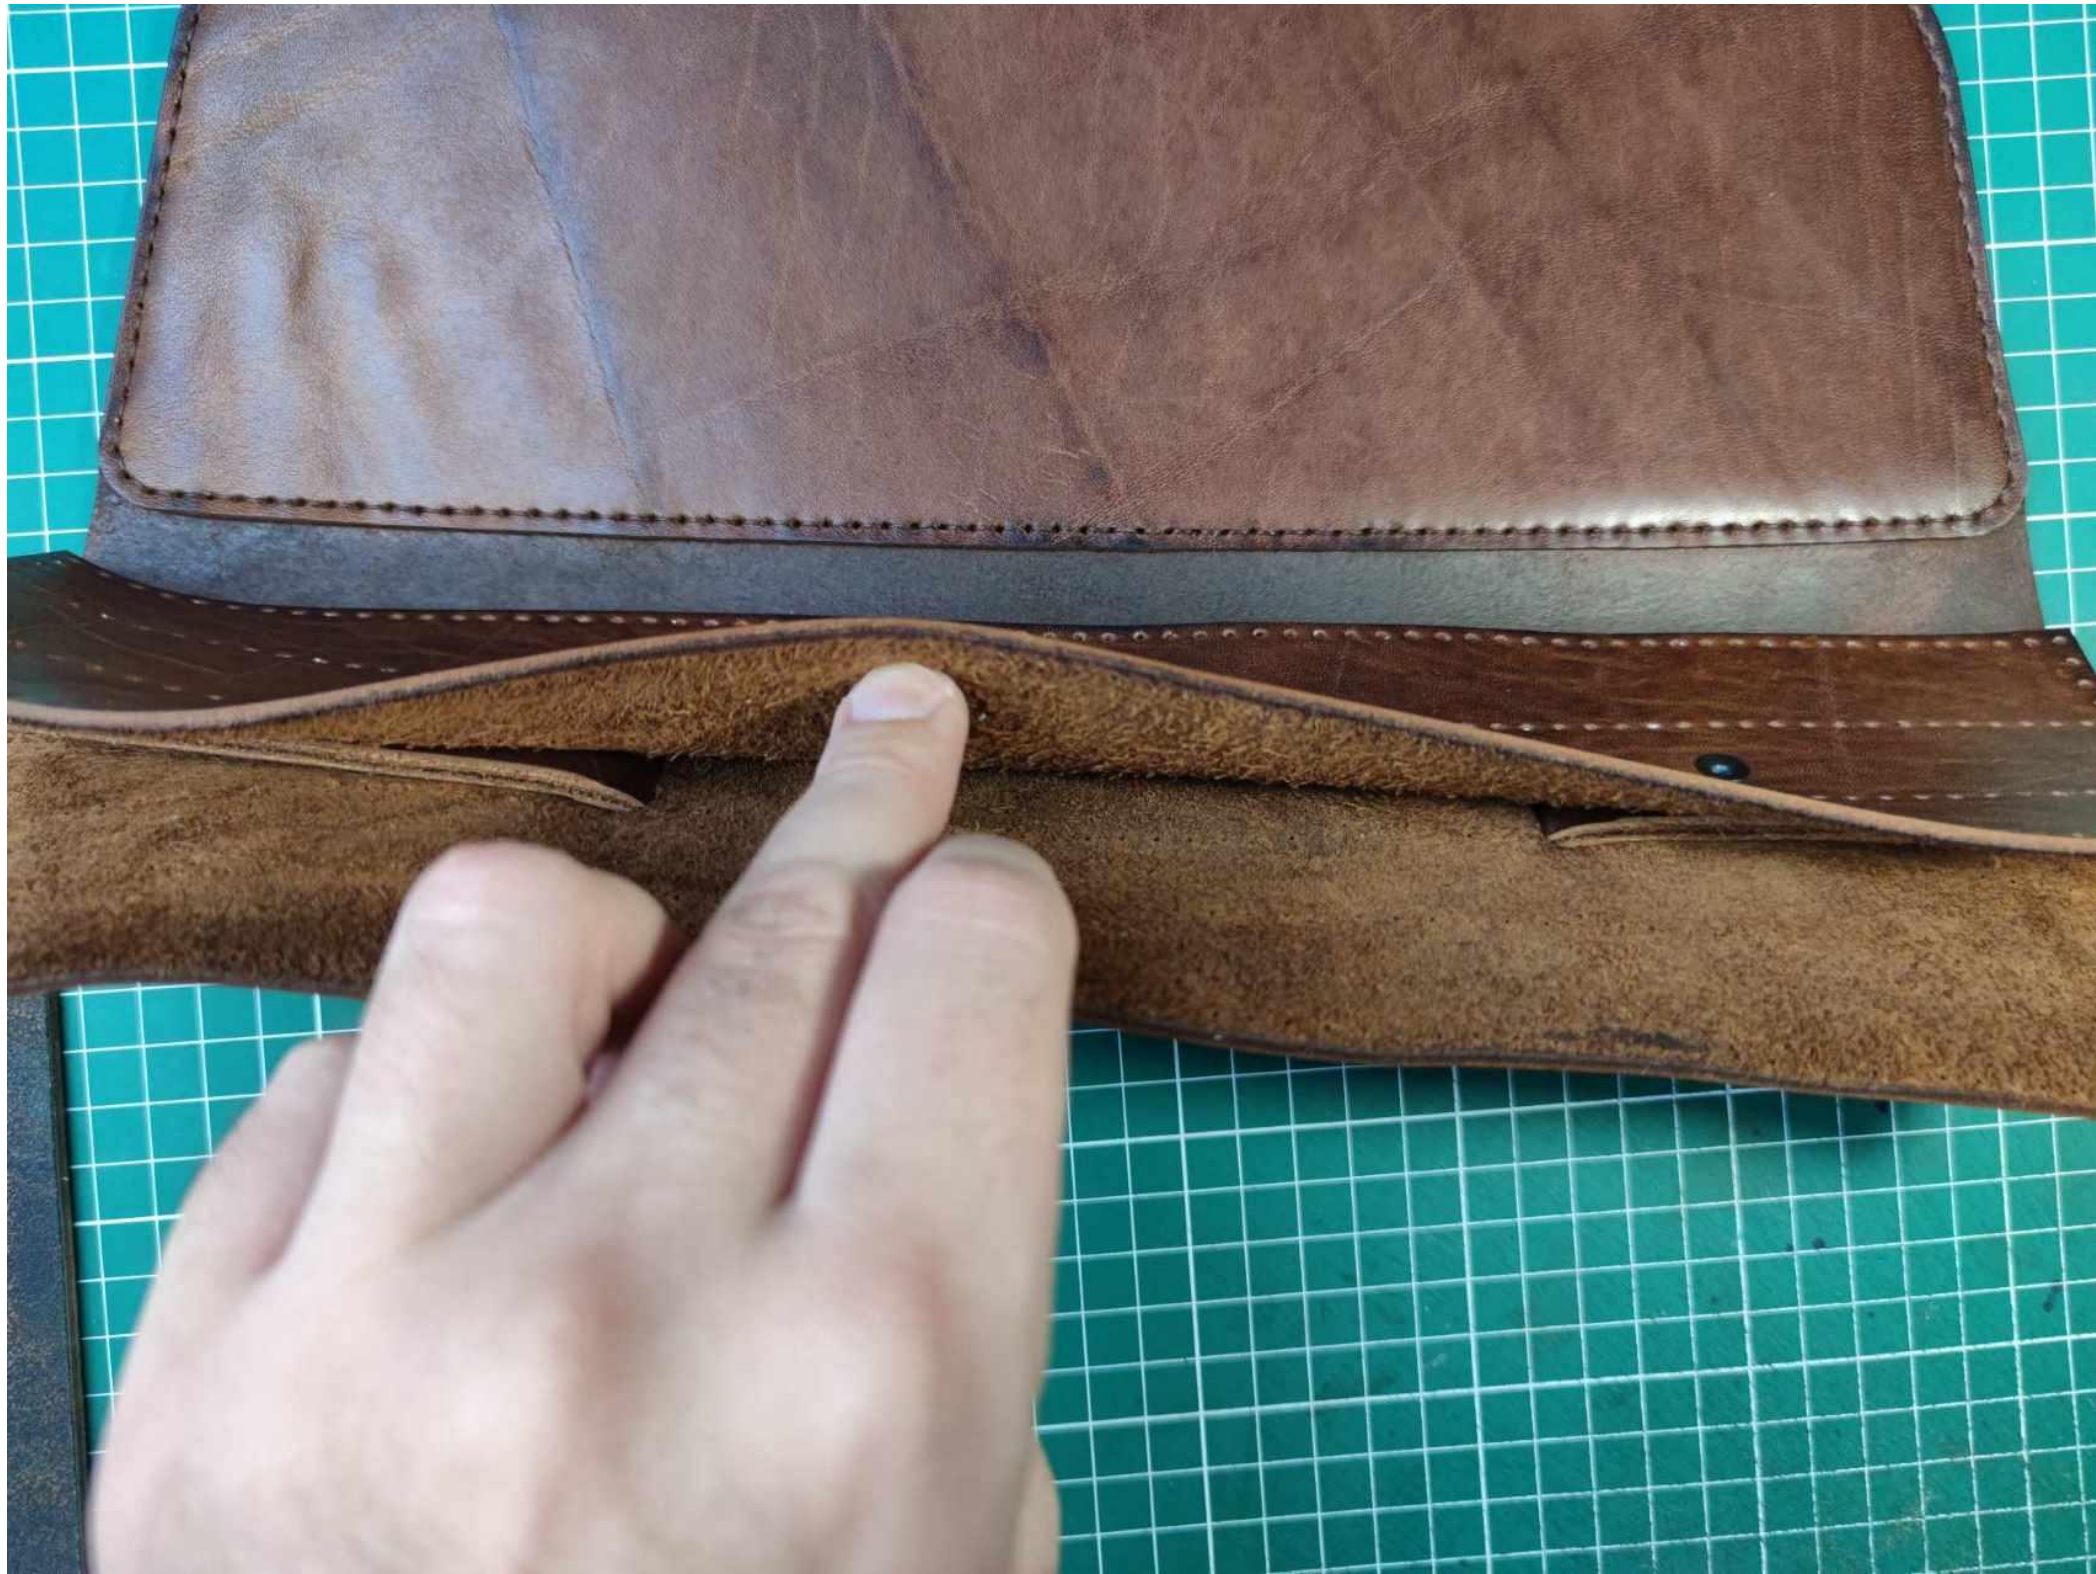













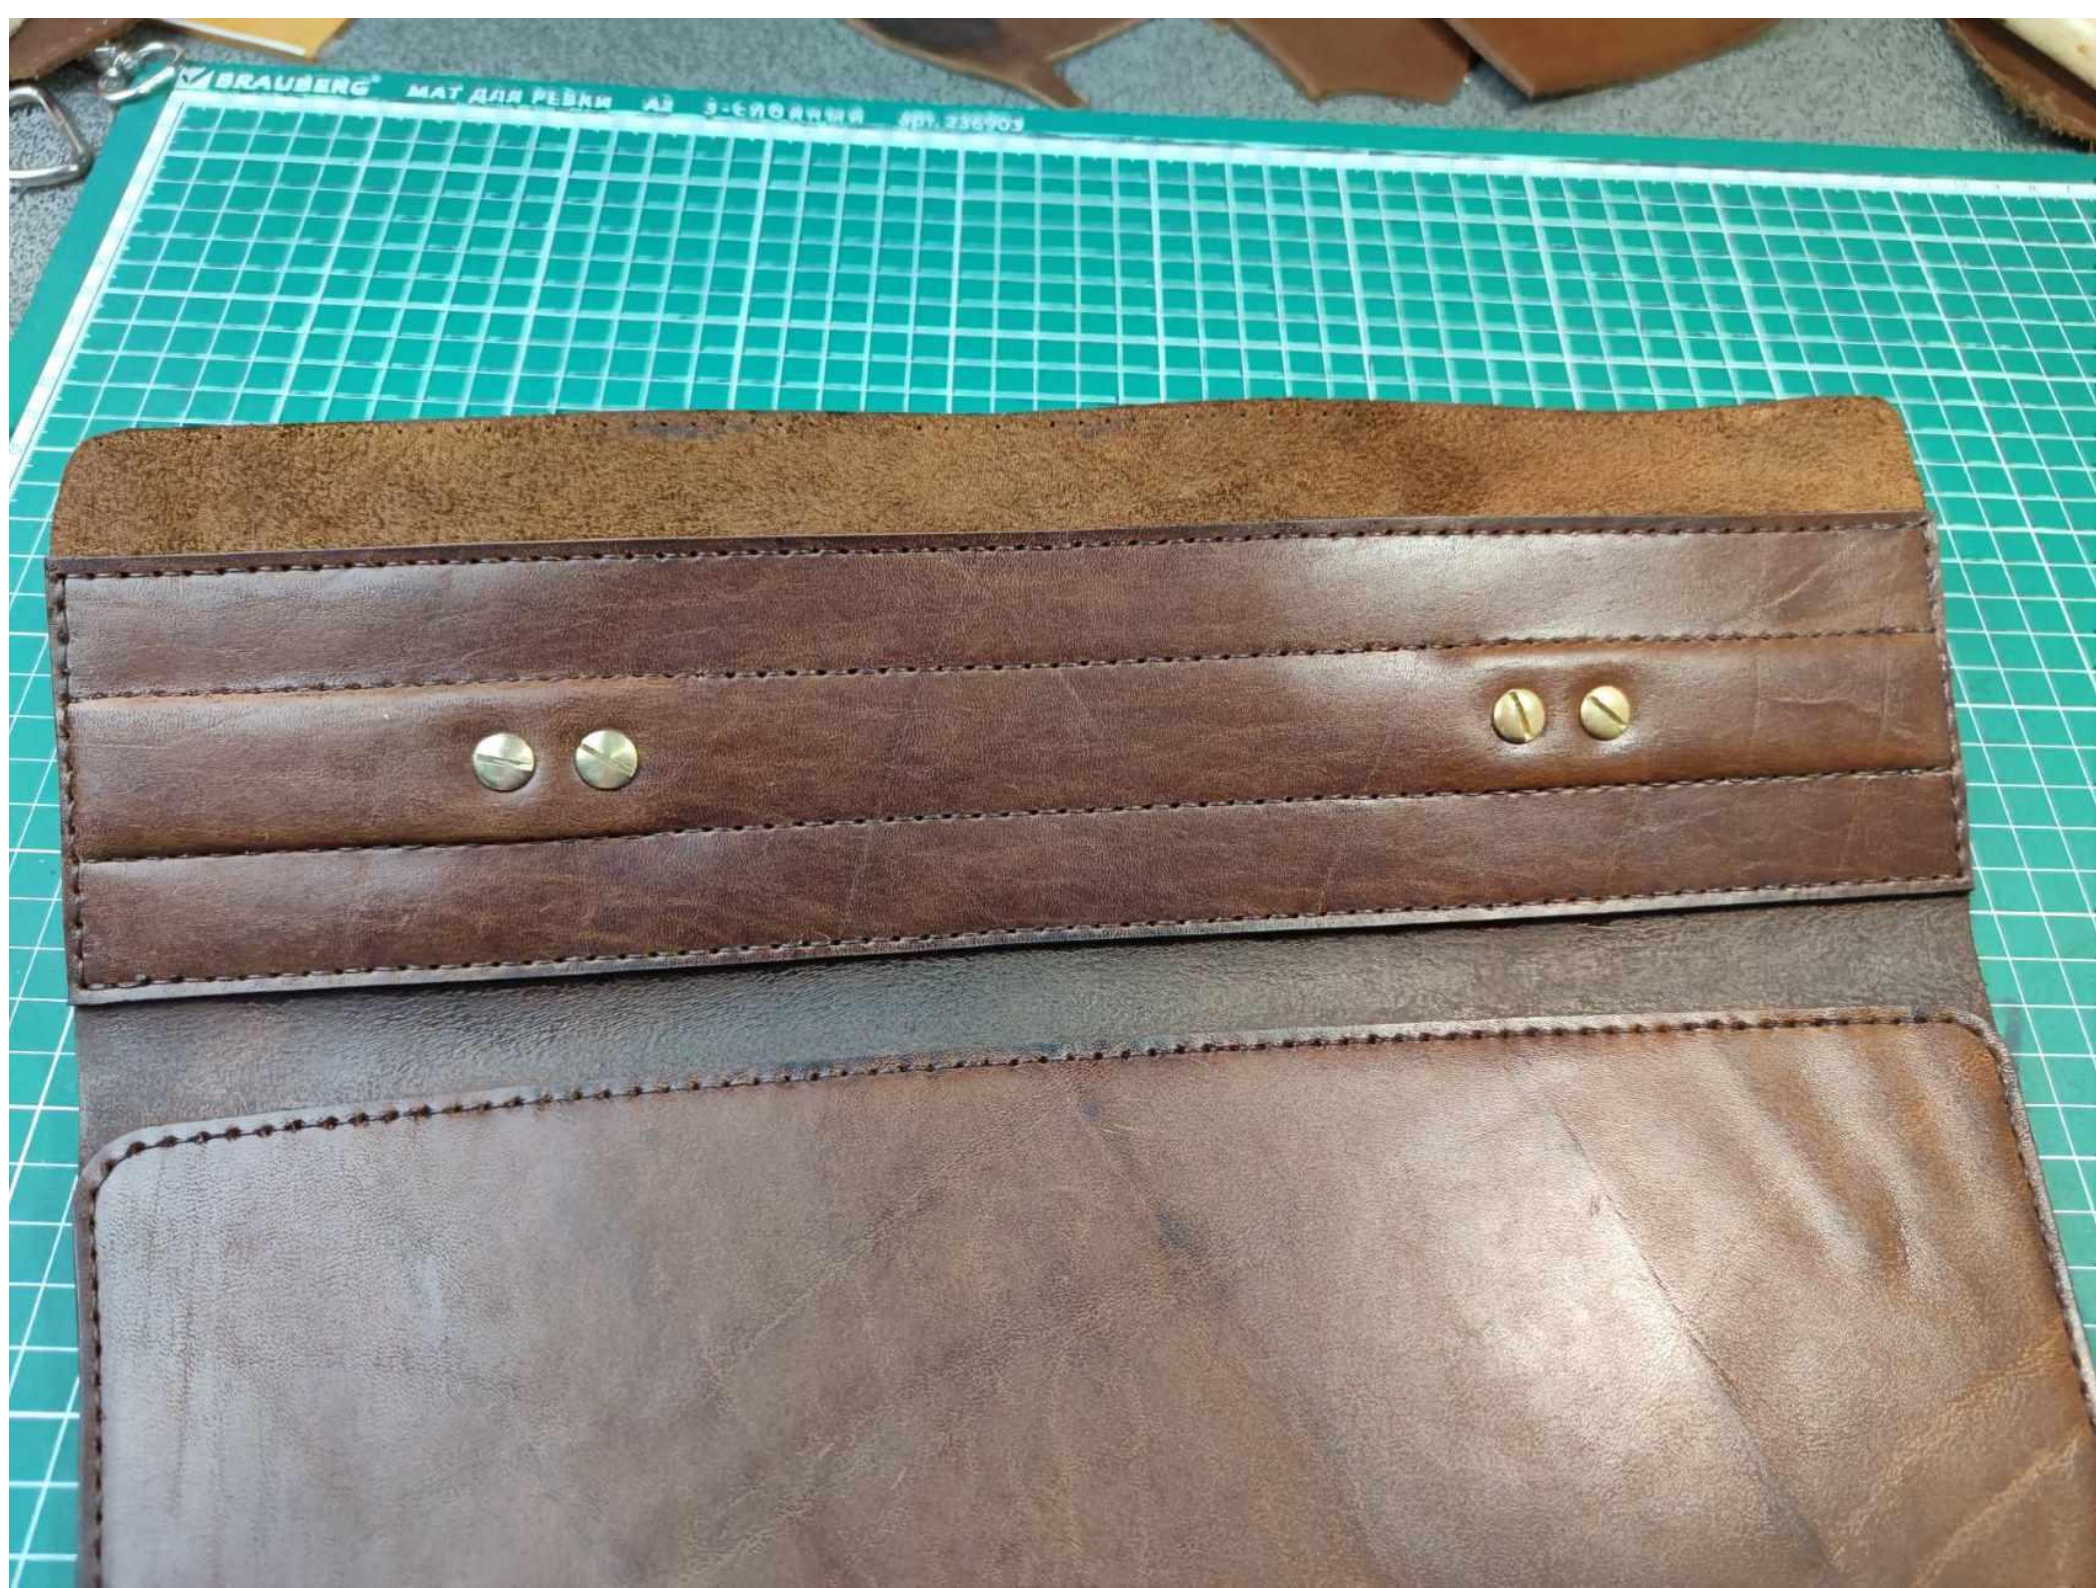





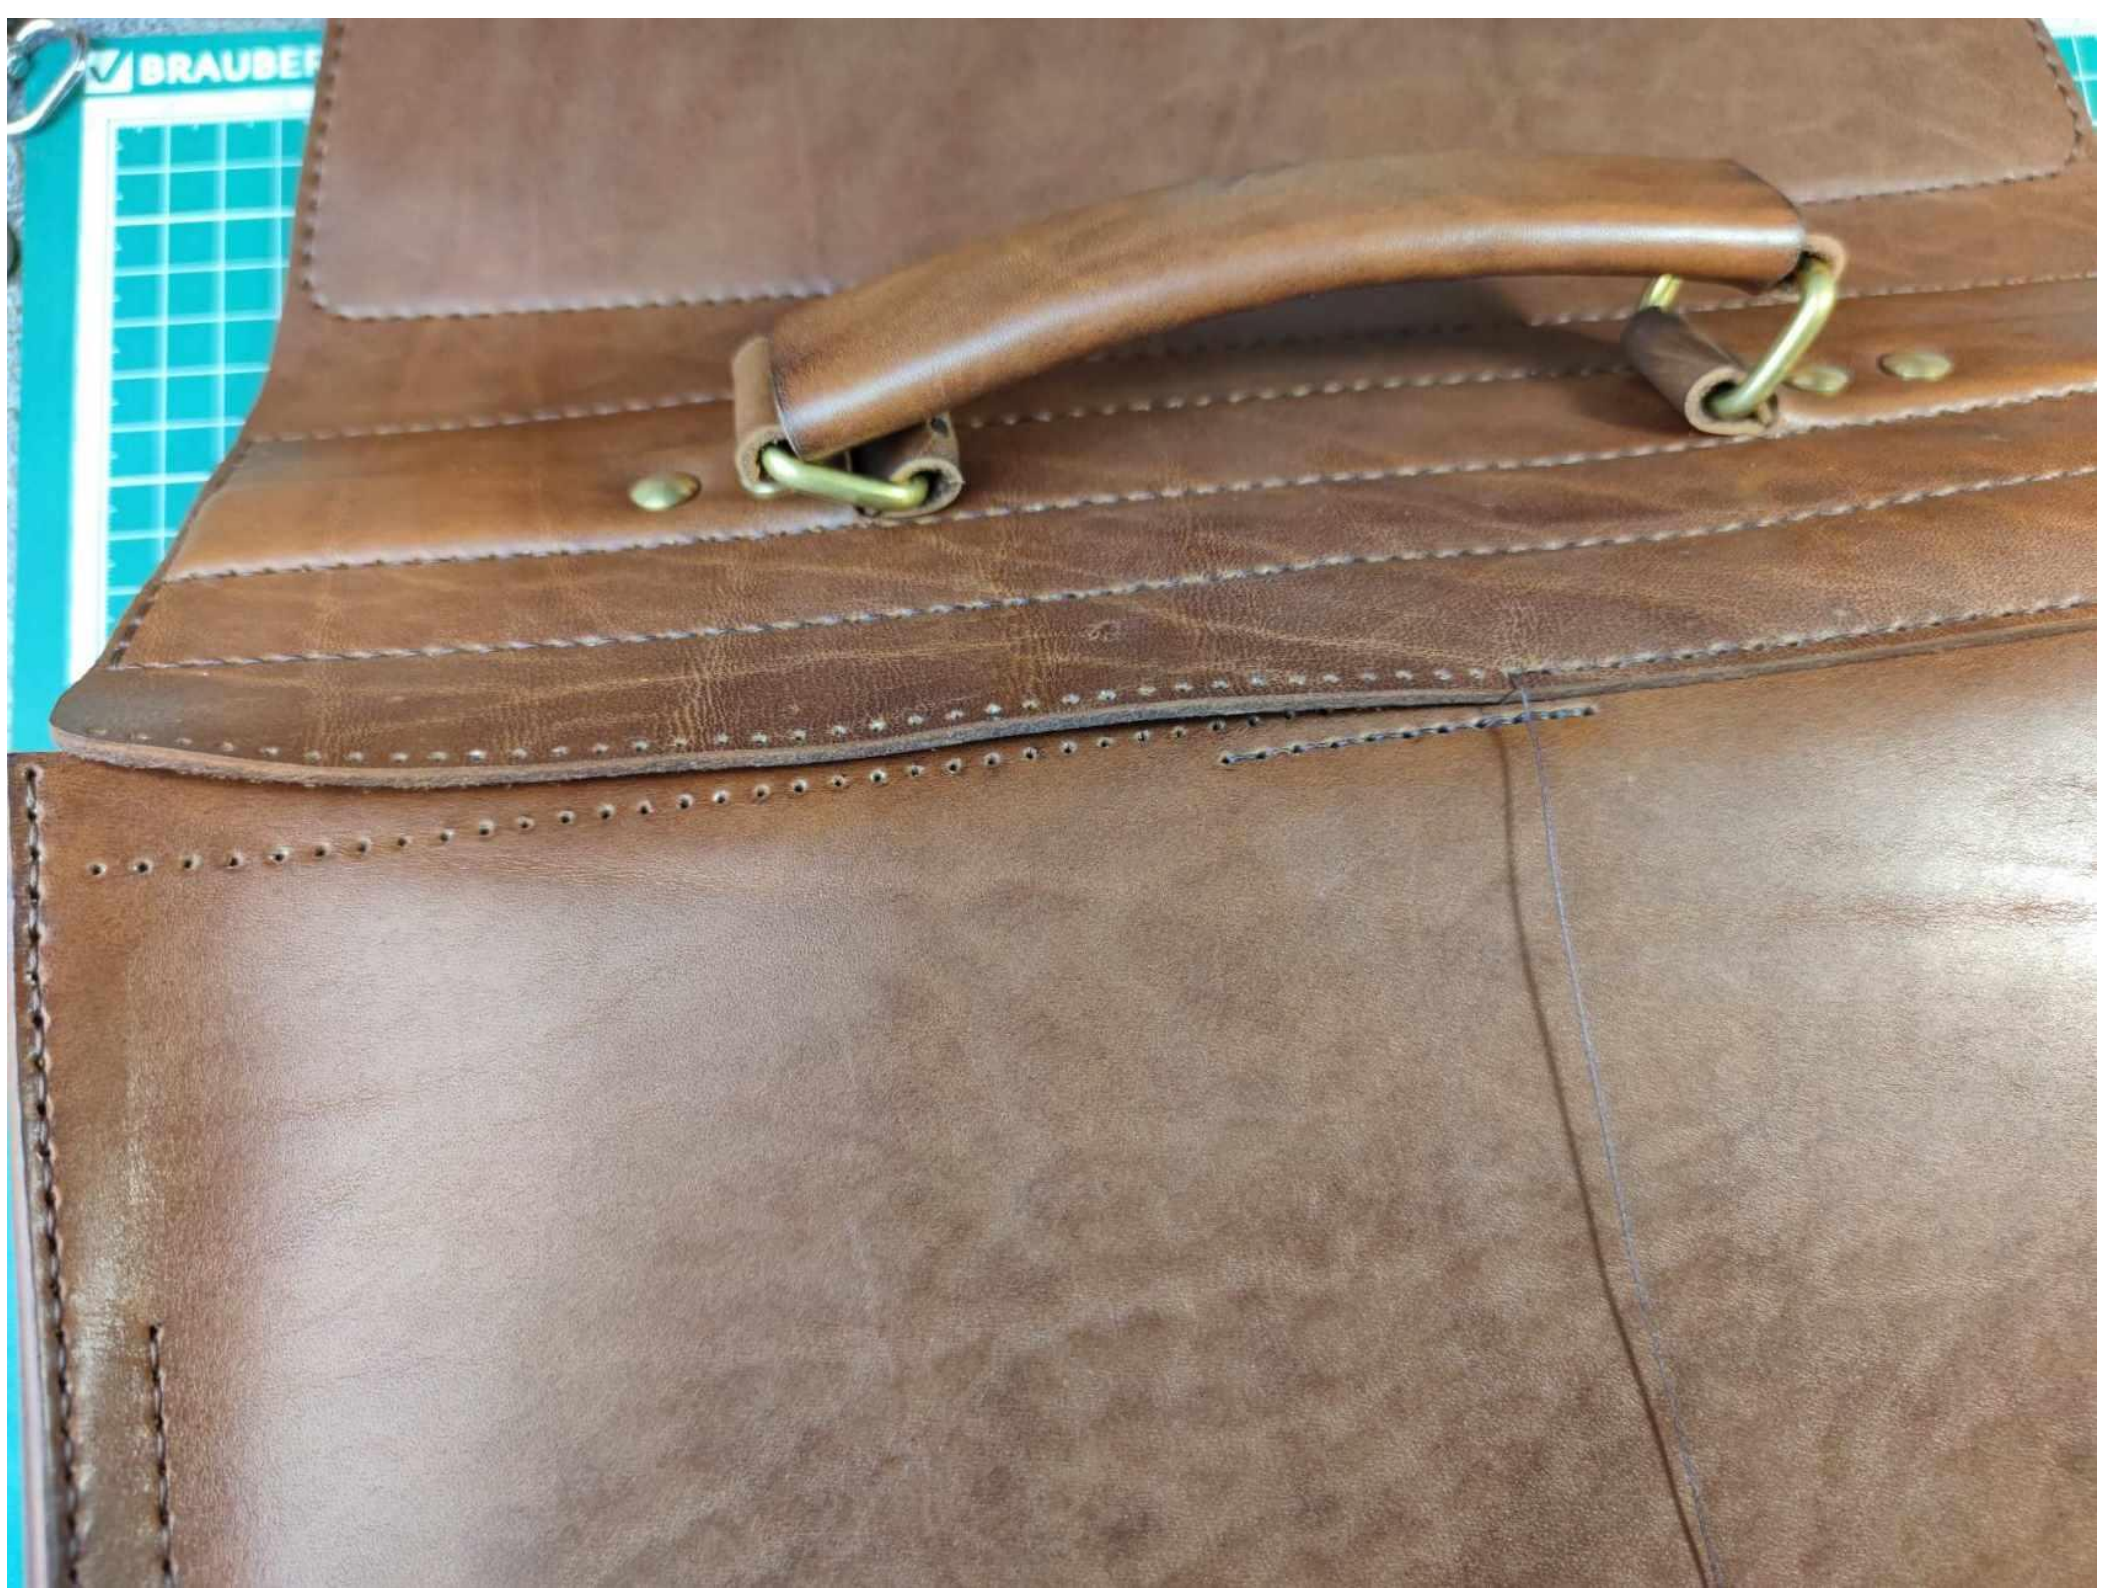

BRAUBERG® МАТ ДЛЯ РЕЗКИ А2 3-слойный арт. 236903

56 55 54 53 52 51 50 49 48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17



