




PaJust Messenger Bag Pattern

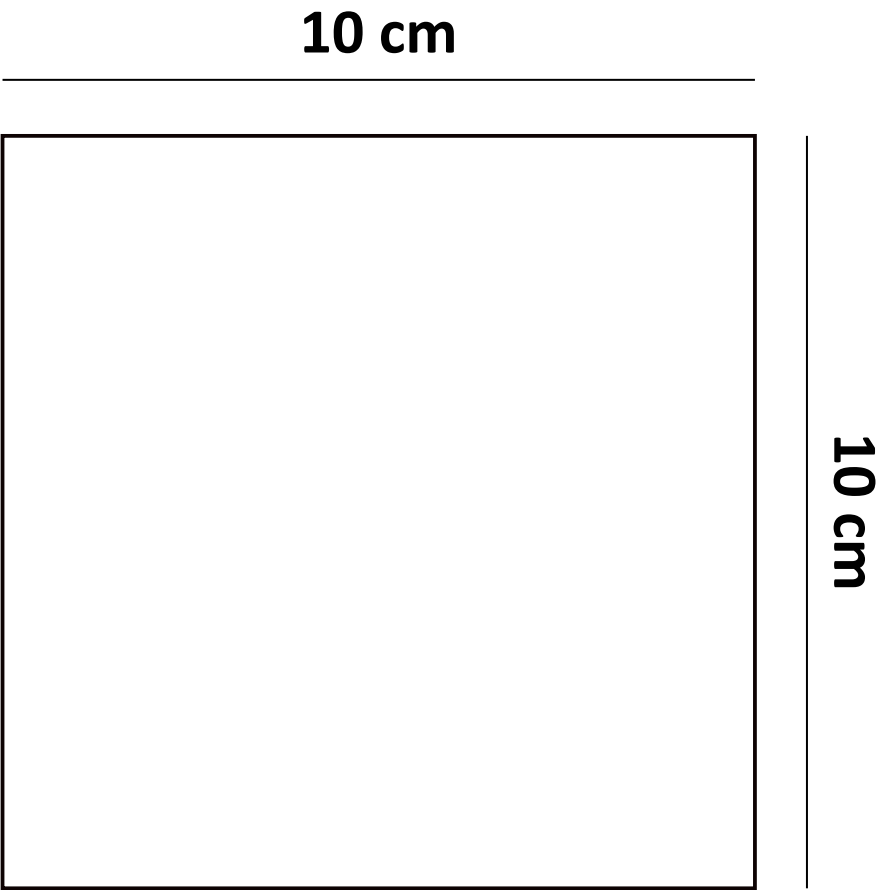

Print Test page.




Instruction


Cut out the patterns following the red dashed lines with scissors markings. Join the patterns according to their numbers using masking tape.

The dimensions of the reinforcement board and linnings are the same as the front and back pattern dimensions.


Front 1

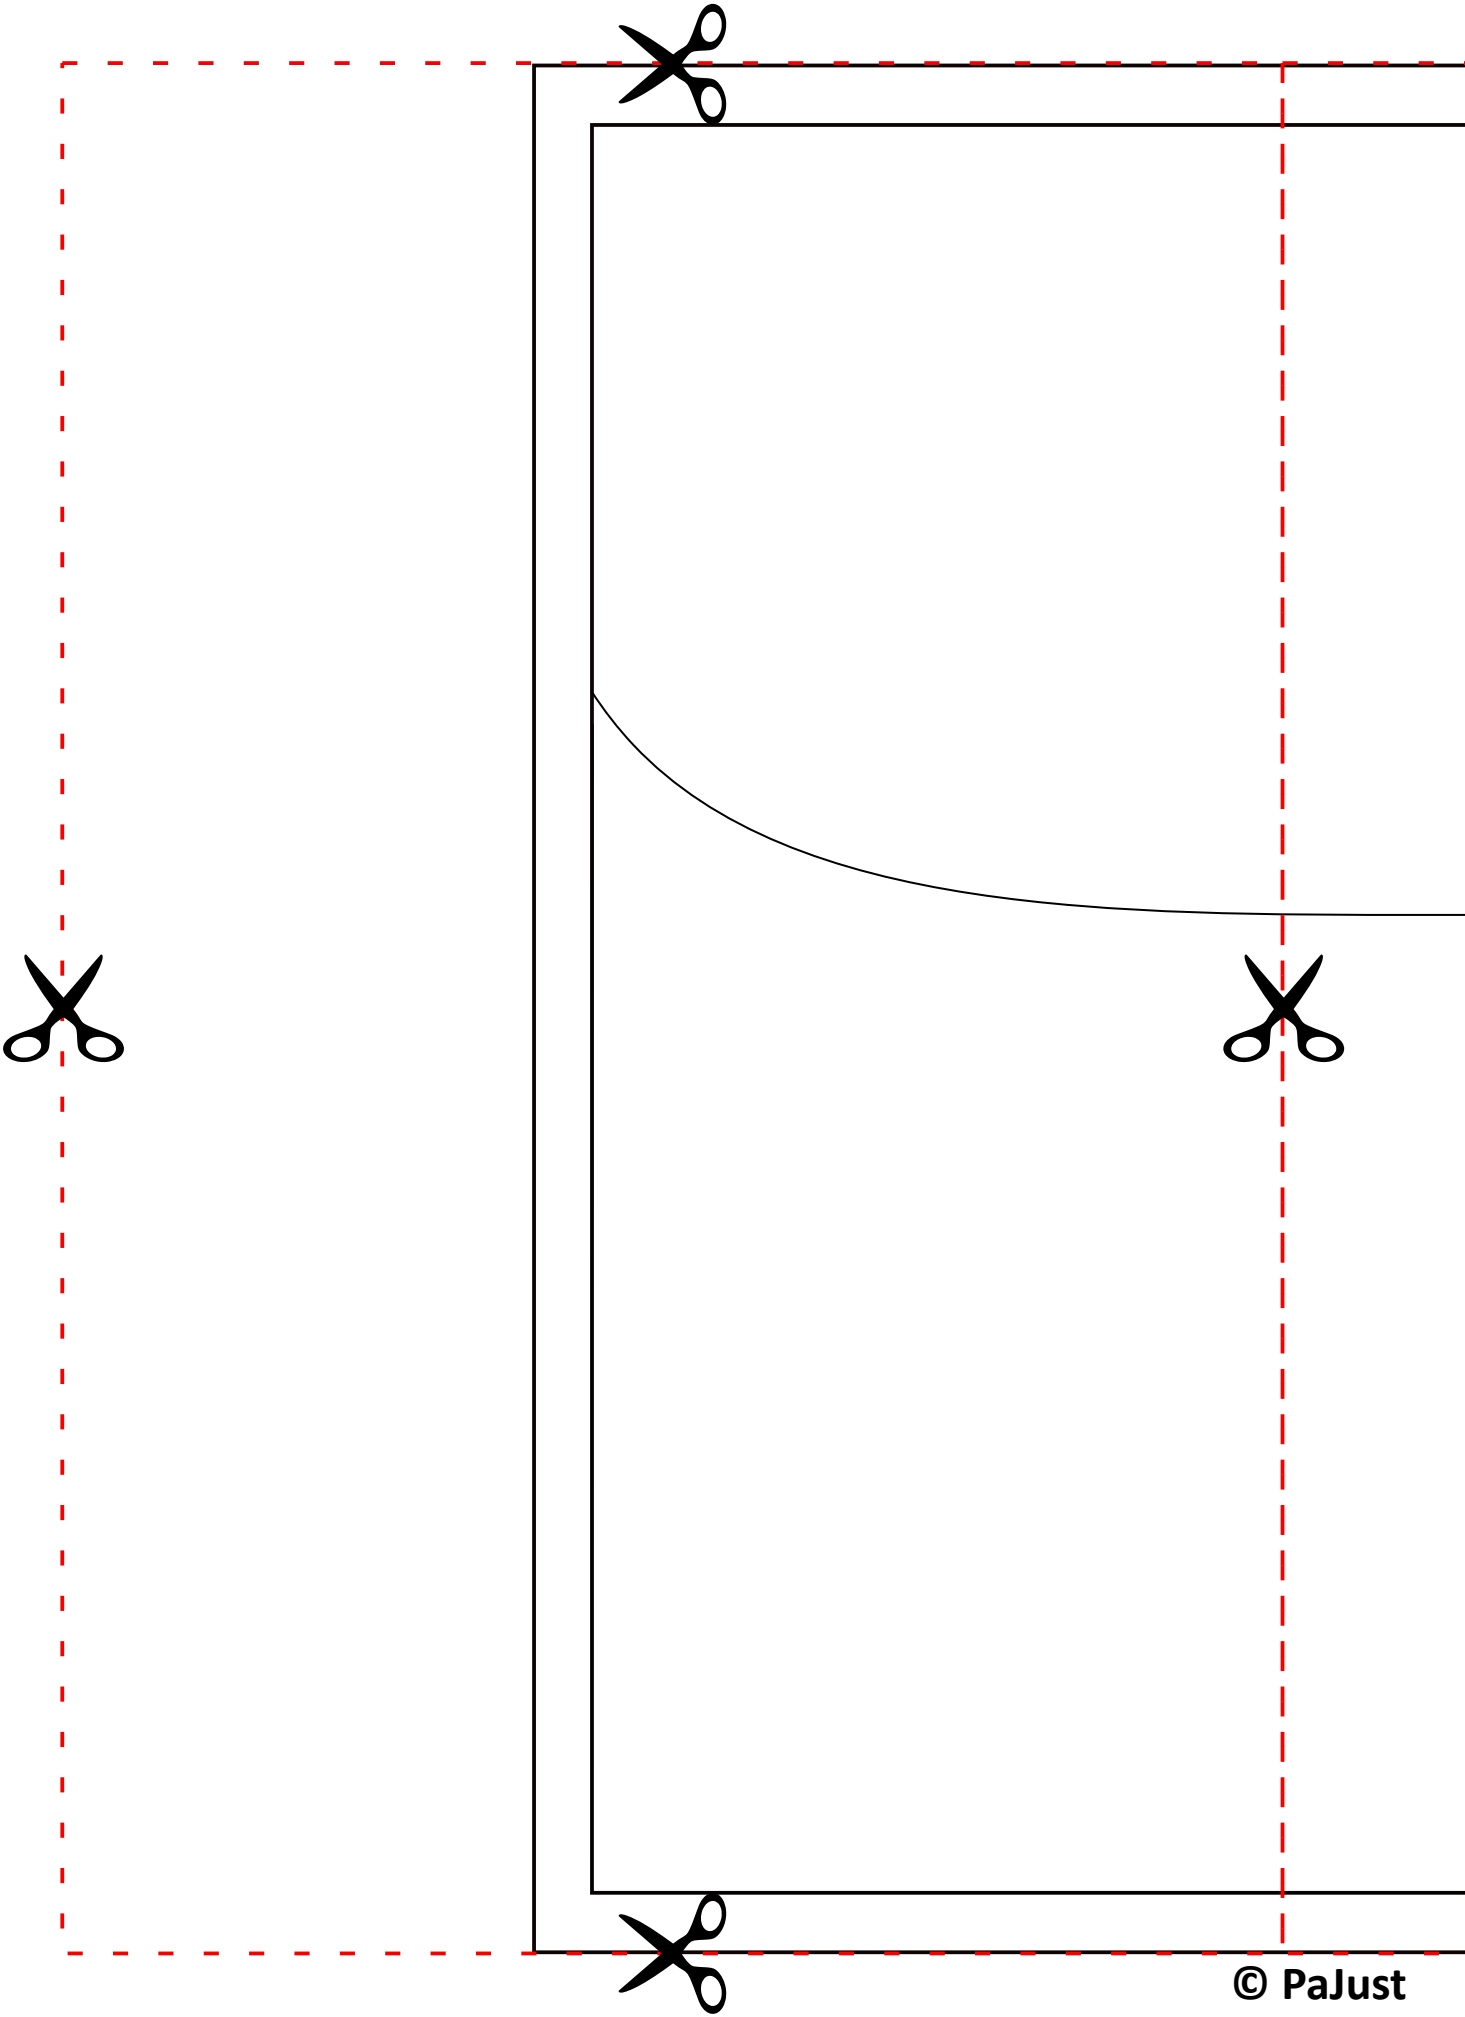


Front 2

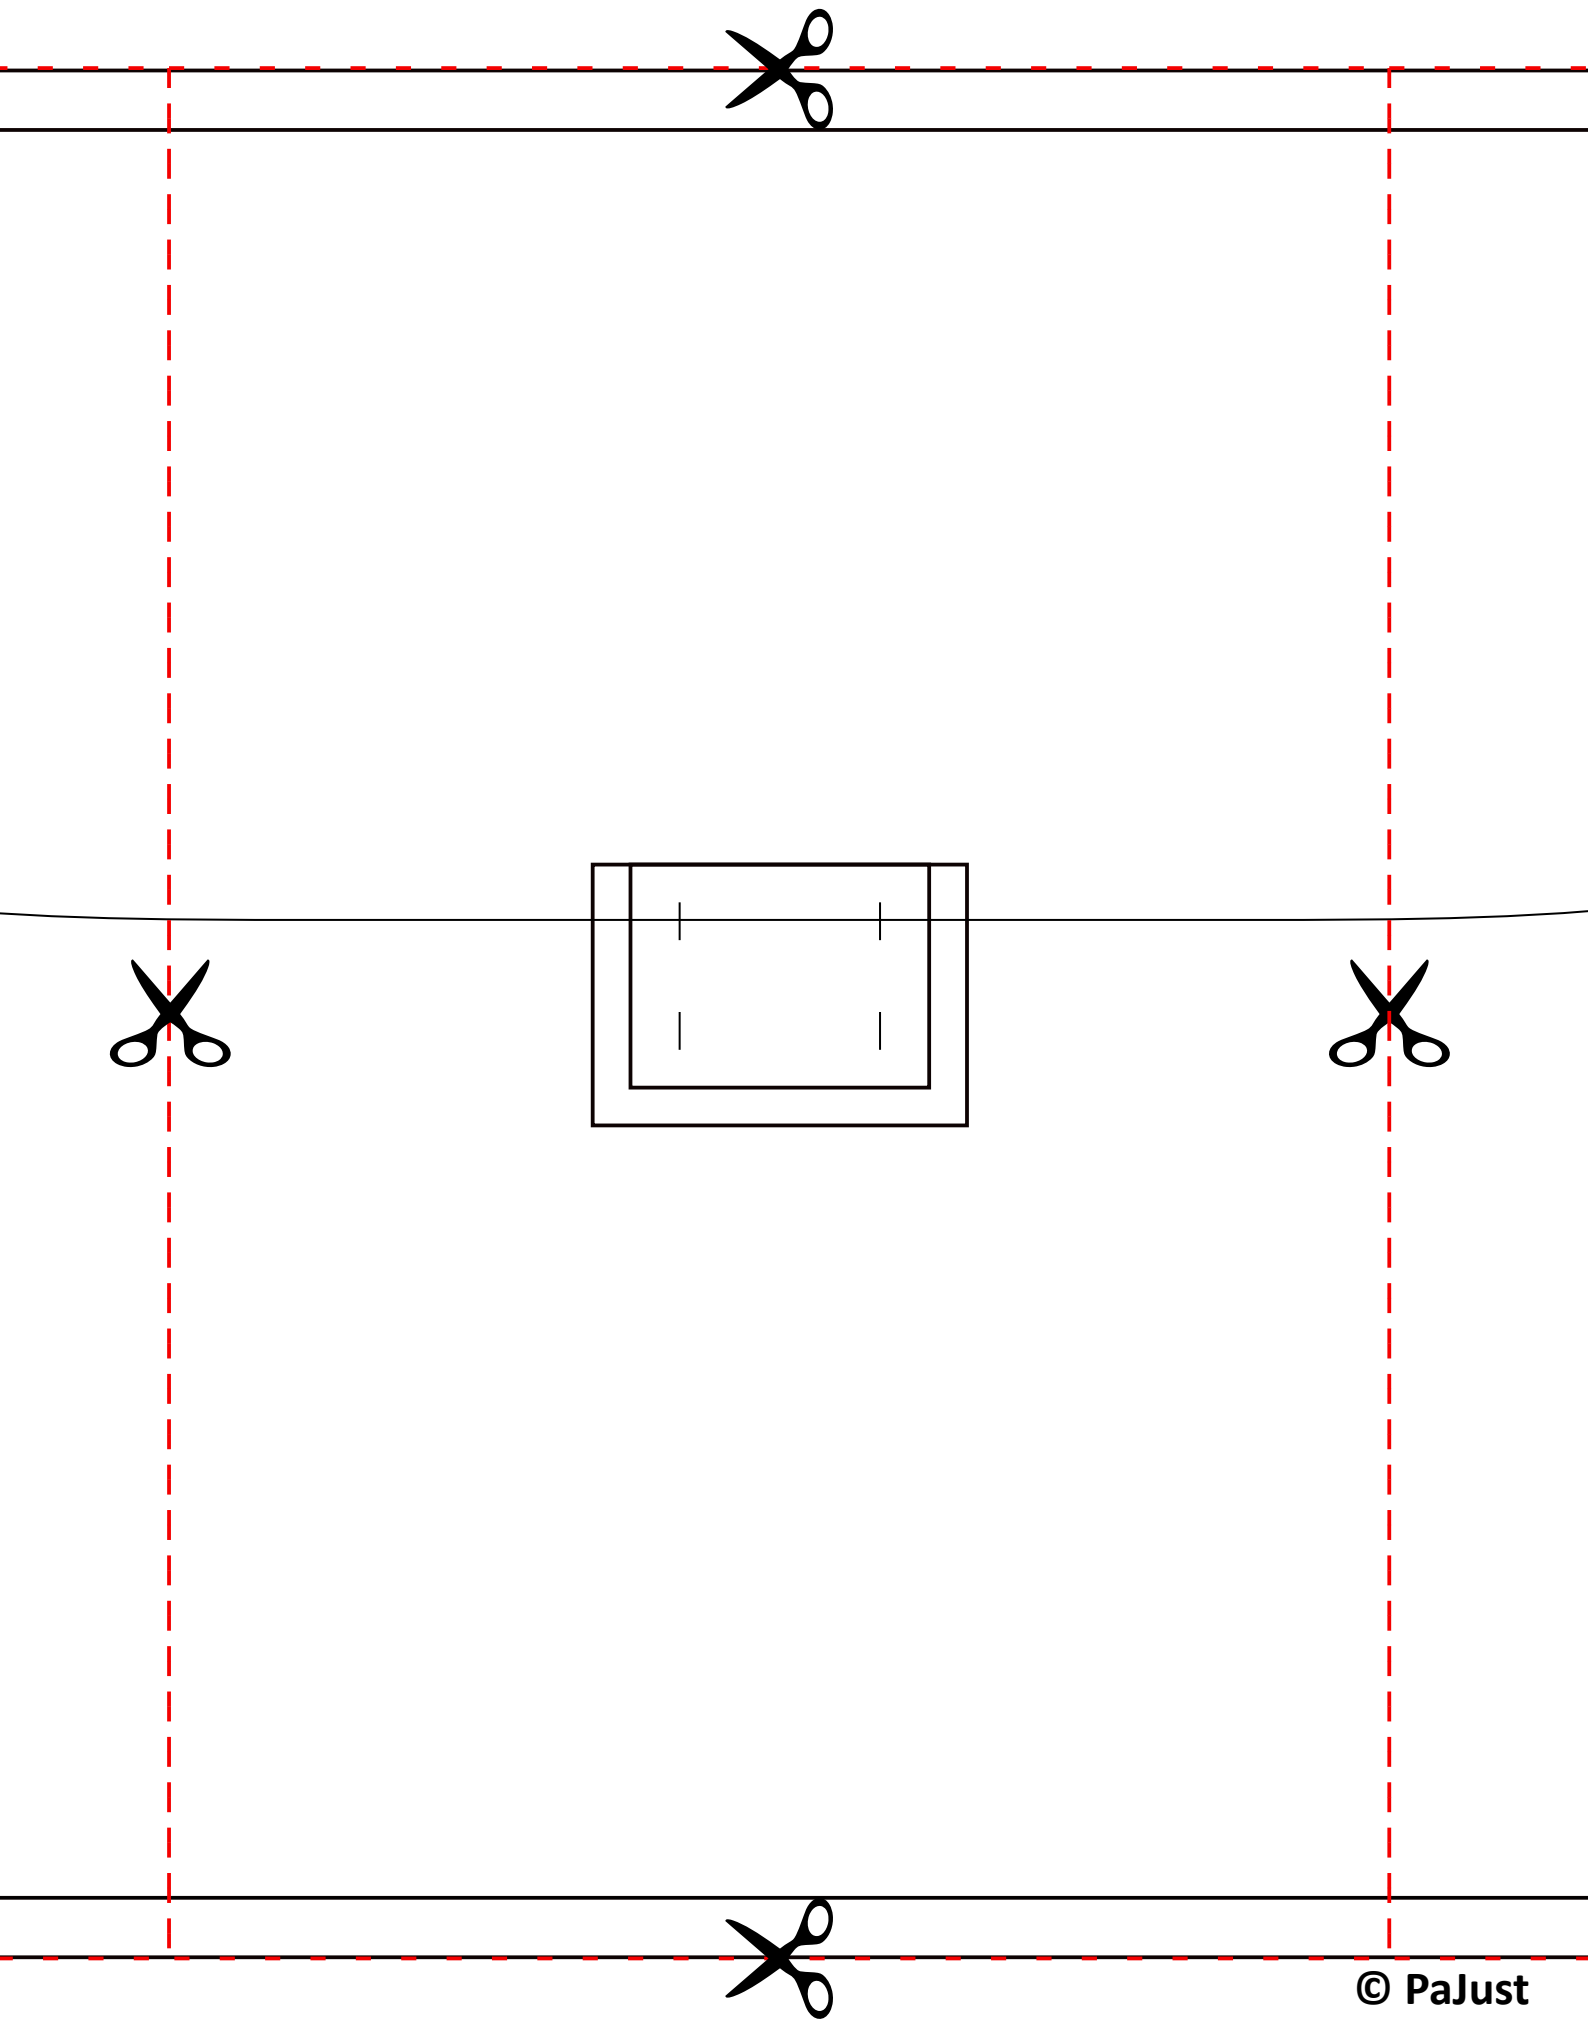



Front 3

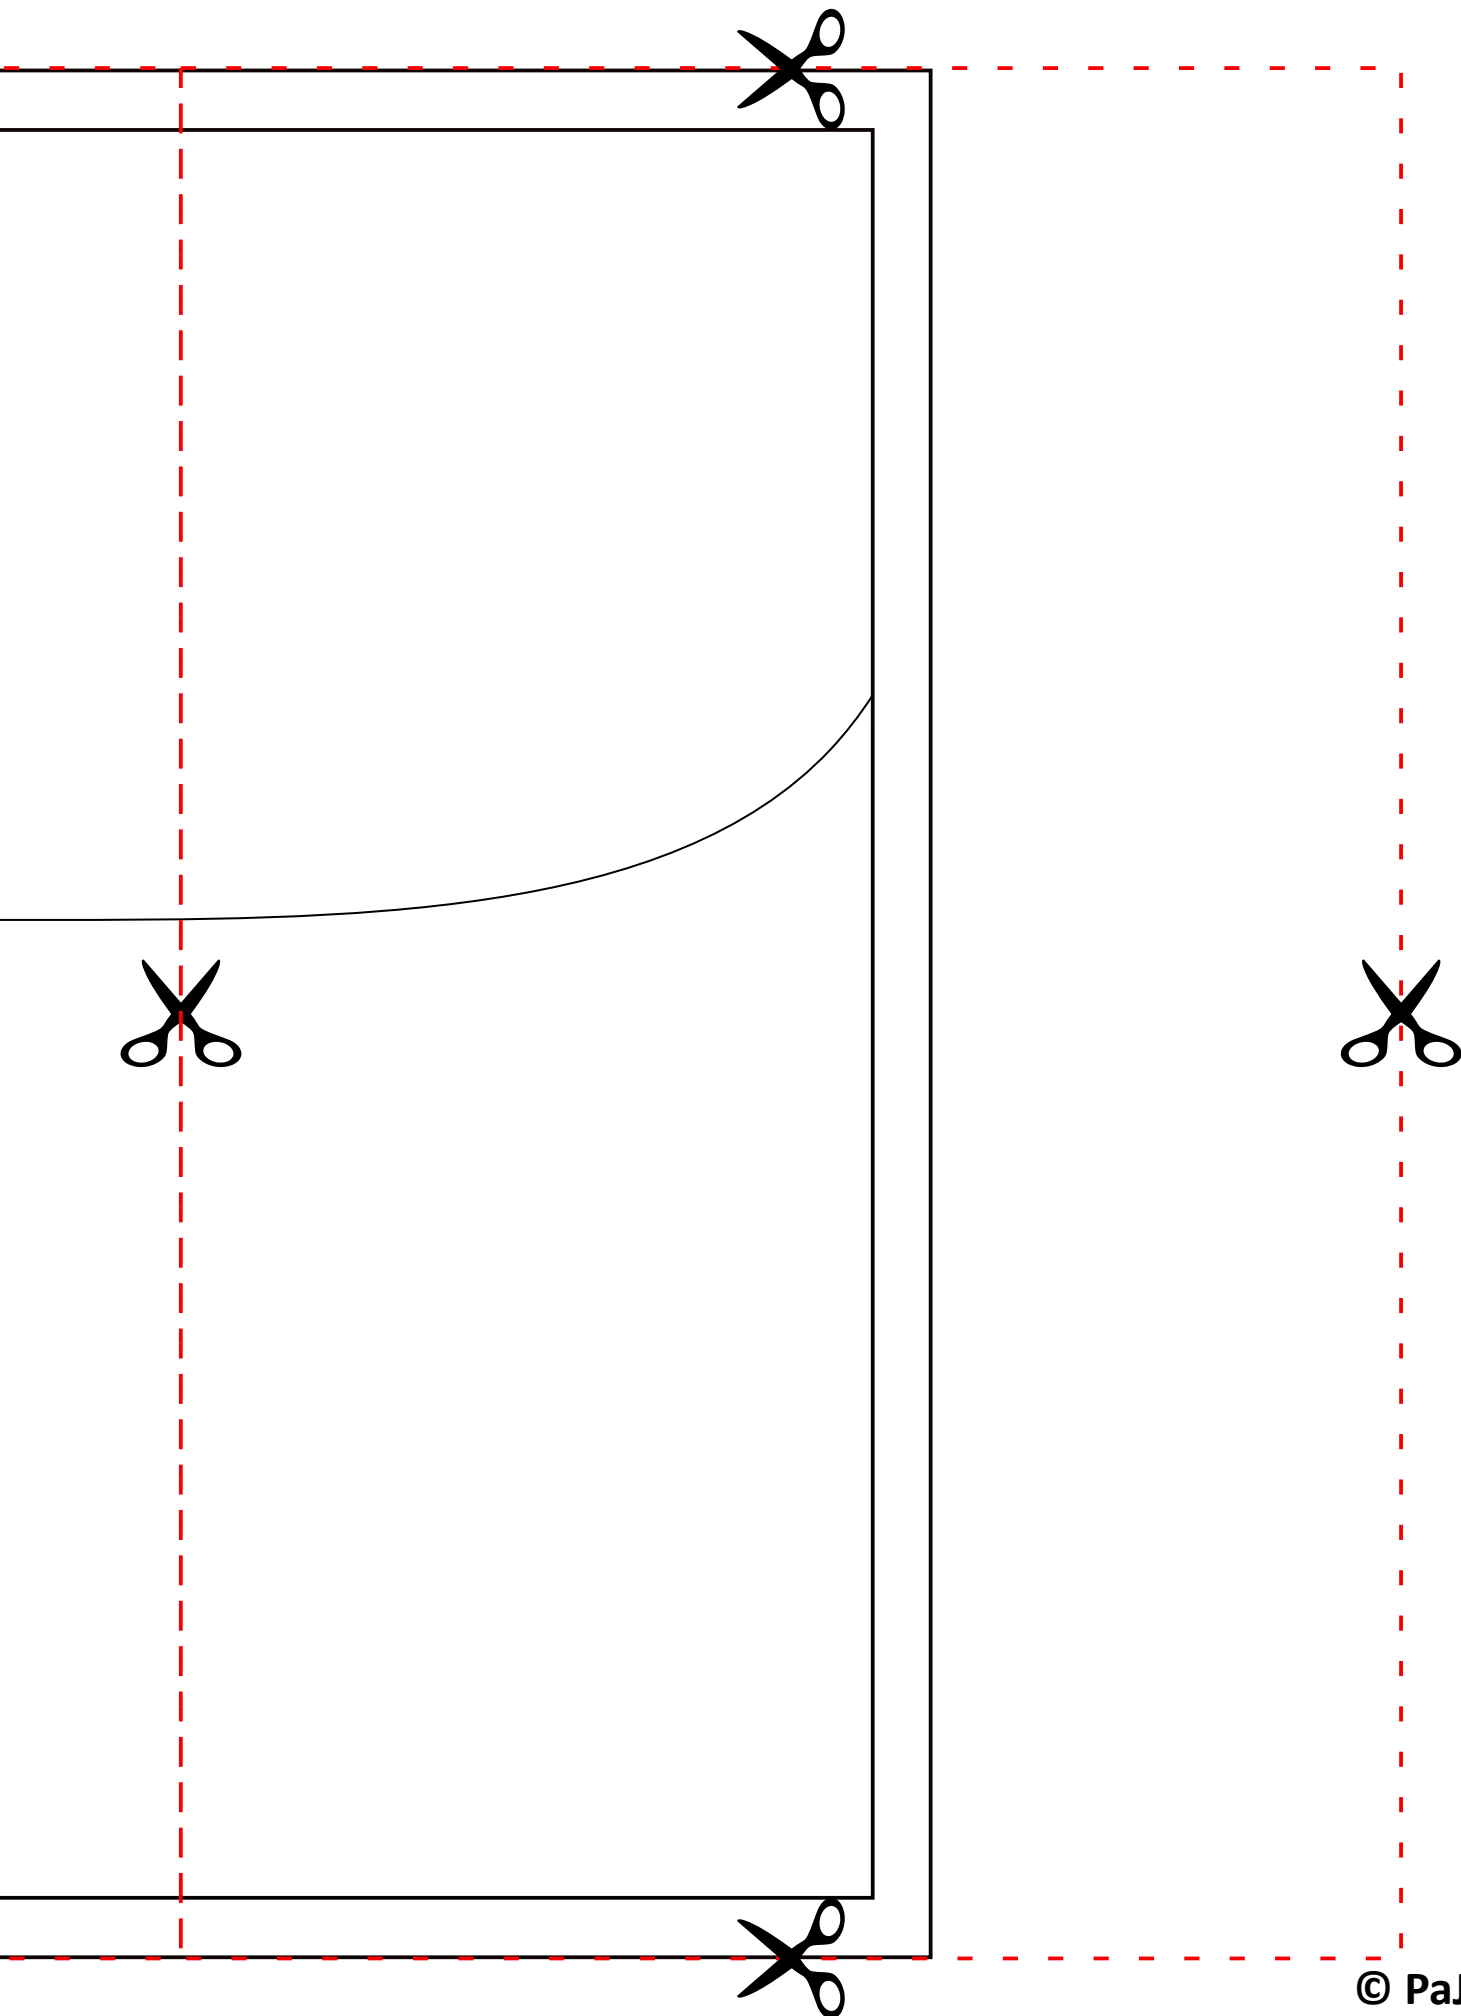


Back 1

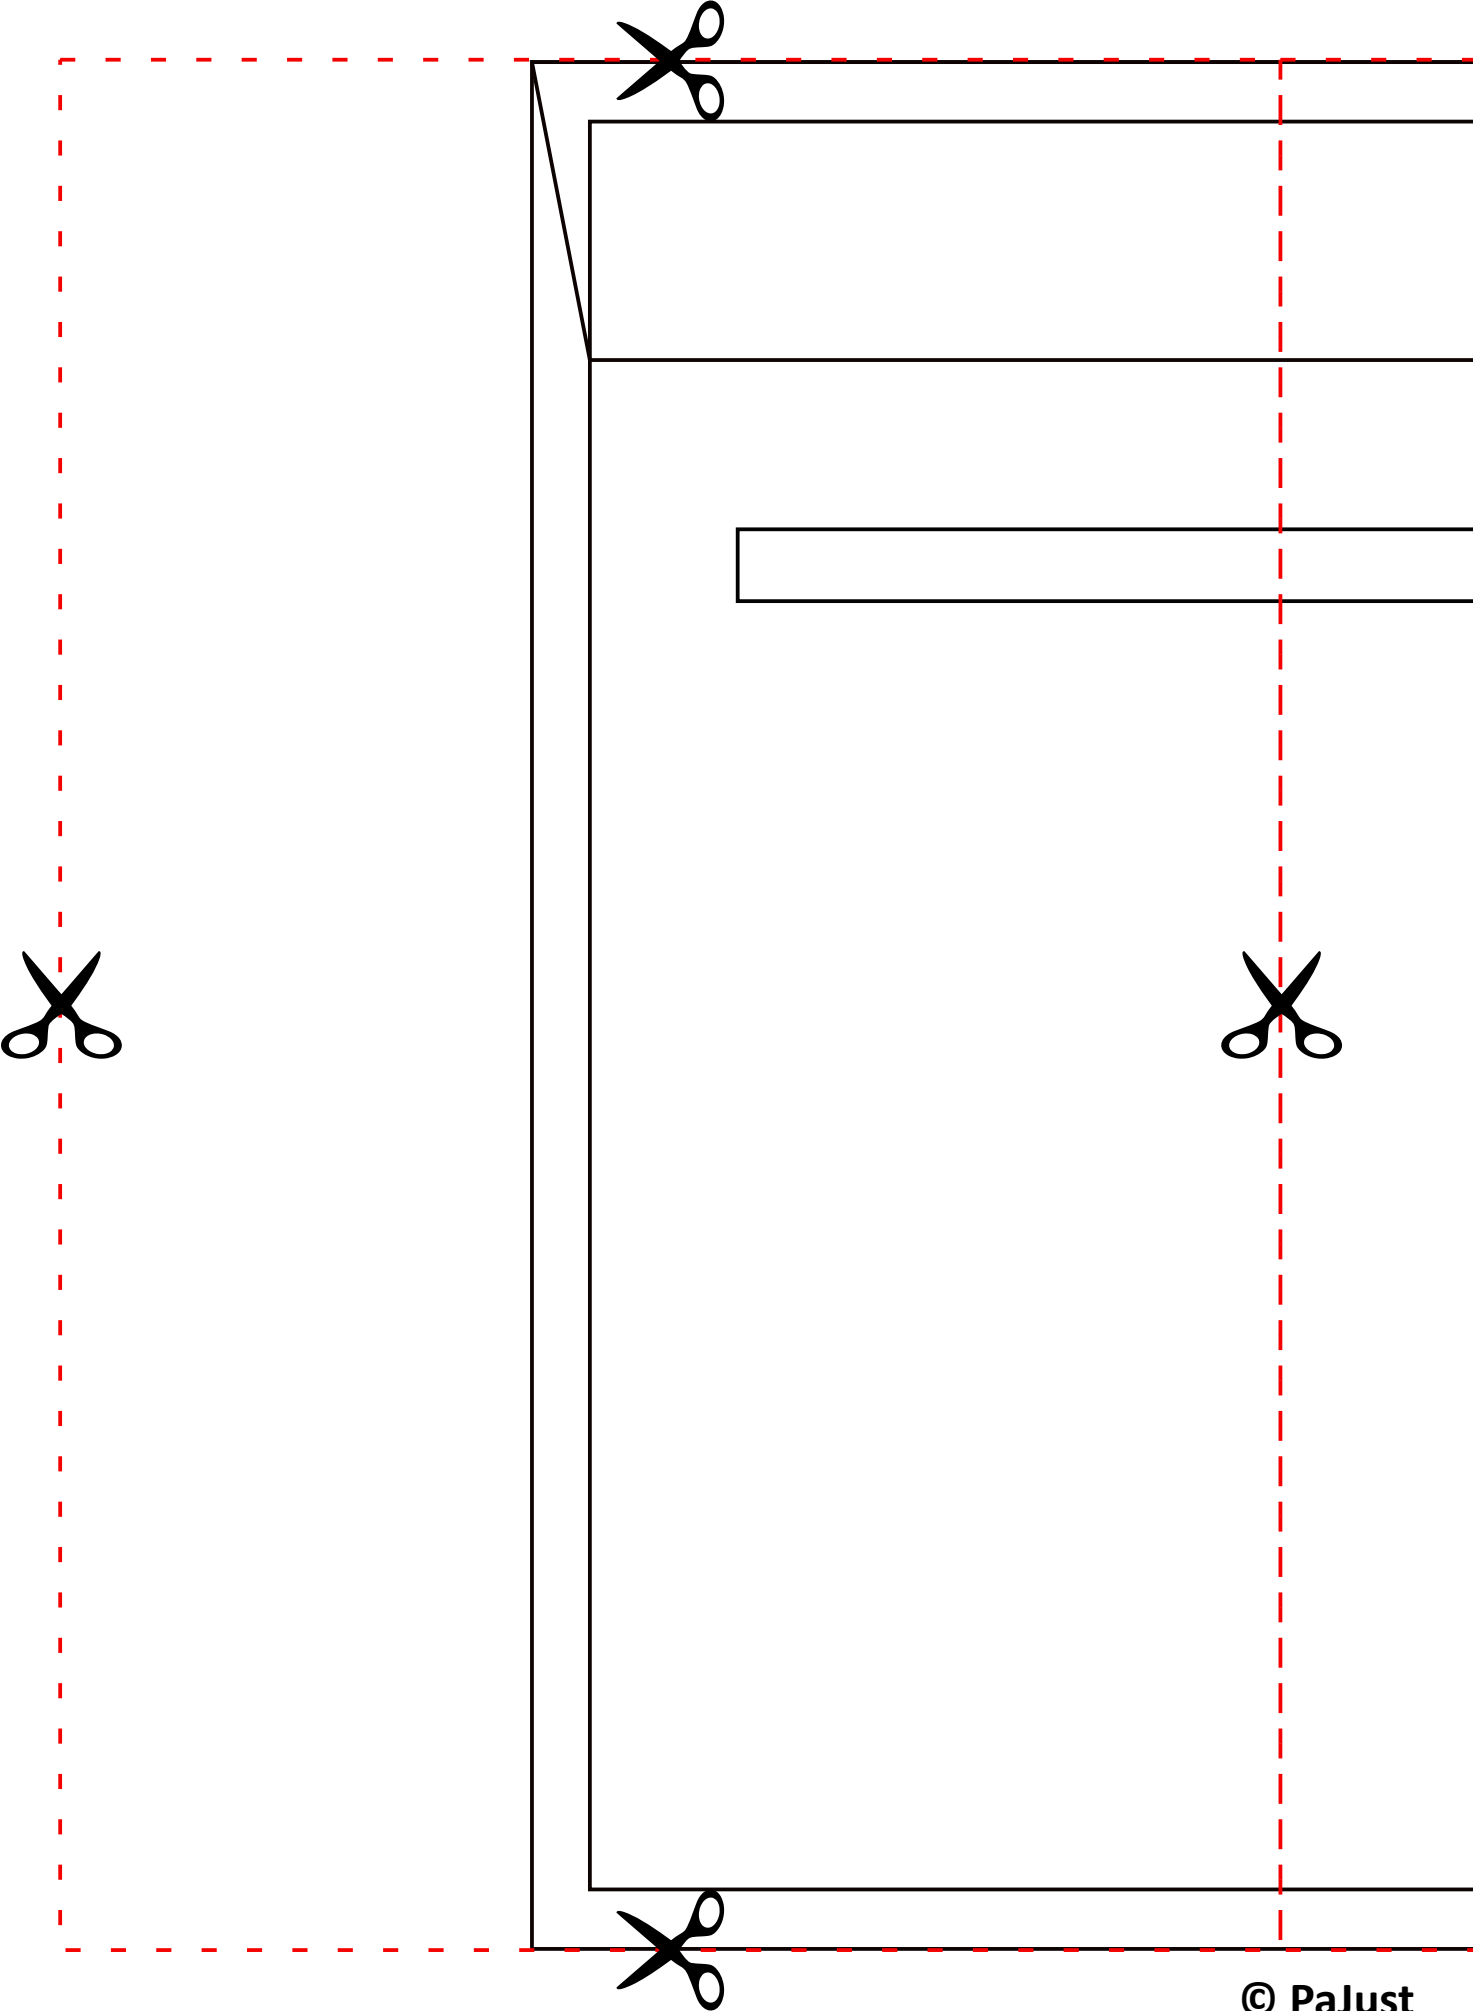


Back 2

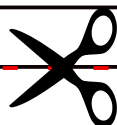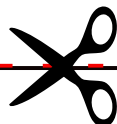


Back 3

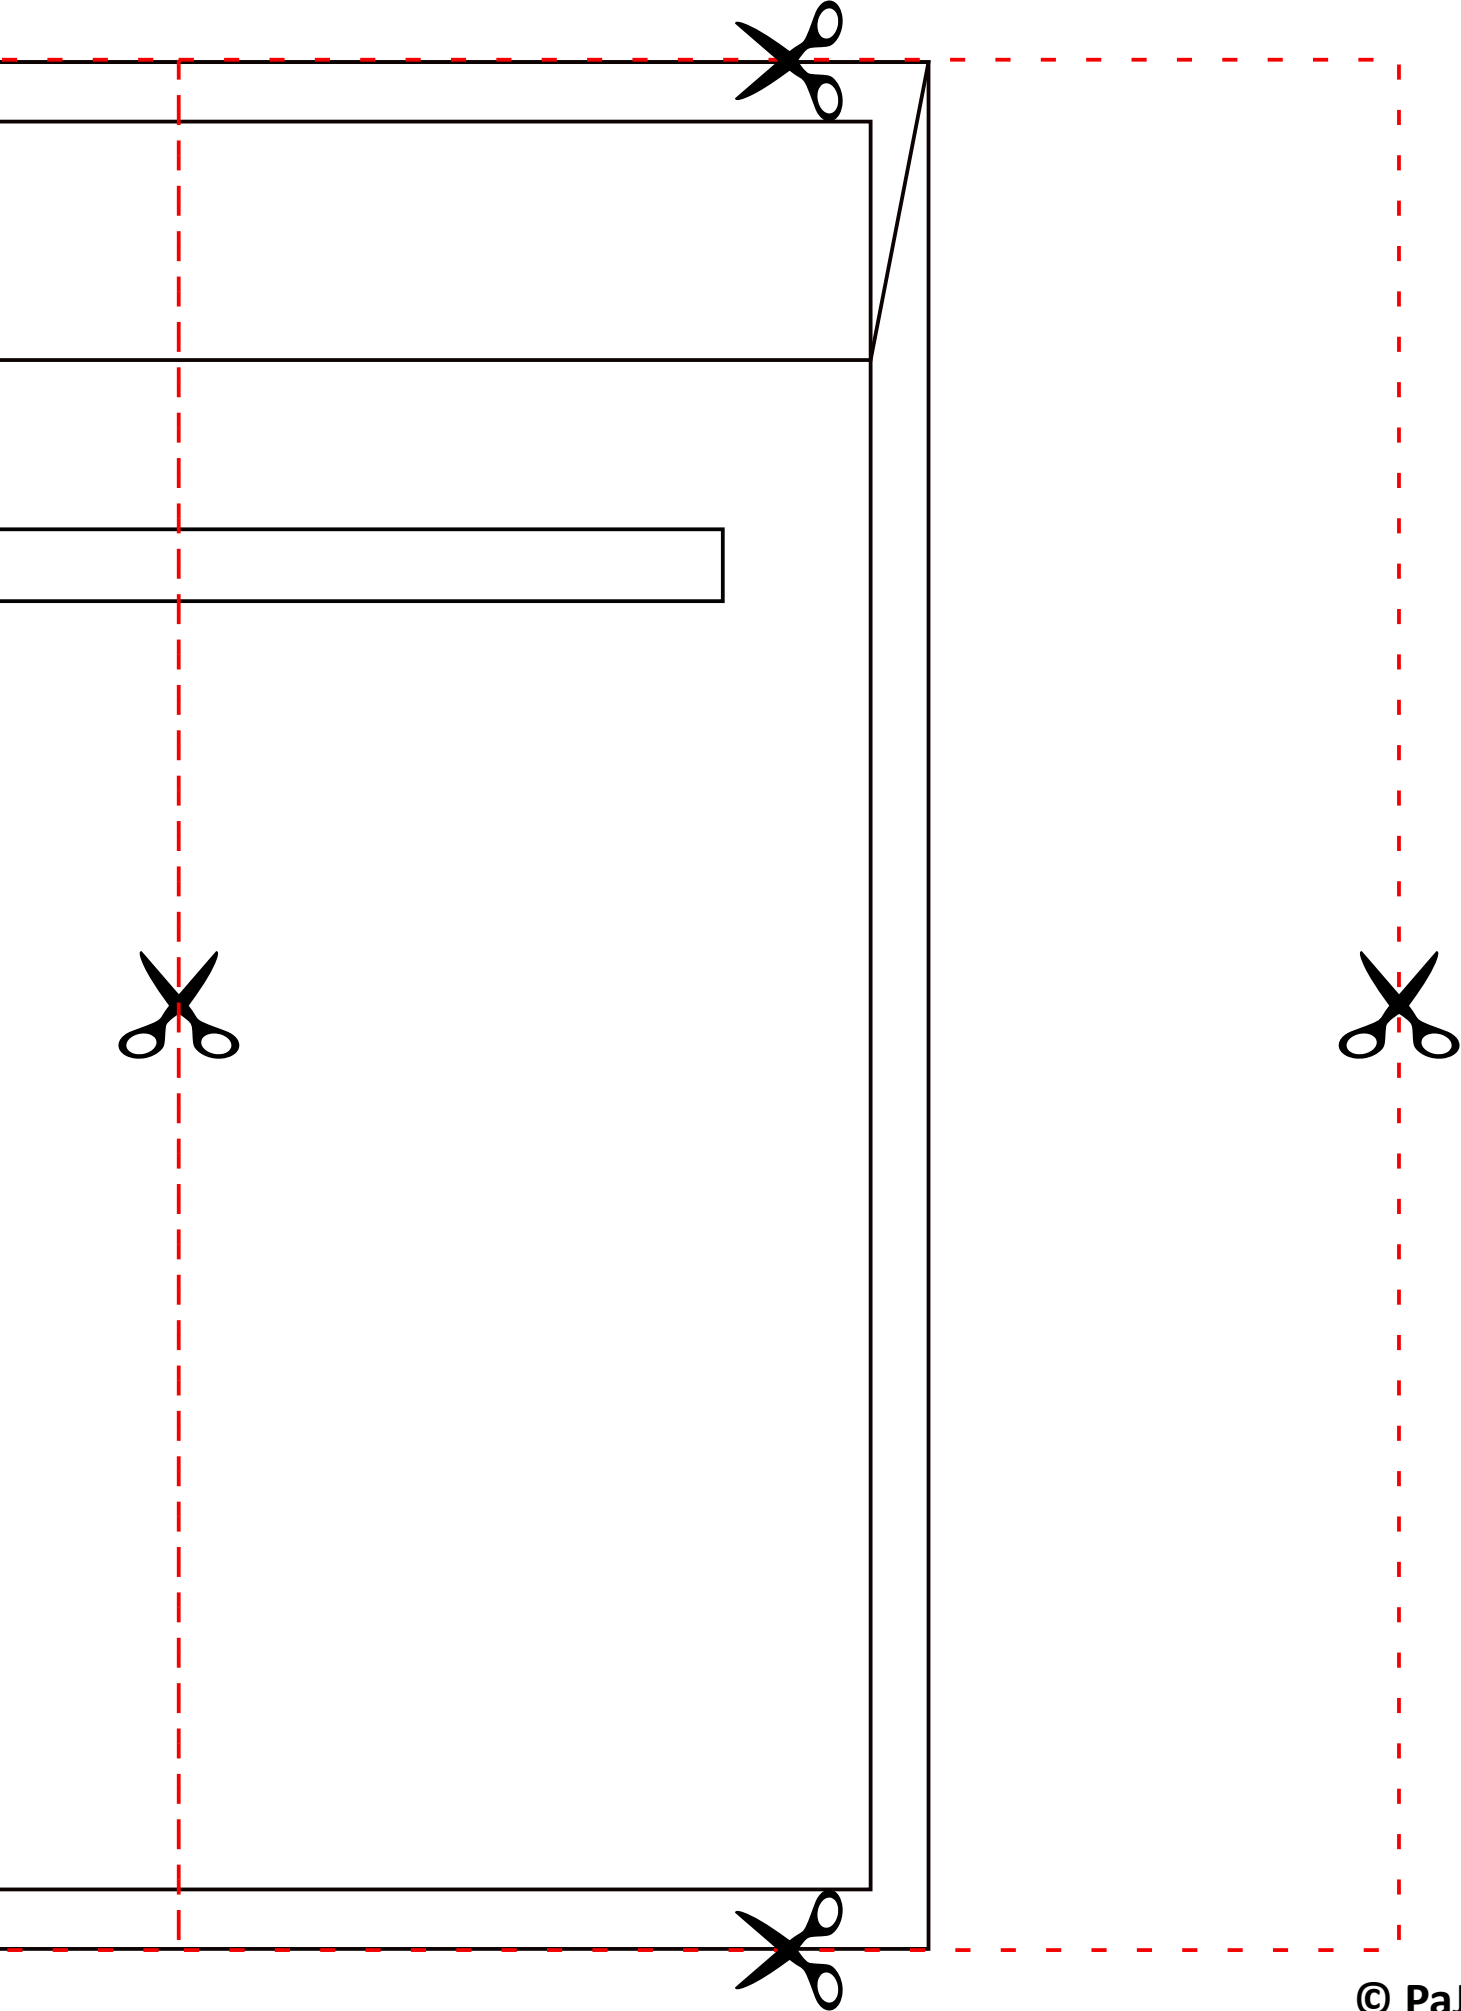


Flip cover 1

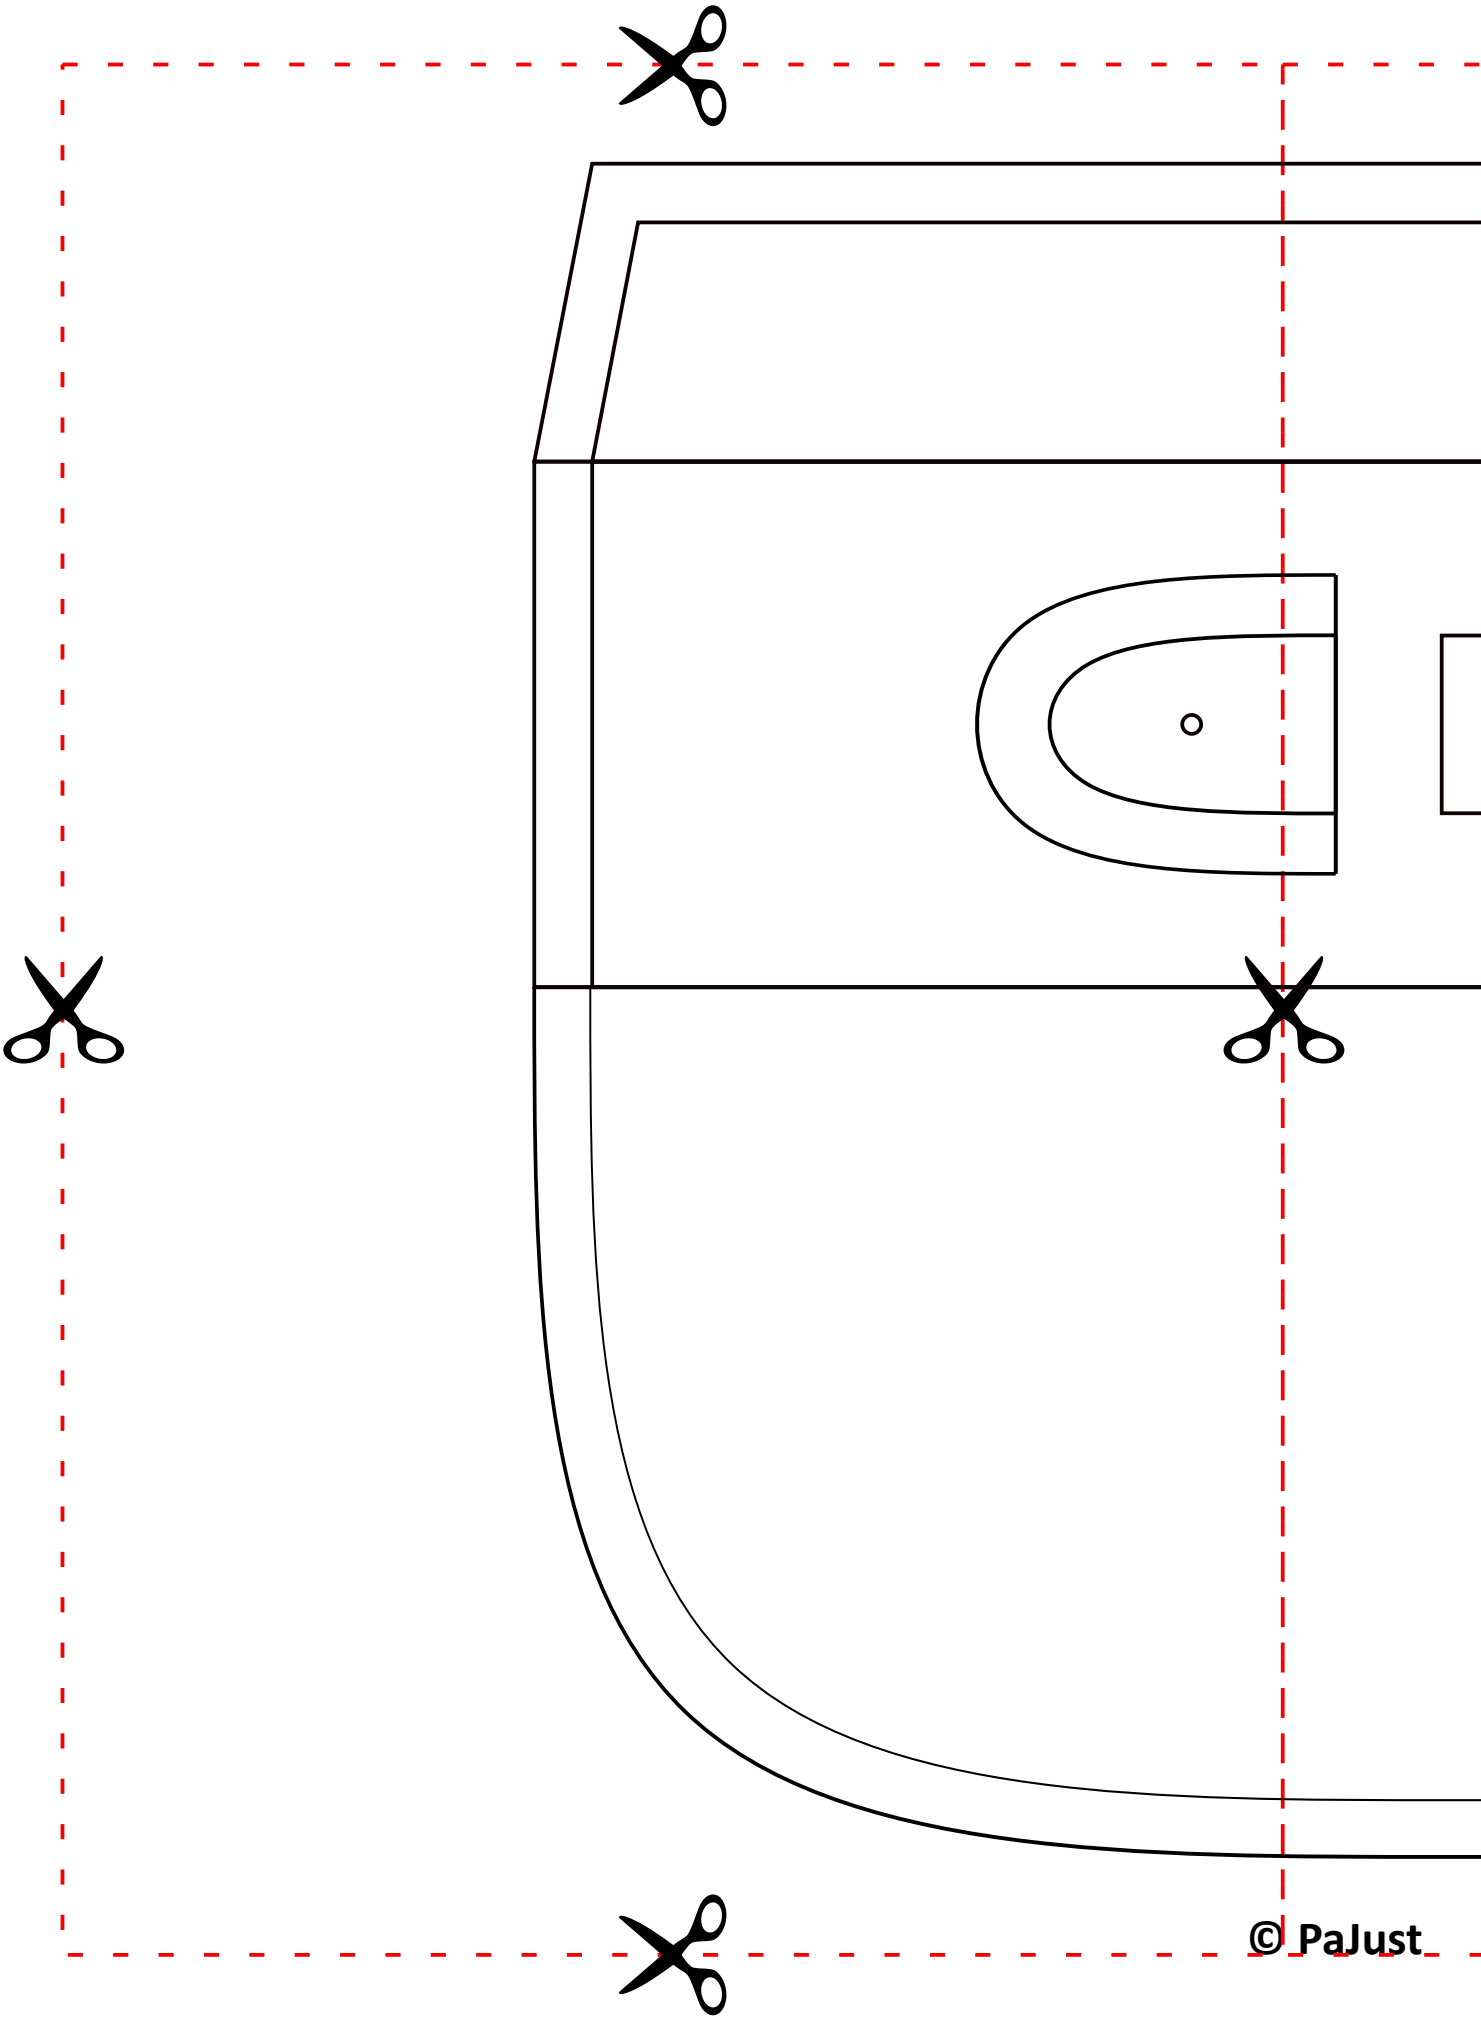


Flip cover 2

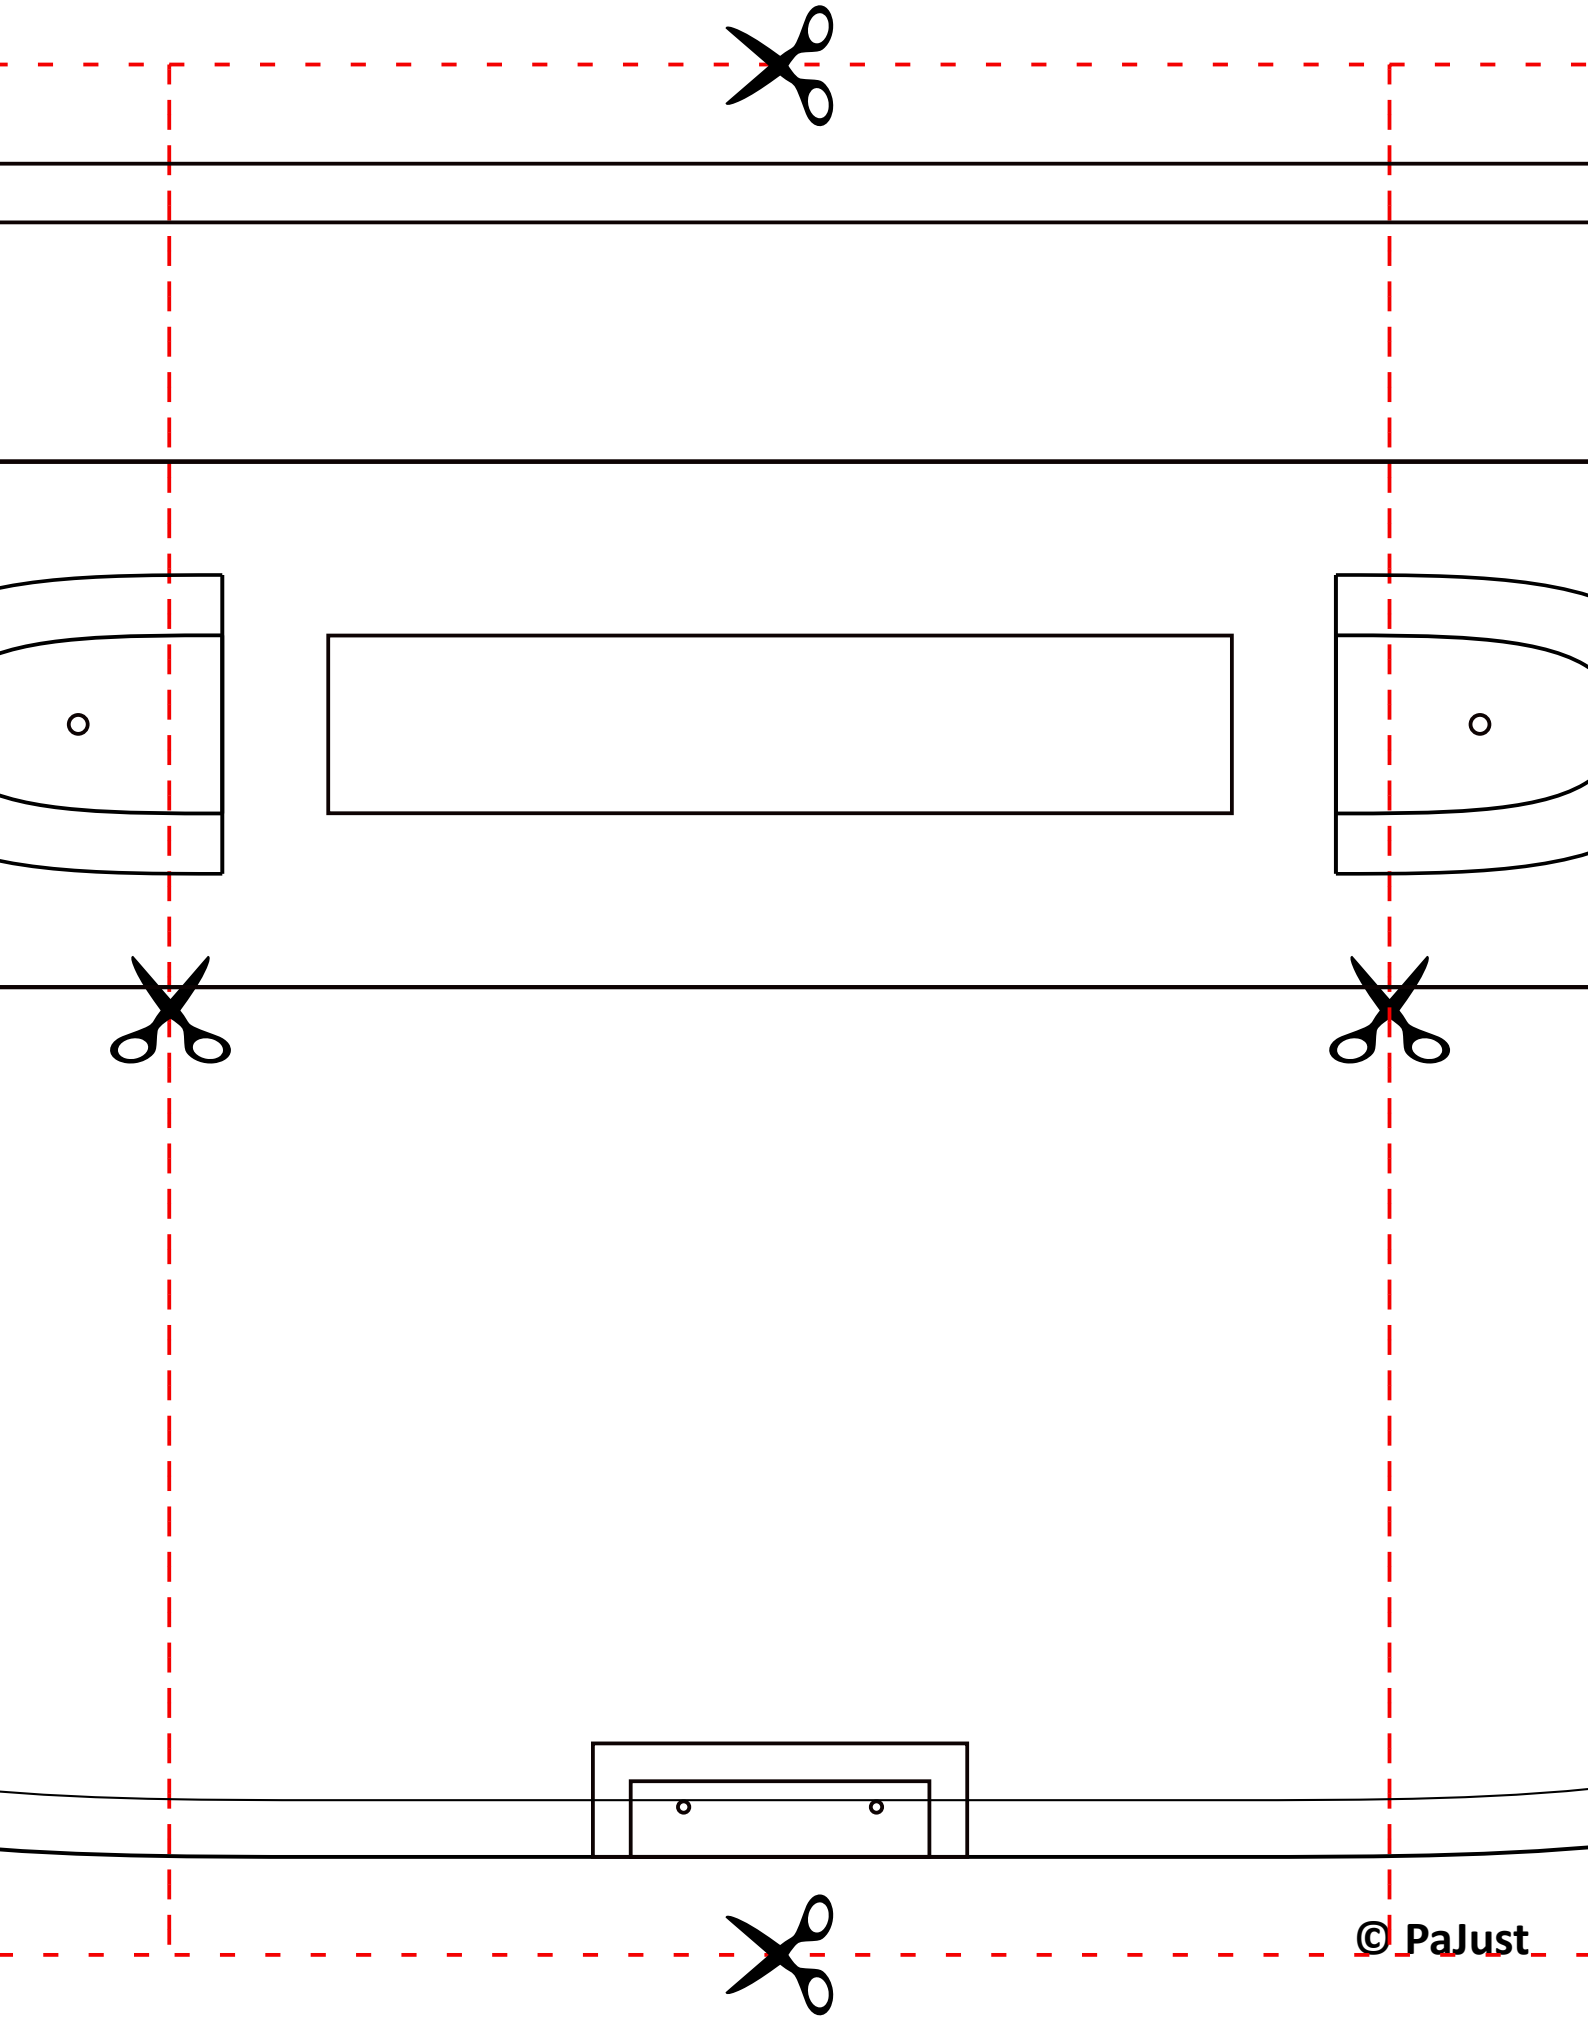


Flip cover 3

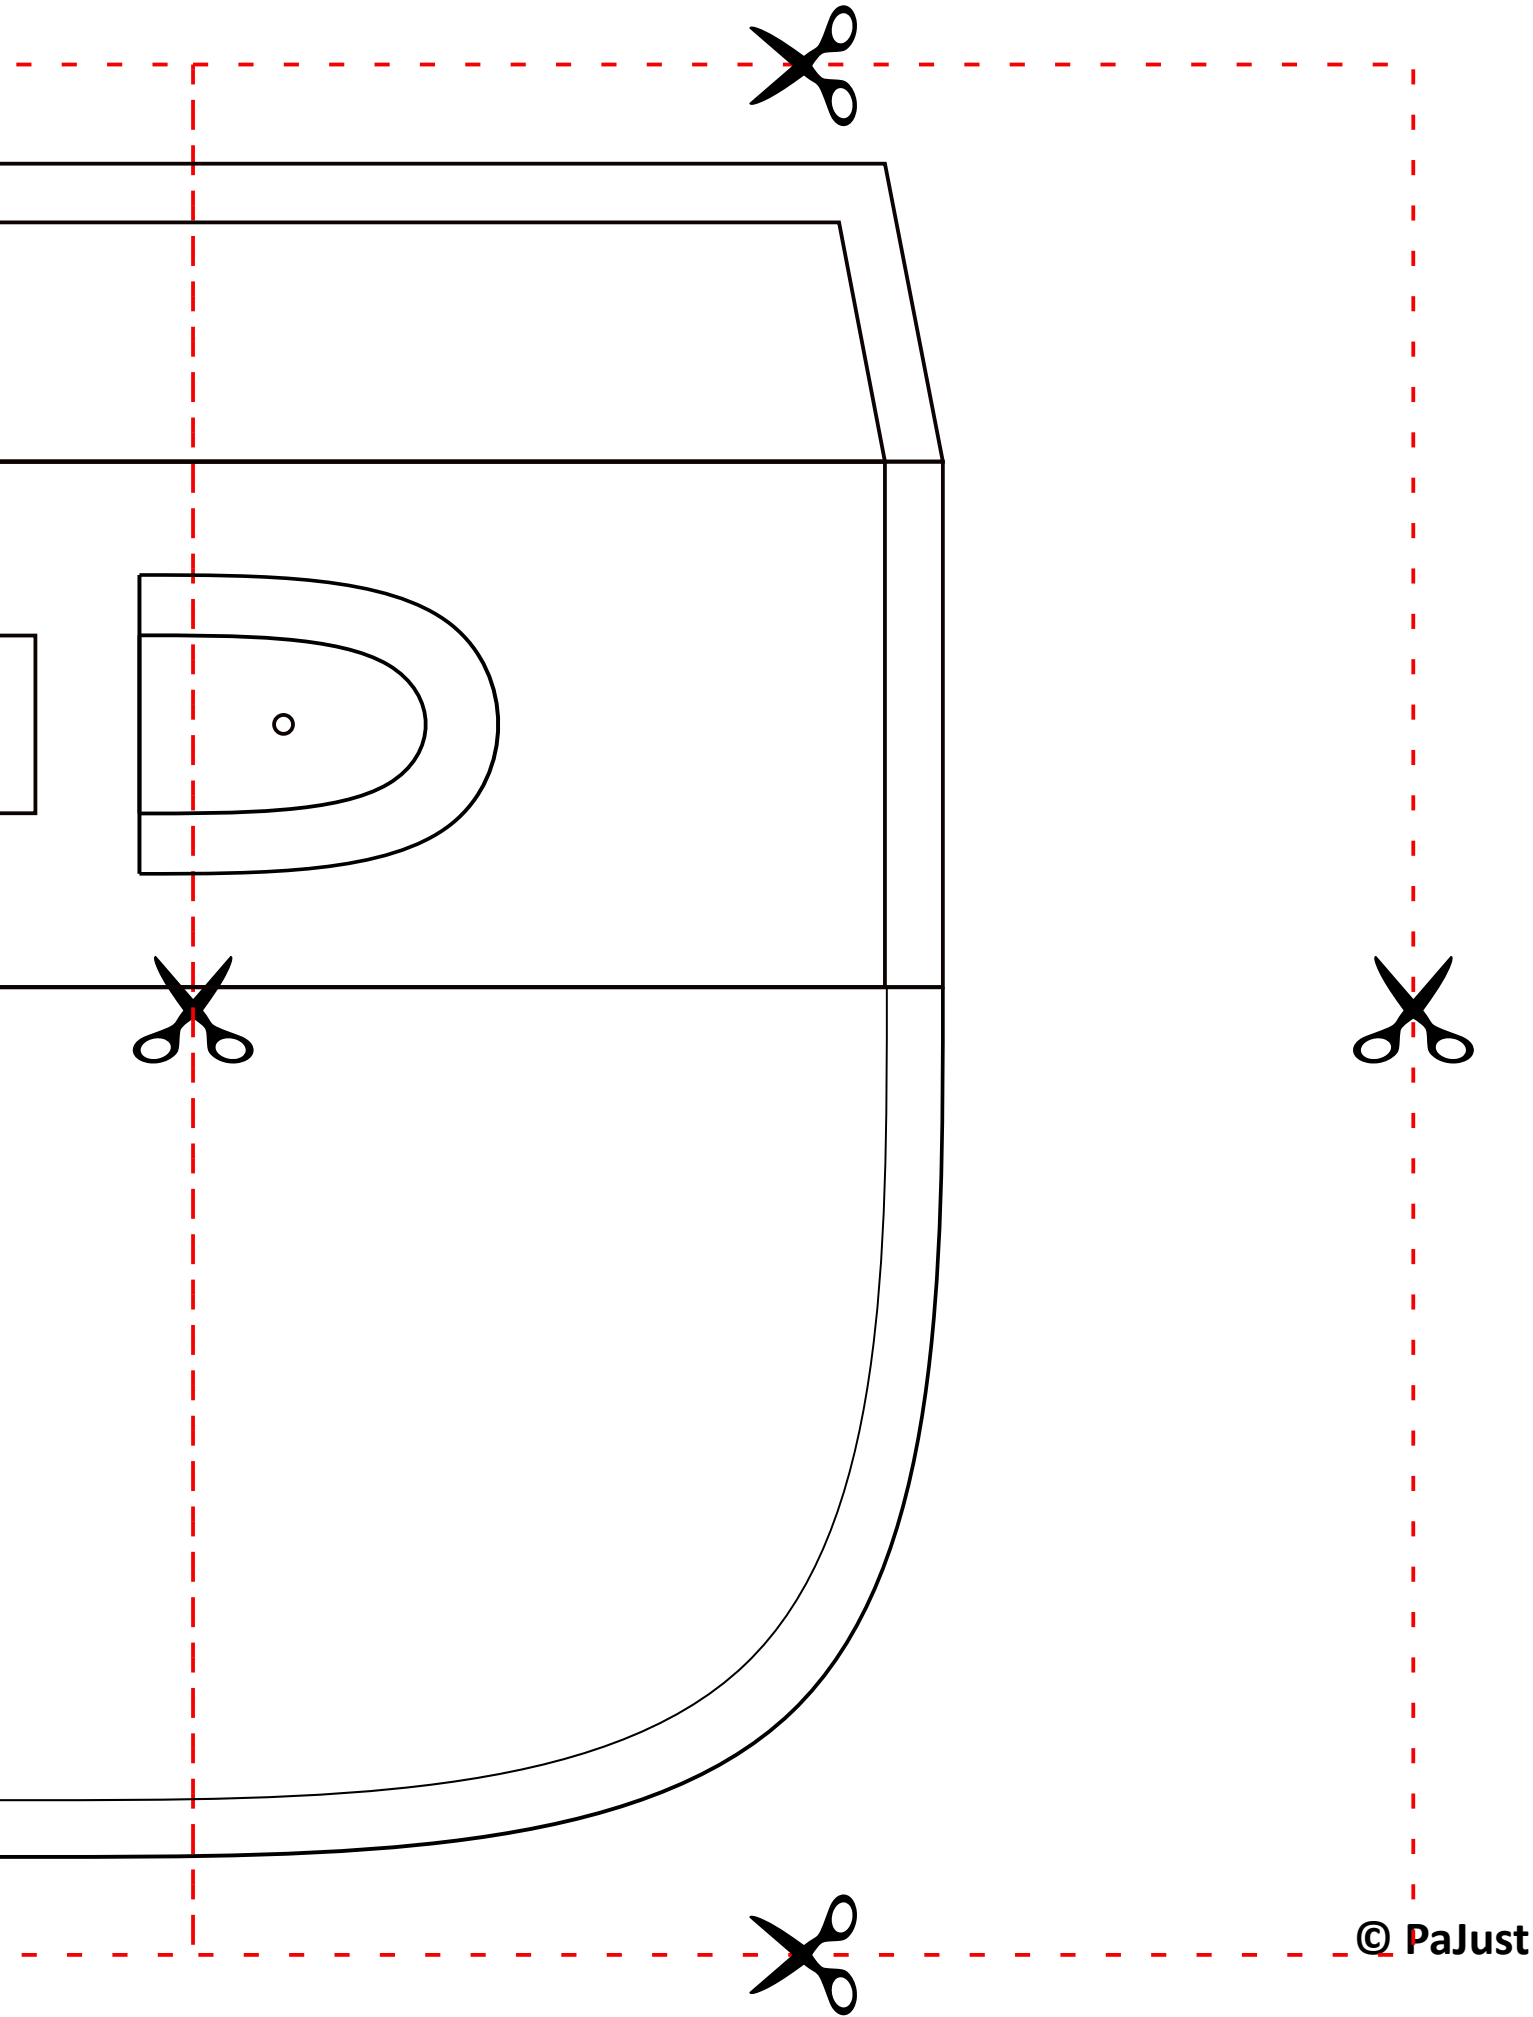





Side gussets 1

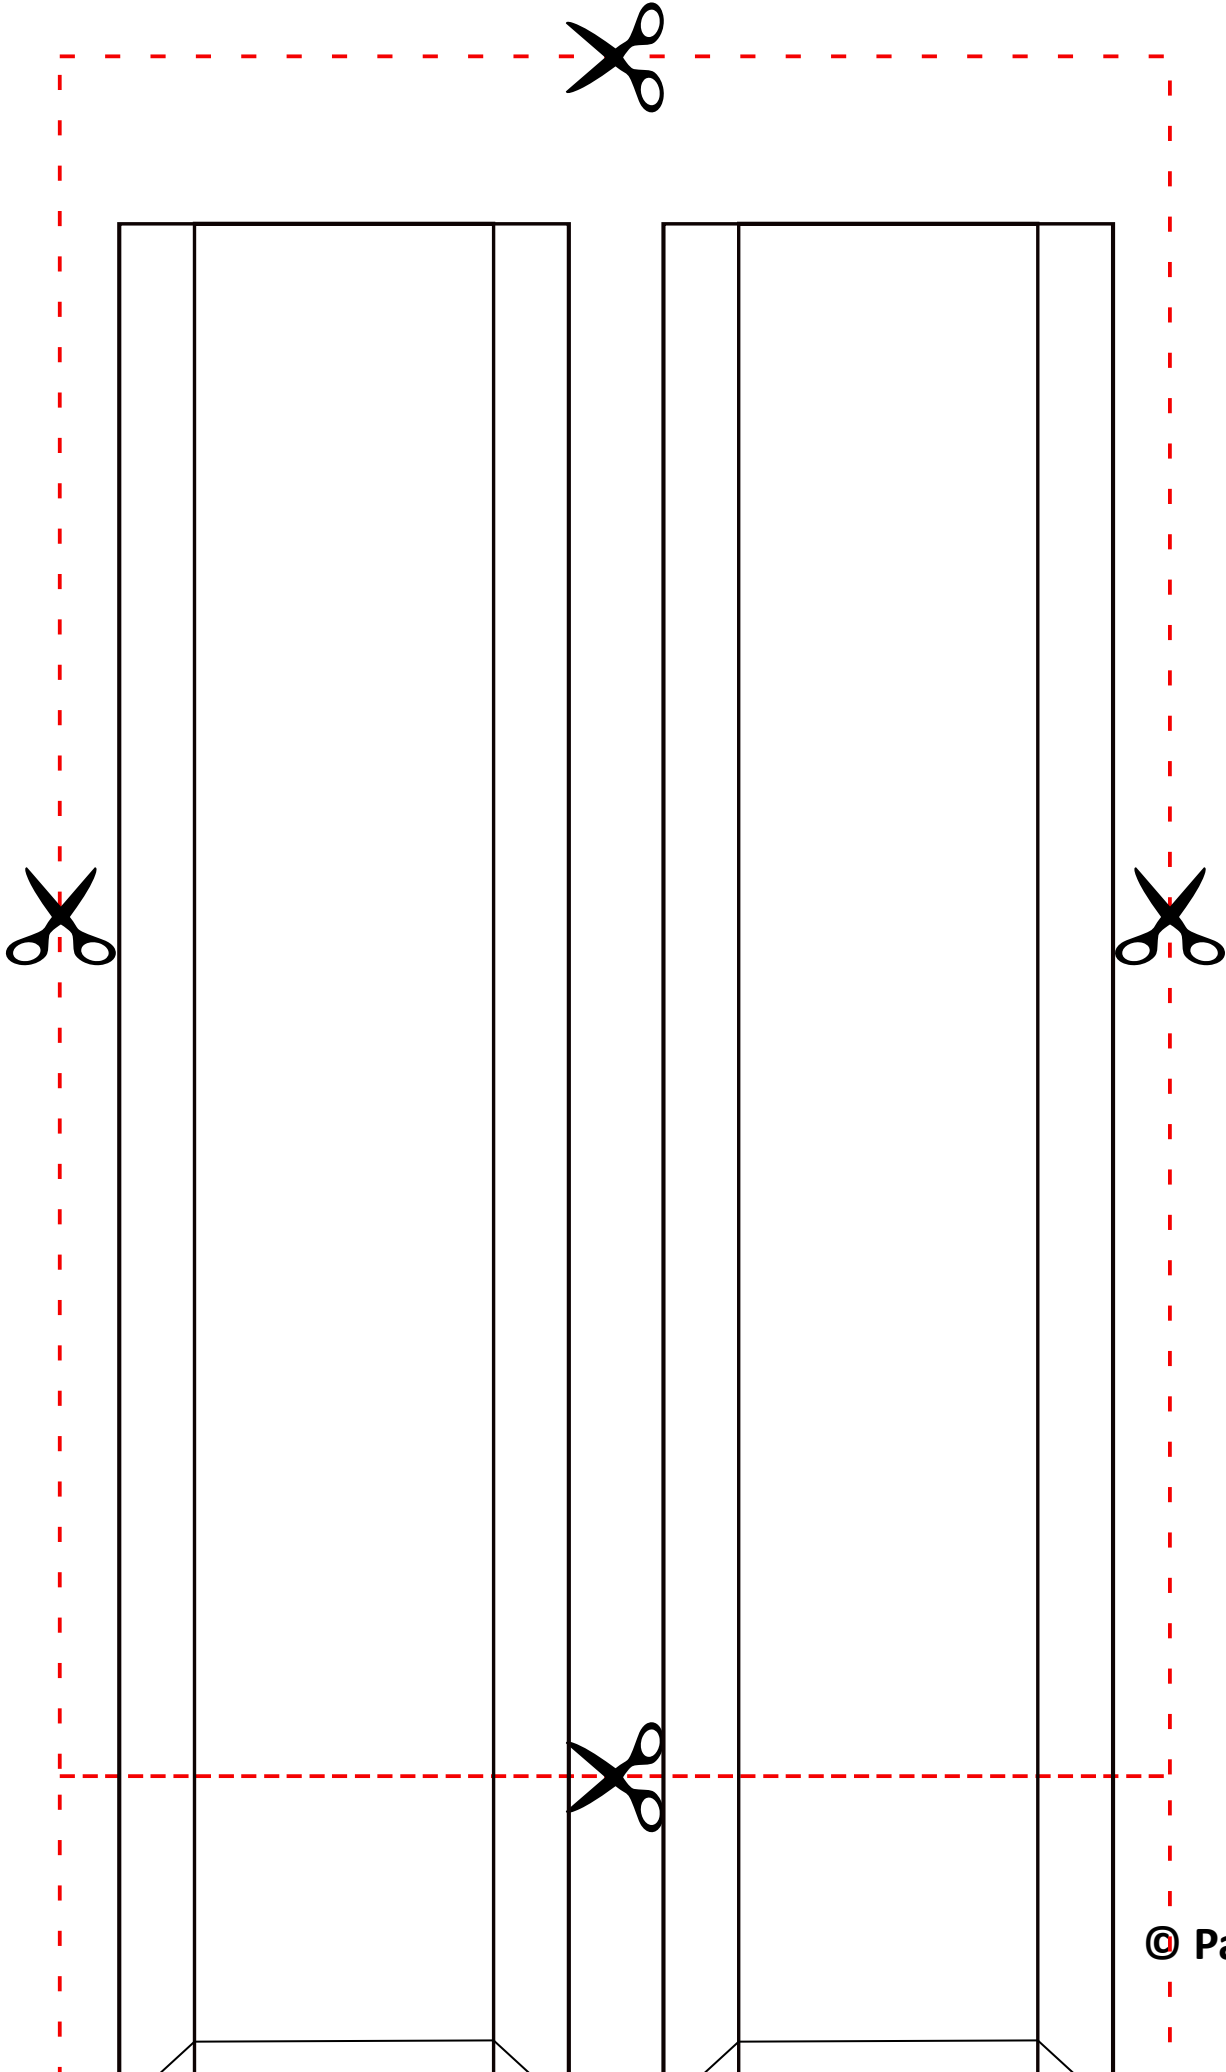


Side gussets 2

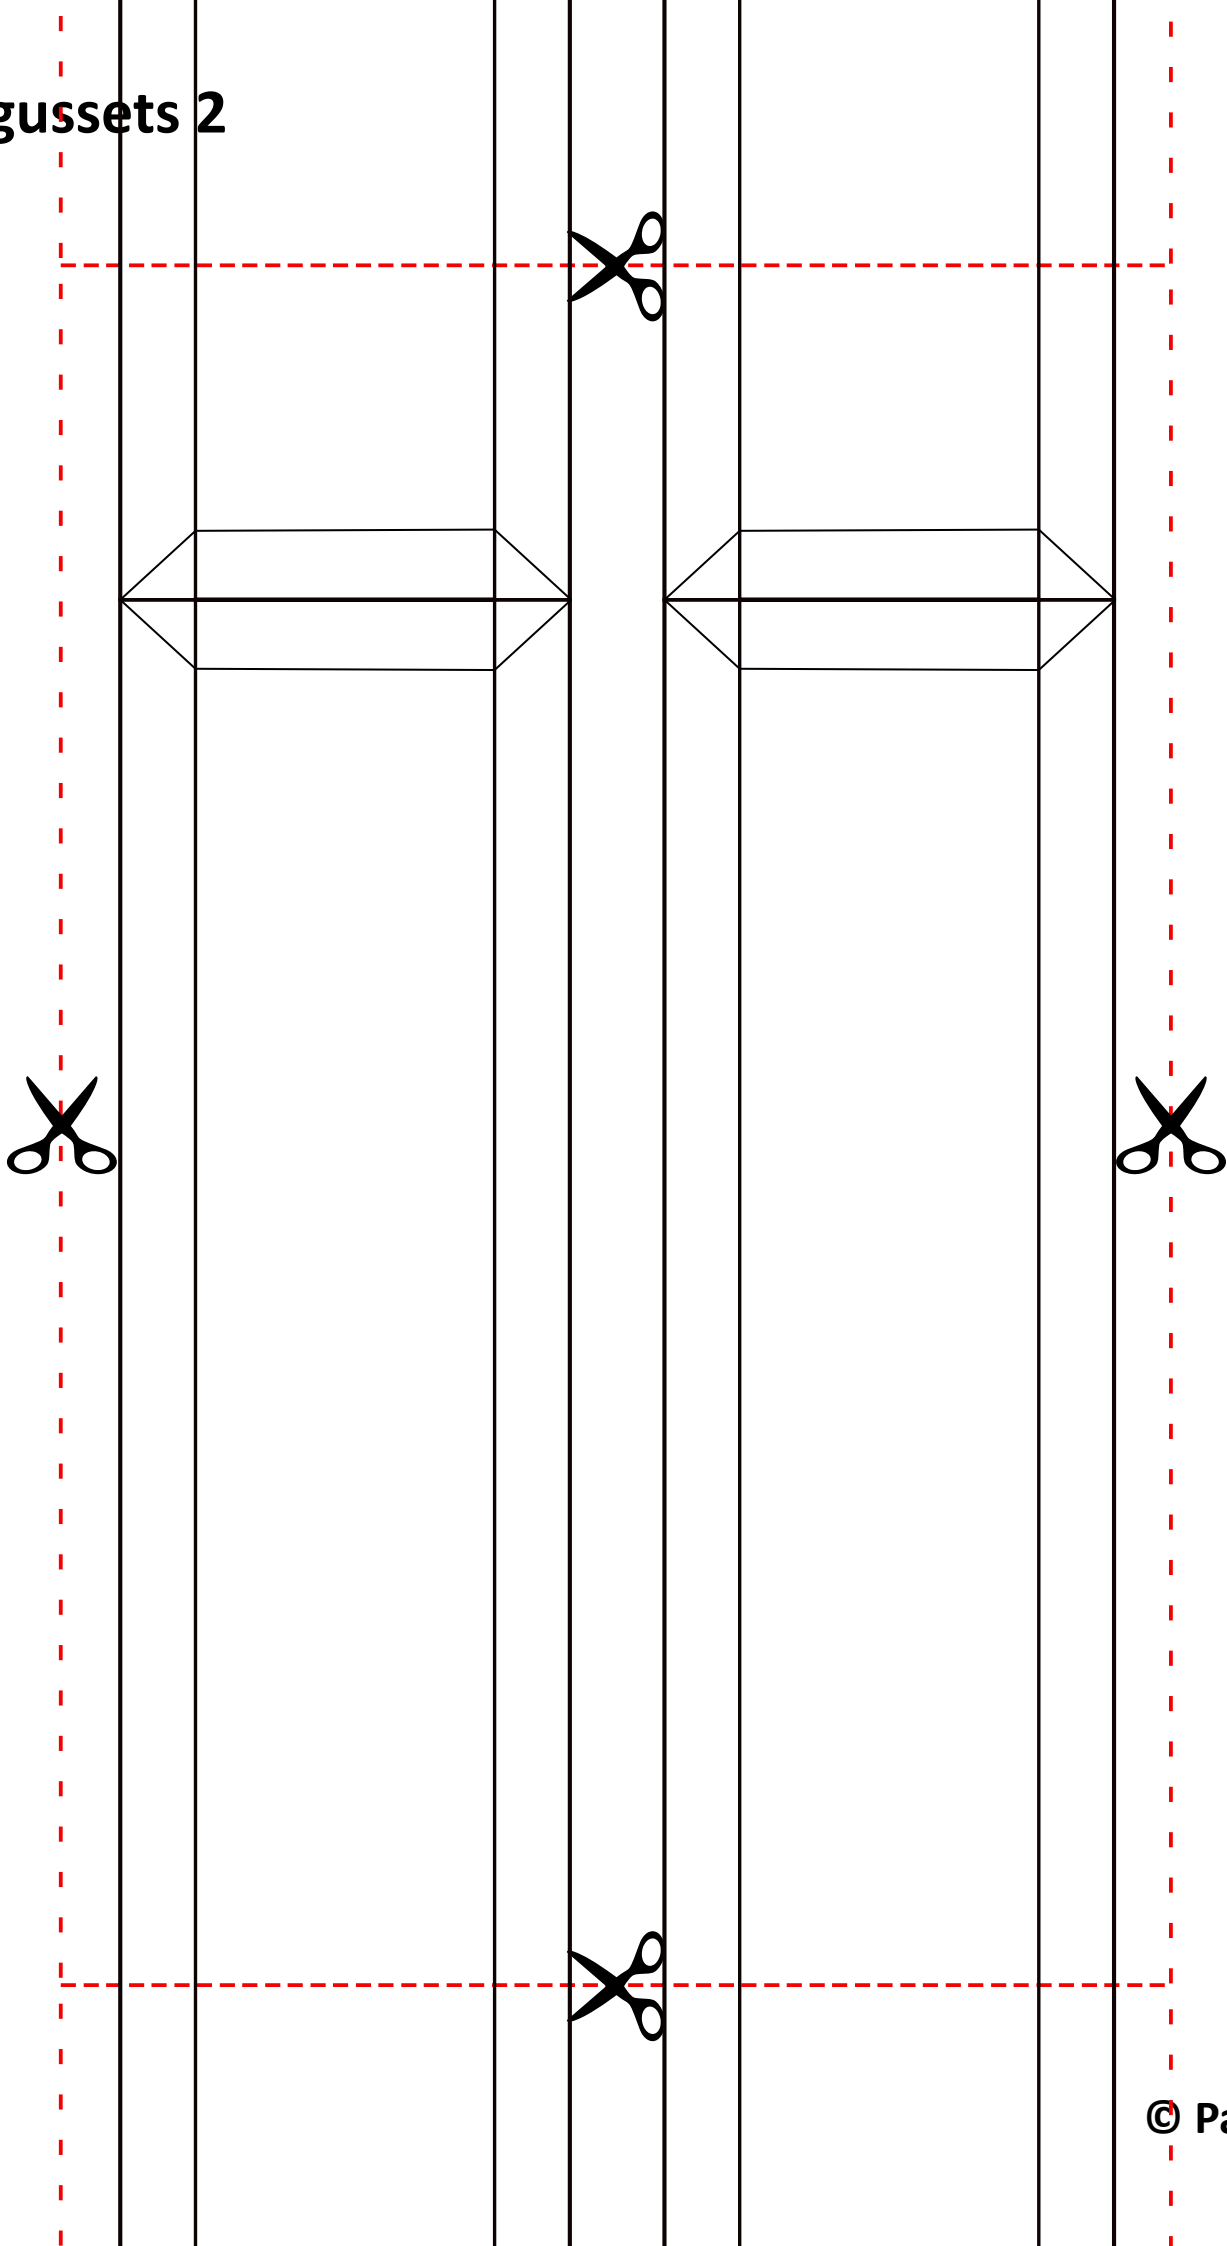


Side gussets 3

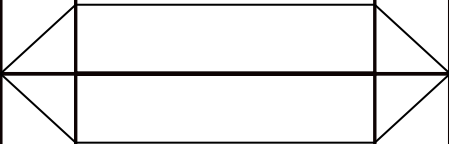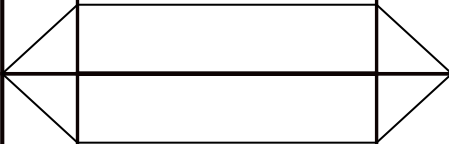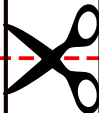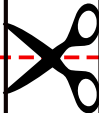




Side gussets 4

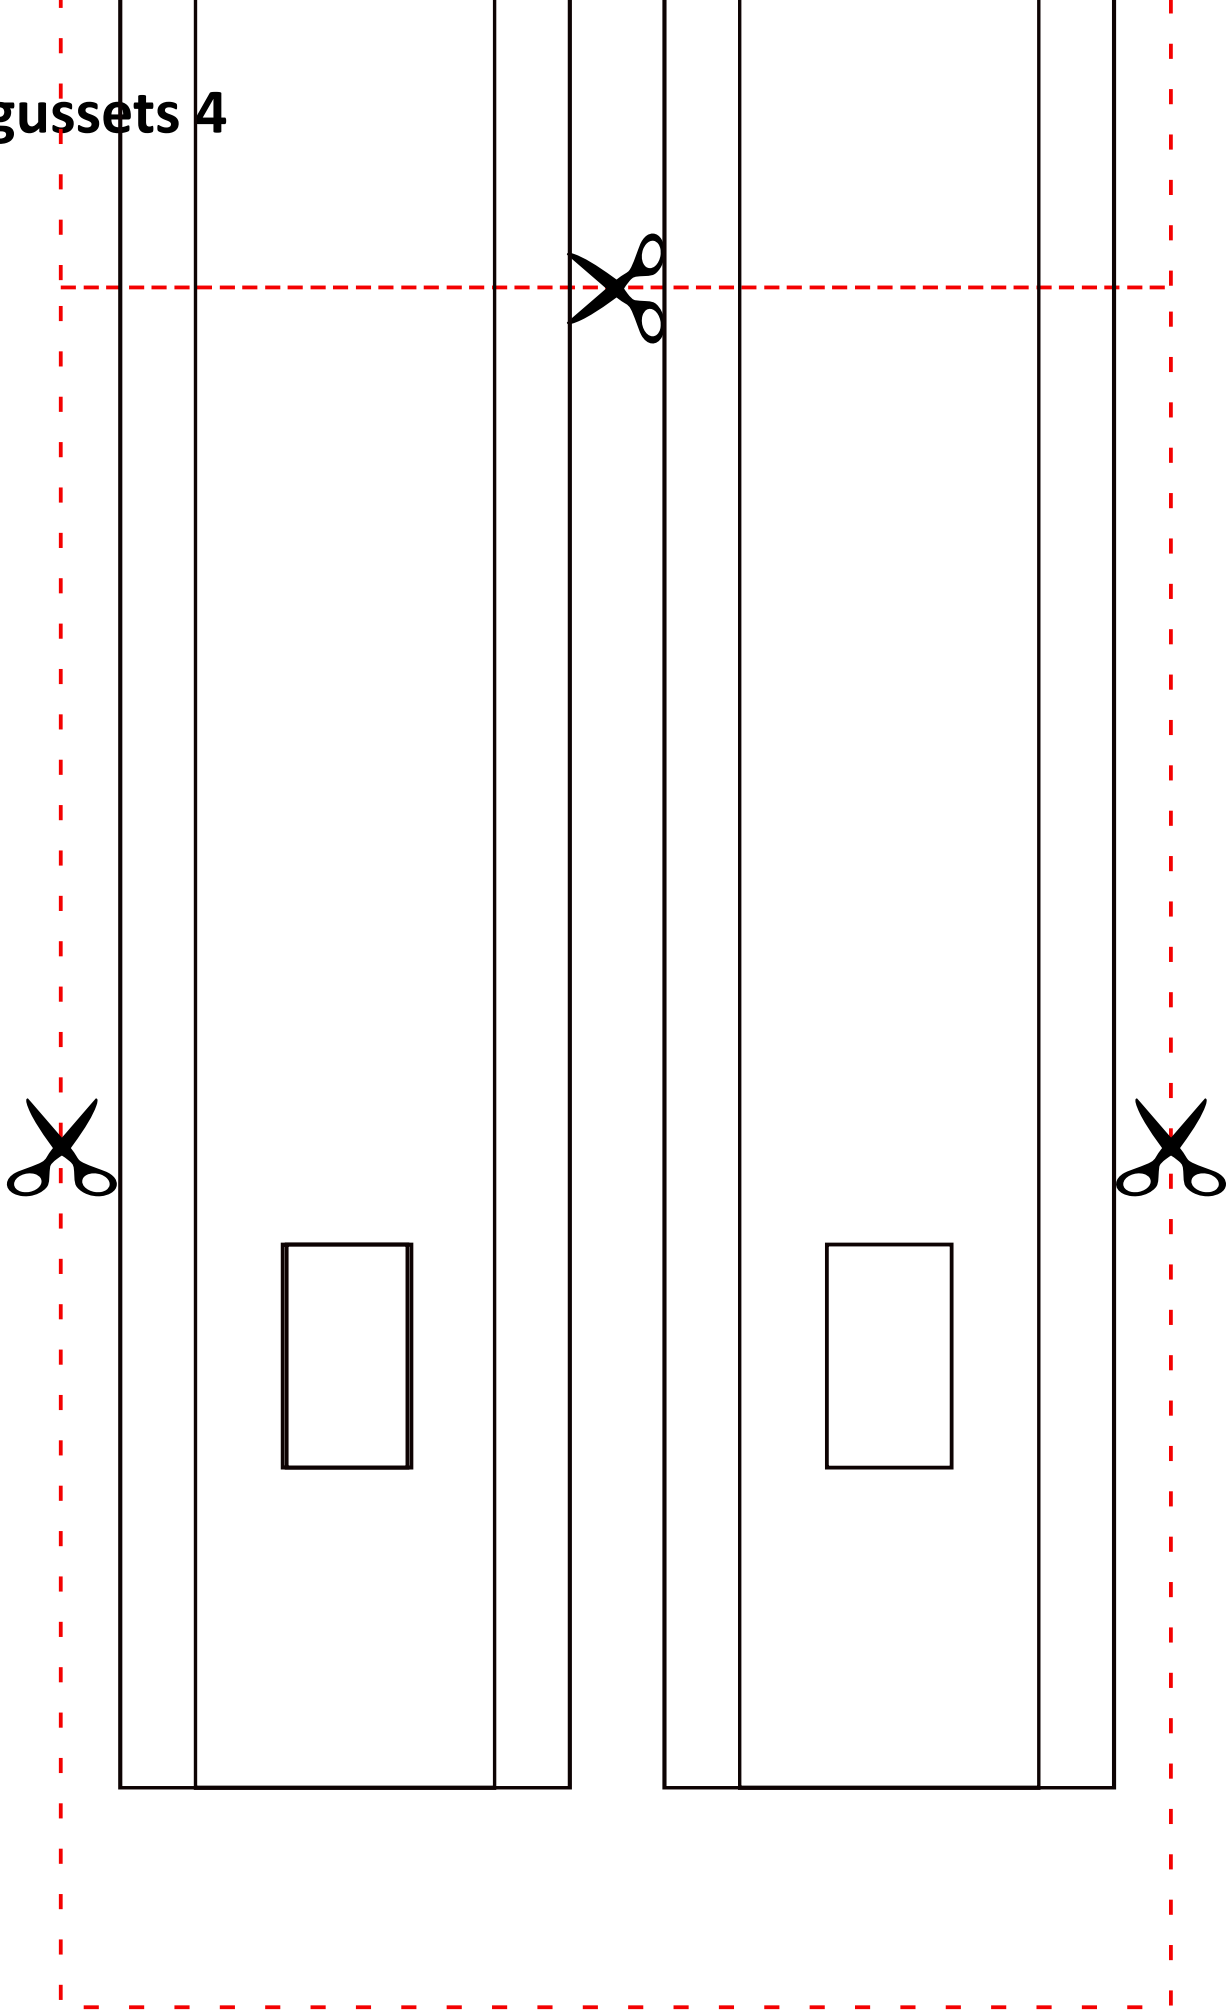

Cover flip handle accessories

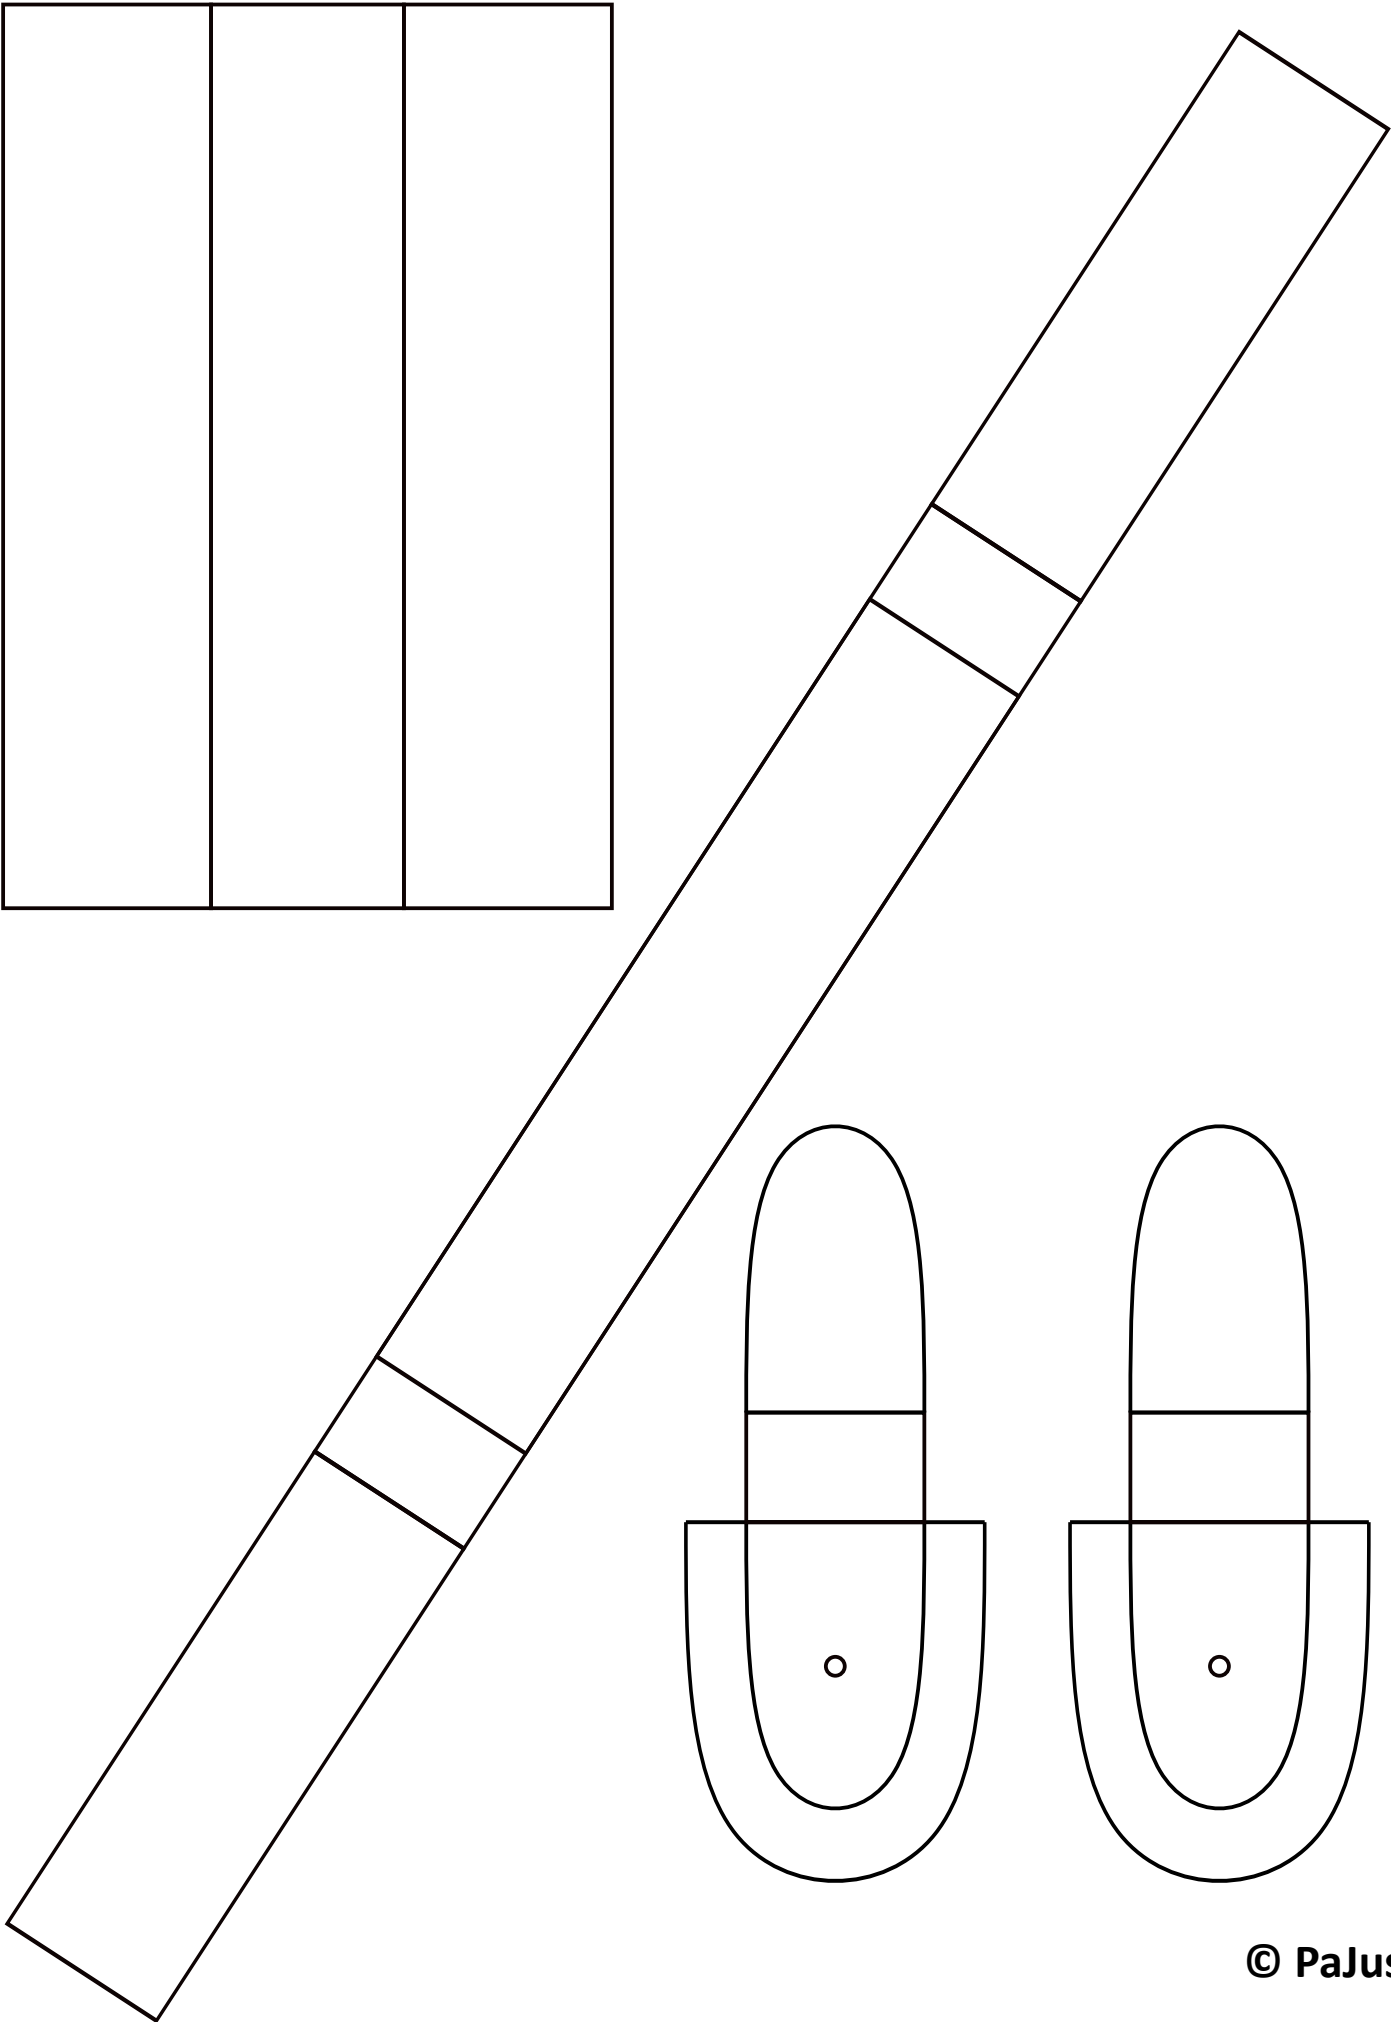


Shoulder strap accessories

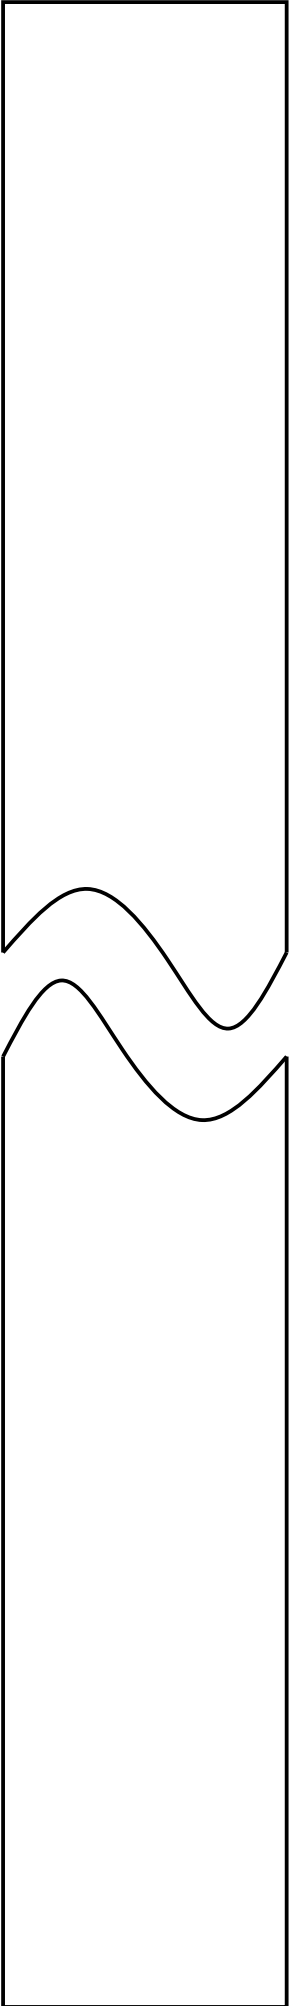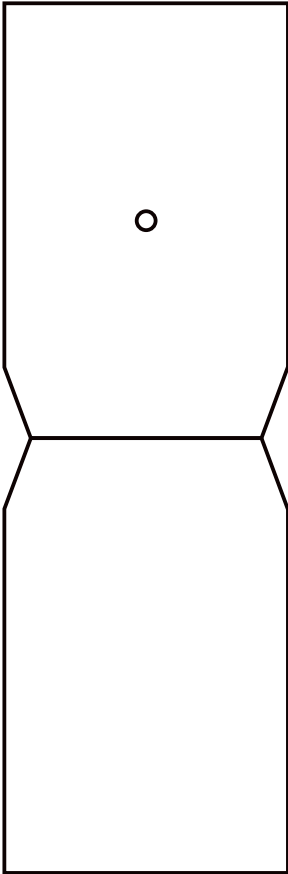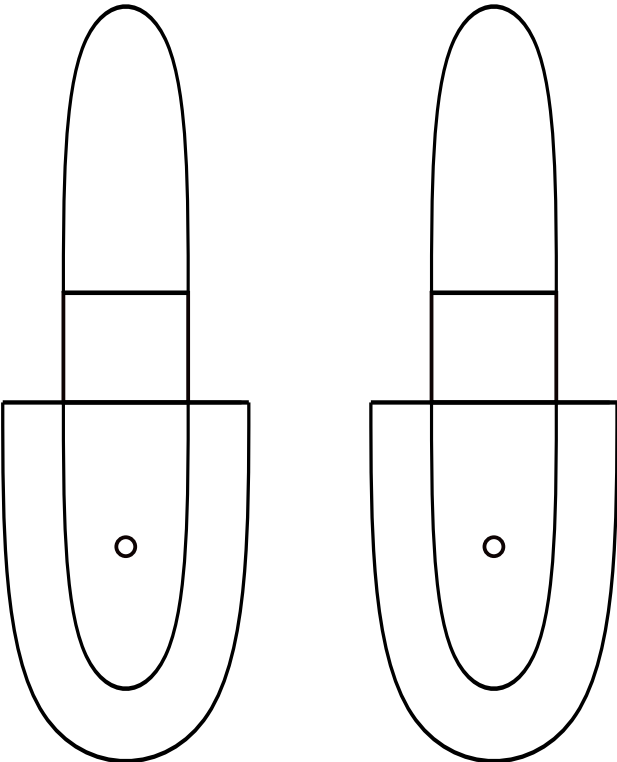


200 cm

Inner pen and phone pockets


Central pocket 1

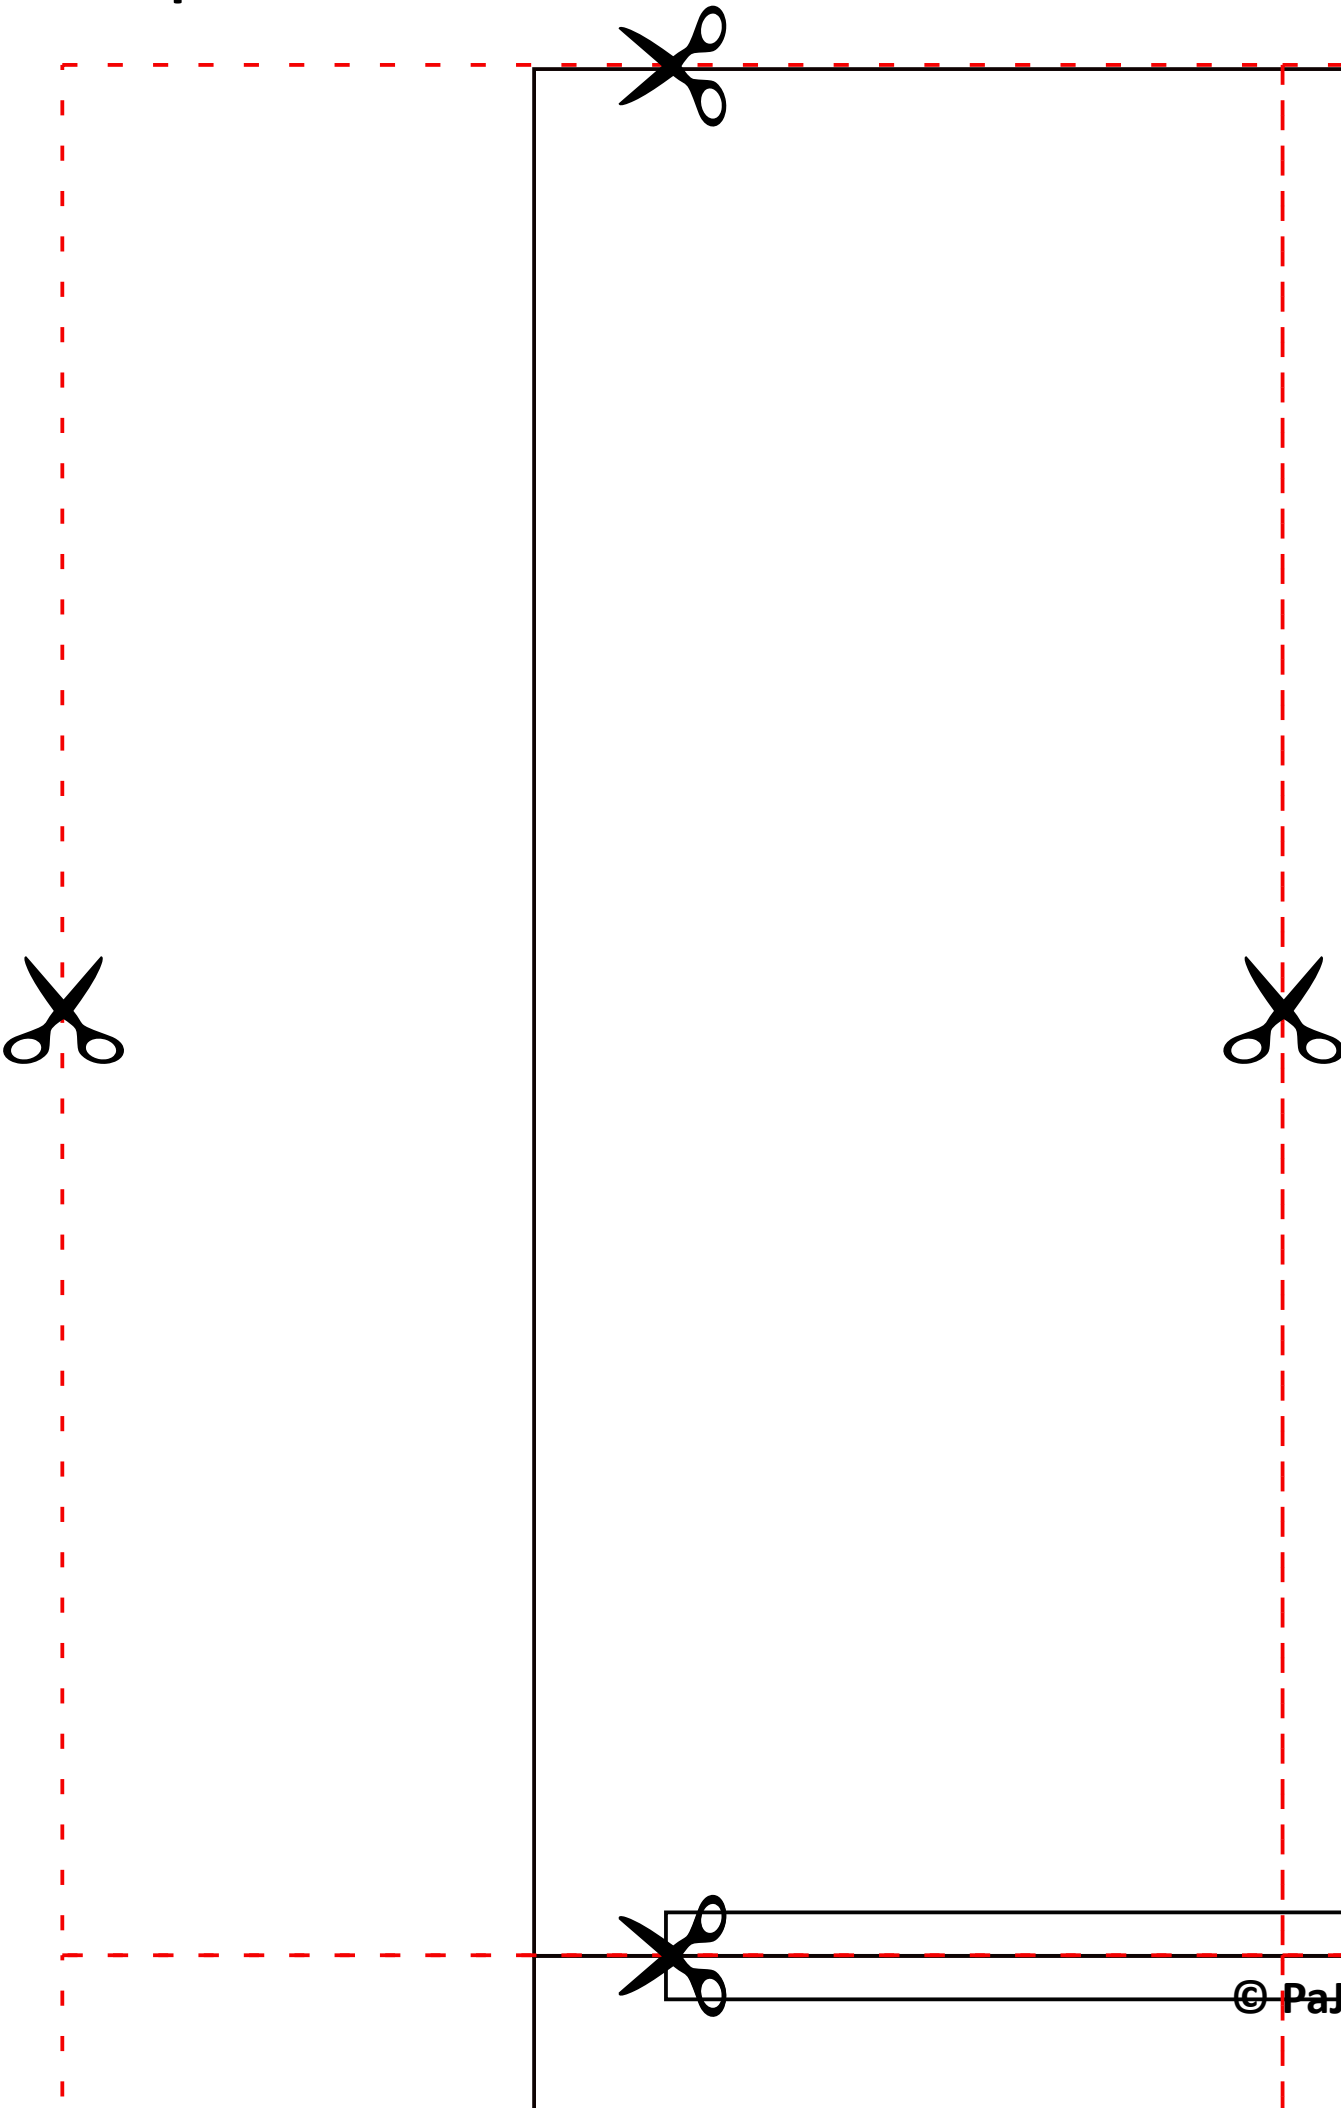


Central pocket 2

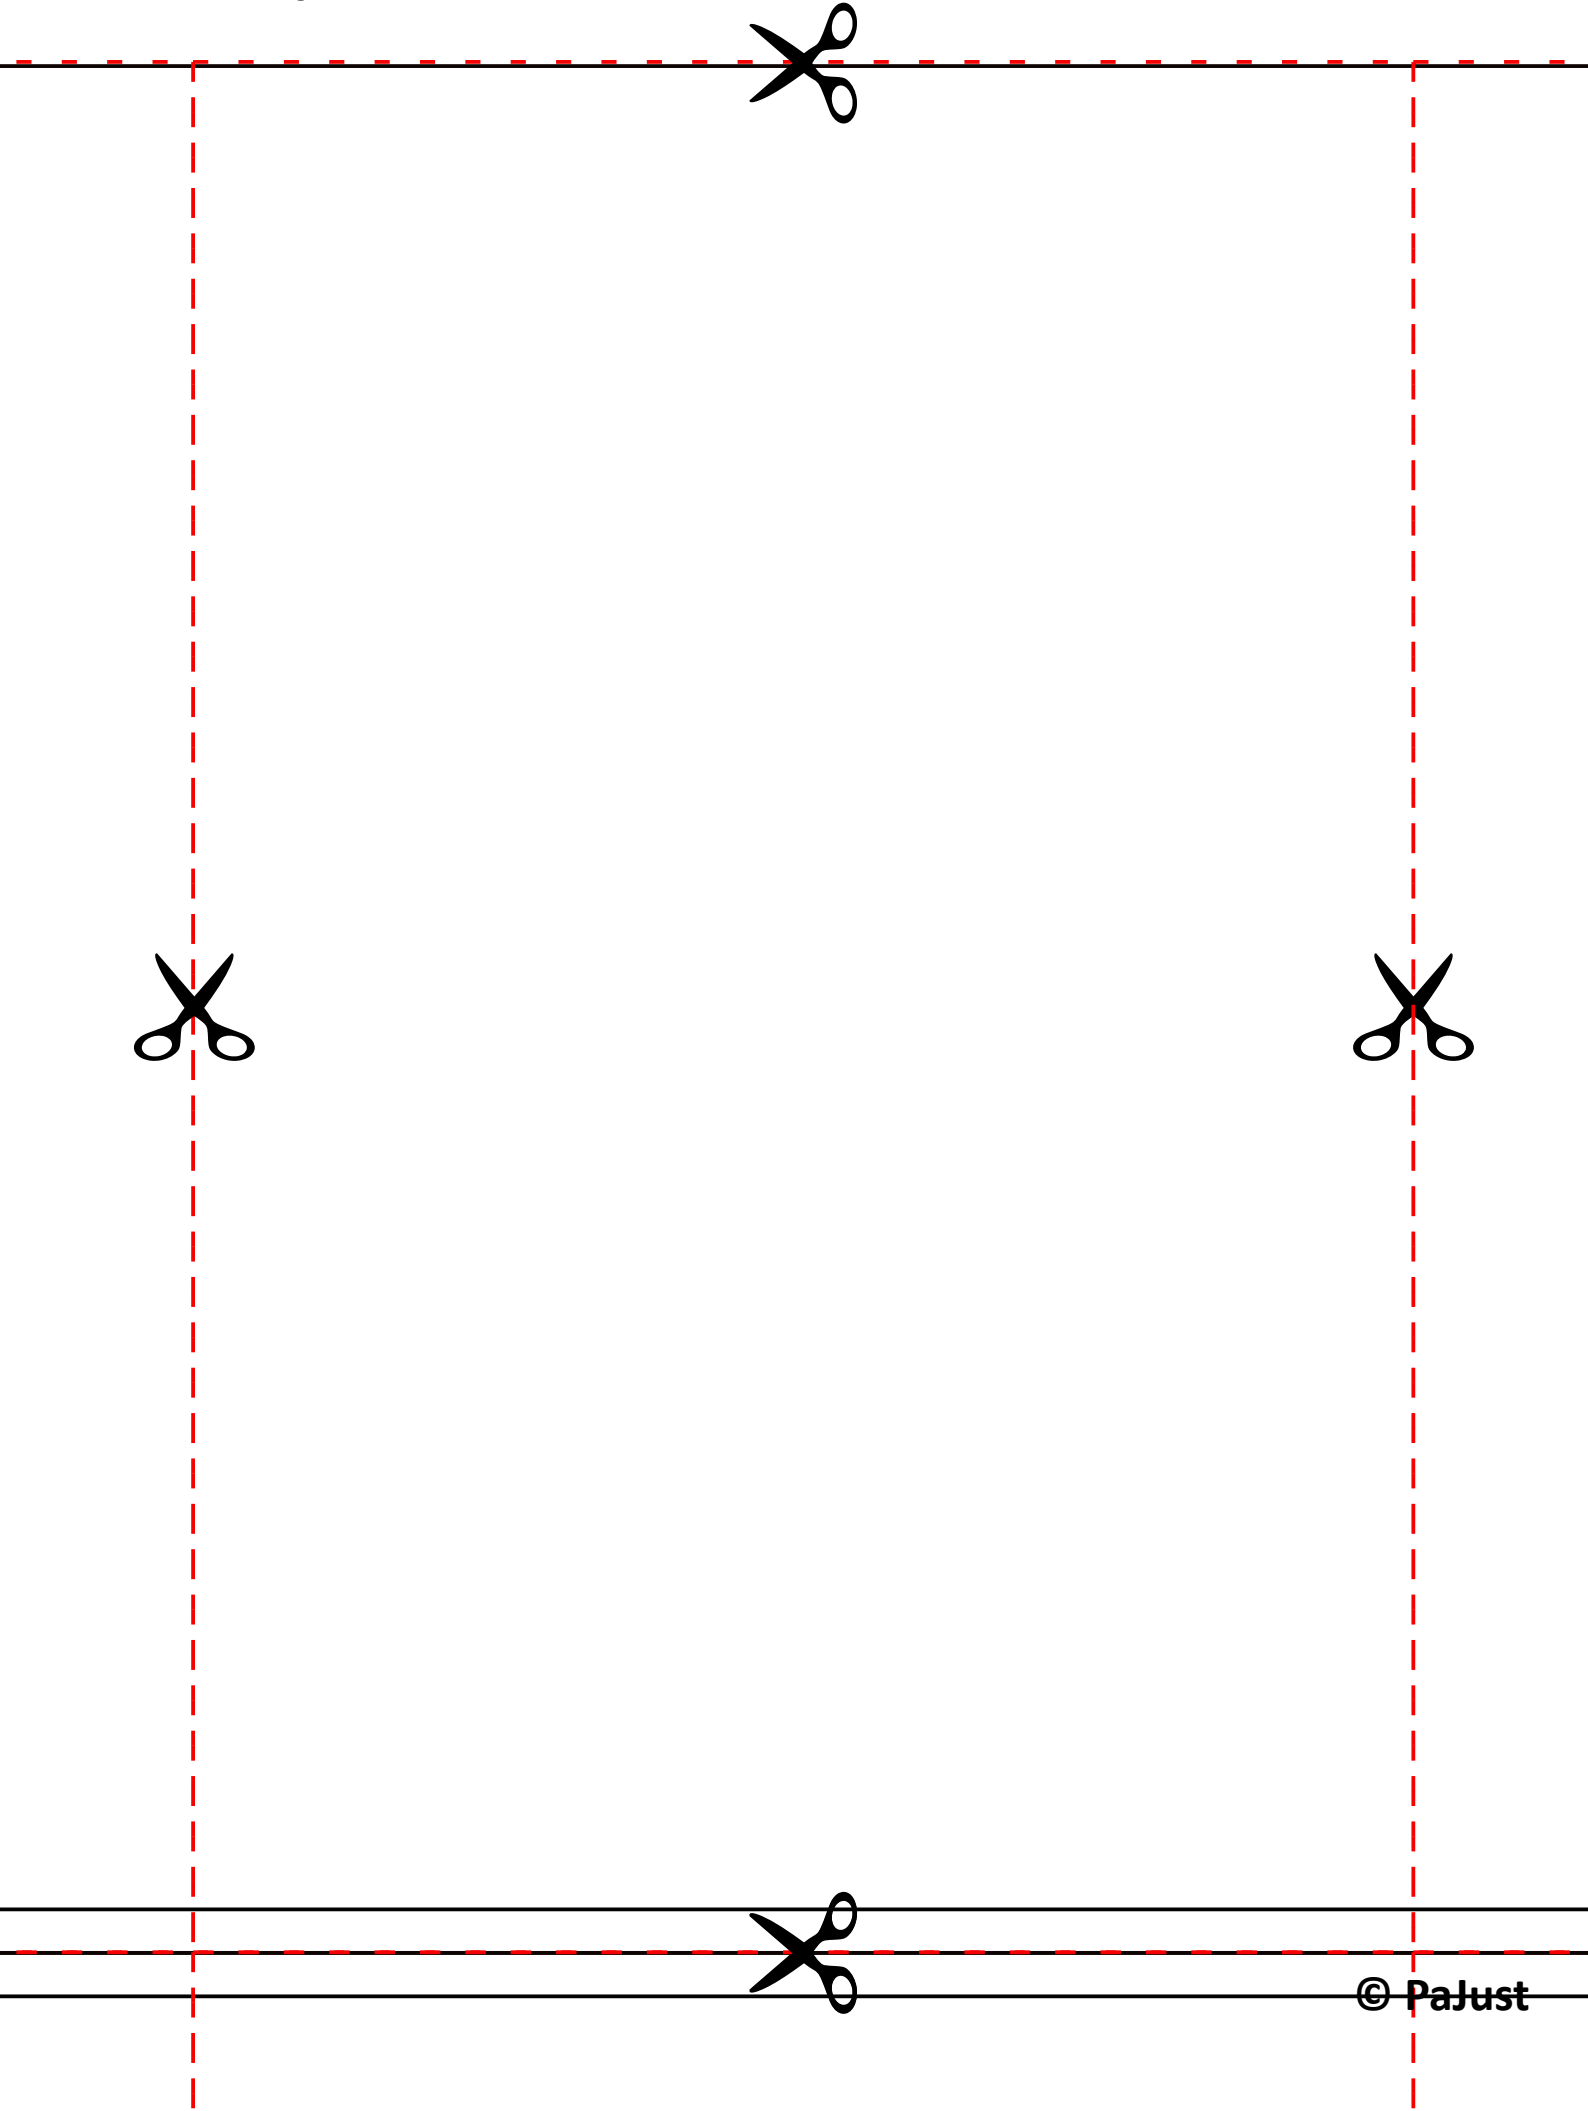


Central pocket 3

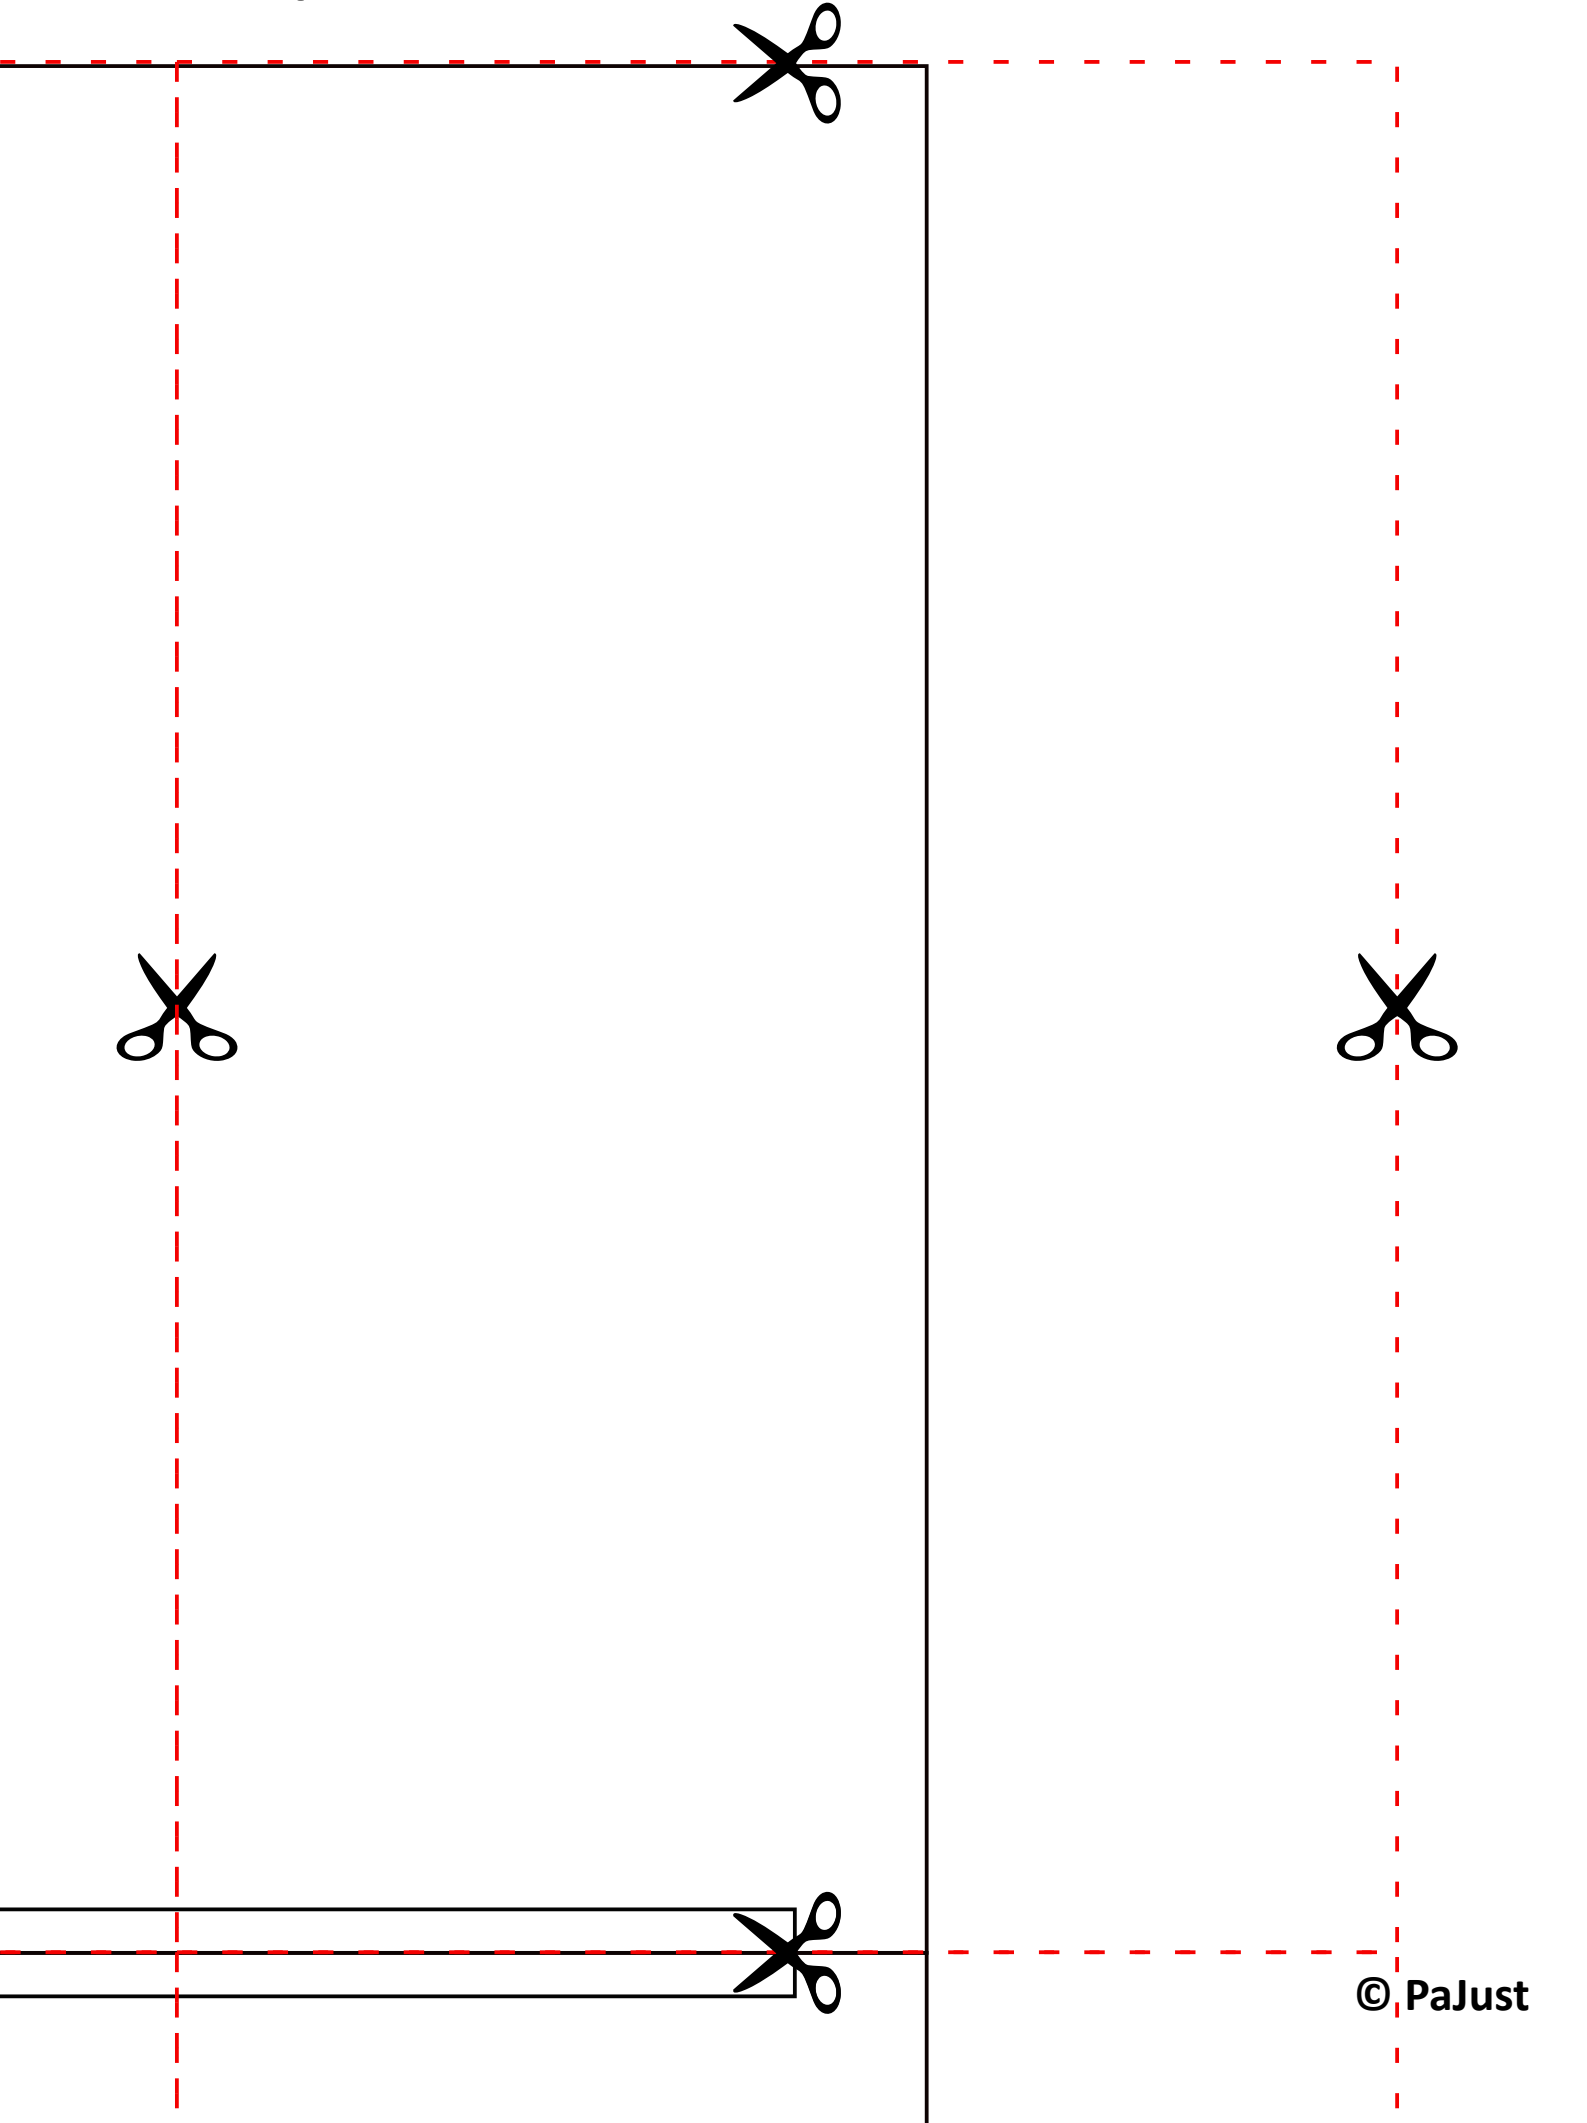


Central pocket 4

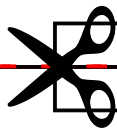

Central pocket 5

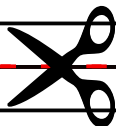

Central pocket 6

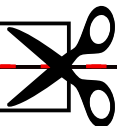

Outer pocket lining 1



Outer pocket lining 2



Outer pocket lining 3



Outer pocket lining 4



Outer pocket lining 5



Outer pocket lining 6

