





PaJust Women's Shoulder Bag Pattern

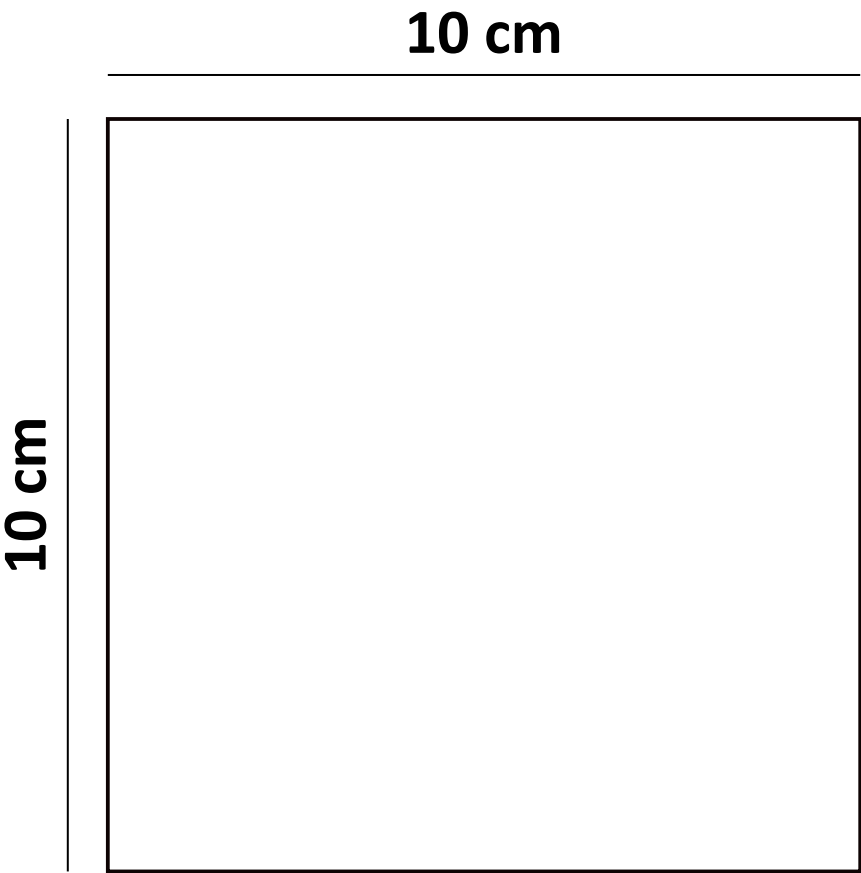


Print test page




Front

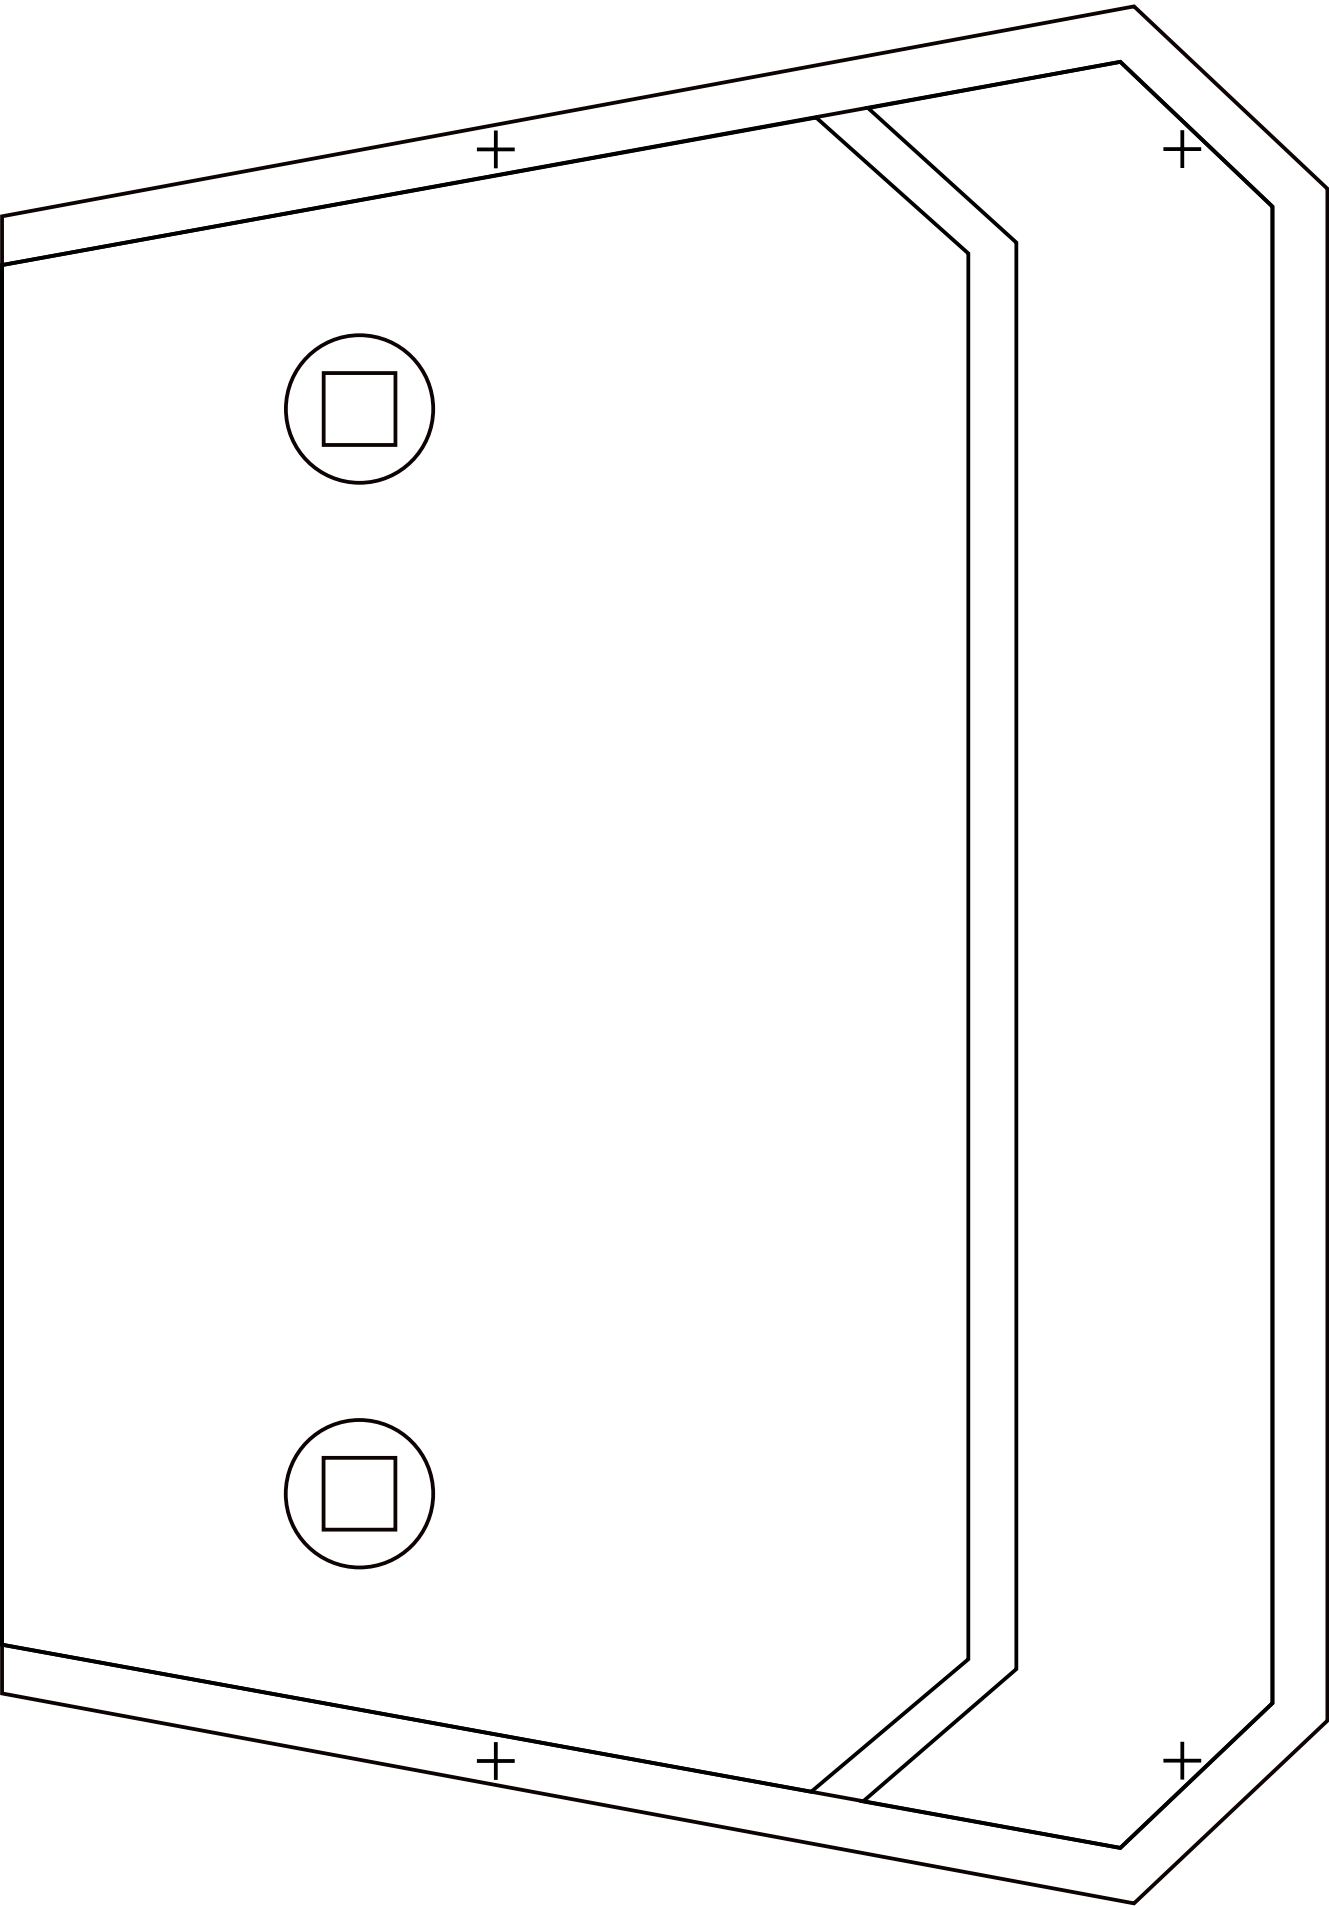


Front with art

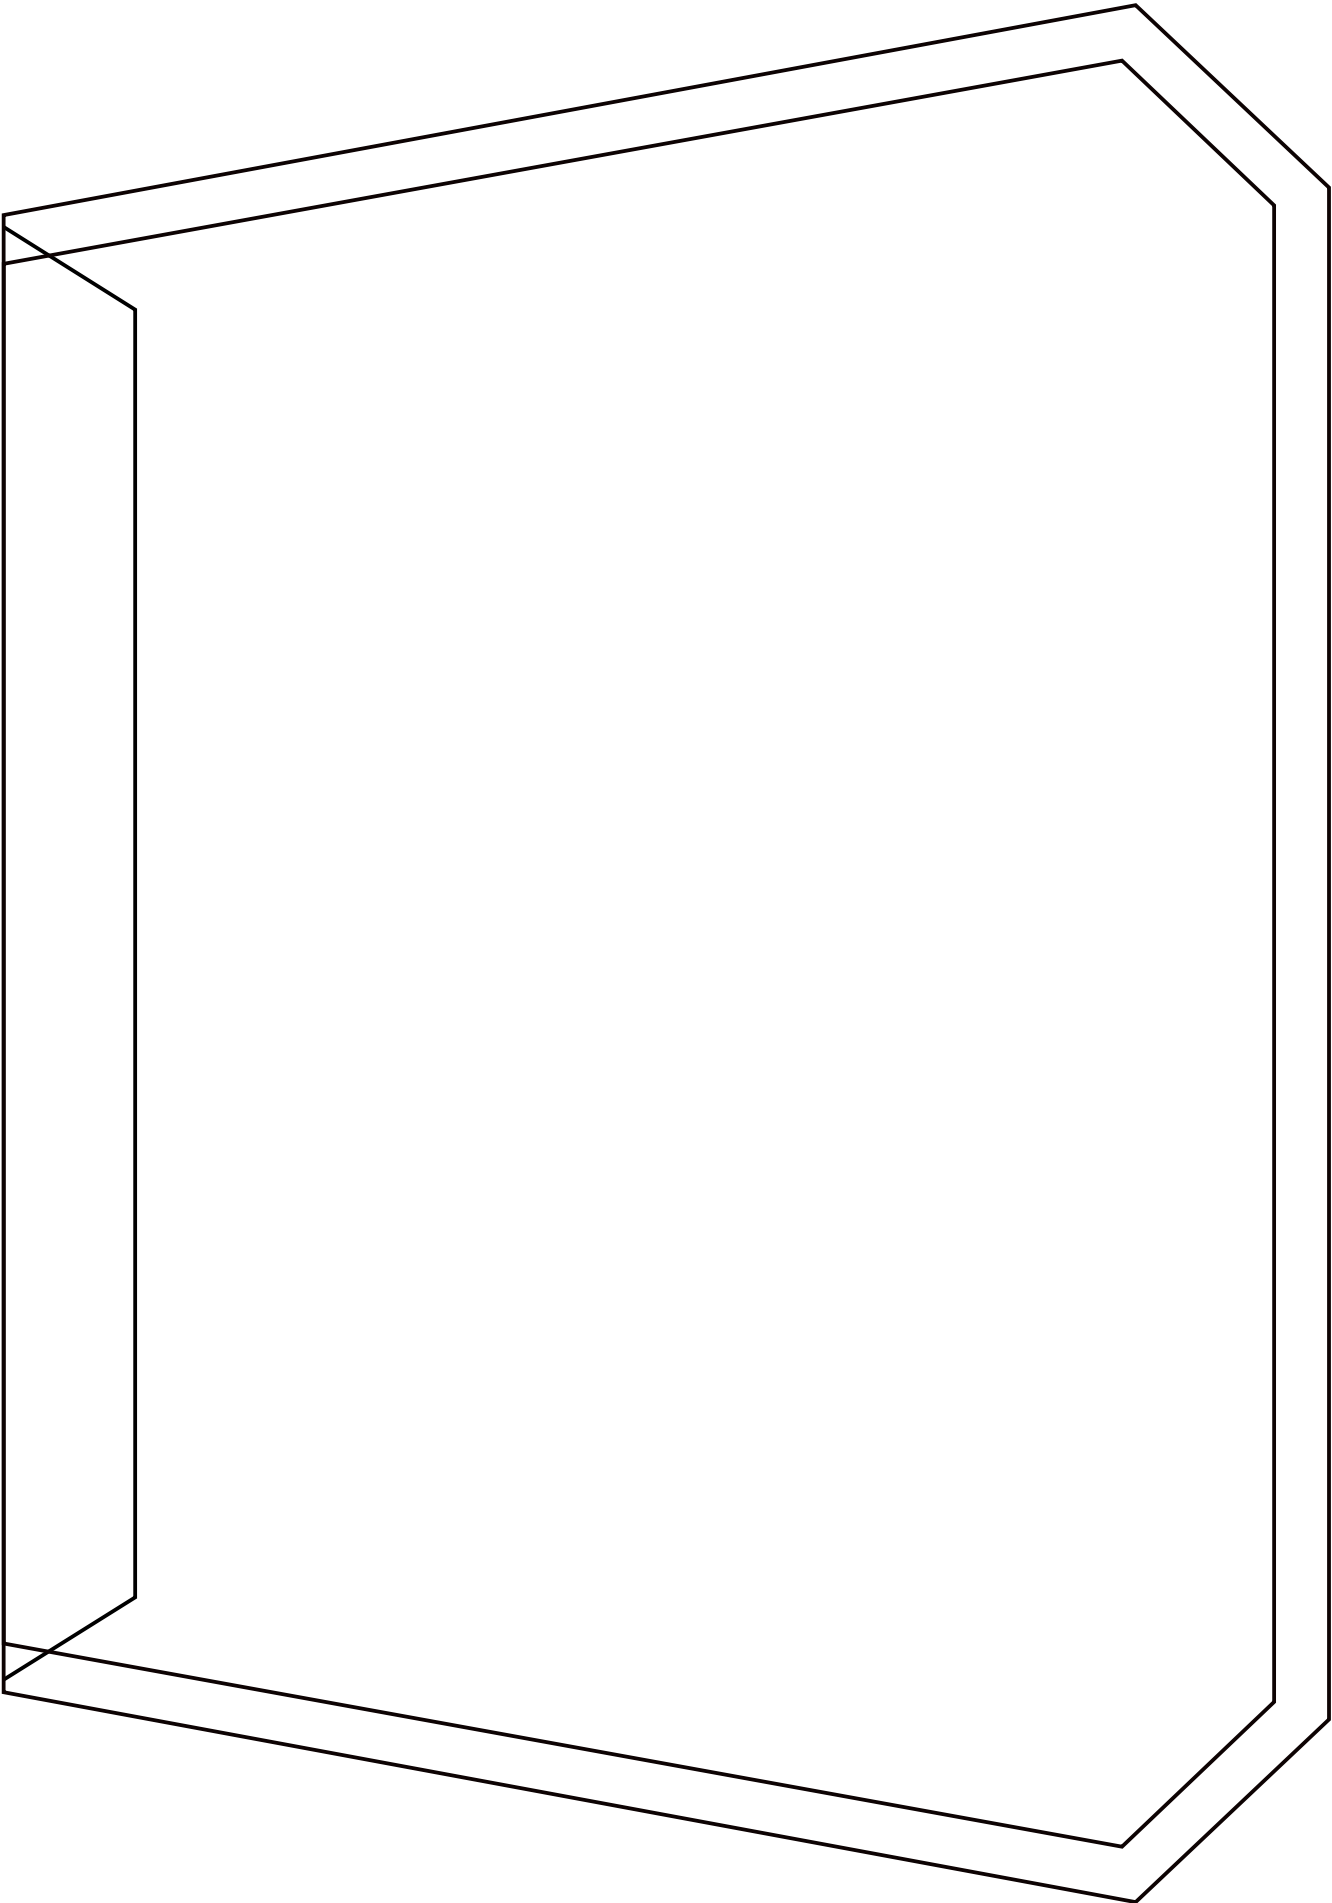


Closure Flap

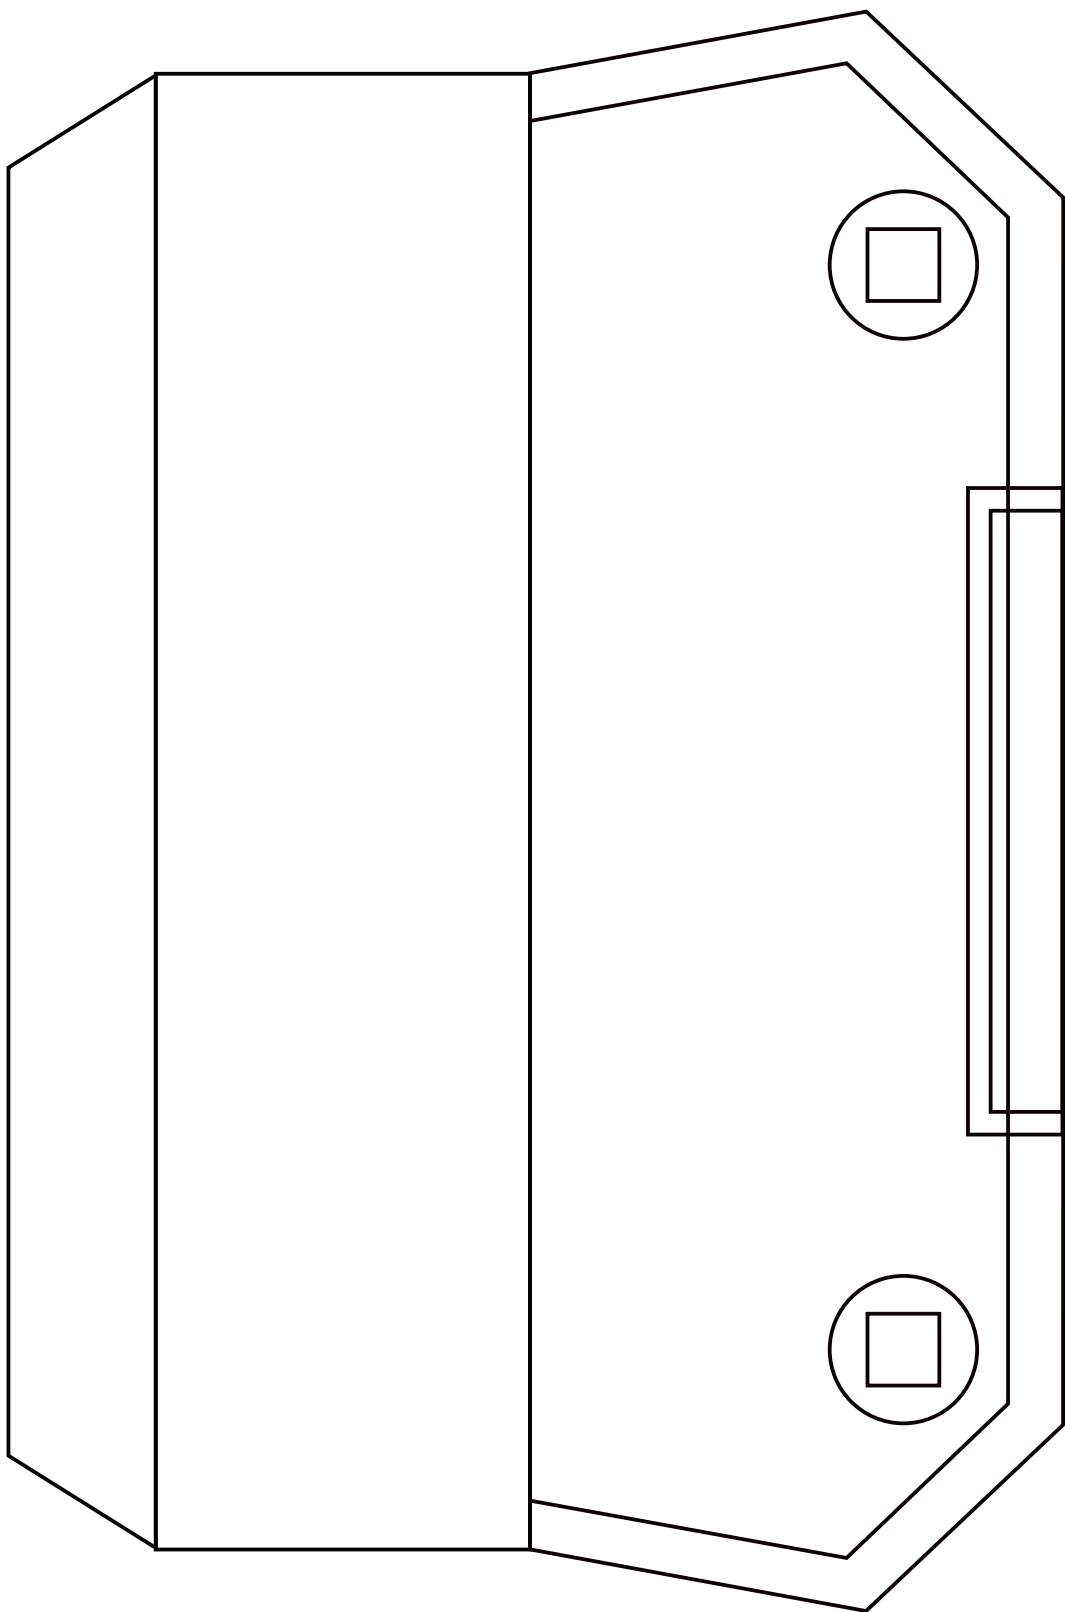


Front with art

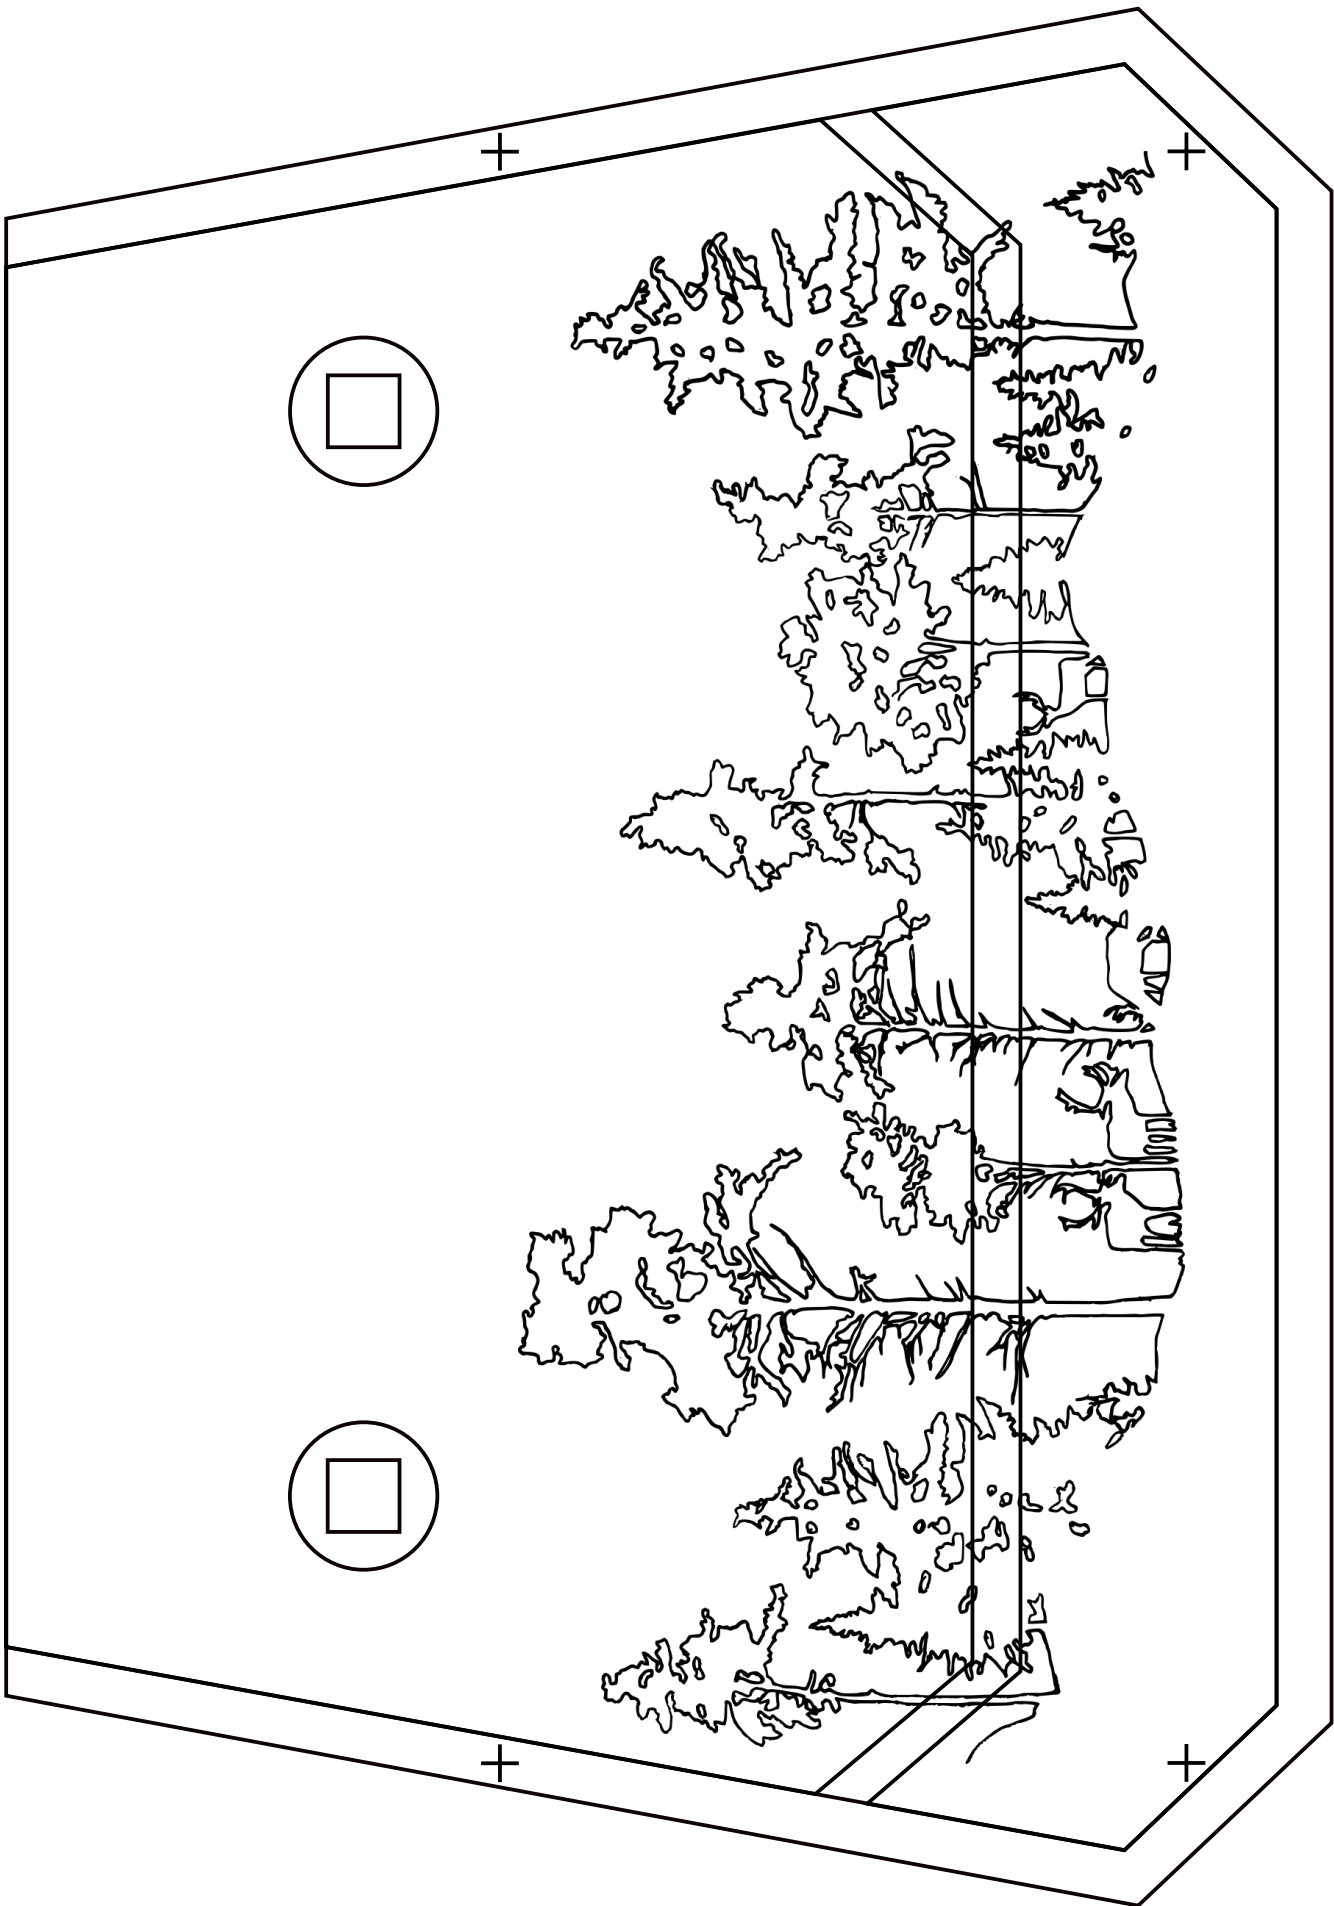


Front inner lining with pocket

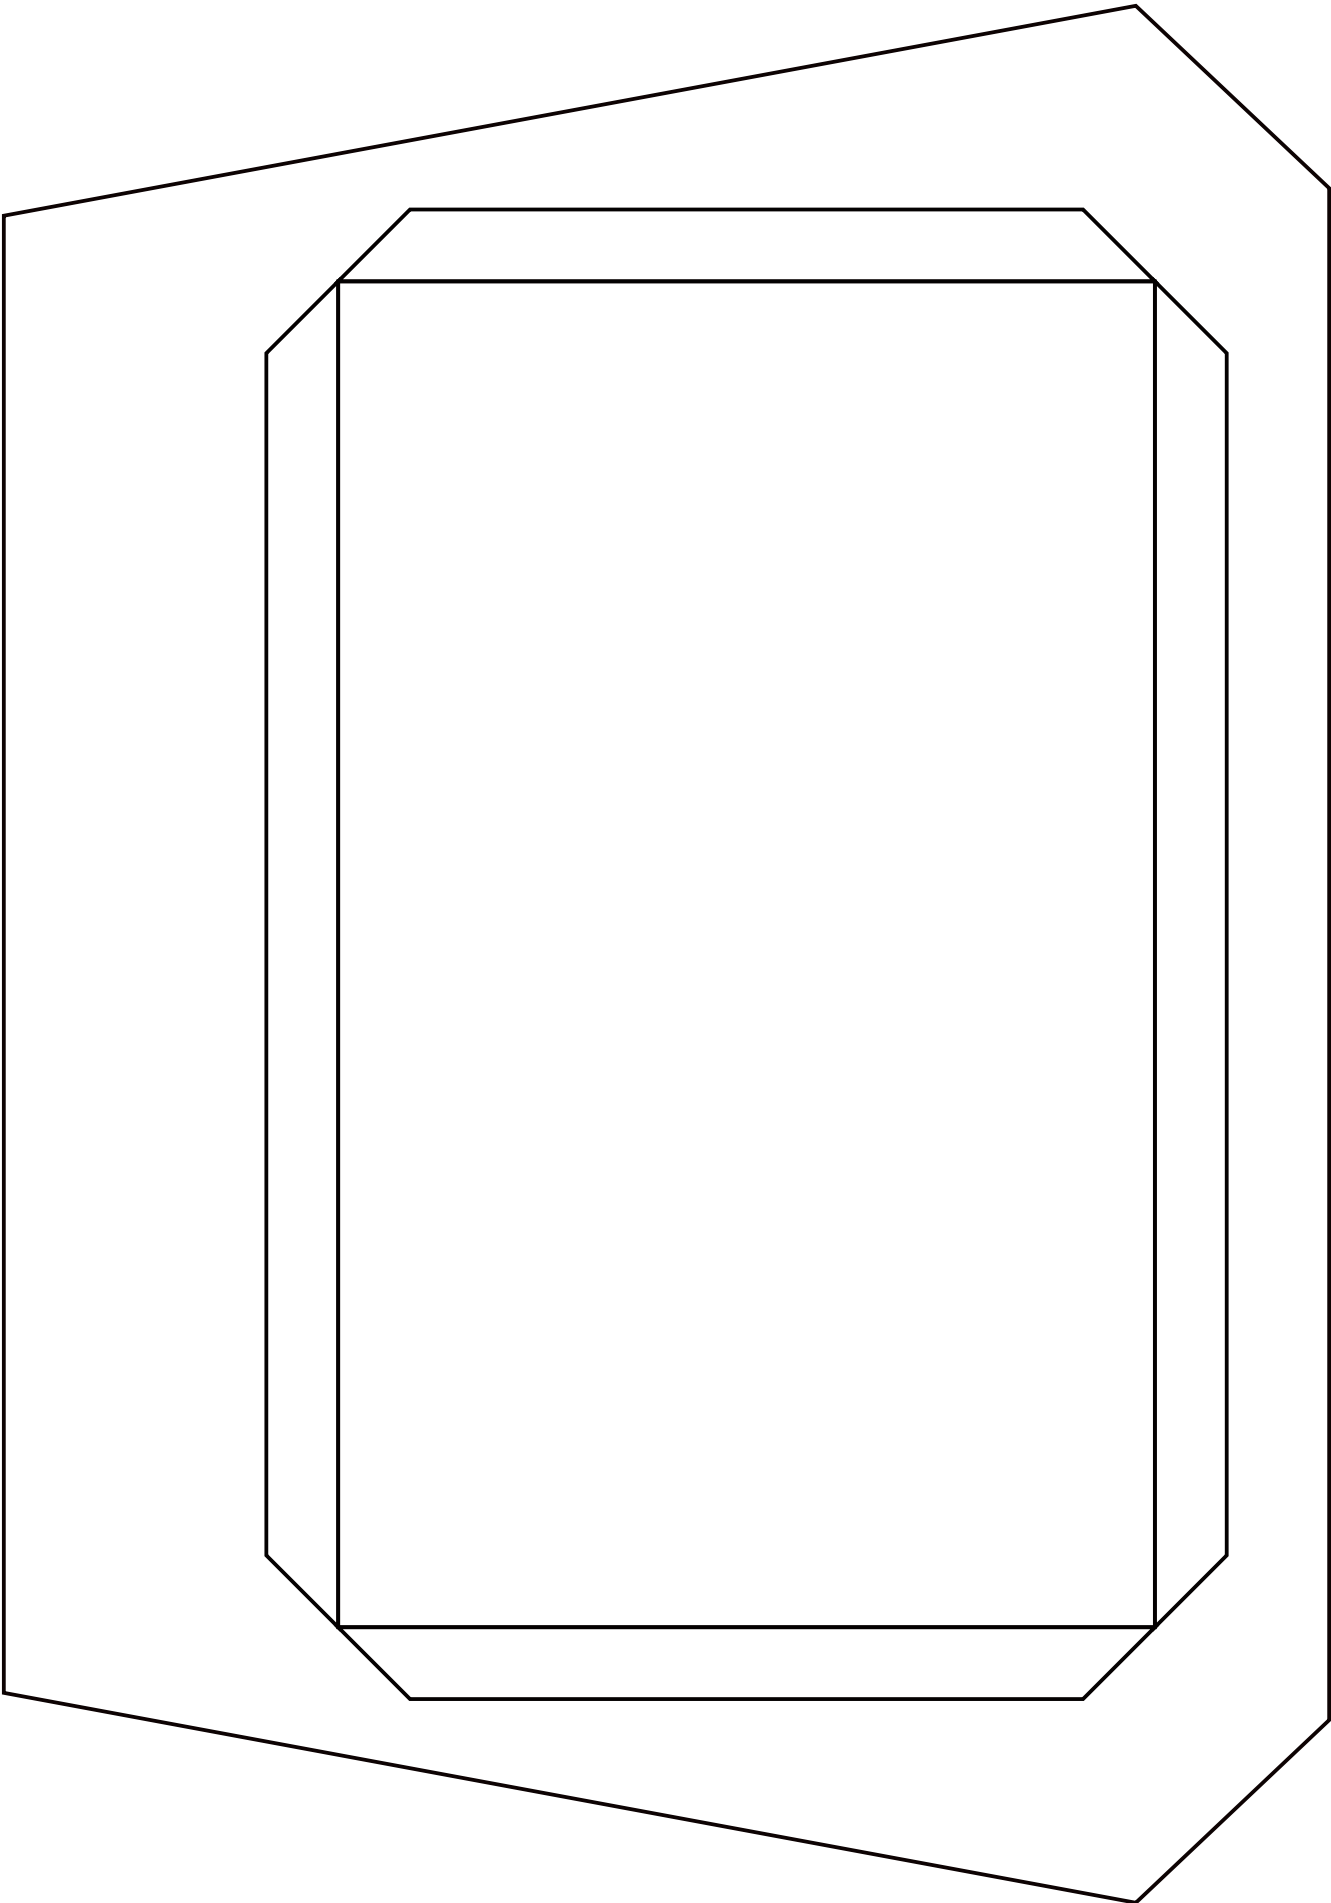

Front inner lining pocket





Back inner lining with zipper pocket

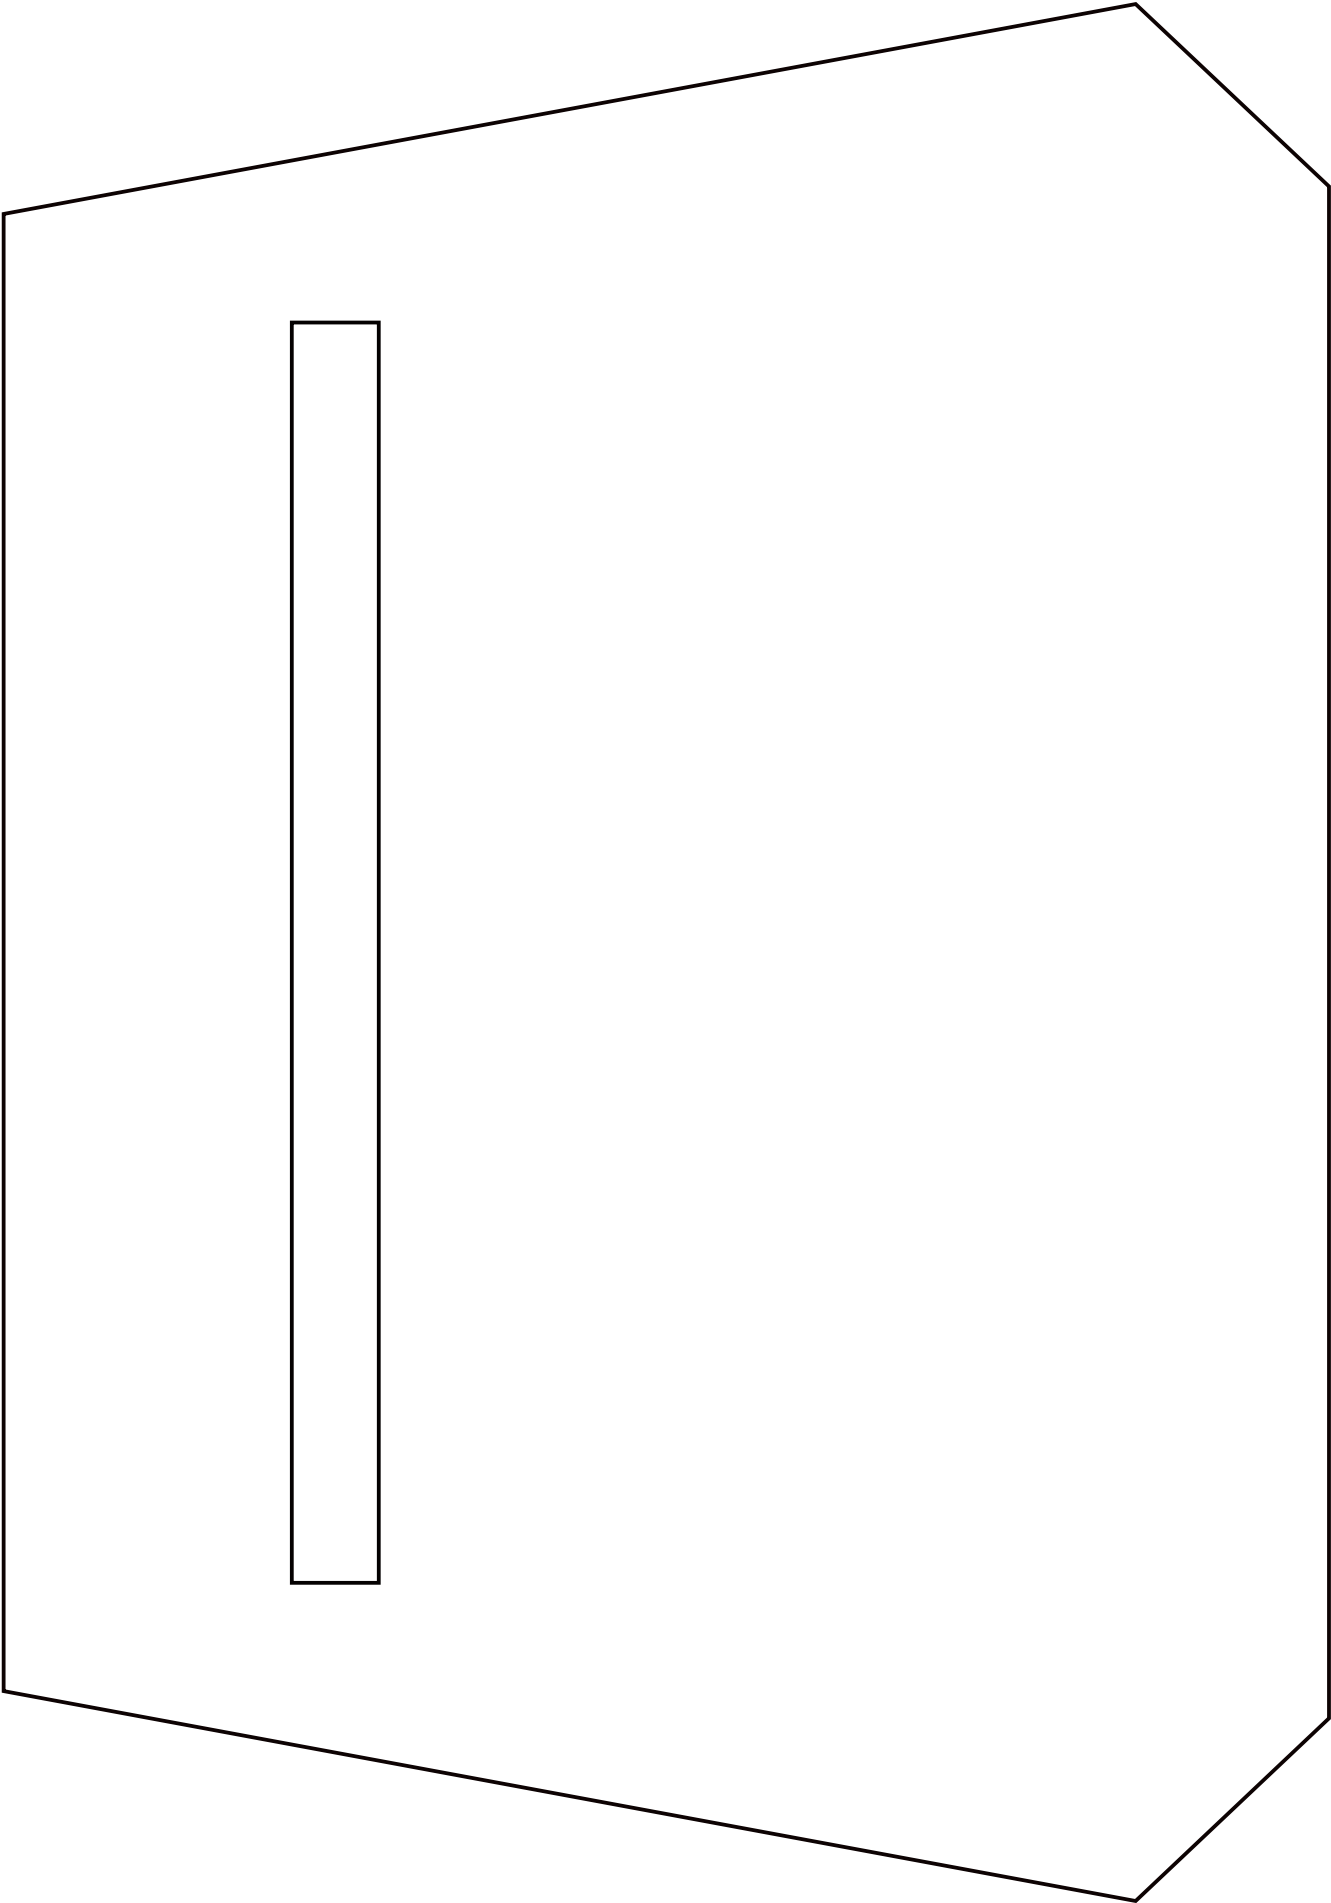




Inner pocket lining

[illegible]


Side gussets 1

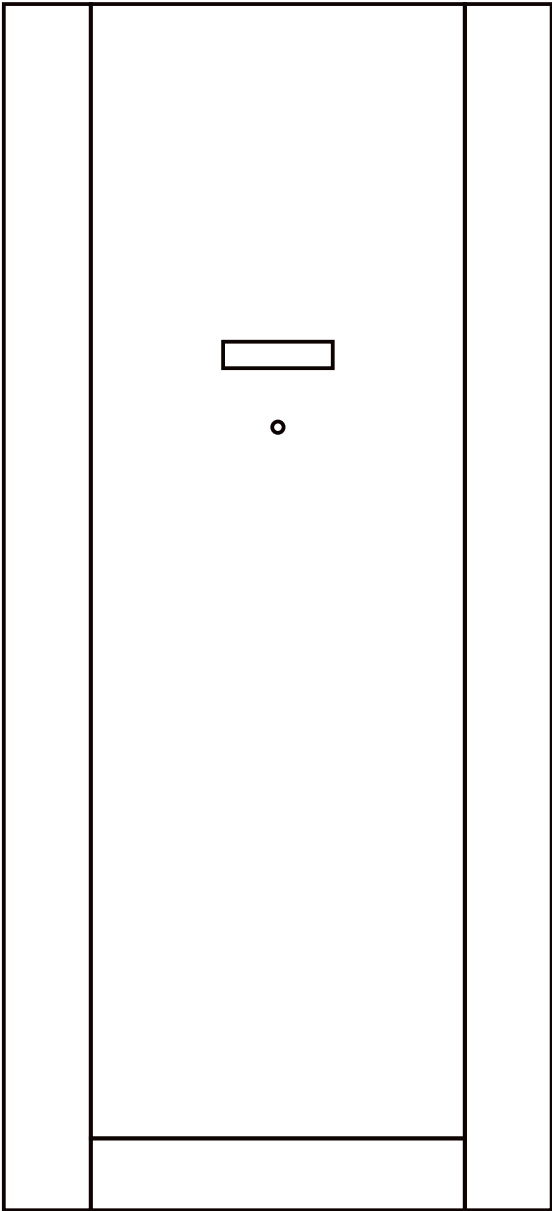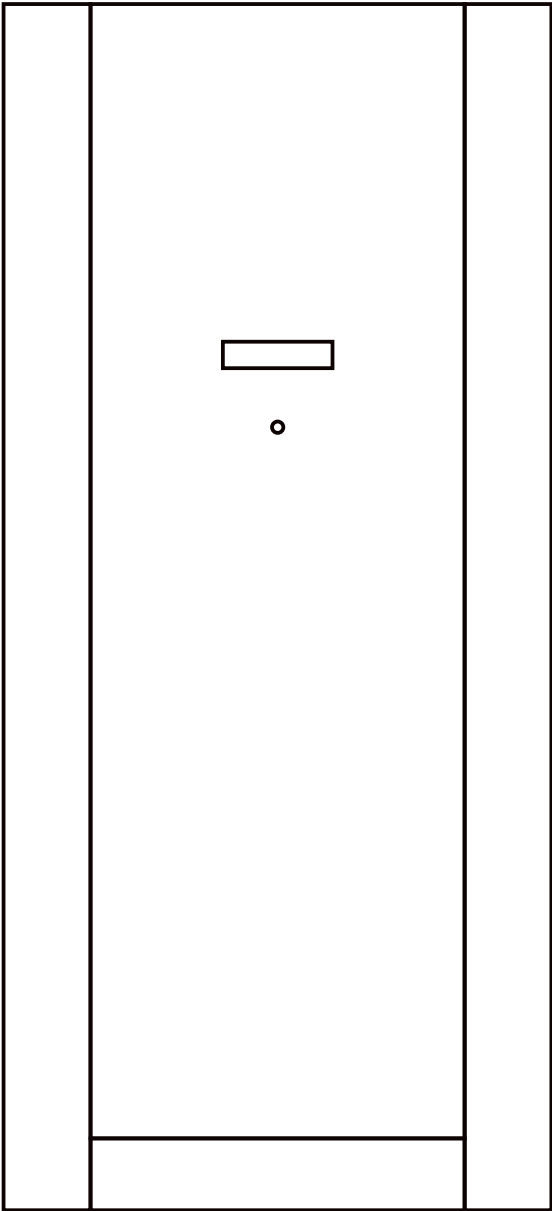



Side gussets 2

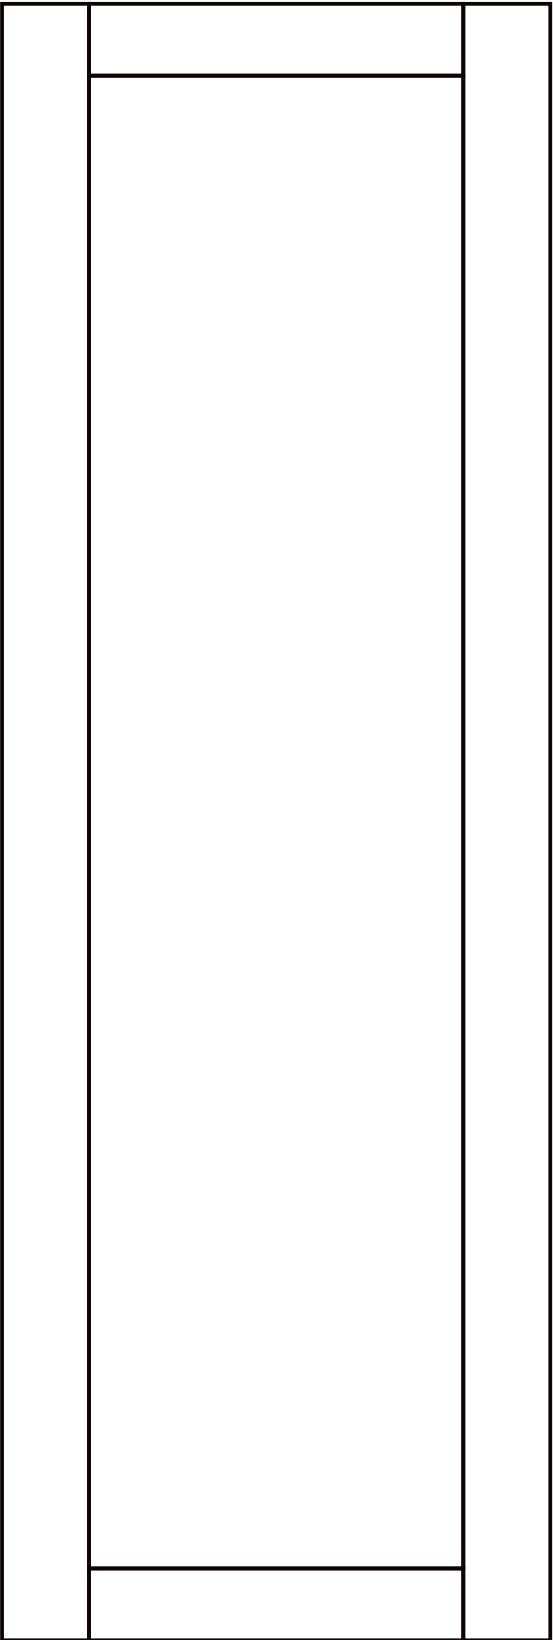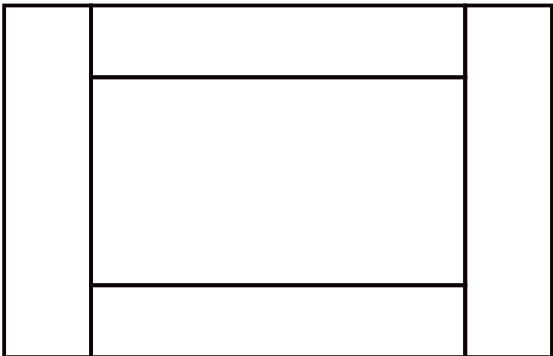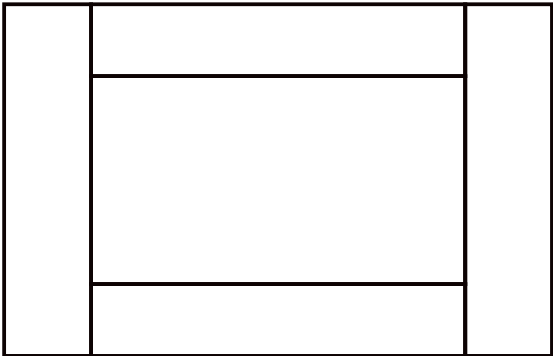

Secondary reinforcement board 1

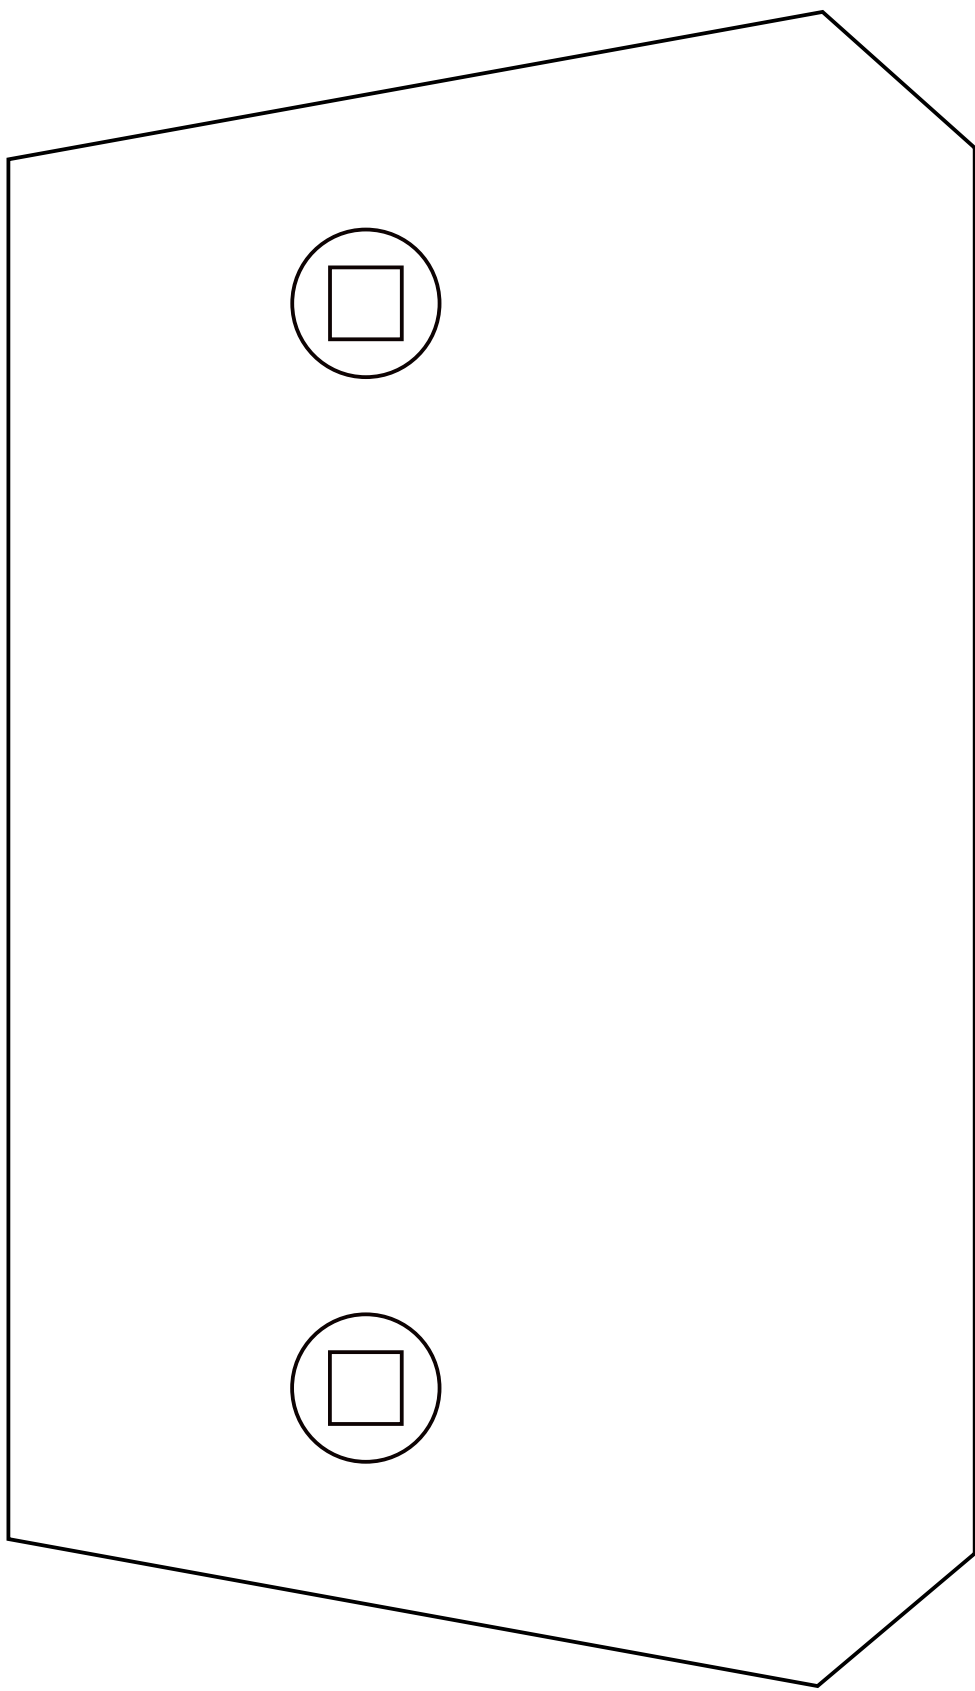

Secondary reinforcement board 2

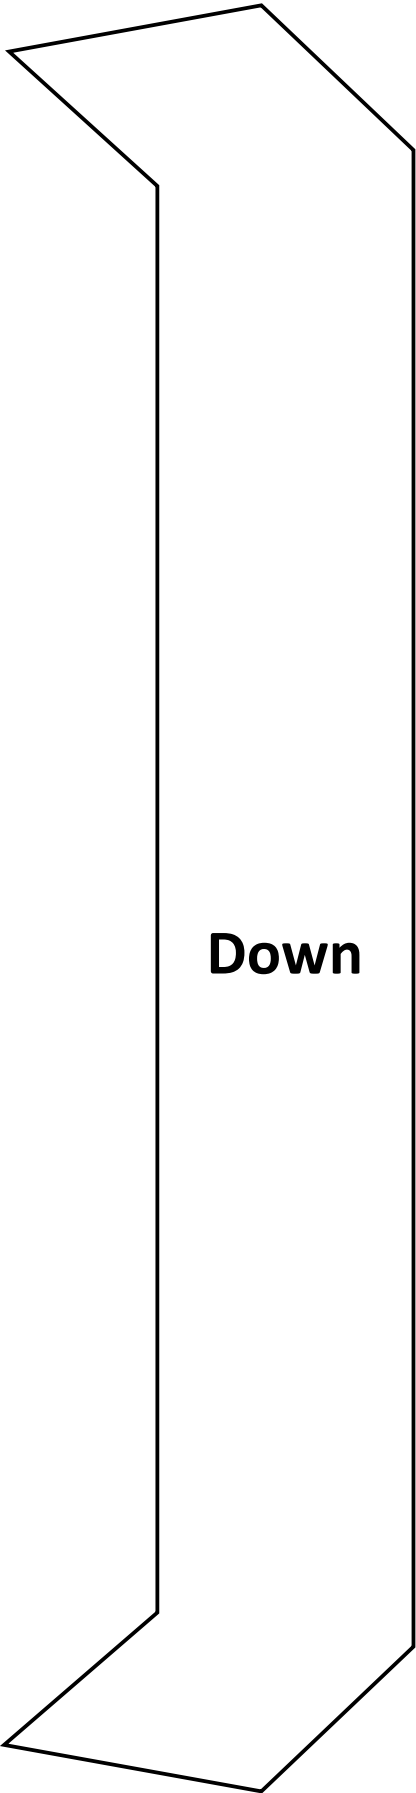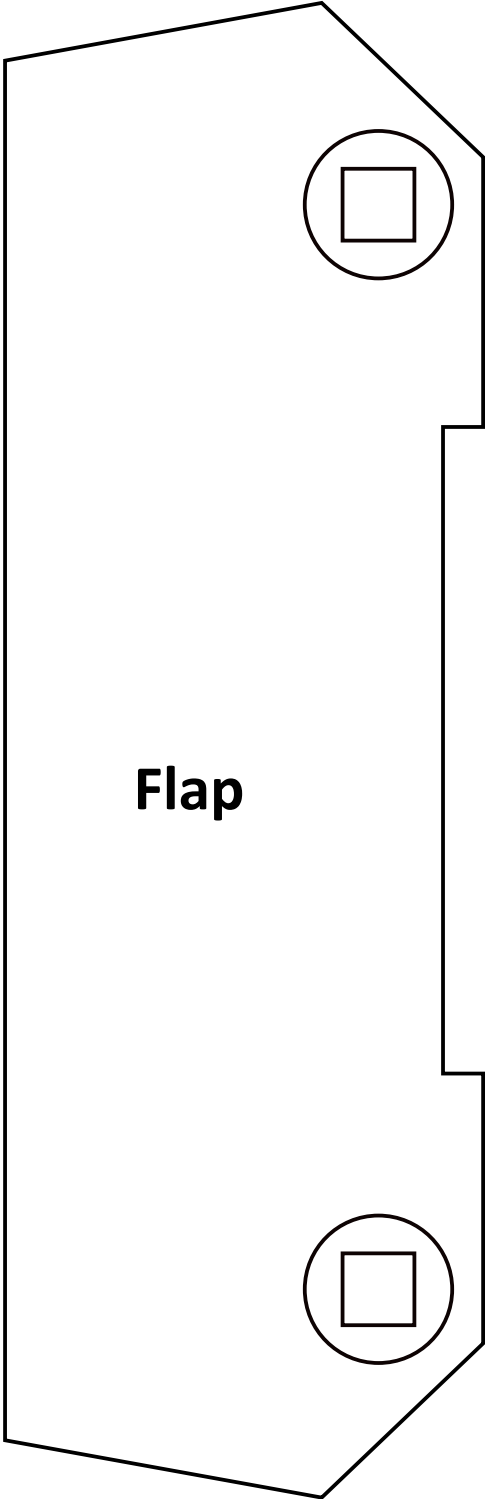

Front art and shoulder strap accessories



Shoulder strap. Cut and join together for full length.



Note :

The primary reinforcement boards are the same dimensions as the front and back parts of the bag.