



ACC-117 Instruction


Step 1: Sew zipper on A04. And sew A04 with A05 flesh side to flesh side.

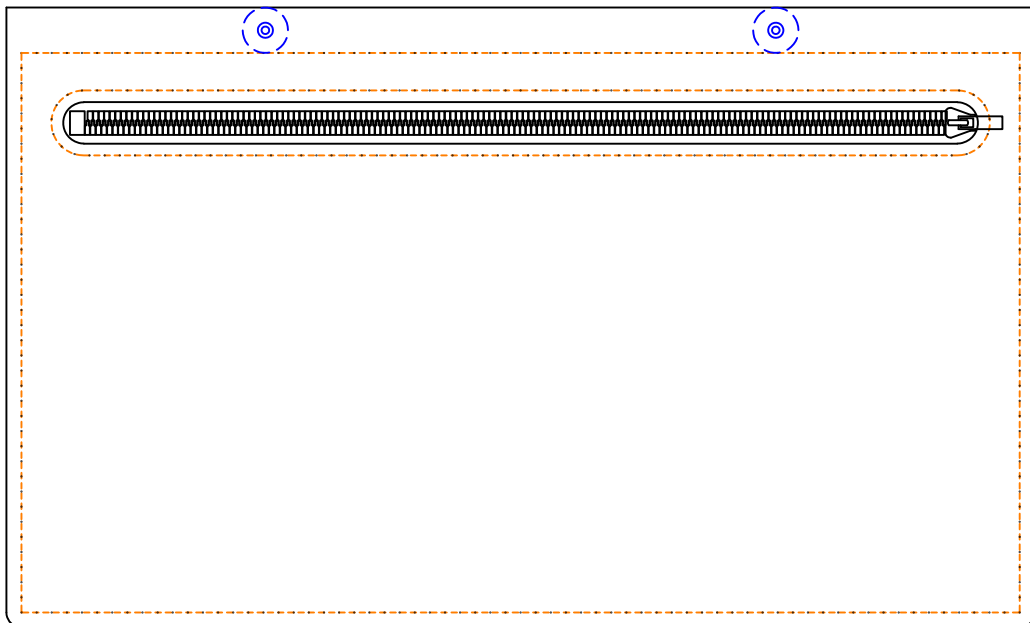


Step 2: Glue A16 in A15, fold A15 and sew A15 and A16 together. Then rivet 2 square buckles on.

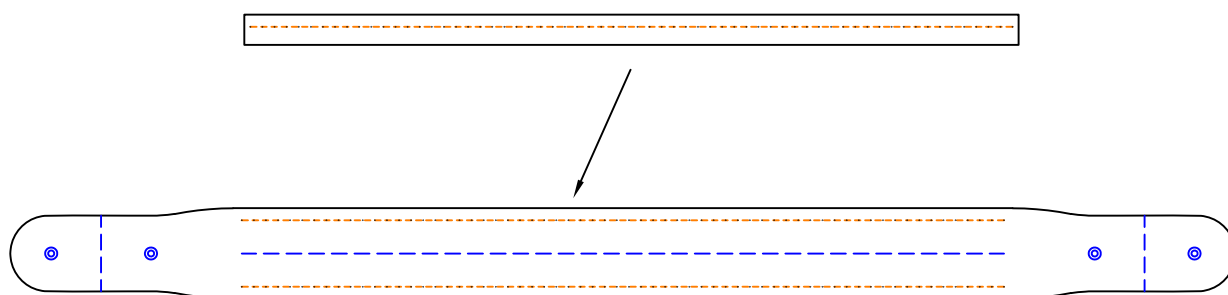


Step 3: Sew taps with square buckle with A01, then shoot the rivet with inner zipper pocket.

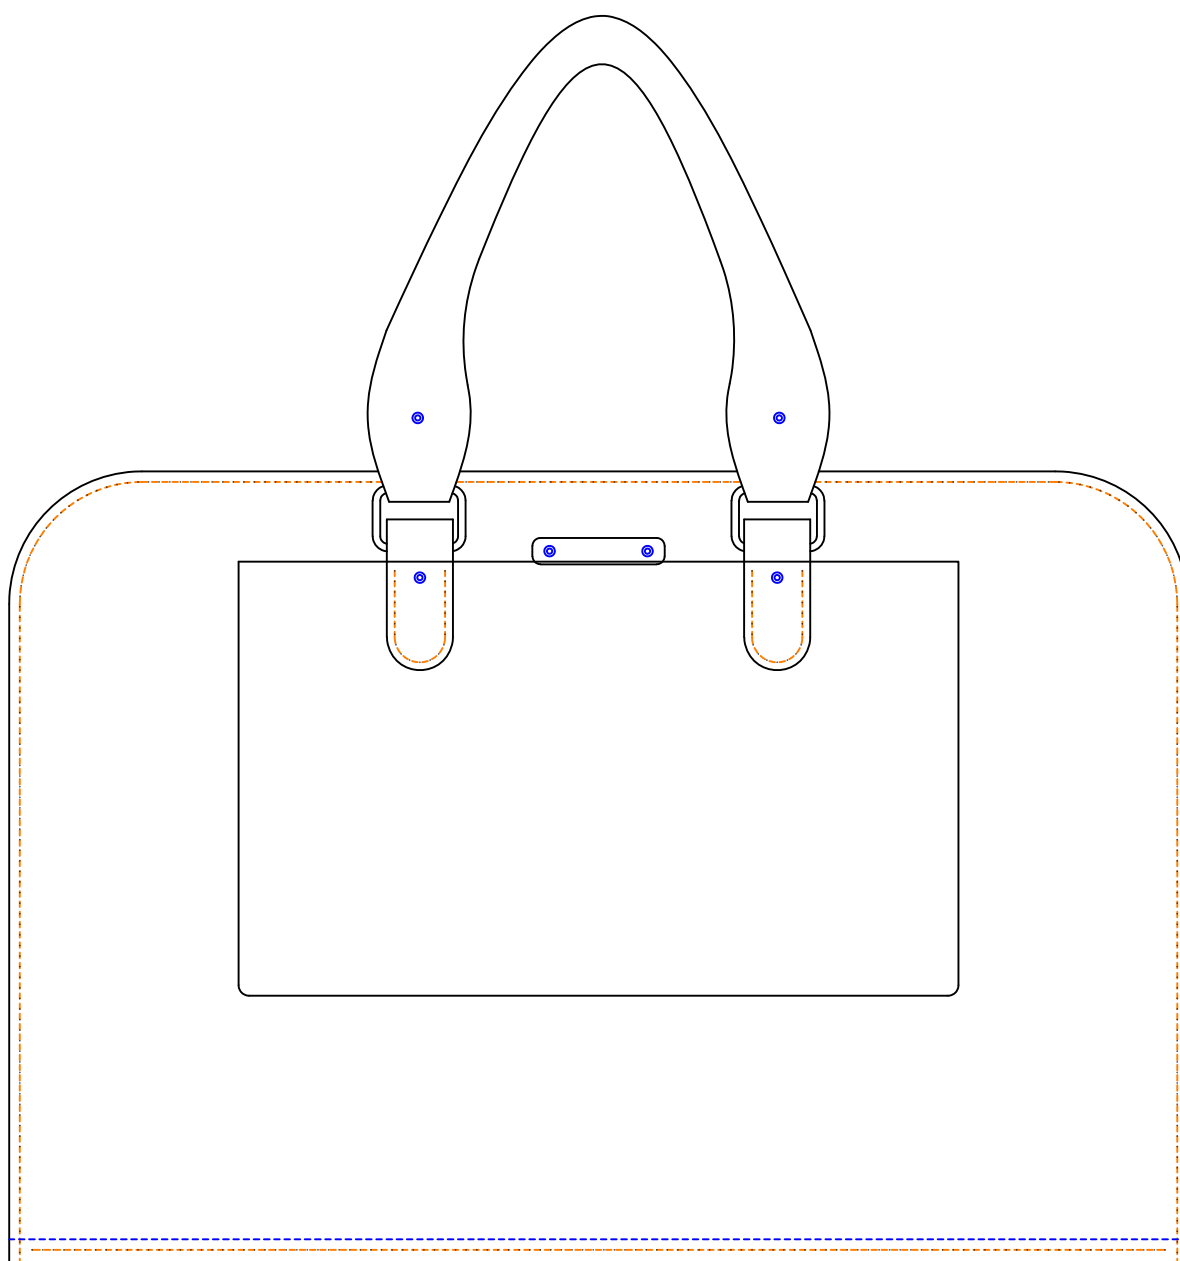

Step 4: Sew A07 on top of A06, then glue A06 on flesh side of A02, then sew A01, A02 and A03 together. Install foot nails on.

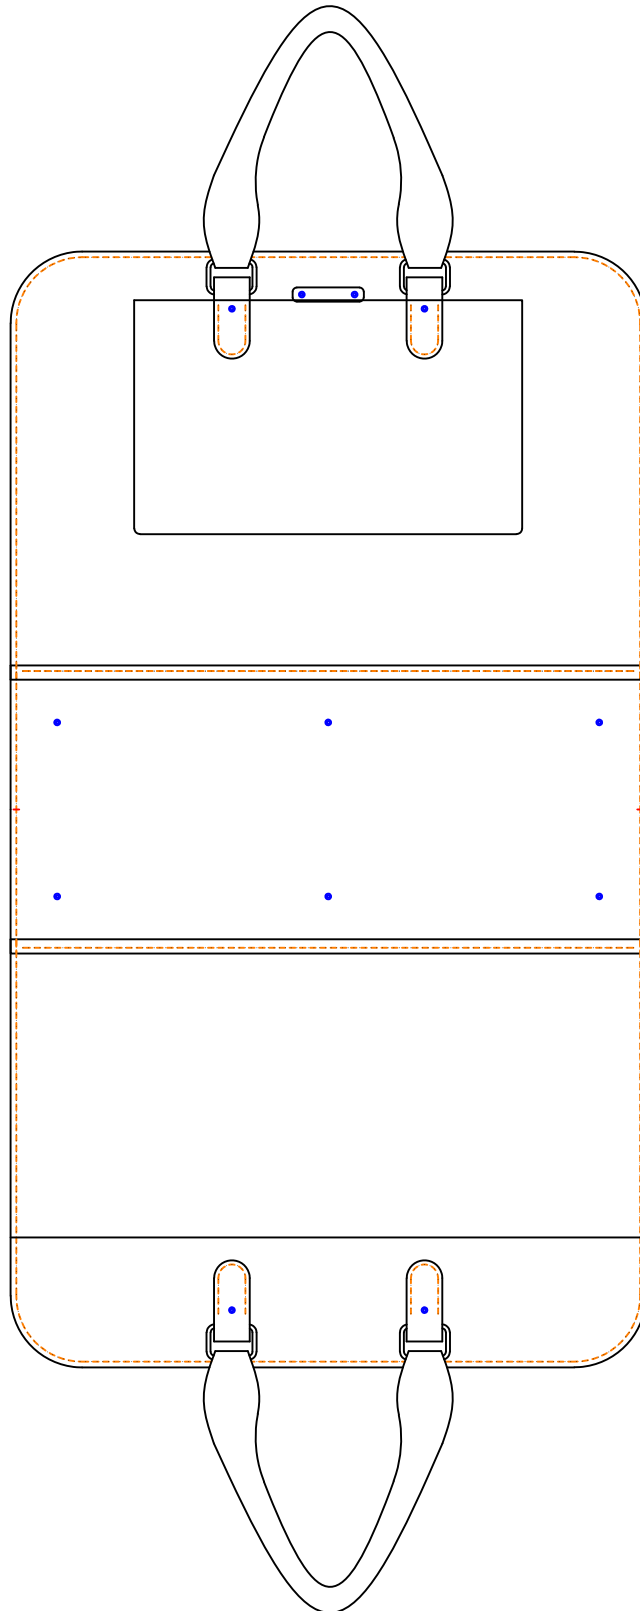

Step 5: Combine the gussets together as picture shows, and then glue 720mm No.8 or No.5 zipper on, then sew A13 on it.

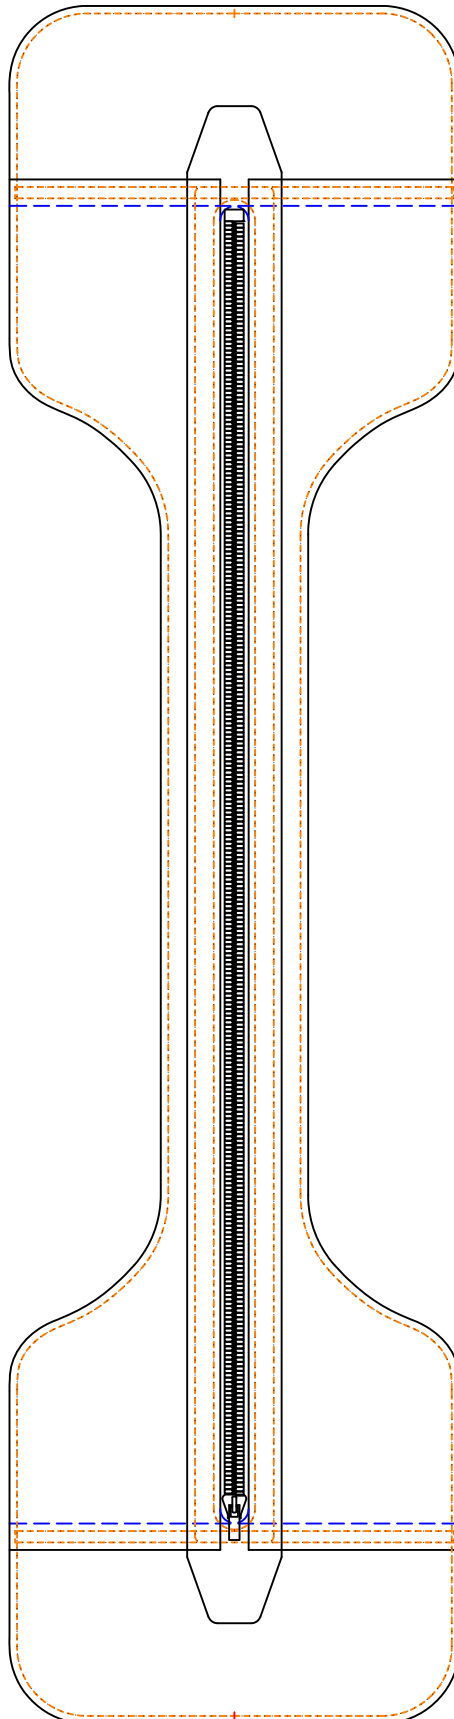

Step 6: Sew on side of A12 on Step 5's combination, then sew it with Step 4's combination. This bag is almost finished.

Notice:

1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;

2, Thin the edge before sewing is always correct;

3, 1oz=0.4mm;

4, Here is the line instruction.

