
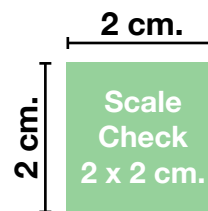
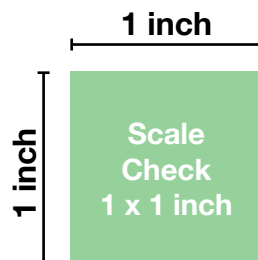


PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

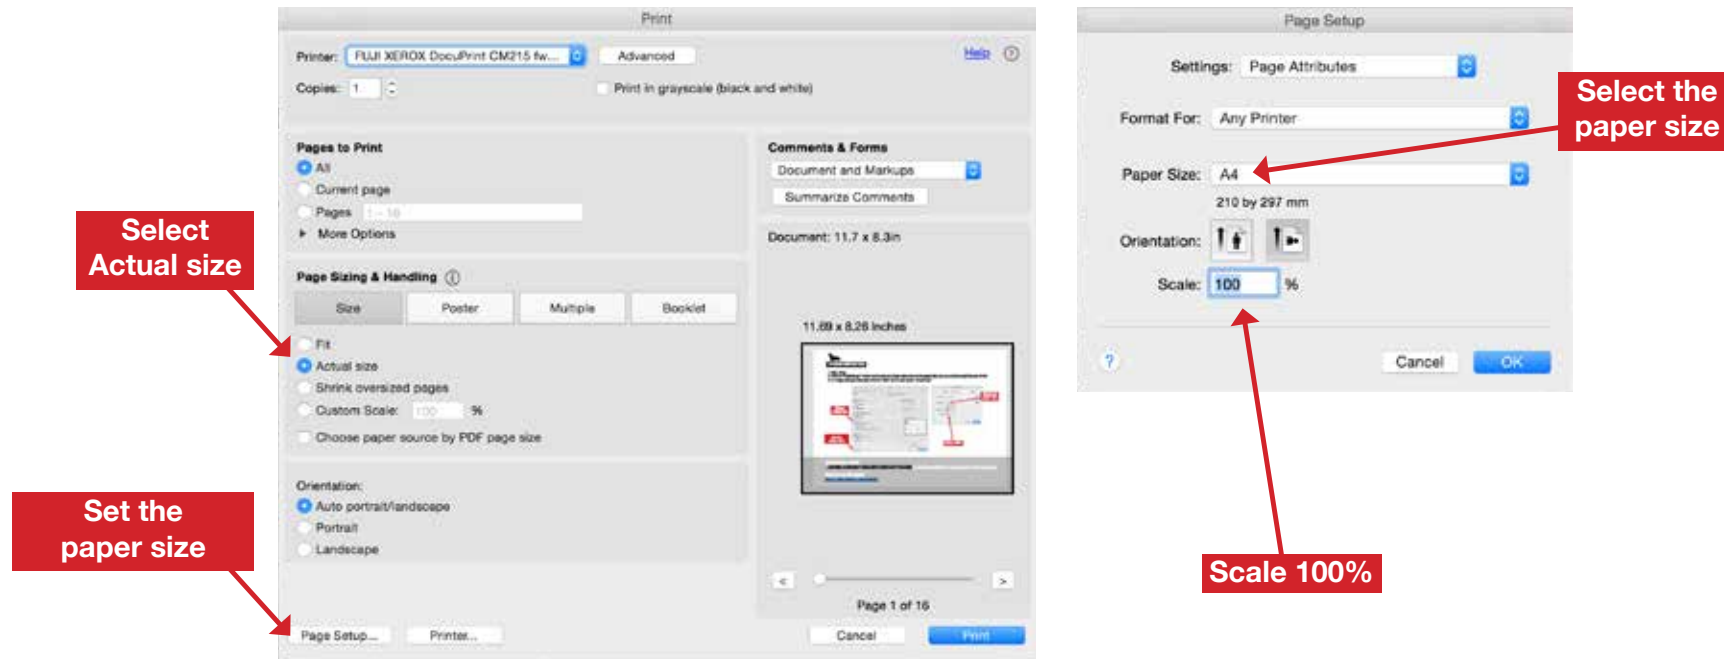

IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download





<https://get.adobe.com/reader>



Day Tote (A4 Size)

Page 1 of 16

Leather: Main Body

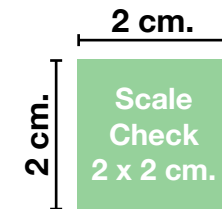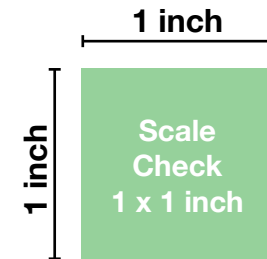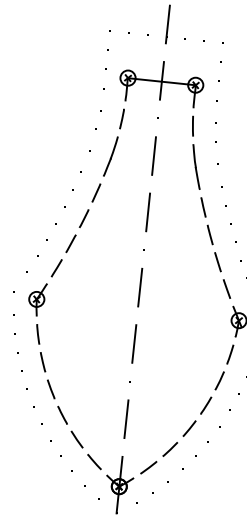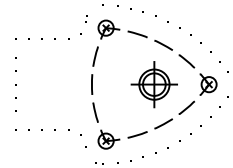

CraftsmanGus Pattern

Tote: Day Tote

Tot DD-01 #4mm.

Main Body

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

Cut the grey area and tile to page 2



A-1




Day Tote (A4 Size)

Page 2 of 16

Leather: Main Body


Cut the grey area and tile to page 1

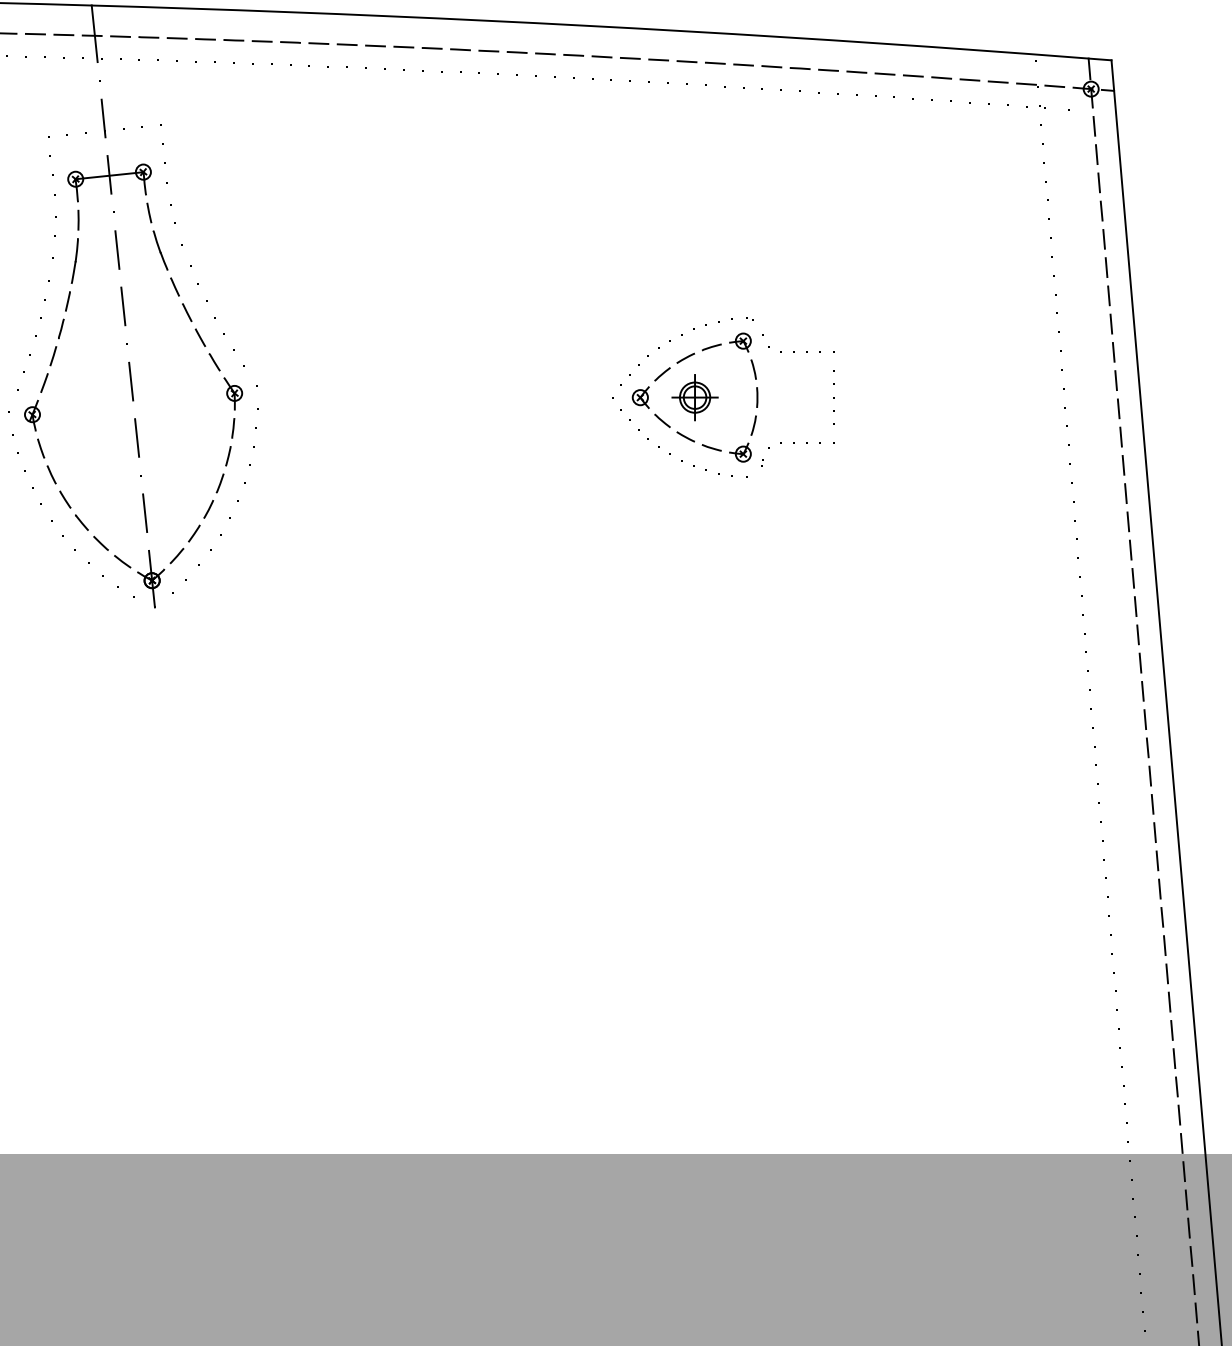



Leather: Main Body

Cut the grey area and tile to bottom of page 1

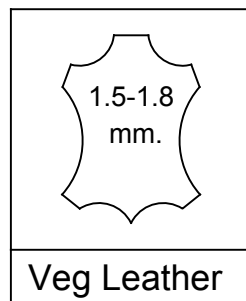

**A-1
X 2**

*Note: Front piece overlap on top of back piece.

*Note 2: Skive the back side piece.



*Note: Try to thin the corner for result of easier turn the side.

Skive this for turn.



Leather: Main Body

Cut the grey area and tile to bottom of page 2

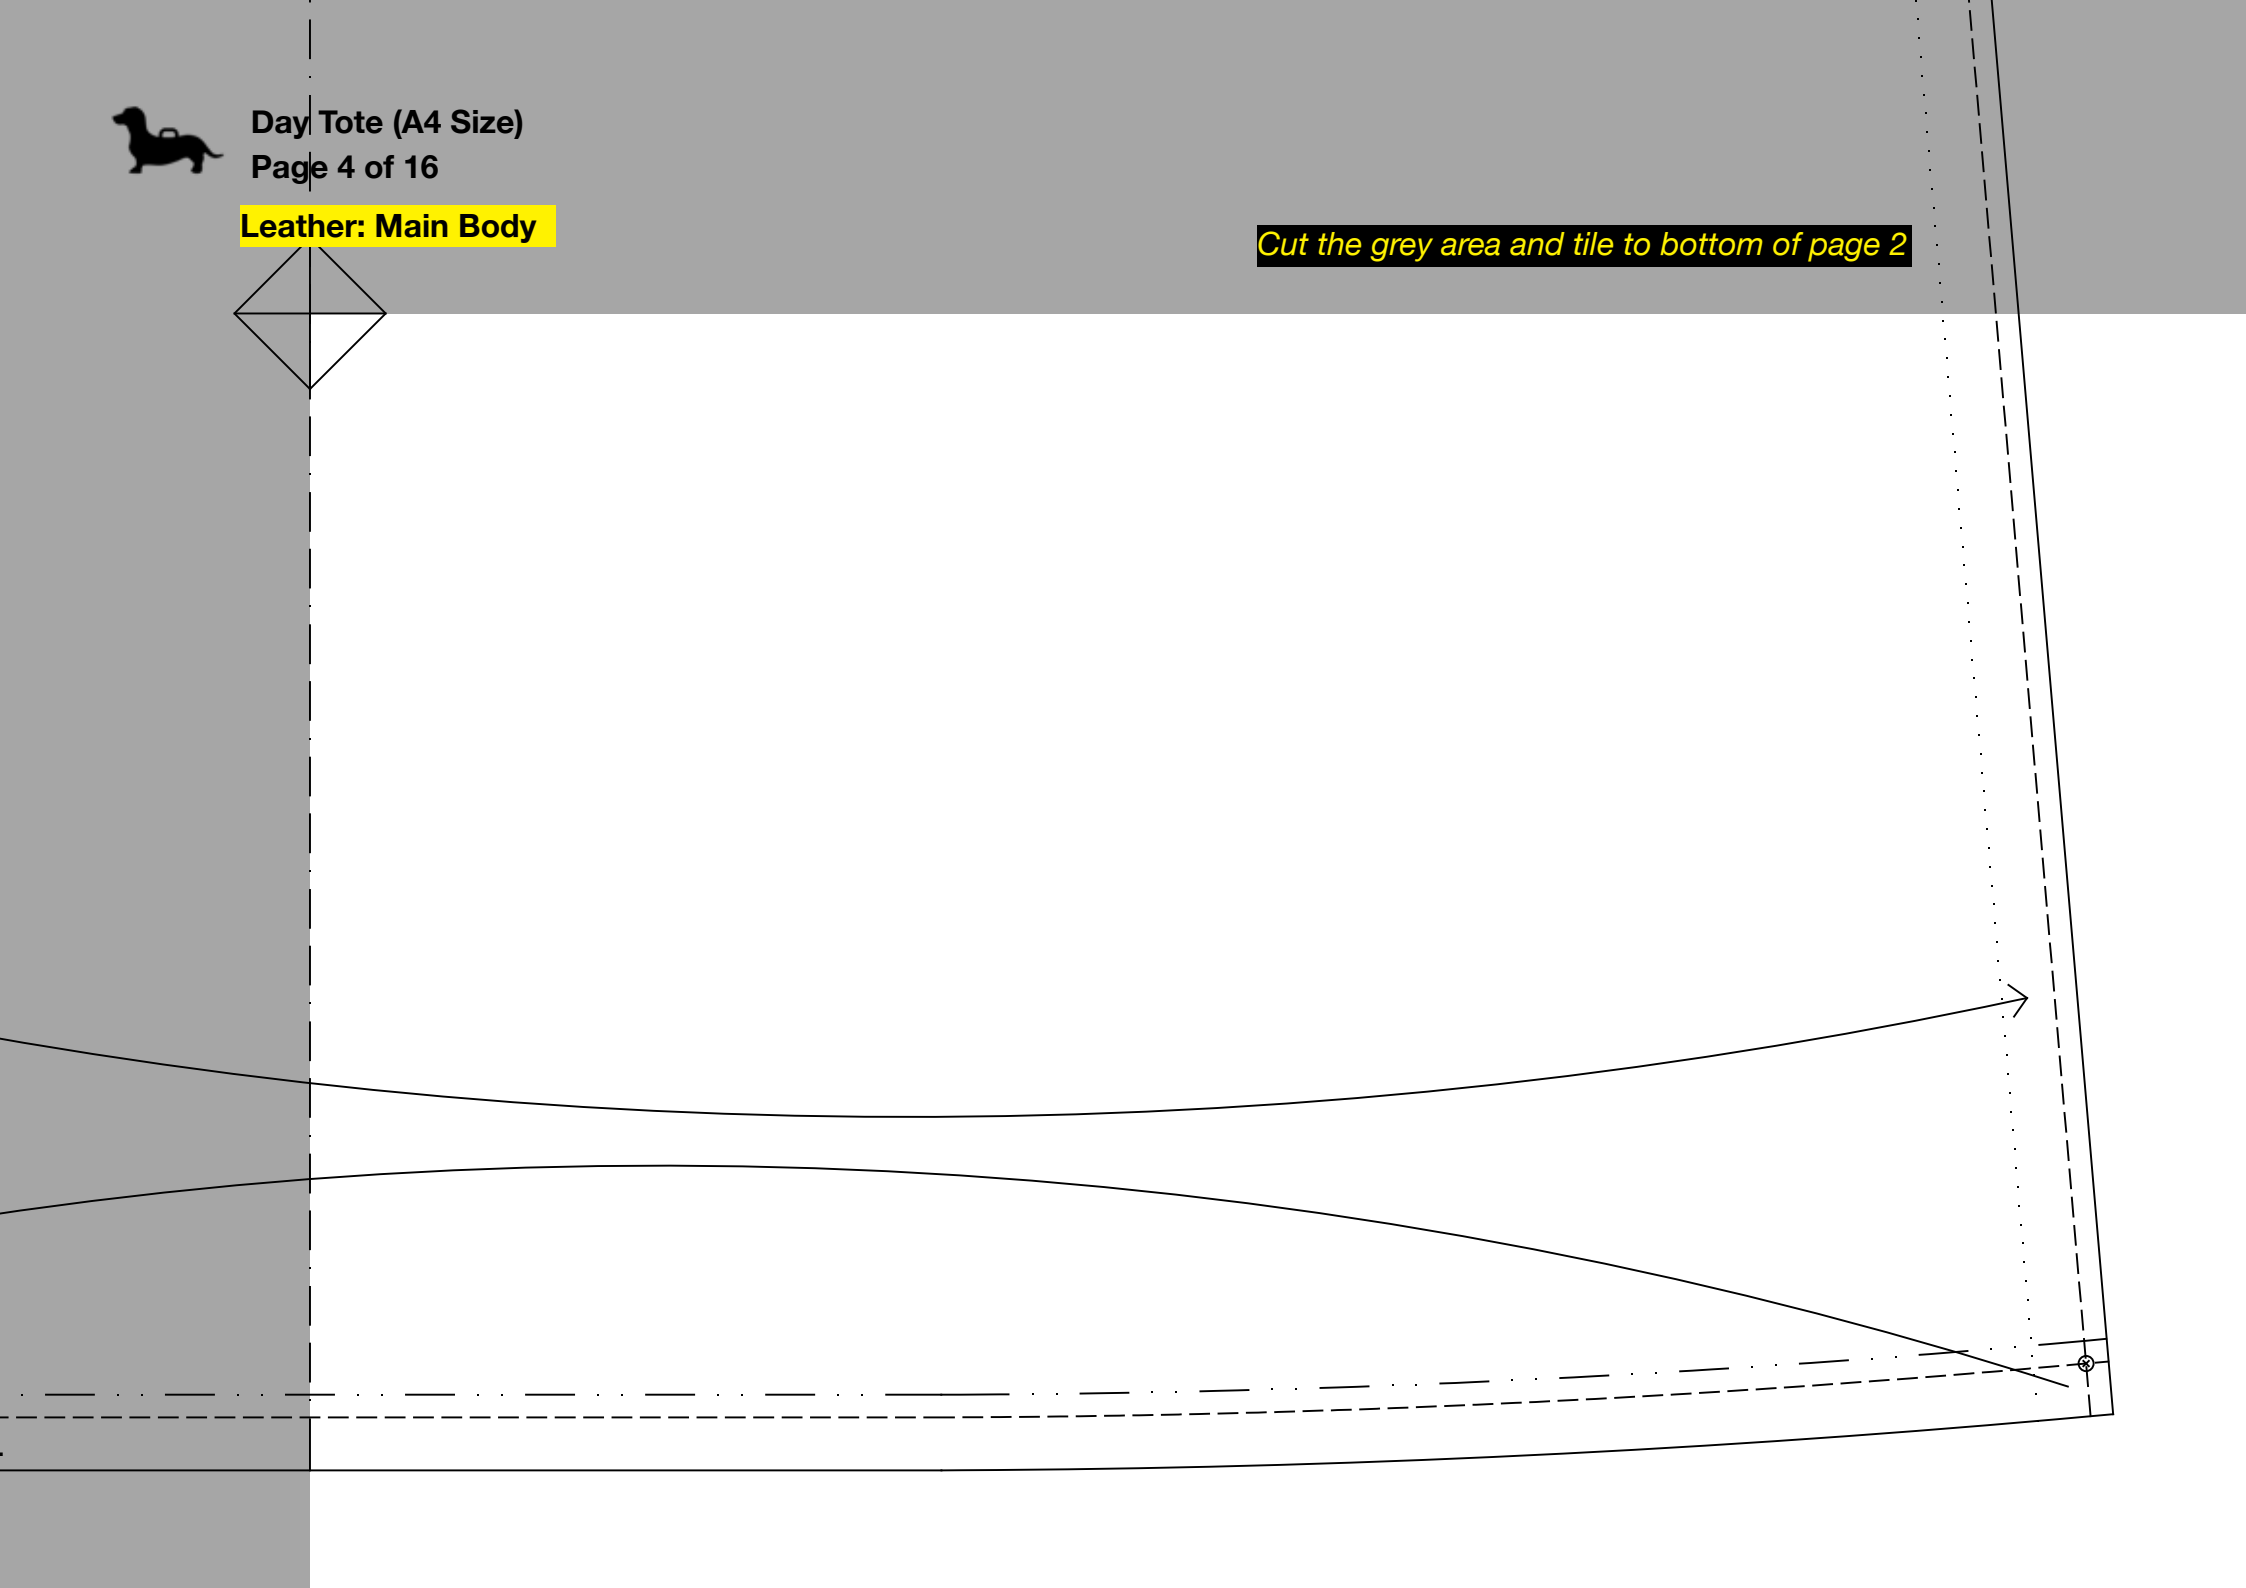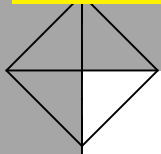



Skive all round border for turn.

CraftsmanGus Pattern

Tote: Day Tote

Tot DD-01 #4mm.


Bottom / Bottom Lining

1.5-1.8mm Chrome Tanned Leather Recommended

Stiff Fabric Lining



B-1
X 1

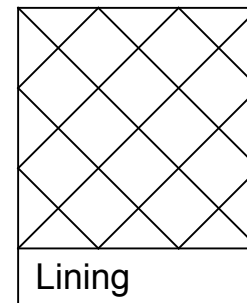

B-1(L)
X 1

*Note: Line where the edge of piping will be placed.


Skive all round border for turn.

Cut the grey area and tile to page 6

ern

ather Recommeded


Cut the grey area and tile to page 5

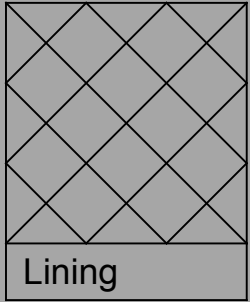

B-1(L)
X 1



ere the edge of piping will be placed.

Skive all round border for turn.



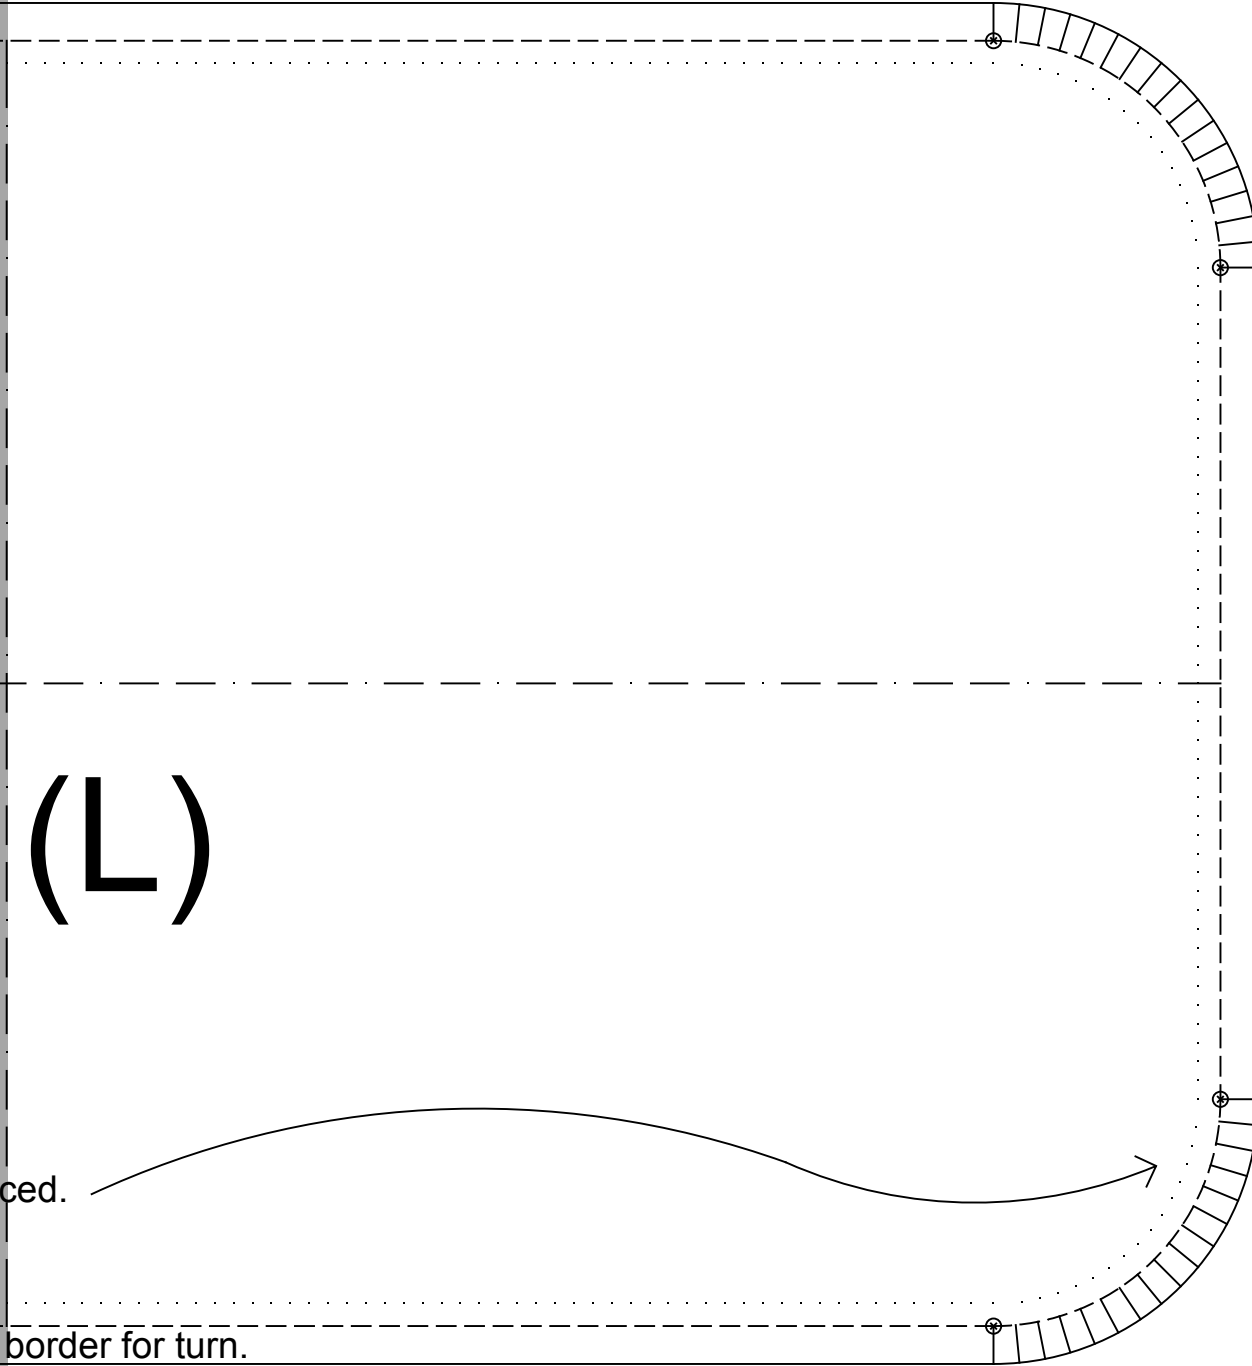


Day Tote (A4 Size)
Page 6 of 16

Leather: Bottom

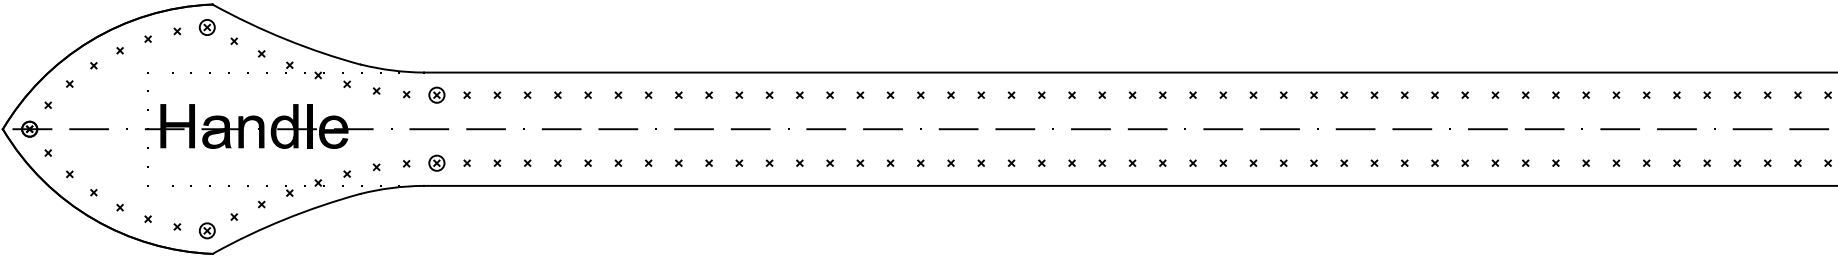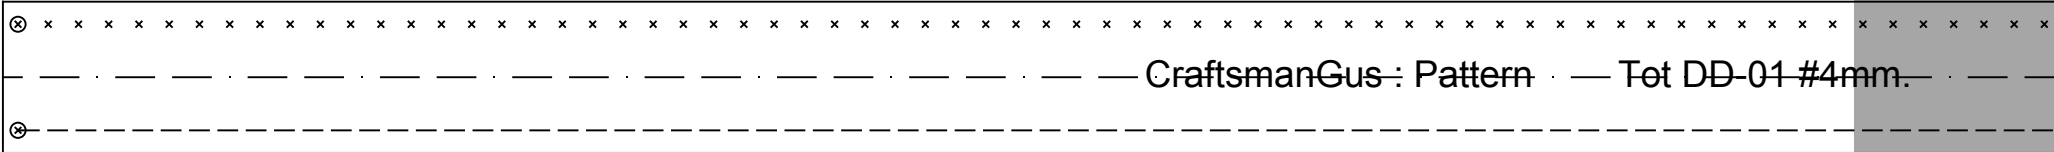

CraftsmanGus : Pattern	Tot DD-01 #4mm.		*** Required 2.0 mm round plastic pipe or round veg-tanned leather
Tote: Day Tote	Piping	round corner area	0.4-0.5 mm. REC

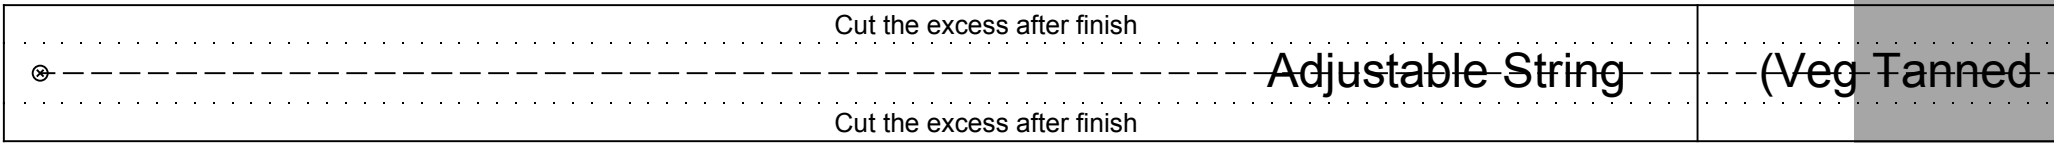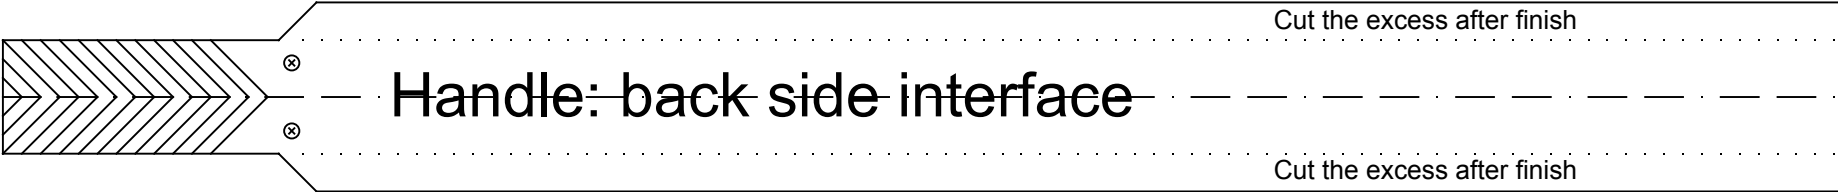

Cut the grey area and tile to page 8



ot DD-01 #4mm. — — Tote: Day Tote — — Mouth Opening Binding — Veg 0.6 mm. REC — — C-1 X 1 — —

1.8 mm. Thickness Vegtanned Leather

round corner area B-2 X 1

0.8 mm. Thickness Vegtanned Leather D-2 X 2

able String (Veg Tanned 0.7 mm.)

(Veg Tanned 0.7 mm.) X 2



<1

Cut the grey area and tile to page 8

Cut the grey area and tile to page 10

D-1 X 2


round corner area

D-2 X 2

X 2

X 4

String Holder X 2

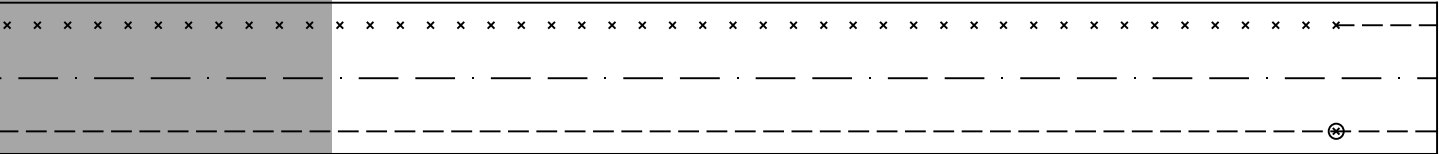

Cut the grey area and tile to page 9

		cut excess
	round corner area	if needed



Day Tote (A4 Size)

Page 11 of 16

Leather: Lining

*Note: May need to adjust stitching line from borders according to your finish in leather part done

CraftsmanGus Pattern


Tote: Day Tote

Tot DD-01 #4mm.


Main Lining

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

Cut the grey area and tile to page 12

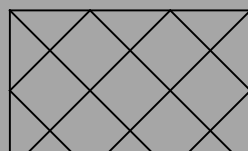

A-1(L)


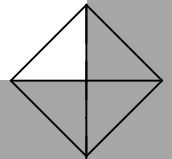




Leather: Lining

ing to your finish in leather part done.

Cut the grey area and tile to page 11

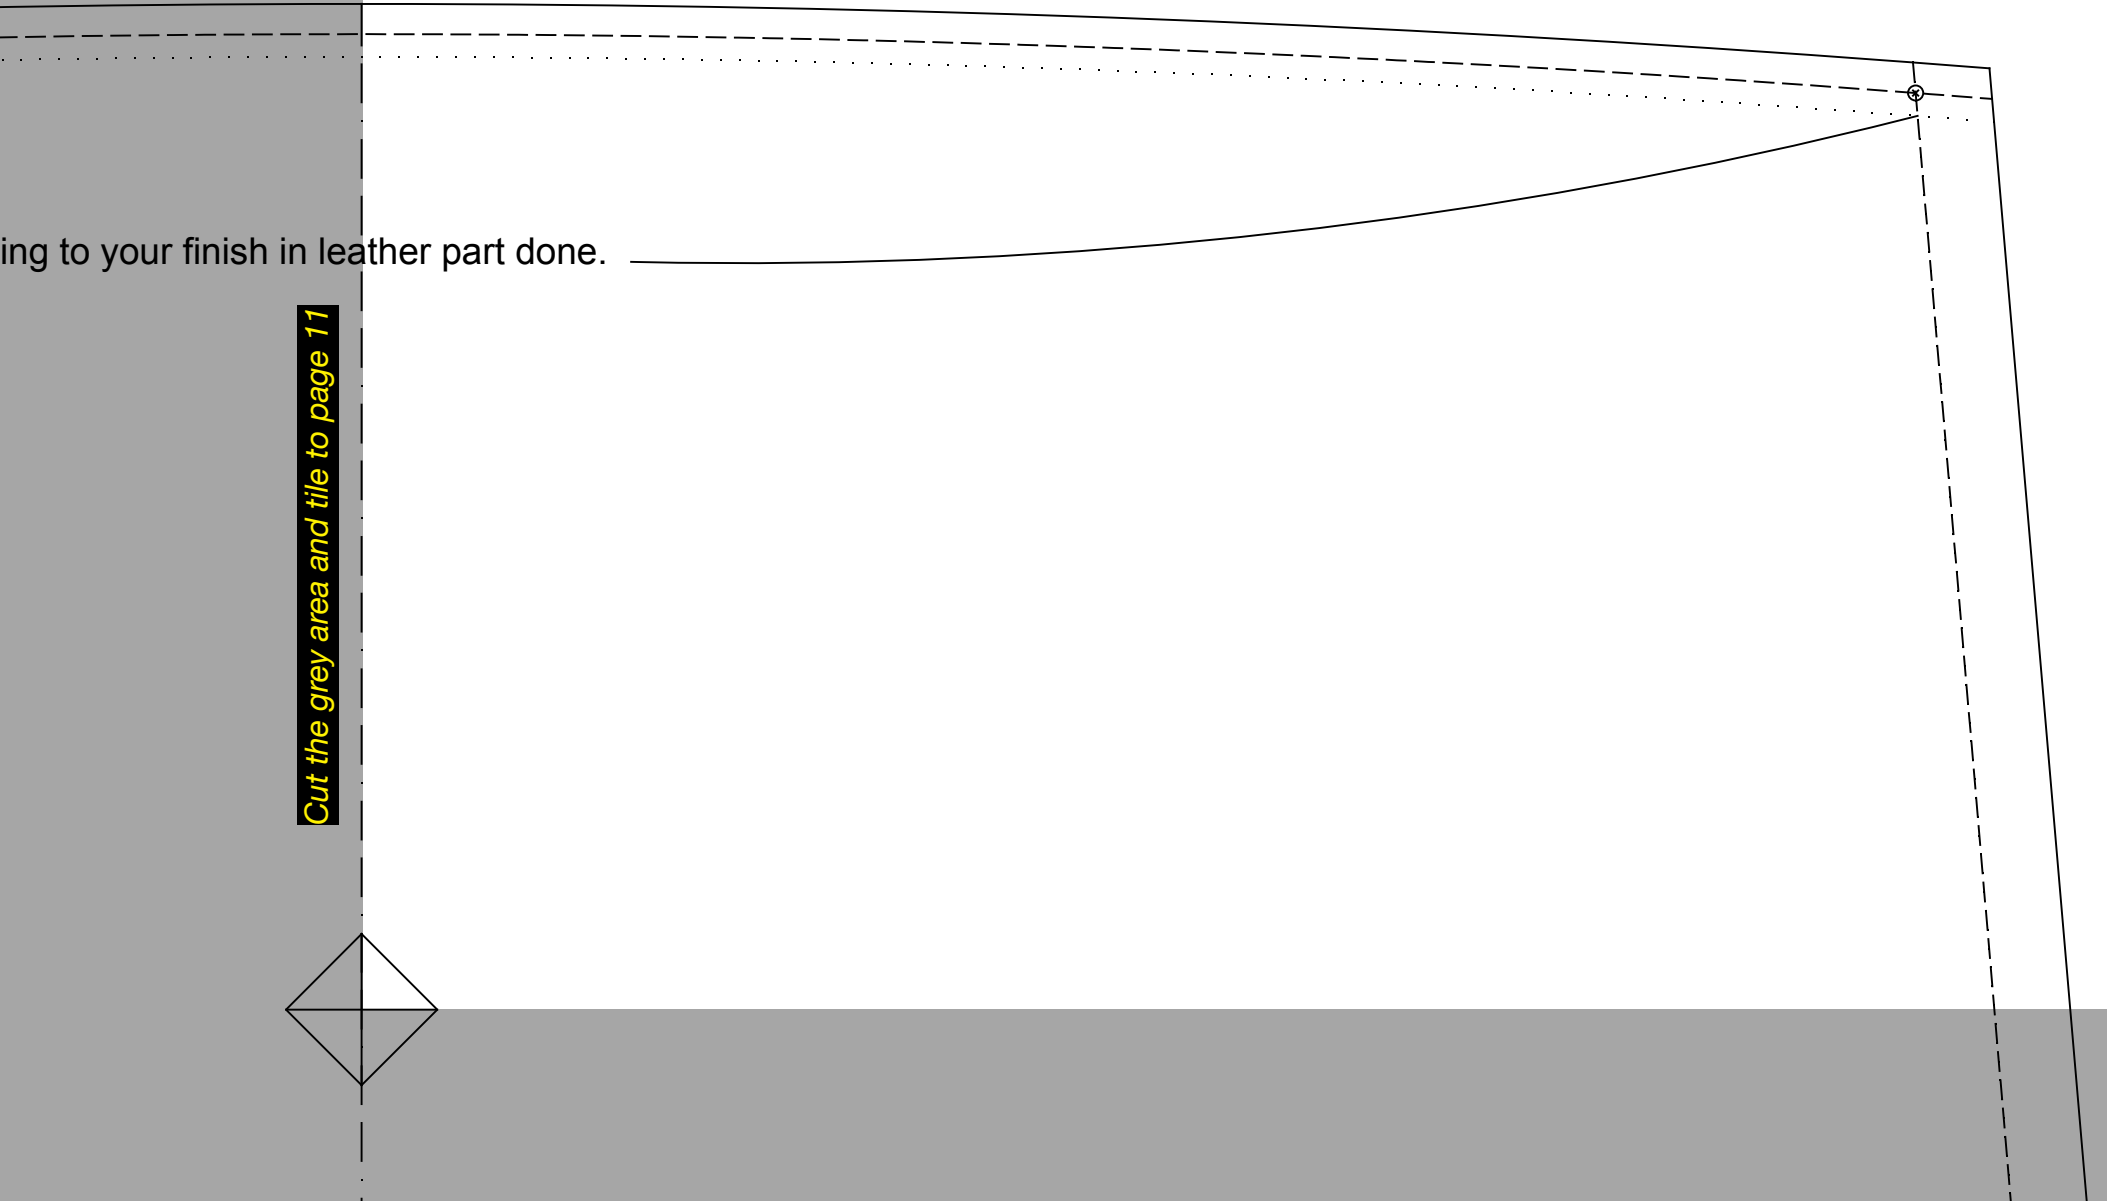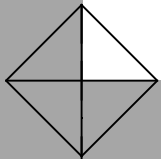




Leather: Lining

Tot DD-01 #4mm.

Main Lining

1.5-1.8mm Chrome or Veg Tanned Leather Recommended

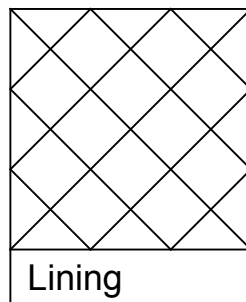

A-1(L)
X 2

Cut the grey area and tile to page 14


Skive this for turn.



Day Tote (A4 Size)

Page 14 of 16

Leather: Lining

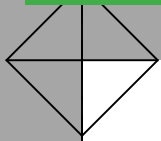

Cut the grey area and tile to page 13






DO NOT CUT MATERIAL

CraftsmanGus Pattern

Tote: Day Tote

Tot DD-01 #4mm.

Bottom Lining Guide Card

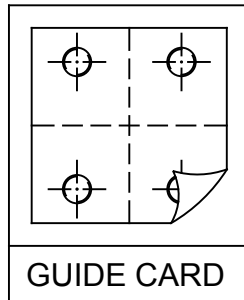

B-1(G)

Not cut any materials,
just to help placing the bottom lining

Cut the grey area and tile to page 16

us Pattern

e Card

Cut the grey area and tile to page 15

B-1(G)

Not cut any materials,
just to help placing the bottom lining



Day Tote (A4 Size)
Page 16 of 16

DO NOT CUT MATERIAL