





ZDIAM STUDIO

Before carrying out each step of the instructions, and stitching parts need to glue them to a depth of 2 mm from the edge. Use the 3 mm diamond punch. The seams should be no more than 3 mm from the edges.


Sewing SideA and SideB first.
Connect lines is mark by A and B arrows.
Skip 3 mm to EdgeZ

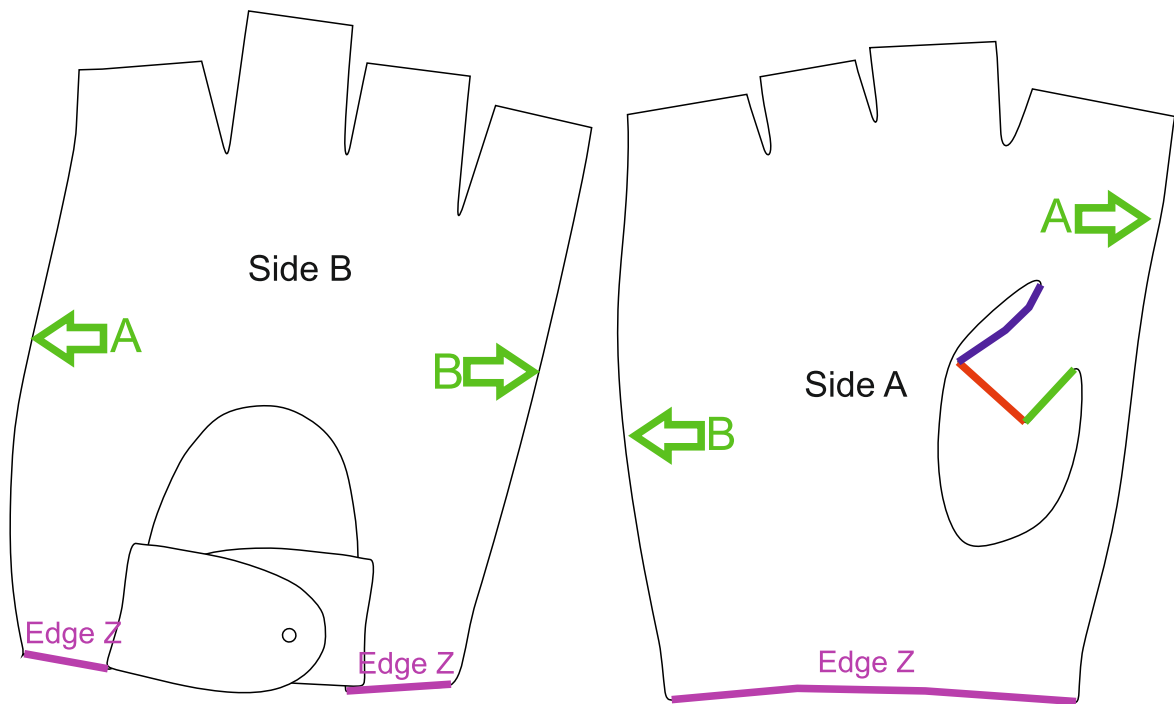


Then sewing thumb finger by A4 line

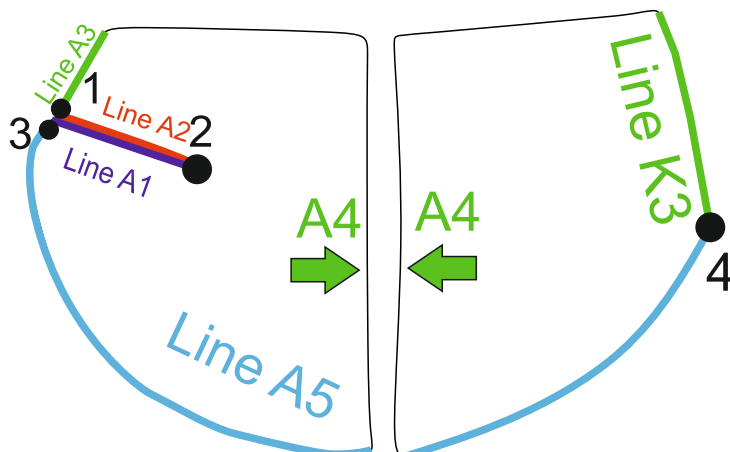

Now connect the thumb finger with SideA
It's a harder part of sewing.
We will start from LineA2 (from point 1 to point 2).

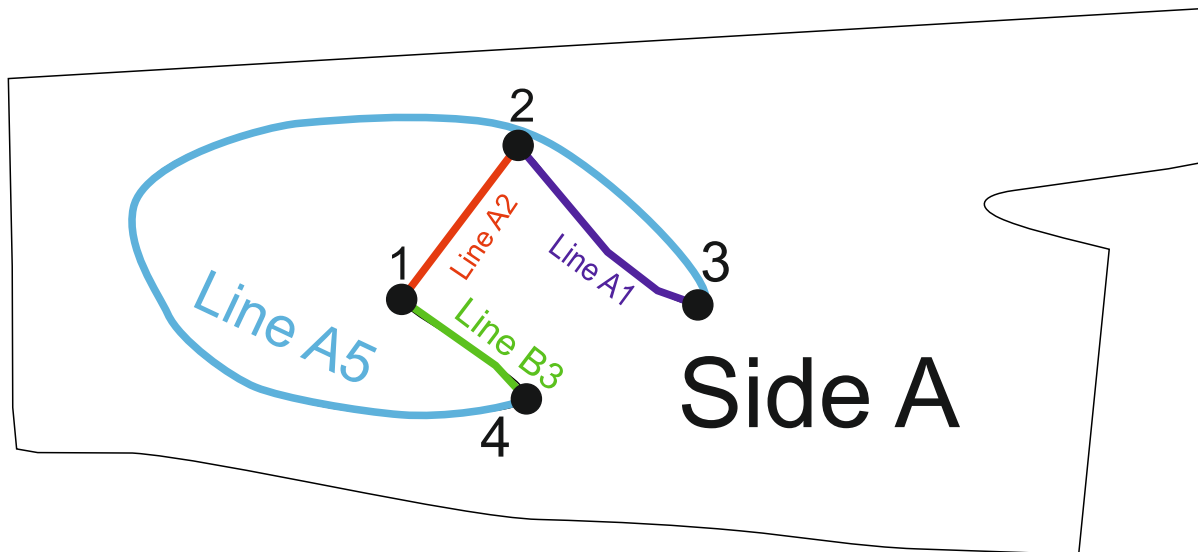


Then connect LineA1 (from point 2 to point 3)
And connect LineA5 (from point 3 to point 4)

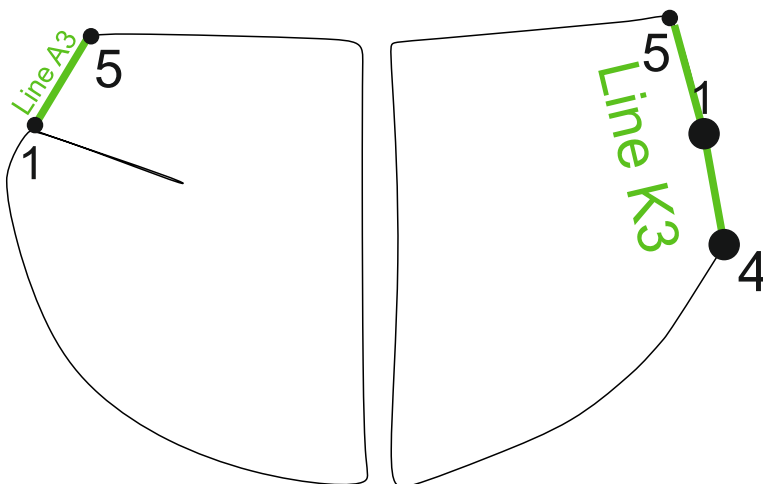


Then continue sewing from point 4 to point 1 by LineB3
Connect LineB3 and LineA3 from point 1 to point 5

Connect D3 with SideA by LineF (point T1-T2-T3)
And D3 with SideB bi LineE (point R1-R2-R3)
You need to connect 3 times. Between each finger

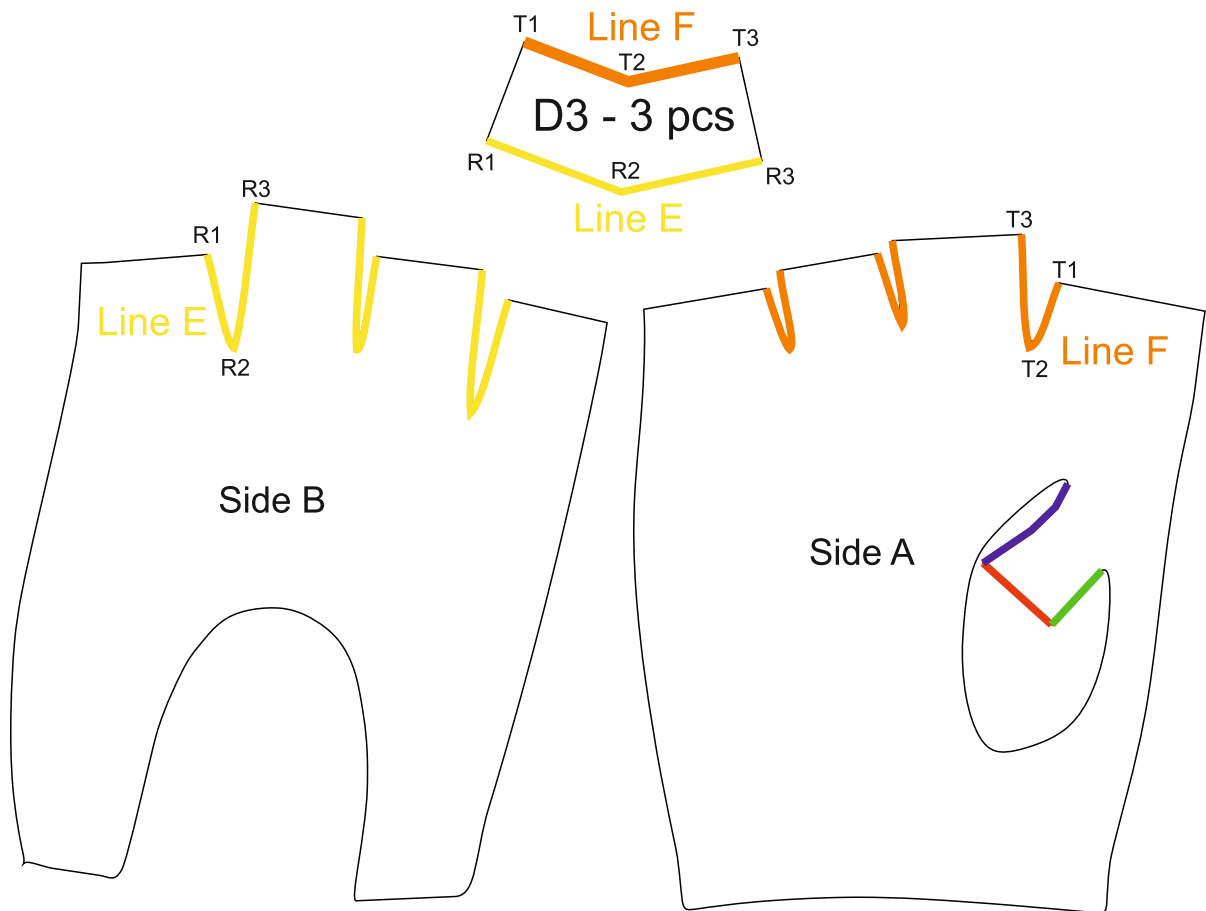


Make a small fold, around 3 mm along the Edge Z

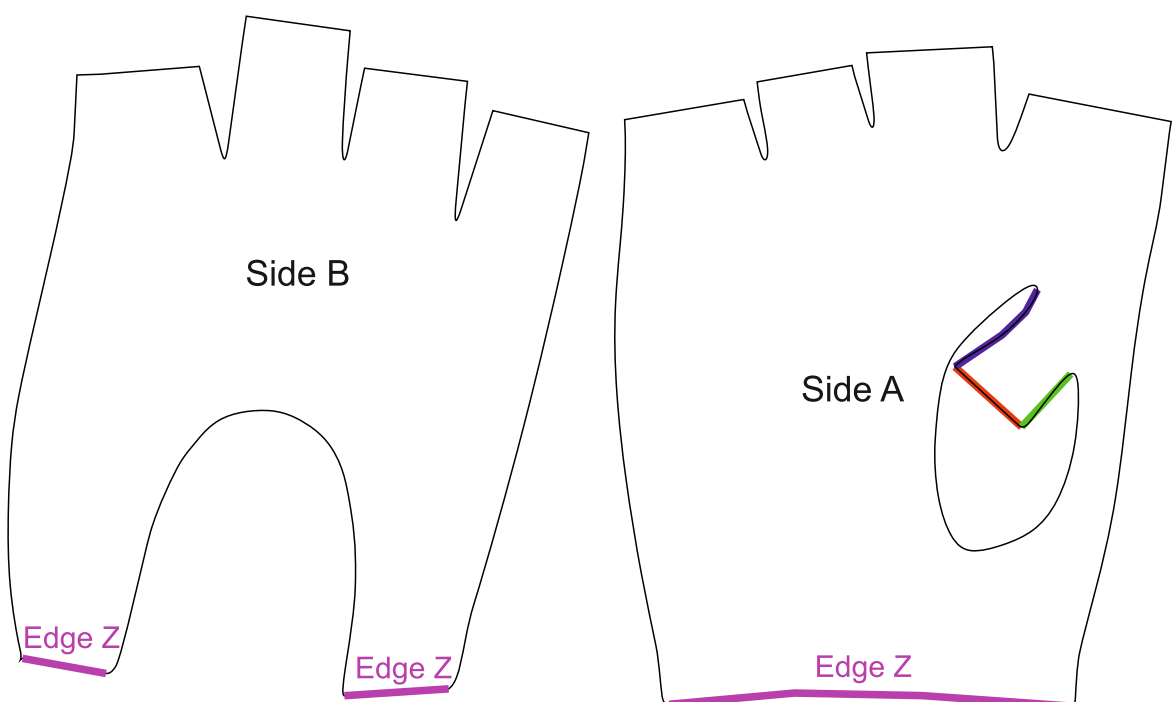

Clue the back sides of U1 with U2 detail
(and Y1 with Y2 detail).

Sew around the perimeter. Make holes for buttons.

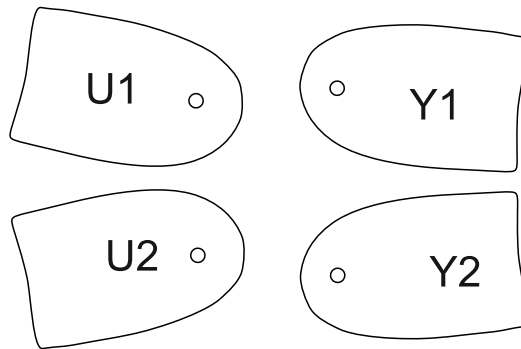

Connect the parts U1 and Y1 with the base
SideB along the LineX. Install a snap buttons.

