

# ACC-66 Instruction

Step 1: Sew A09 on A01, sew A04 on A02, Shoot A11 on A02 with 2 pieces of 12mm rivets, sew A10 with A02, and then shoot 2 pieces of A11 with A10 and A02, don't forget install D-rings when you install A11.


Step 2: Sew 2 pieces of A06 with A05, after do that, align A05's bottom edge with **A05 orienting line** by keeping flesh side above, and then sew A05 with A01 along the stitching line, then fold A05 until A06 align with **A06 orienting line**, sew A06 with A01, the front pouch is almost finished.

Step 3: We make front pouch flap. Sew A07 with A08 flesh side to flesh side, install male lock on A07, and then sew A08 with A01 by align with **A08 orienting line**.

Step 4: After doing all steps above, install female lock on, please find a perfect place on the green line.

Step 5: Install zipper on A01.


Step 6: Combine A01 with A02 by align with the orienting lines ( For beauty, you can thin the edges before sewing). Notice that when grain side above, A01 overlaps A02, then fold and sew the 2 edges.

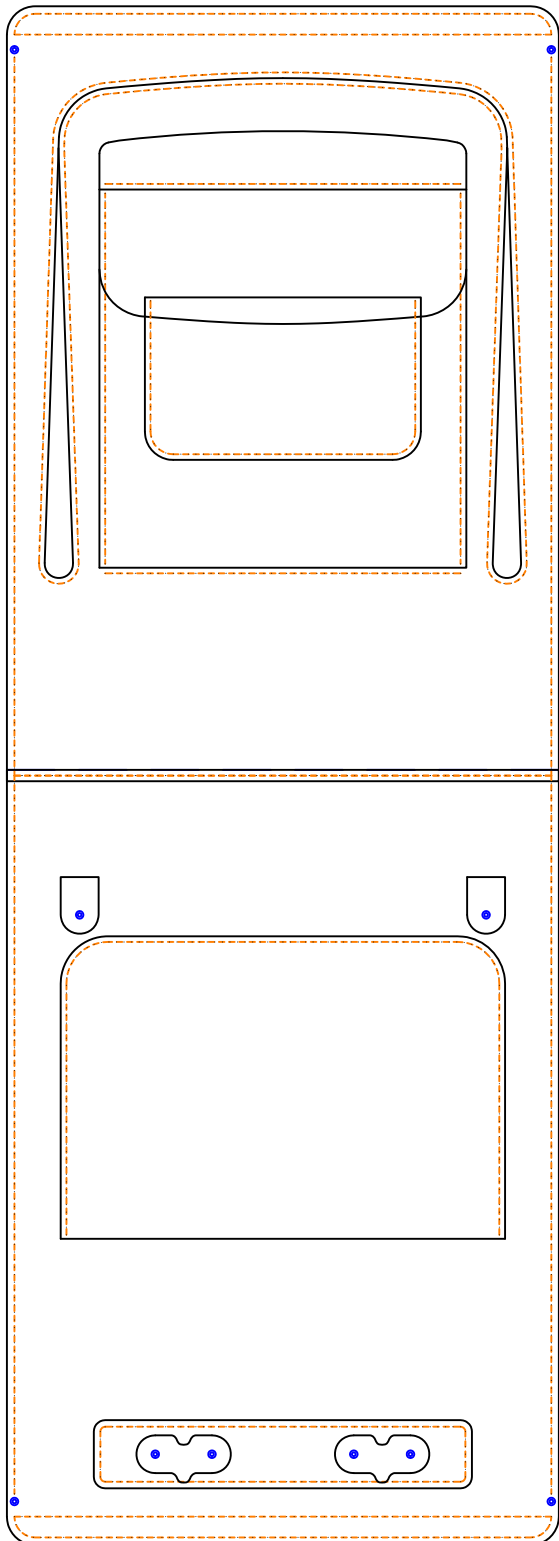

Step 7: The key step is coming. You should wet the area out of blue lines, and fold the edge of A03 vertically. And then sew A14's one side with the vertical edge, after do that, sew A14 with the main body, the bag is OK.



Step 8: Now, we make the handle, the way to make handle is very classic, please learn it carefully. First, fold the handle leather tip to tip by through the D-rings, and then paste the rest part with glue. Second, wrap the wrapper in the middle, and glue firmly. Third, make a stitch in the middle, the handle is OK.

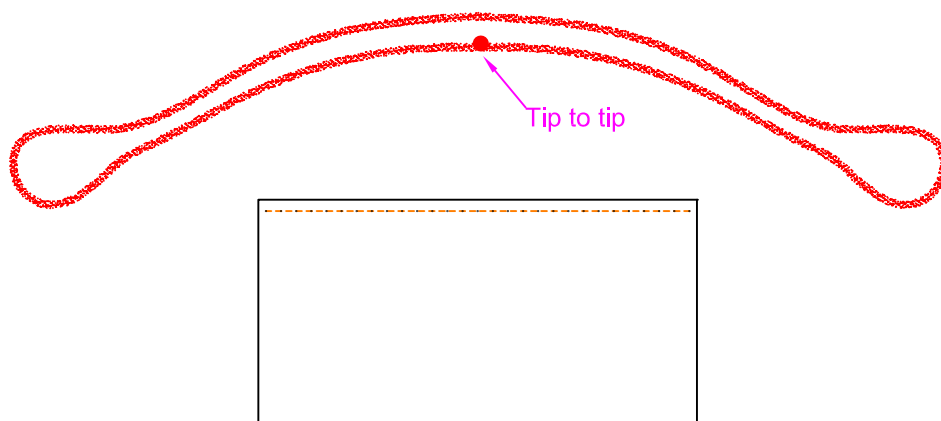

Notice:

- 1, You can burnish edges for aesthetic;
- 2, 1oz=0.4mm;
- 3, Here is the line instruction.

