






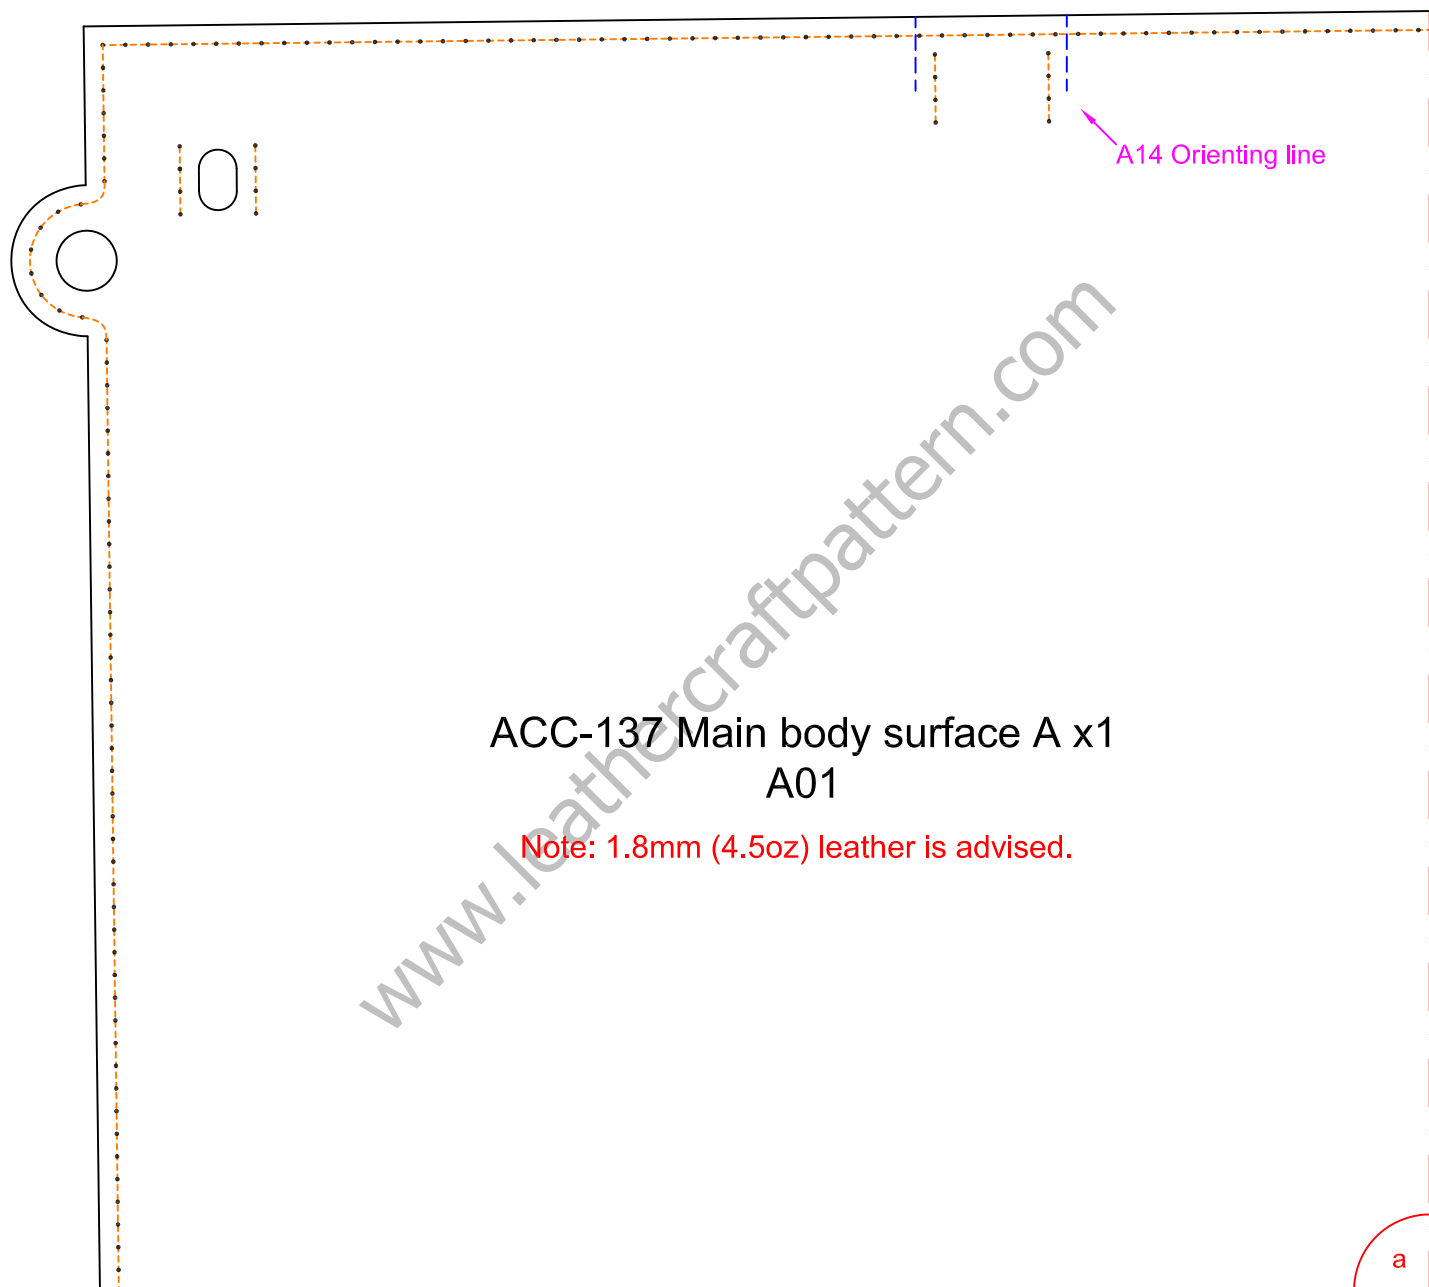


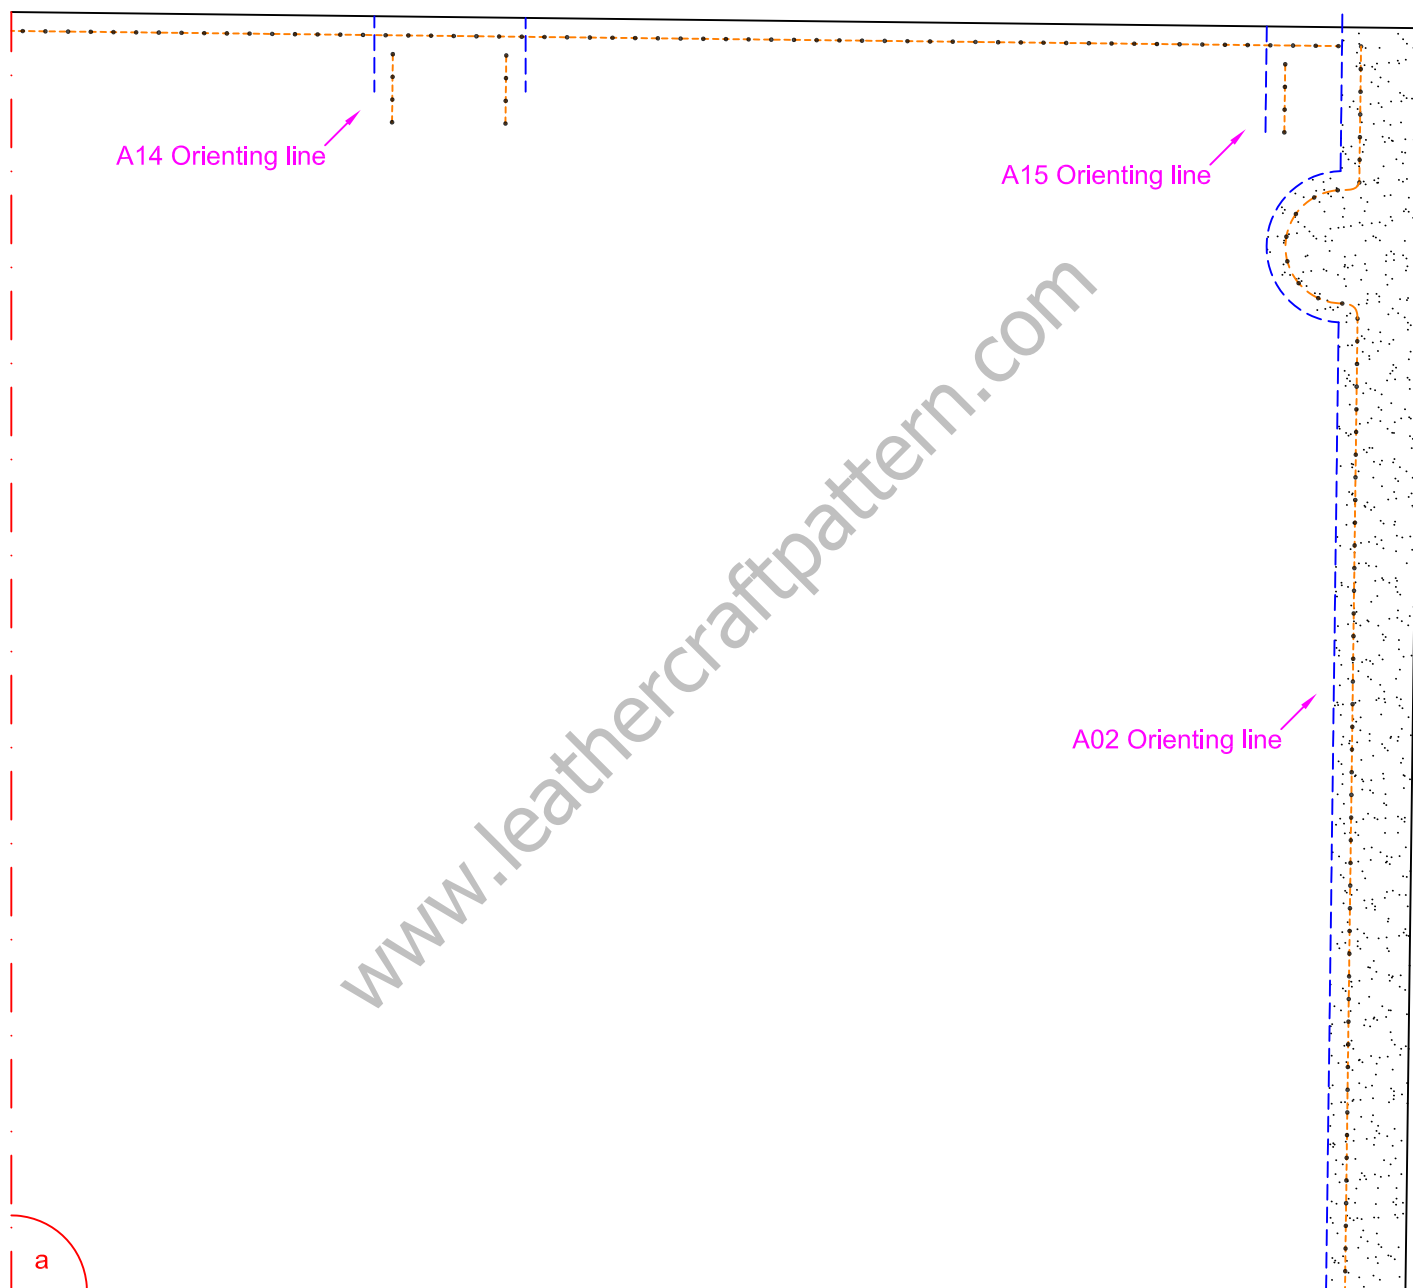


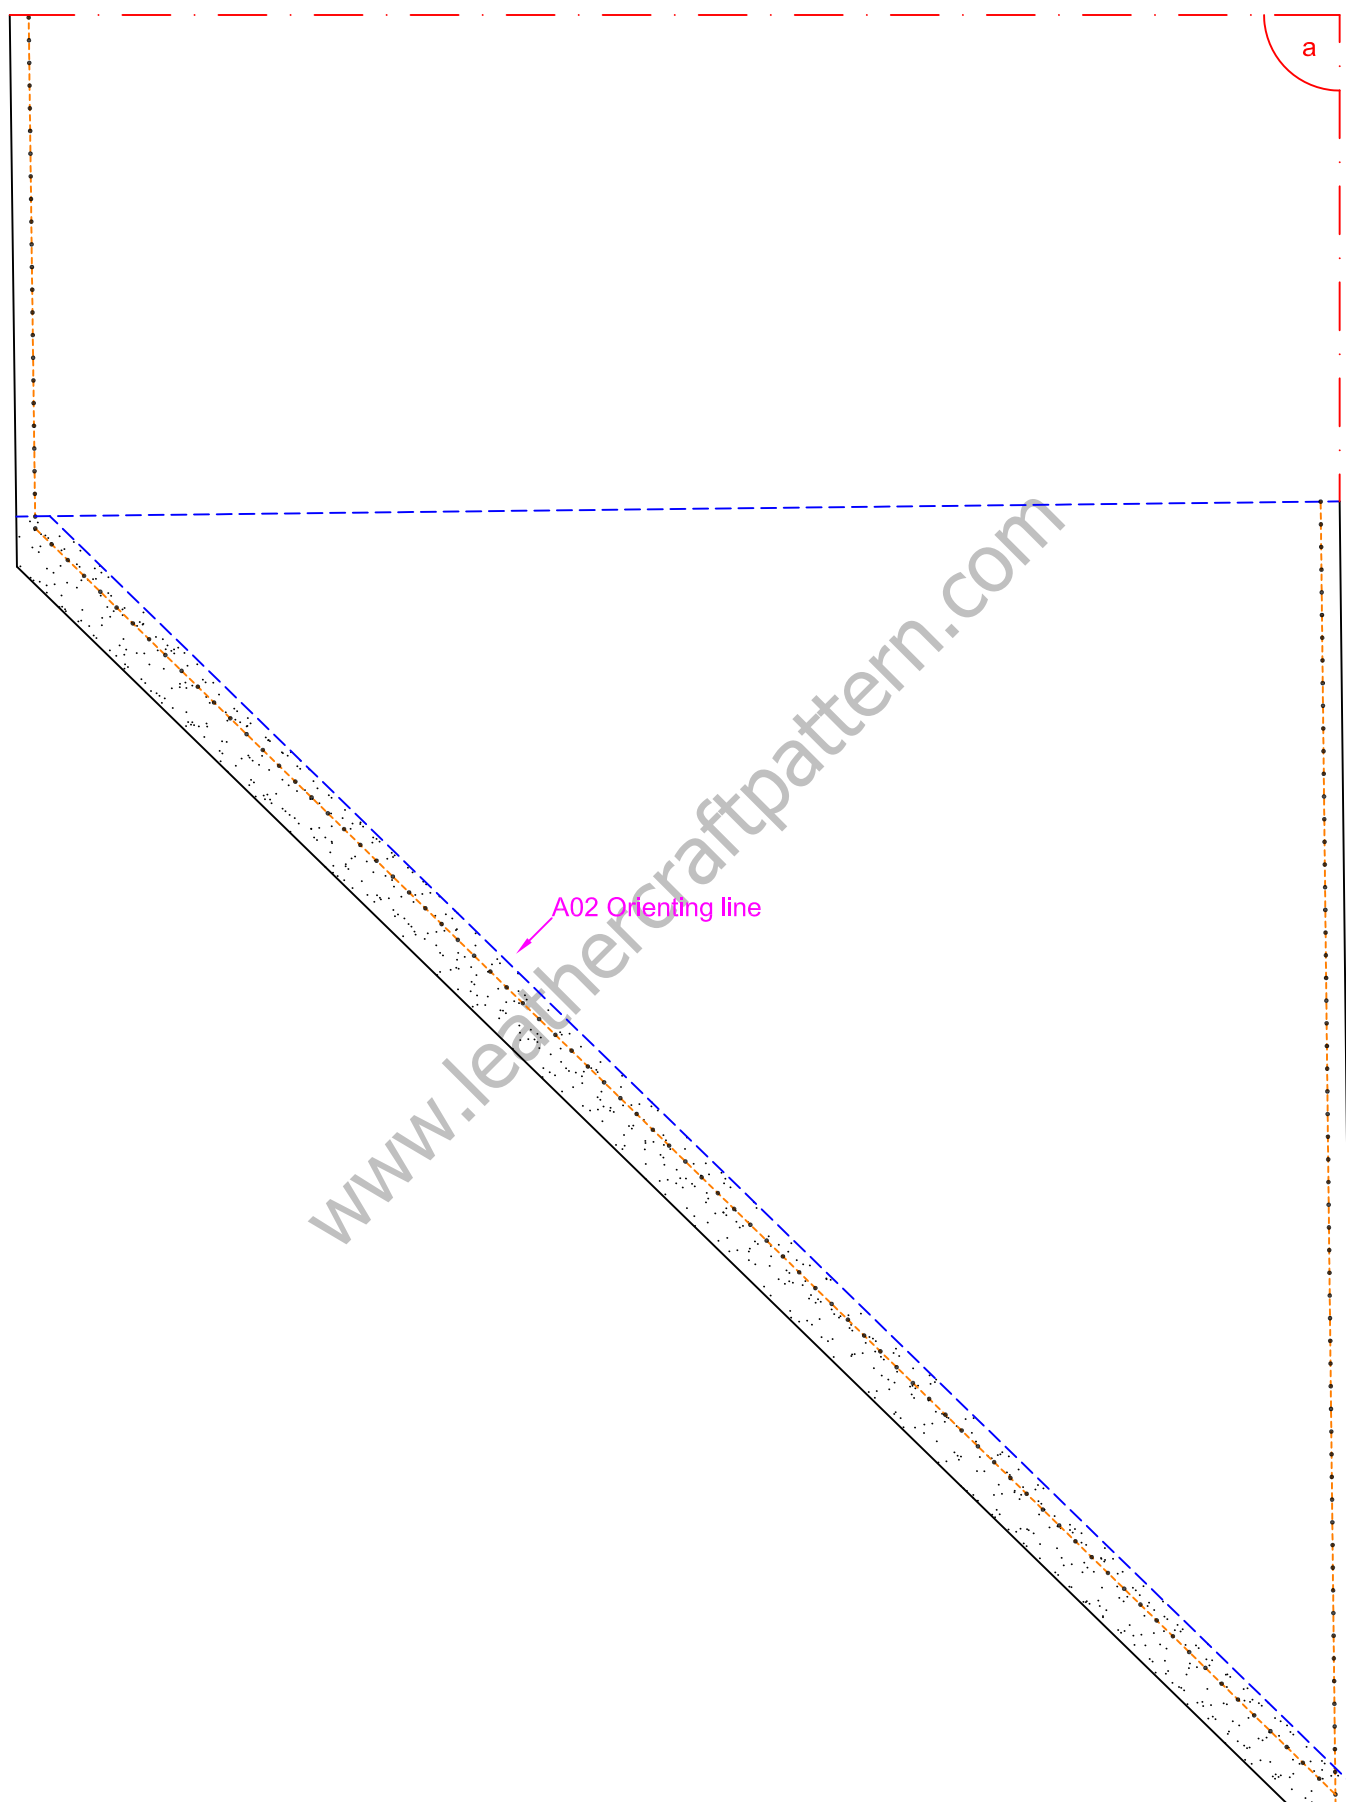


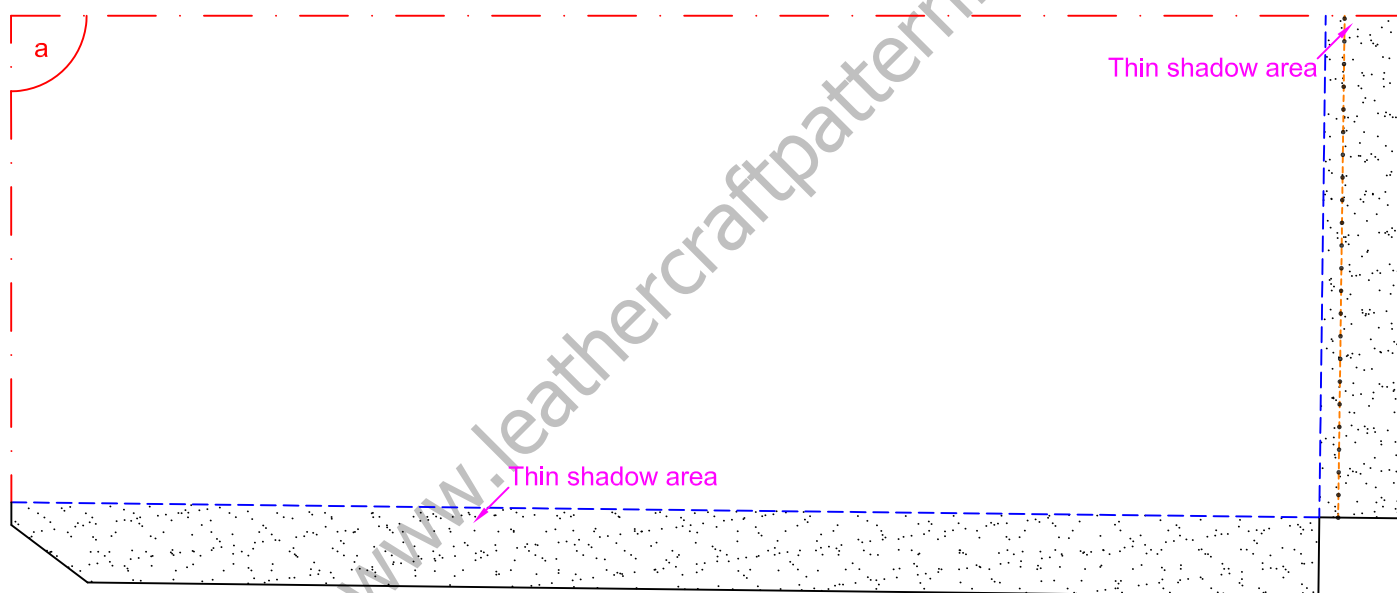


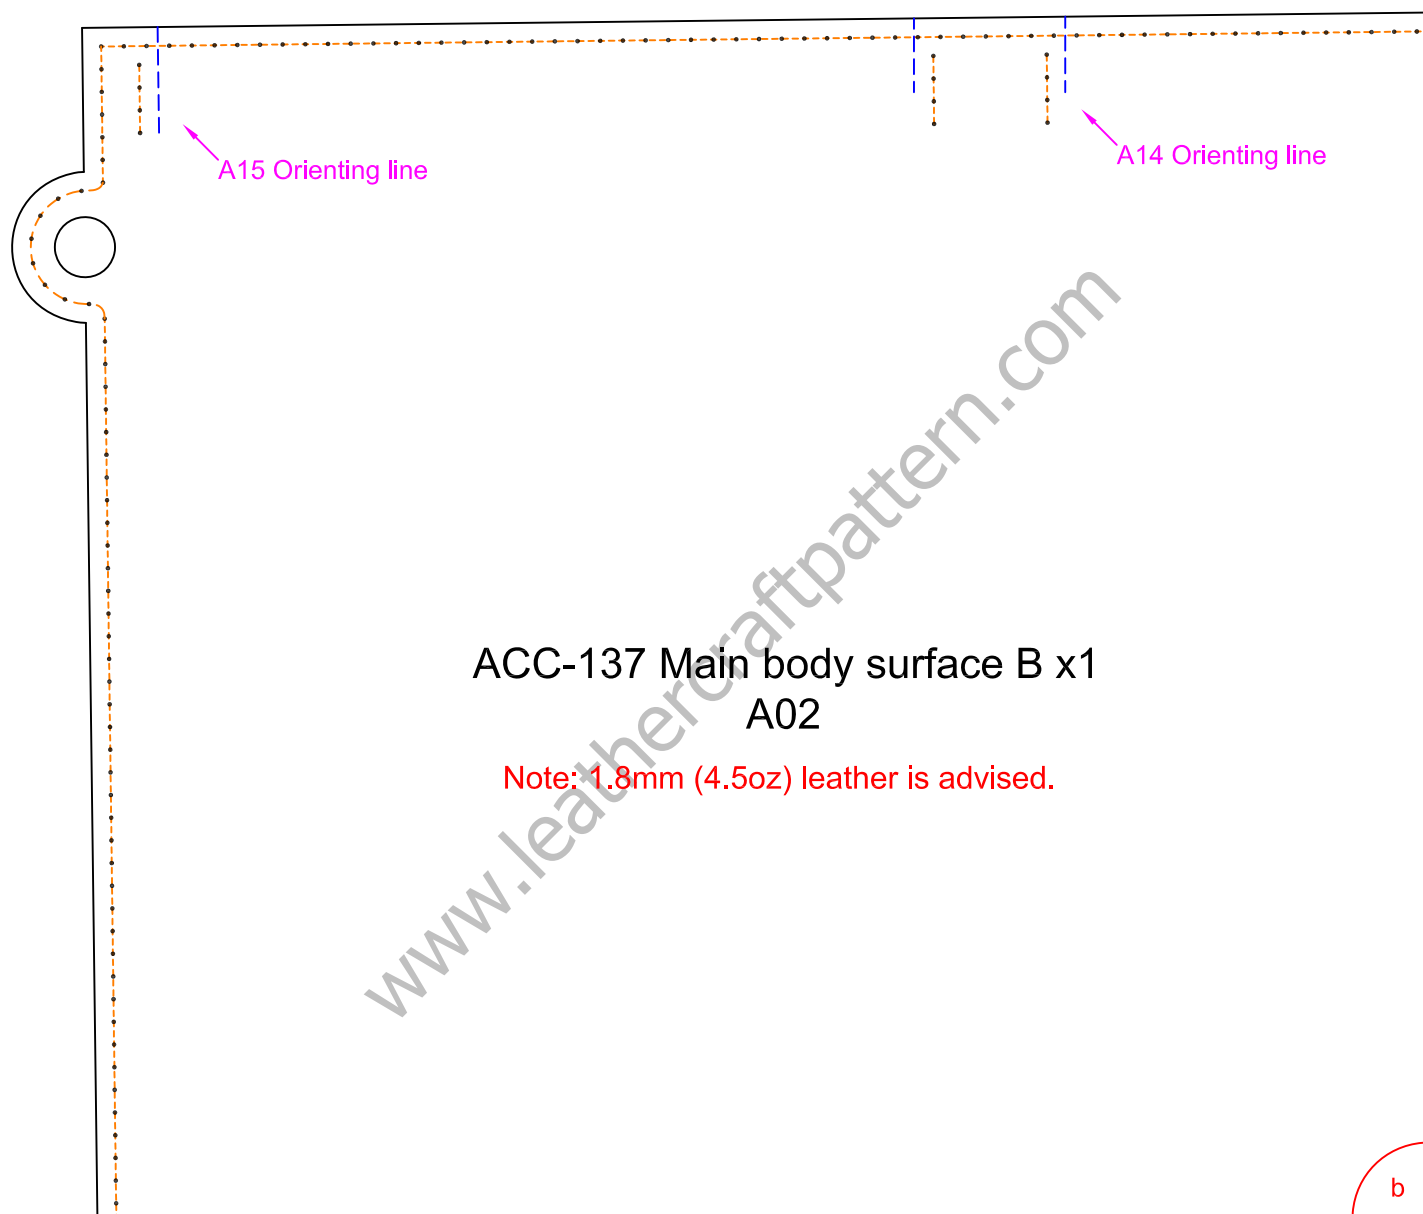


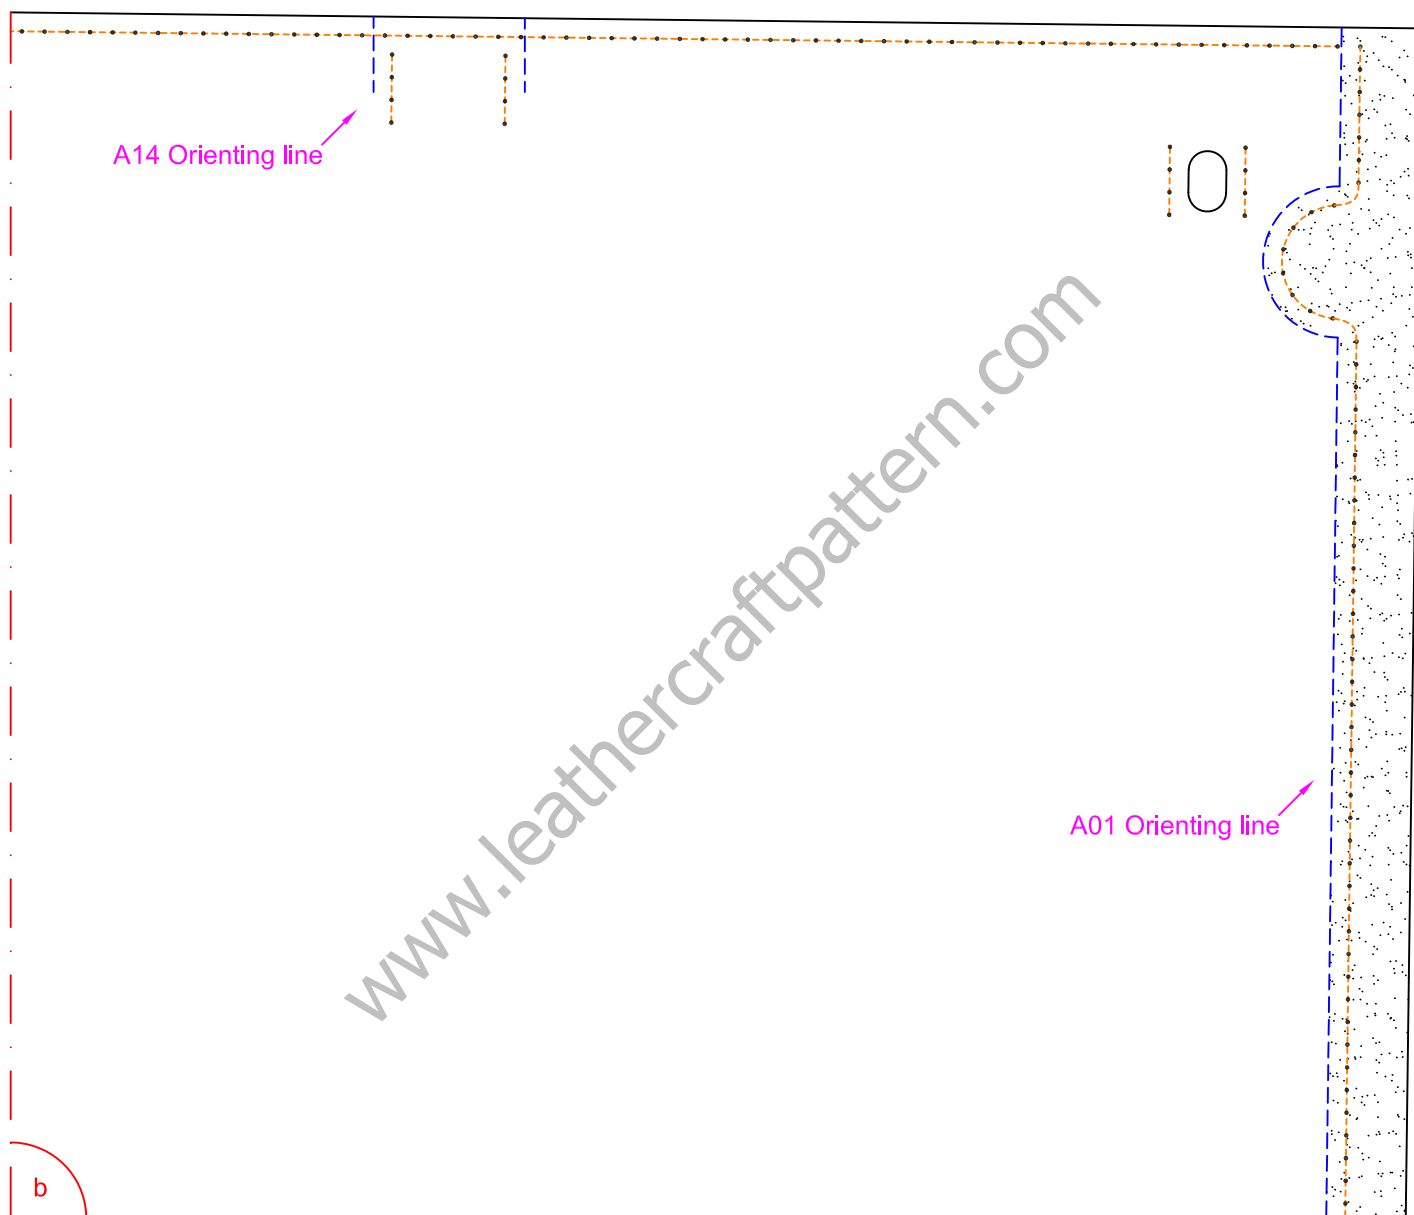


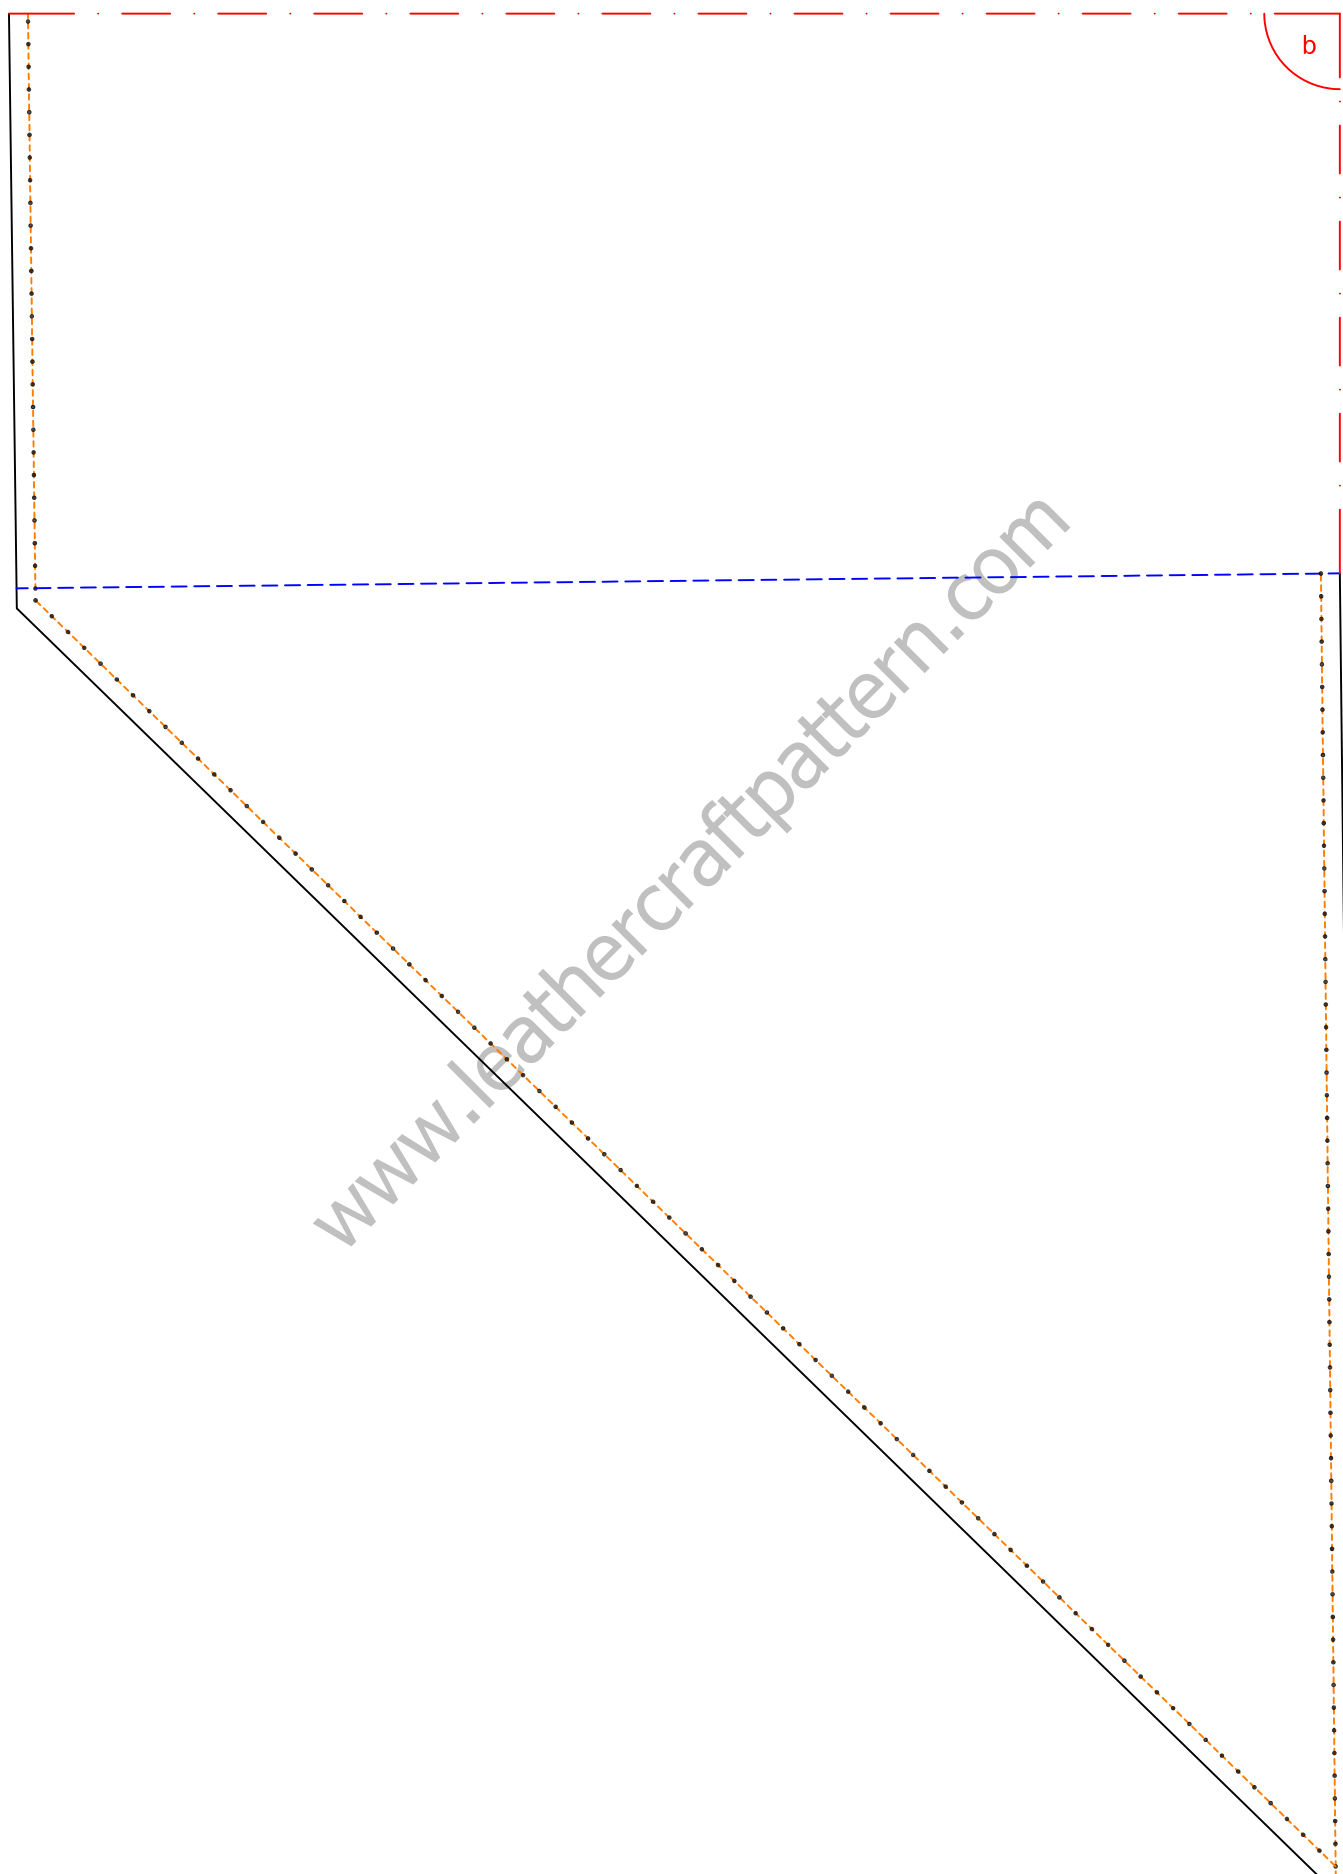


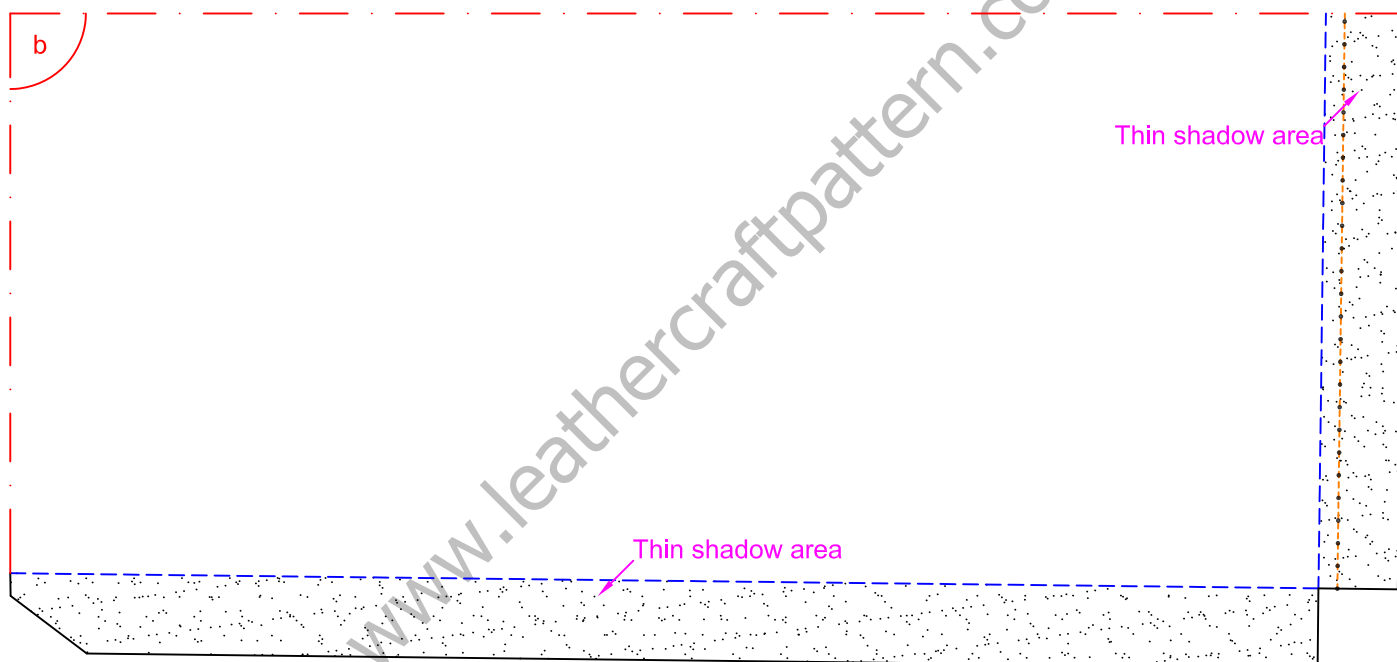

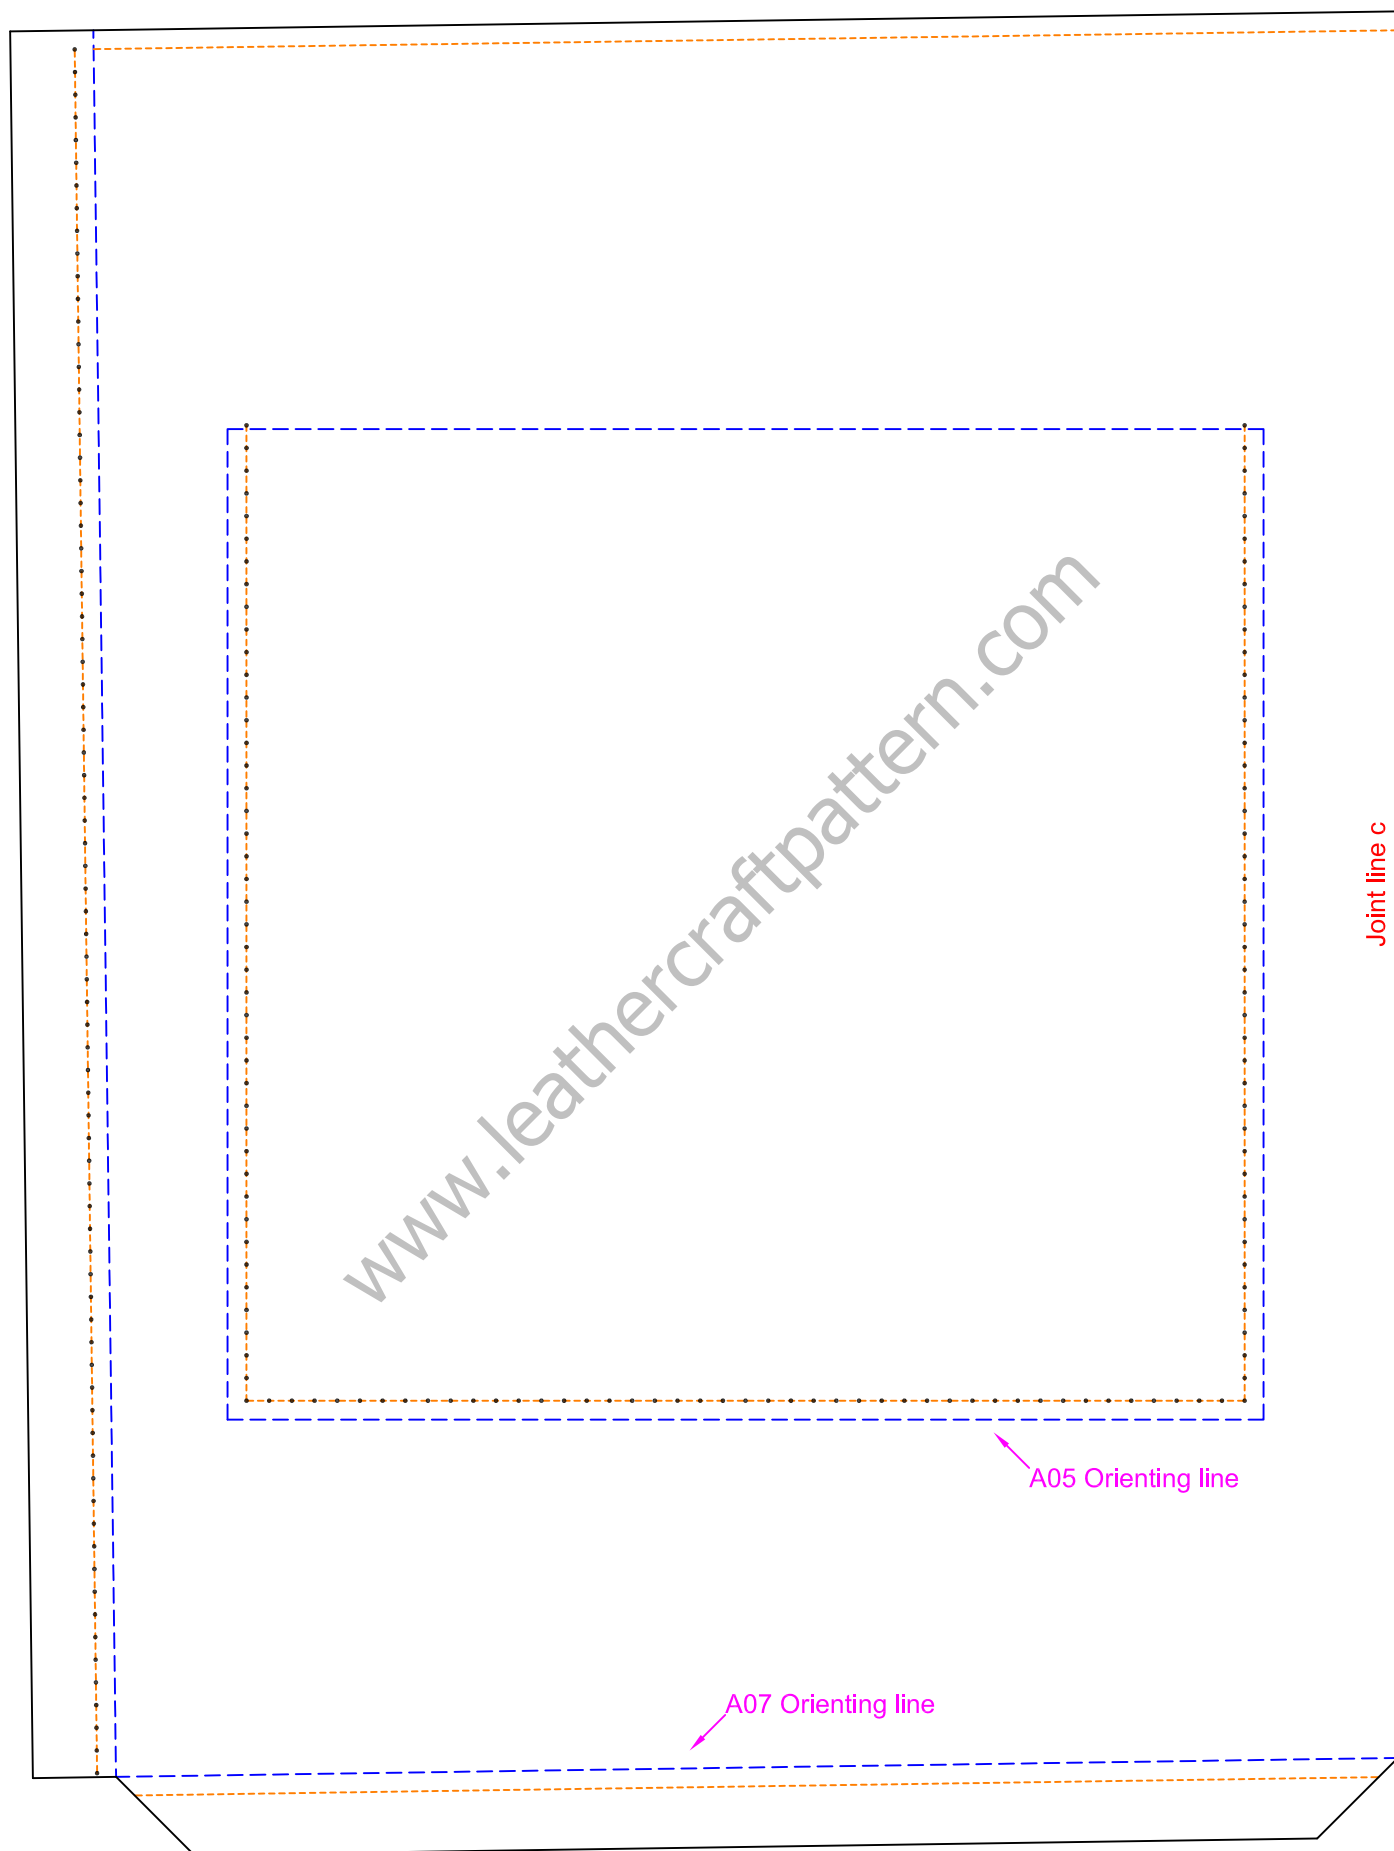

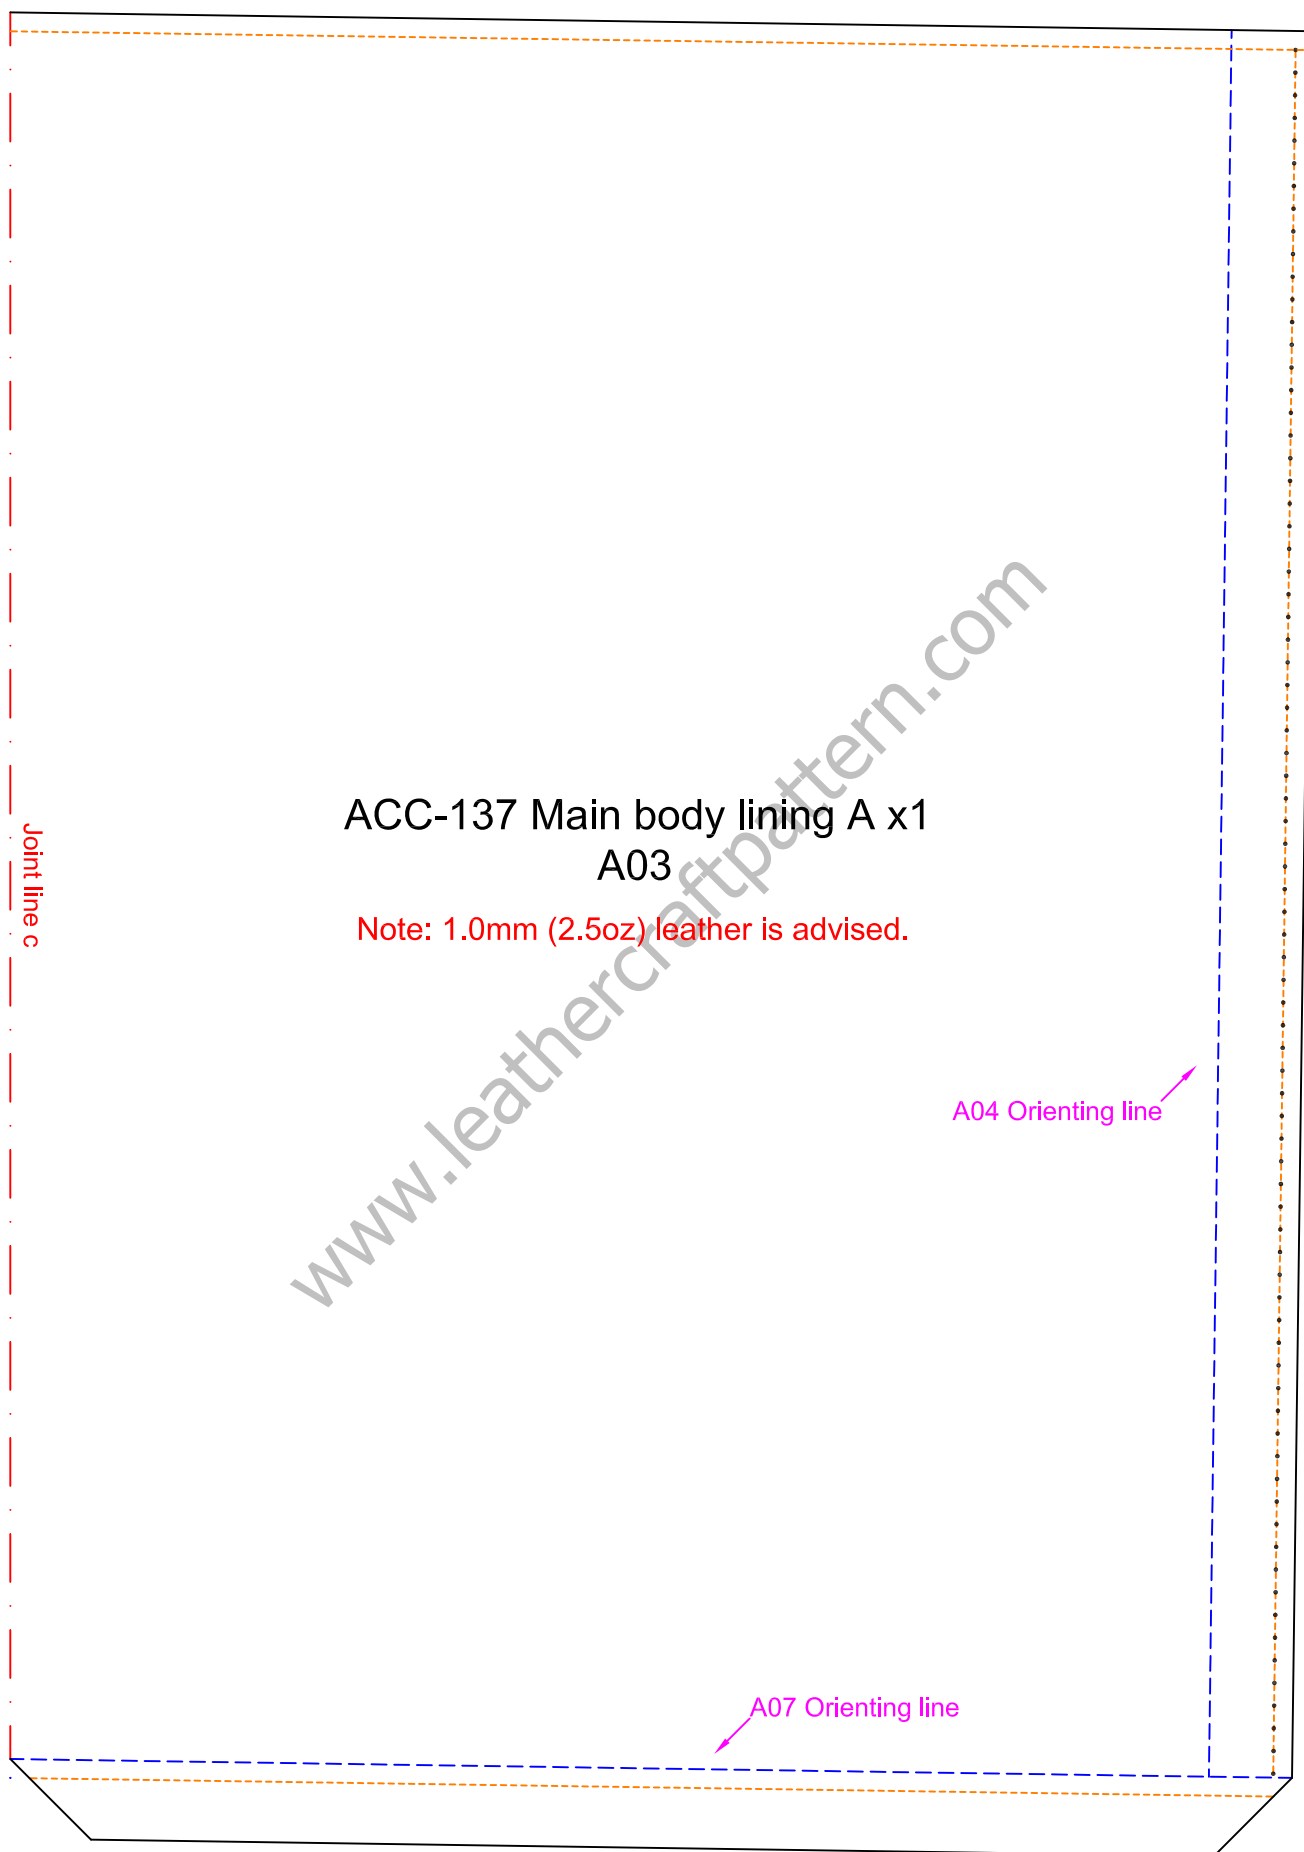

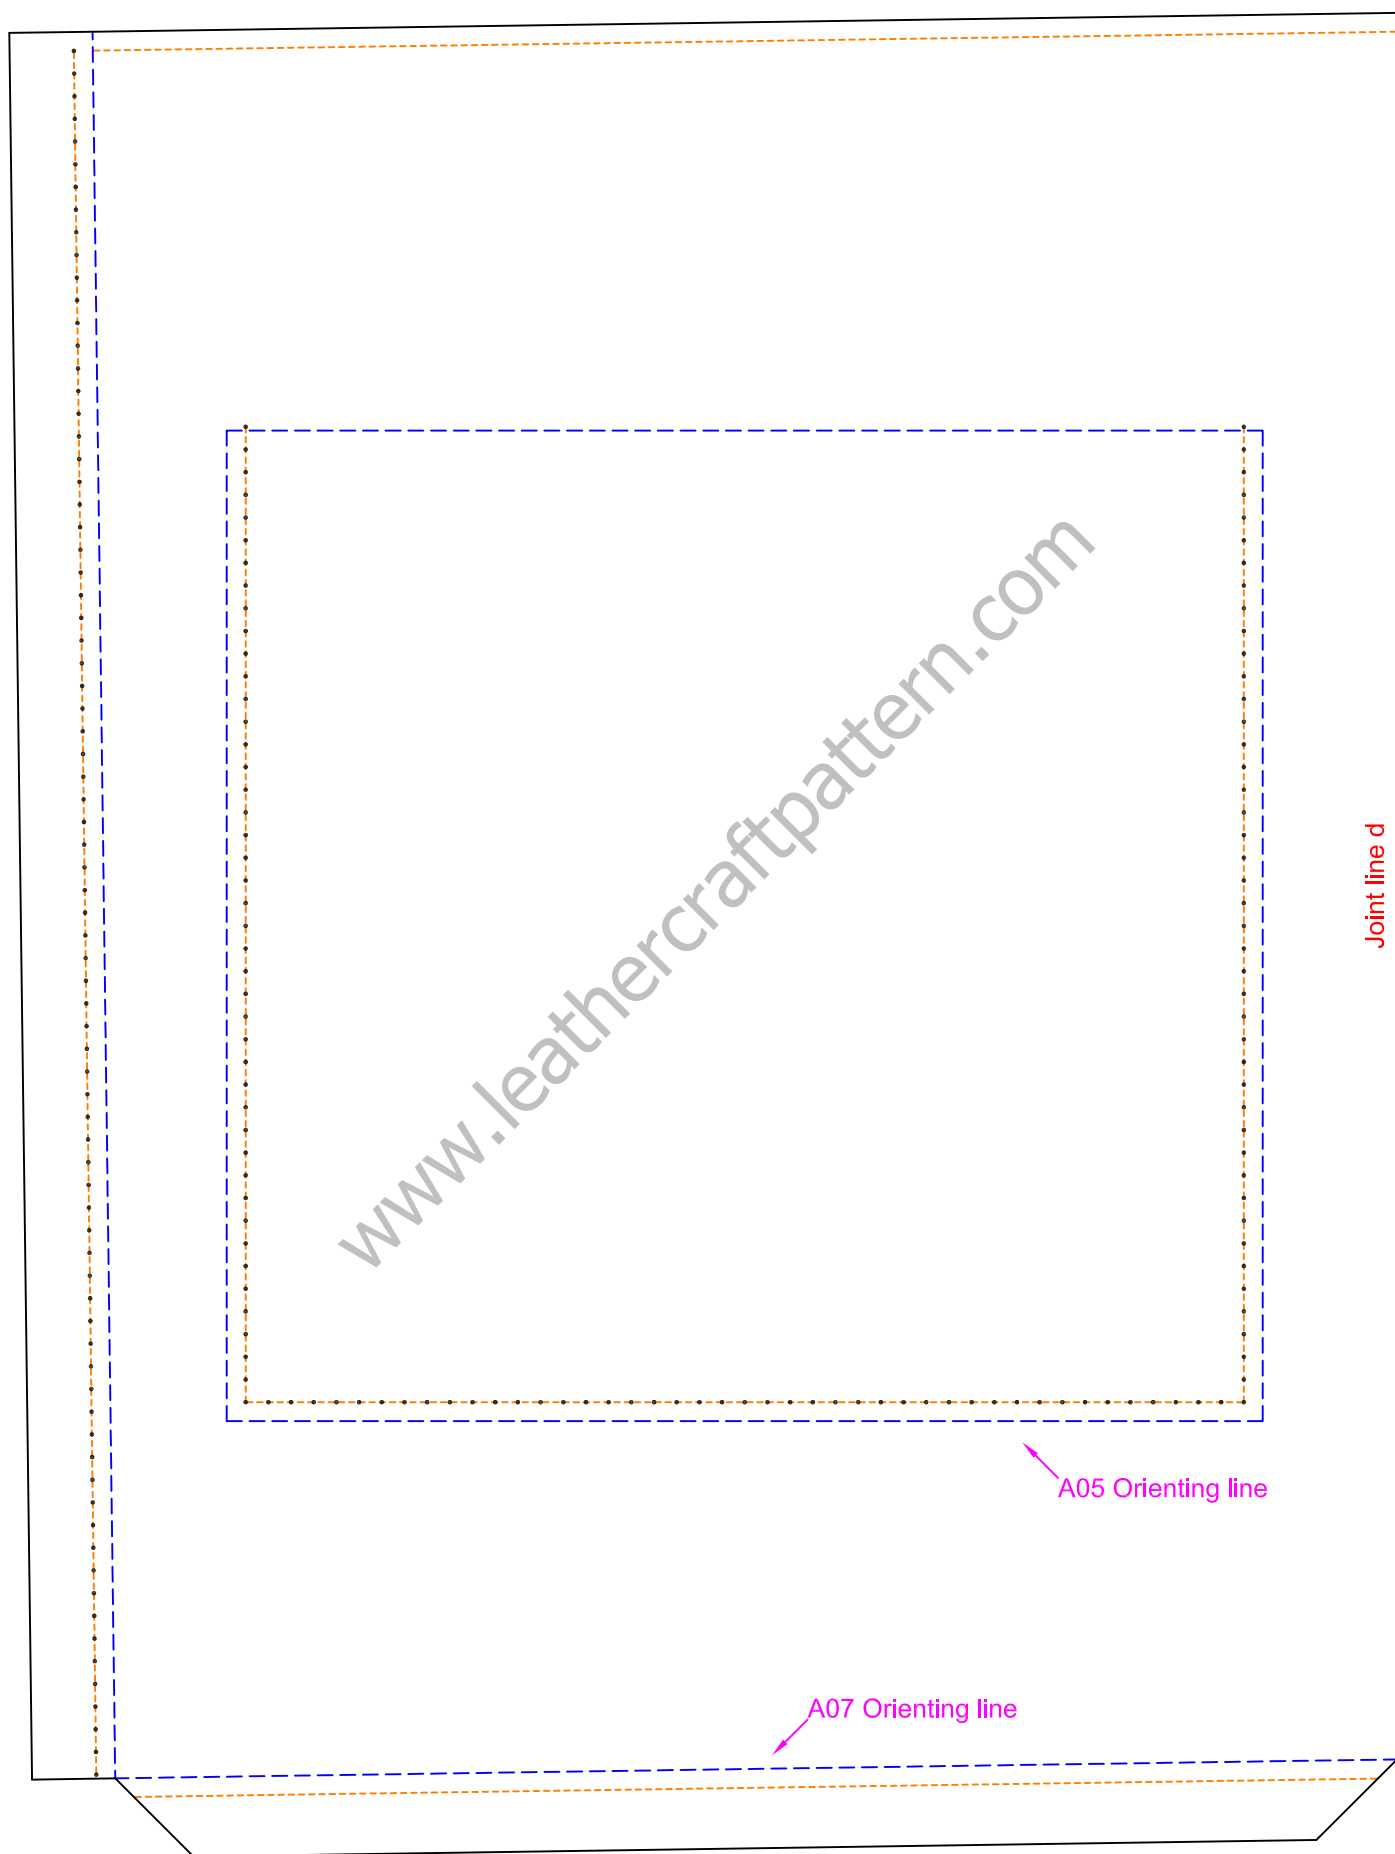

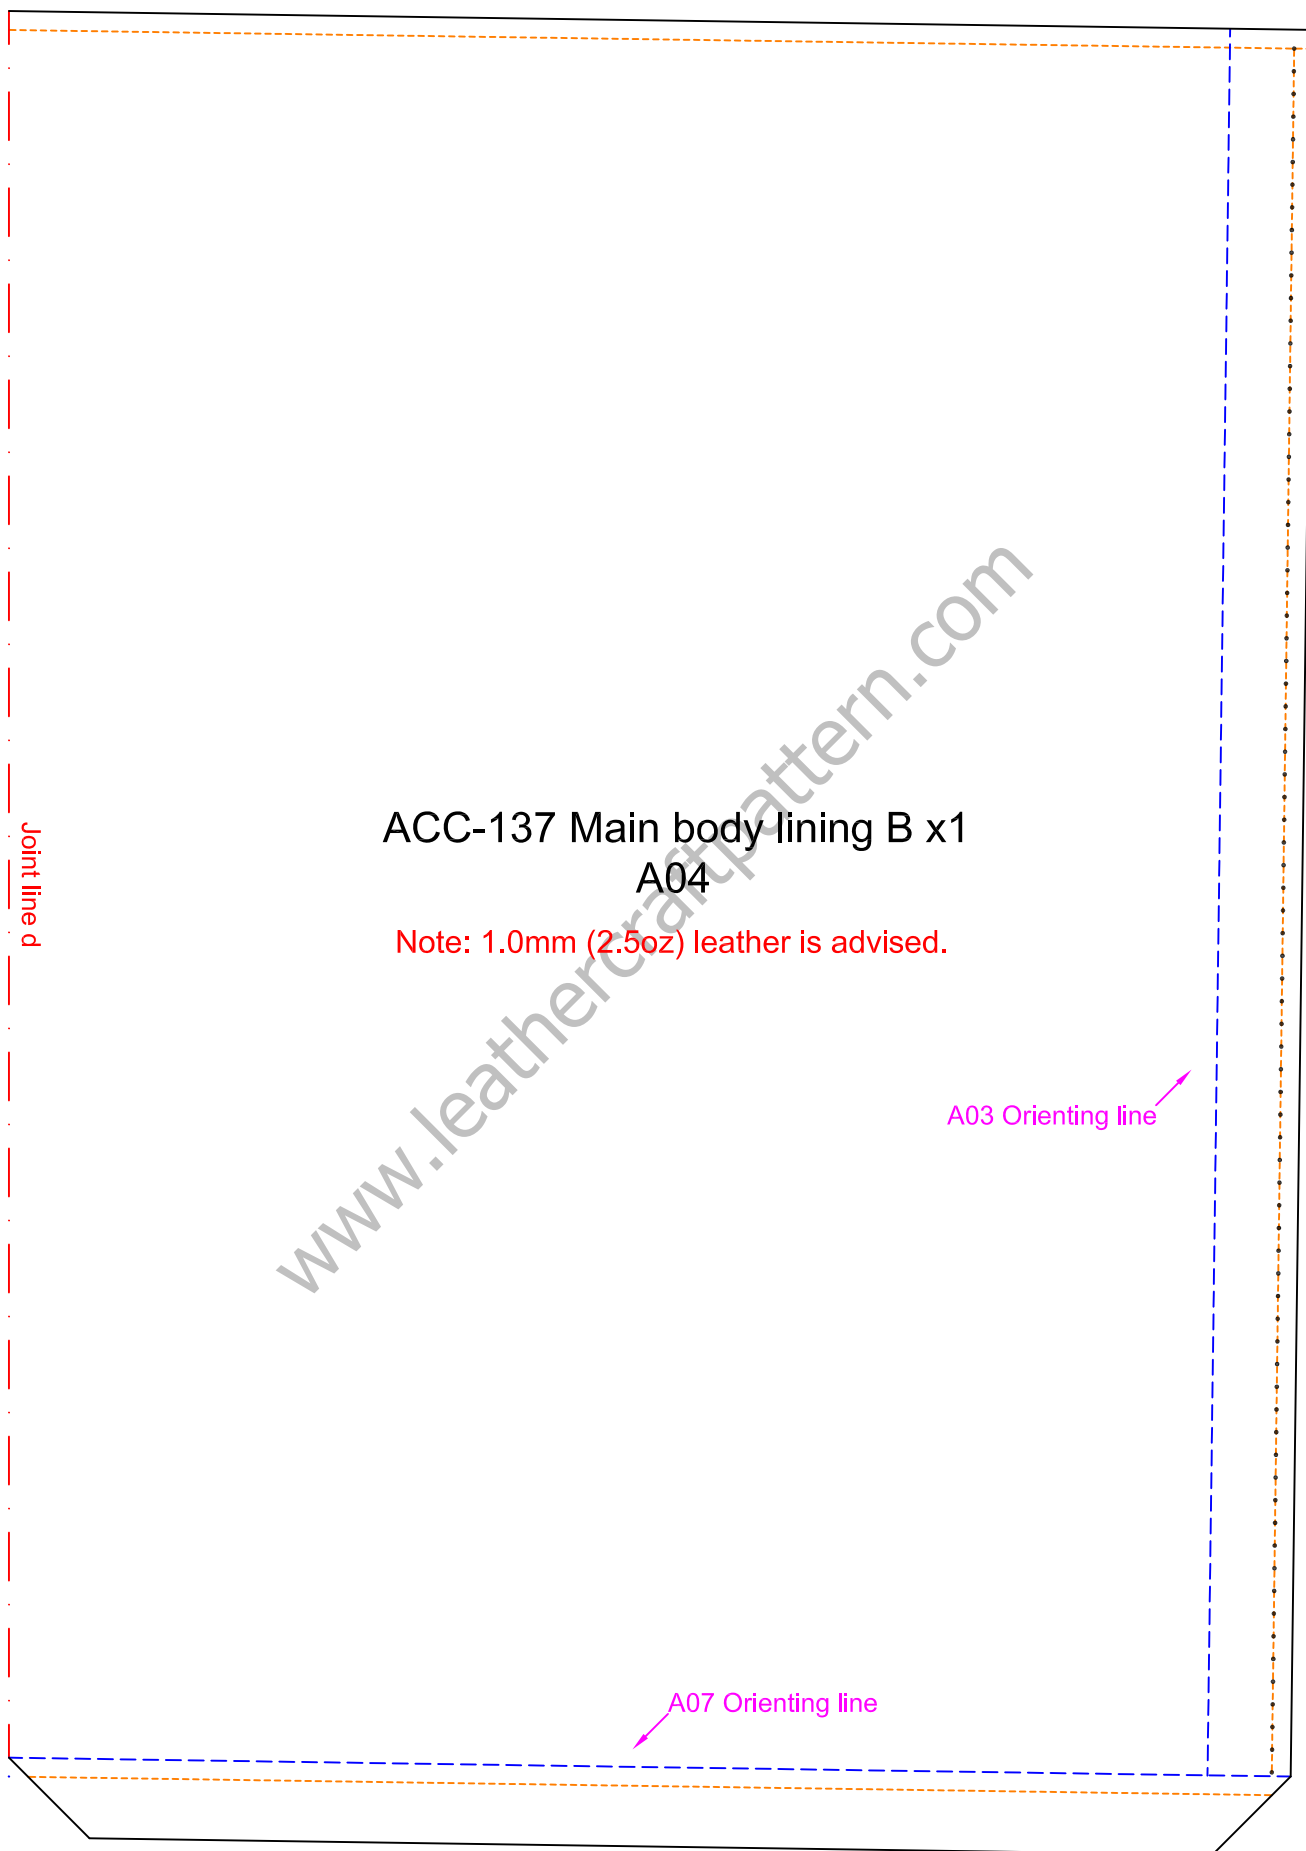



ACC-137 Internal pocket lining x1
A06










Note: 0.8mm (2oz) leather is advised.



www.leathercraftpattern.com

ACC-137 Lining bottom x2
A07

Note: 0.8mm (3.75oz) leather x2,
with same size 0.7mm spunlace.

www.leathercraftpattern.com

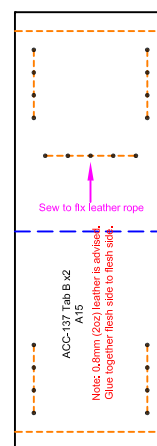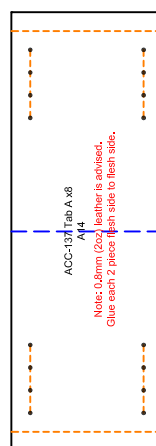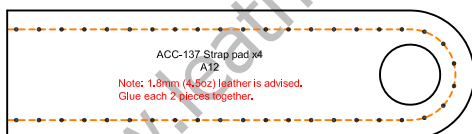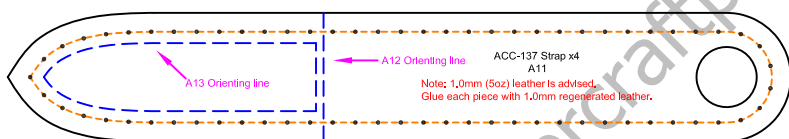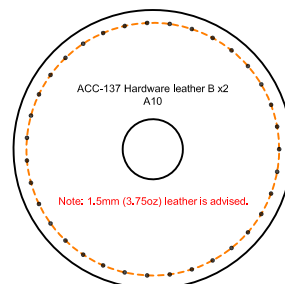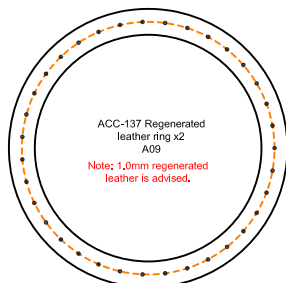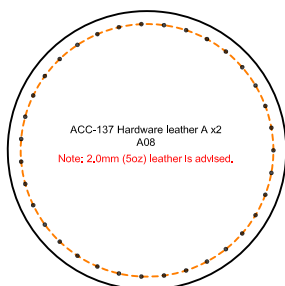

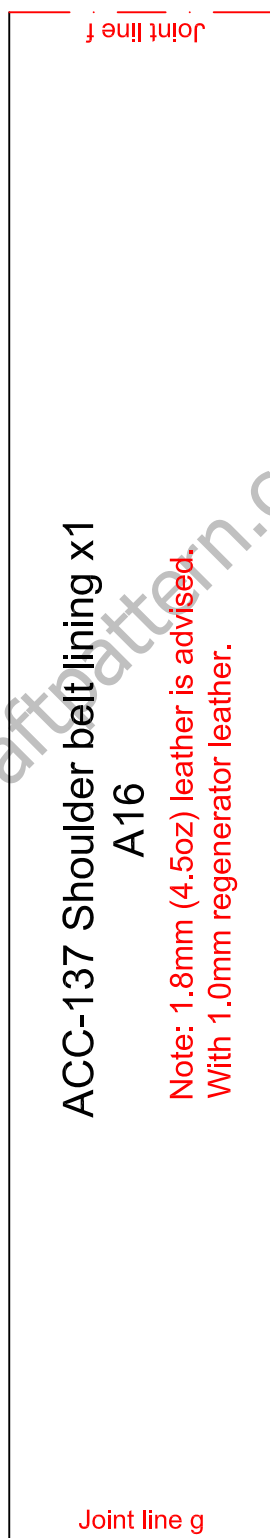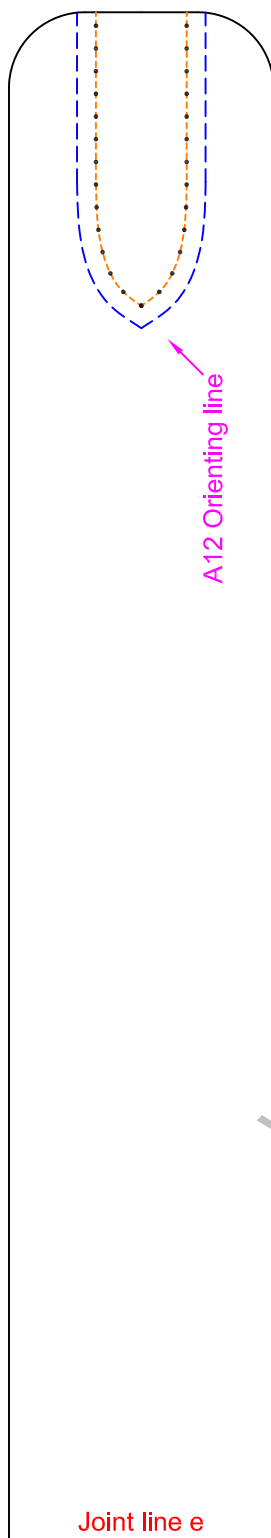

ACC-137 Shoulder belt lining x1

A16

Note: 1.8mm (4.5oz) leather is advised.
With 1.0mm regenerator leather.

