

The Eddy Wallet

by DS Leather Goods




DS Leather Goods

Thank you for your purchase and enjoy crafting
The Eddy Wallet, Deyan


www.instagram.com/dsleathergoods
www.etsy.com/shop/dsleathergoods

The Small Print

- > If you are a 1-person small leather crafting business you can sell as many products as you want that you made using this pattern, otherwise please consider the pattern for personal use only.
- > Selling or distributing this pattern via any means for commercial or non-commercial purposes and creating cut dies (clicker dies) using the pattern is forbidden.
- > Non-handmade production of **The Eddy Wallet** via any means is not allowed.
- > If you have any questions regarding the pattern or the build, feel free to reach out to me via www.instagram.com/dsleathergoods
- > If you post **The Eddy Wallet** you have created on social media, please always credit my Instagram account and/or my Etsy shop

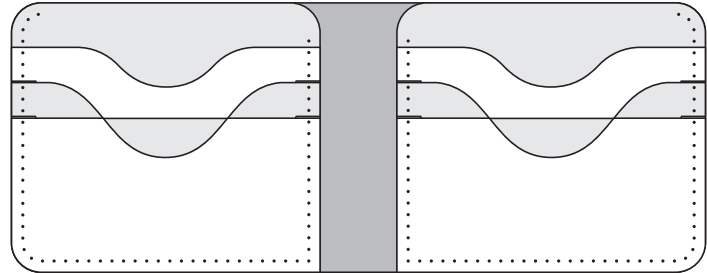

Print Accuracy Test

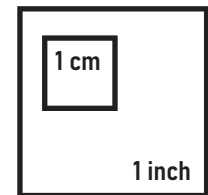

The Eddy

Dimensions: 11/9cm (~4.3/3.5 inches)
Capacity: up to 8 cards and unfolded cash.

The Build

Skill level: Intermediate

Leather:

- > 1.0-1.2mm thickness (2.5-3 oz) for the interior, medium to stiff temper
- > 1.4-1.8mm thickness (3.5-4.5oz) for the exterior



Basic Instructions

- > Print pattern at 100% and verify size using the Print Accuracy Test. **Measure and cut on outside edge of the lines.**
- > Follow the instructions as written on the pattern pages. Please read through the instructions and review the pictures included in the download zip folder before you commence the build. **Note:** stitching holes in the patterns are 4mm from the edge (unless mentioned otherwise on the pattern pages) and spaced at 3.85mm, however illustrative in nature. You can use other spacing based on your pricking irons/stitching chisels.



Assembly Instructions




Important: The Slots patterns have additional trim allowance marked with grey lines. Cut the leather pieces along those lines and we will trim the excess leather after the Slots are installed. Given the trim allowance on those patterns they are identical for both the left and right side of the interior. You can cut out of paper only one set of Bottom, Middle and Top Slots or you can use both sets if your approach to transferring to the leather is by taping the pattern onto it. You can skive down the bottom parts of the Bottom and Middle Slots before you begin the assembly to reduce the bulk.

1. Start by finishing the open edges of all Slots (those are the edges without stitch line along them) and the open edge of the Exterior between the red marks as noted on the Exterior pattern
2. Let's make the Left side of the Interior. Install the Left Bottom Slot over the Left Base by stitching only the green stitch line at the bottom of the Slot. Note that this stitch line is 3.5mm off the Slot edge.
3. Install the Left Middle Slot on top of the Left Bottom Slot by stitching only the red stitch line at the bottom of the Slot. Note that this stitch line is 3.5mm off the Slot edge.
4. Glue the Left Top Slot on top along its stitch line edges to the Left Base. The three Slots edges will be sticking over the Base edges on both side and at the bottom because of the mentioned trim allowance. Remove the excess by turning the Base with its flesh side of leather towards you and cutting along its edge.
5. Punch and stitch the blue stitch line on the right side of the Left Base. Finish the edge between the red marks in the direction of the arrows as marked on the Left Base pattern. Pre-punch the black stitch line but do not stitch it yet.
6. Repeat steps 2-5 for the Right side of the Interior. You should end up with what you see on Pic1.
7. Turn the Exterior with its flesh side of leather towards you and glue the Left and Right sides of the interior to their respective sides along the pre-punched black stitch line and aligning them to the Exterior top edge.
8. Using that same pre-punched stitch line, punch all the way through the Exterior and stitch. Remove the 3mm excess leather at the bottom edge of the exterior by cutting along the Interior edges. Finish the edges you just stitched including the gap between them at the bottom of the Exterior and done! :)



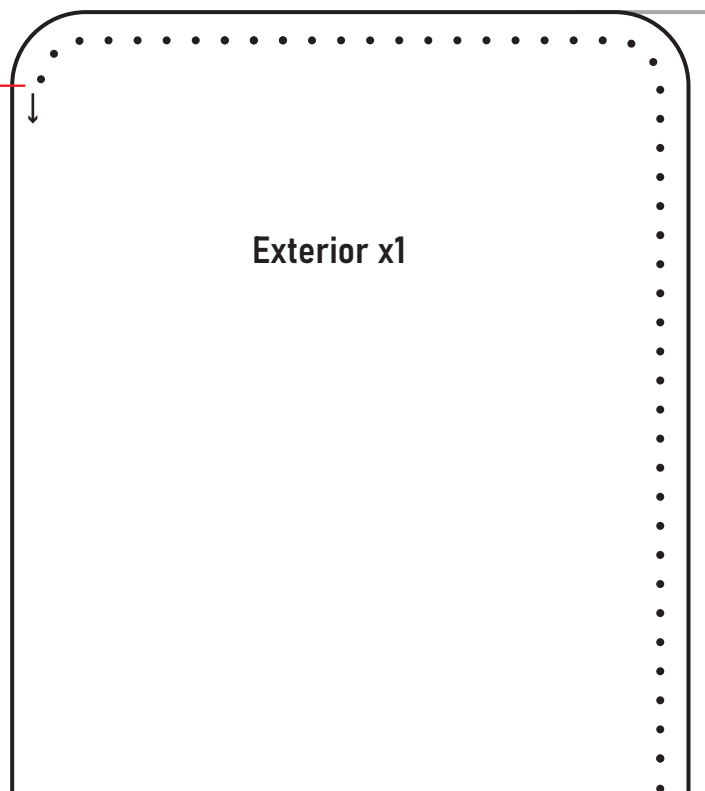
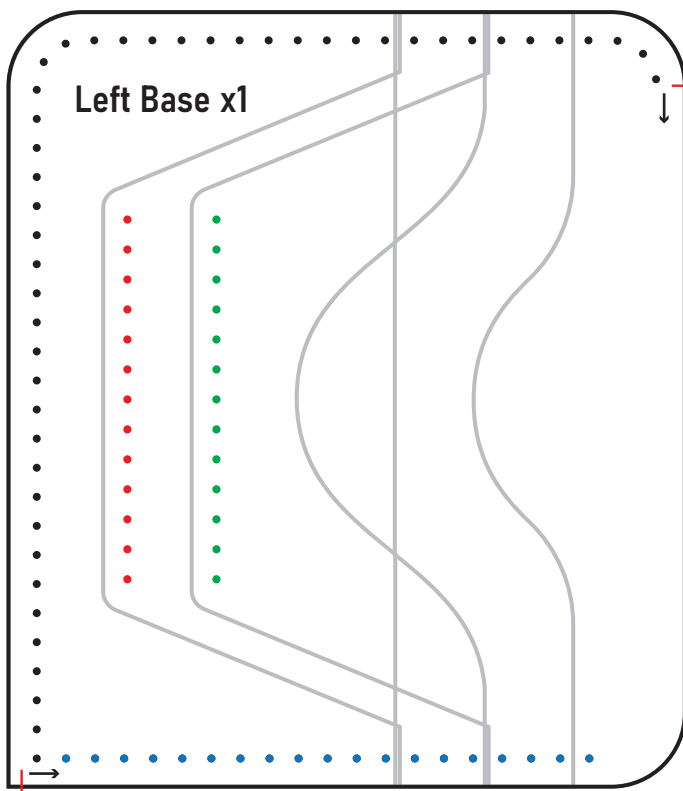


← Top open edge of the Exterior

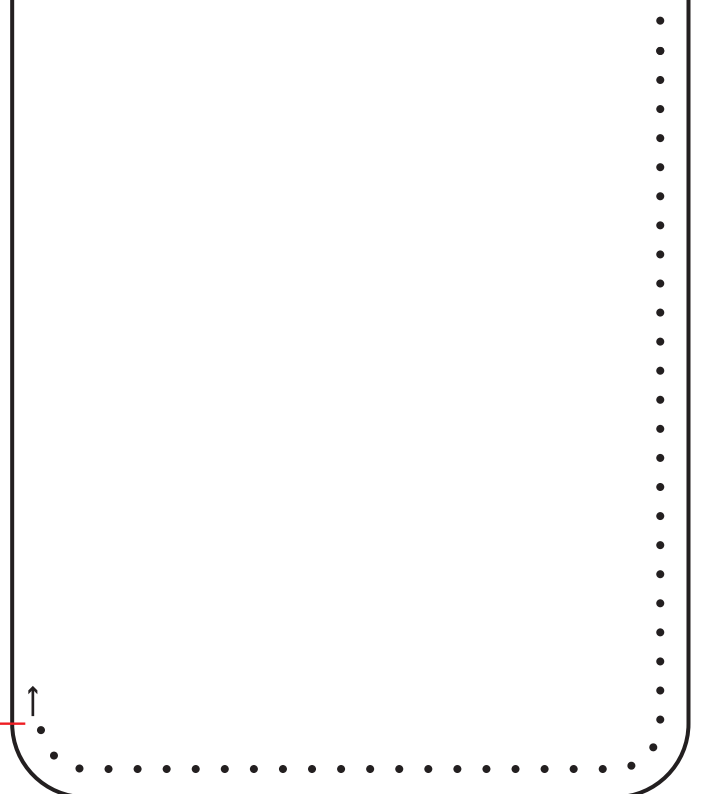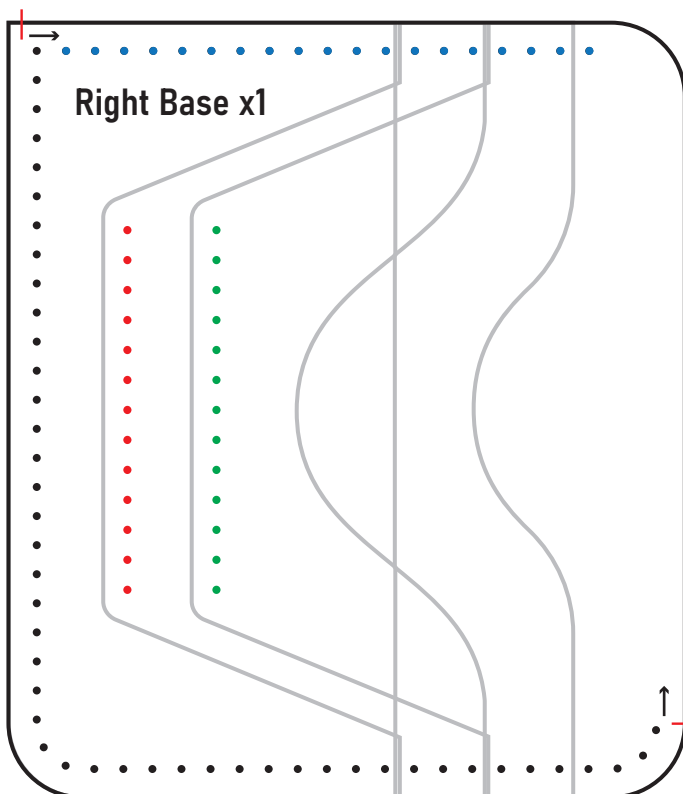

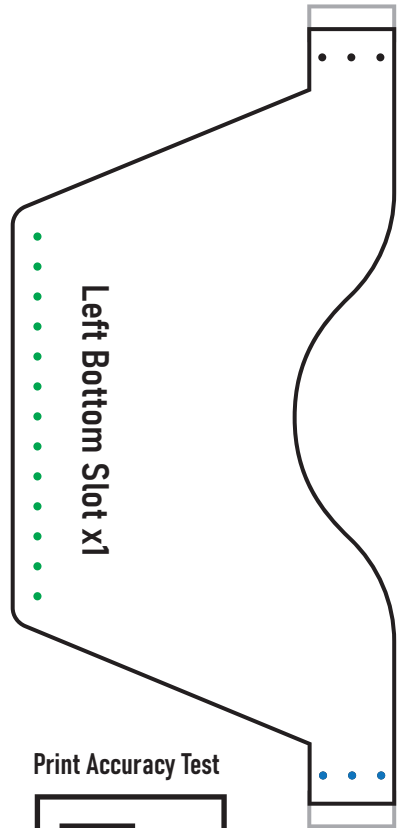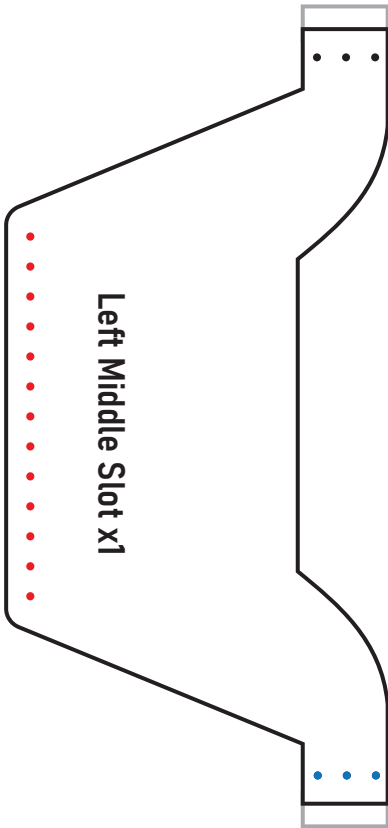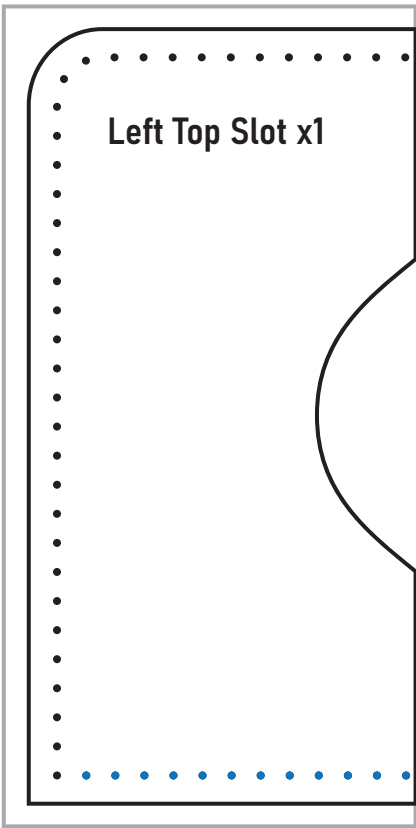

Print Accuracy Test

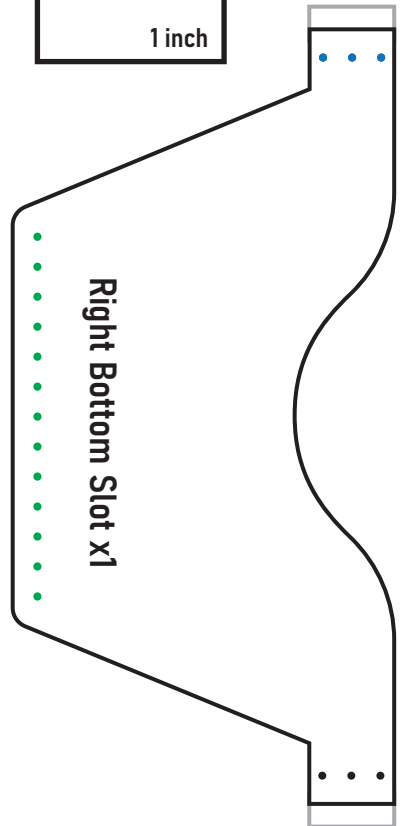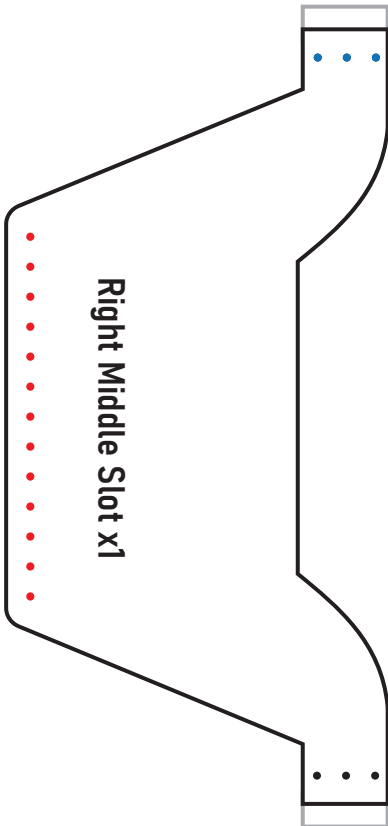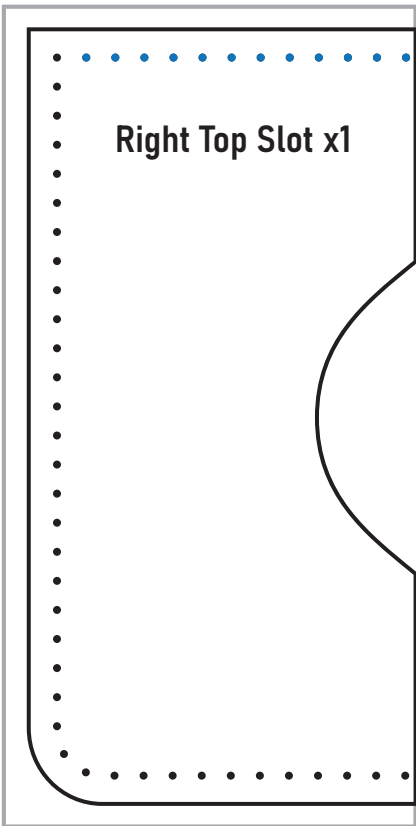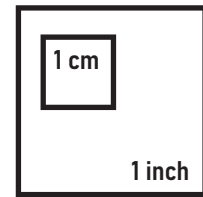

Carved/Tooled Exterior Aid

The shapes with blue lines below will give you the 'safe' zone to carve/tool the exterior leaving a 'blank' border around in case you want to draw or overlay a carving/tooling design. The one on the left leaves the fold of the wallet blank too if you prefer that part not to be carved/tooled. The small blue shapes are 96/73mm and the big one on the right is 213/73mm. This page of the pattern is also available as a separate file in your download folder that can be opened in editing software if you want to overlay your carving design digitally.

