



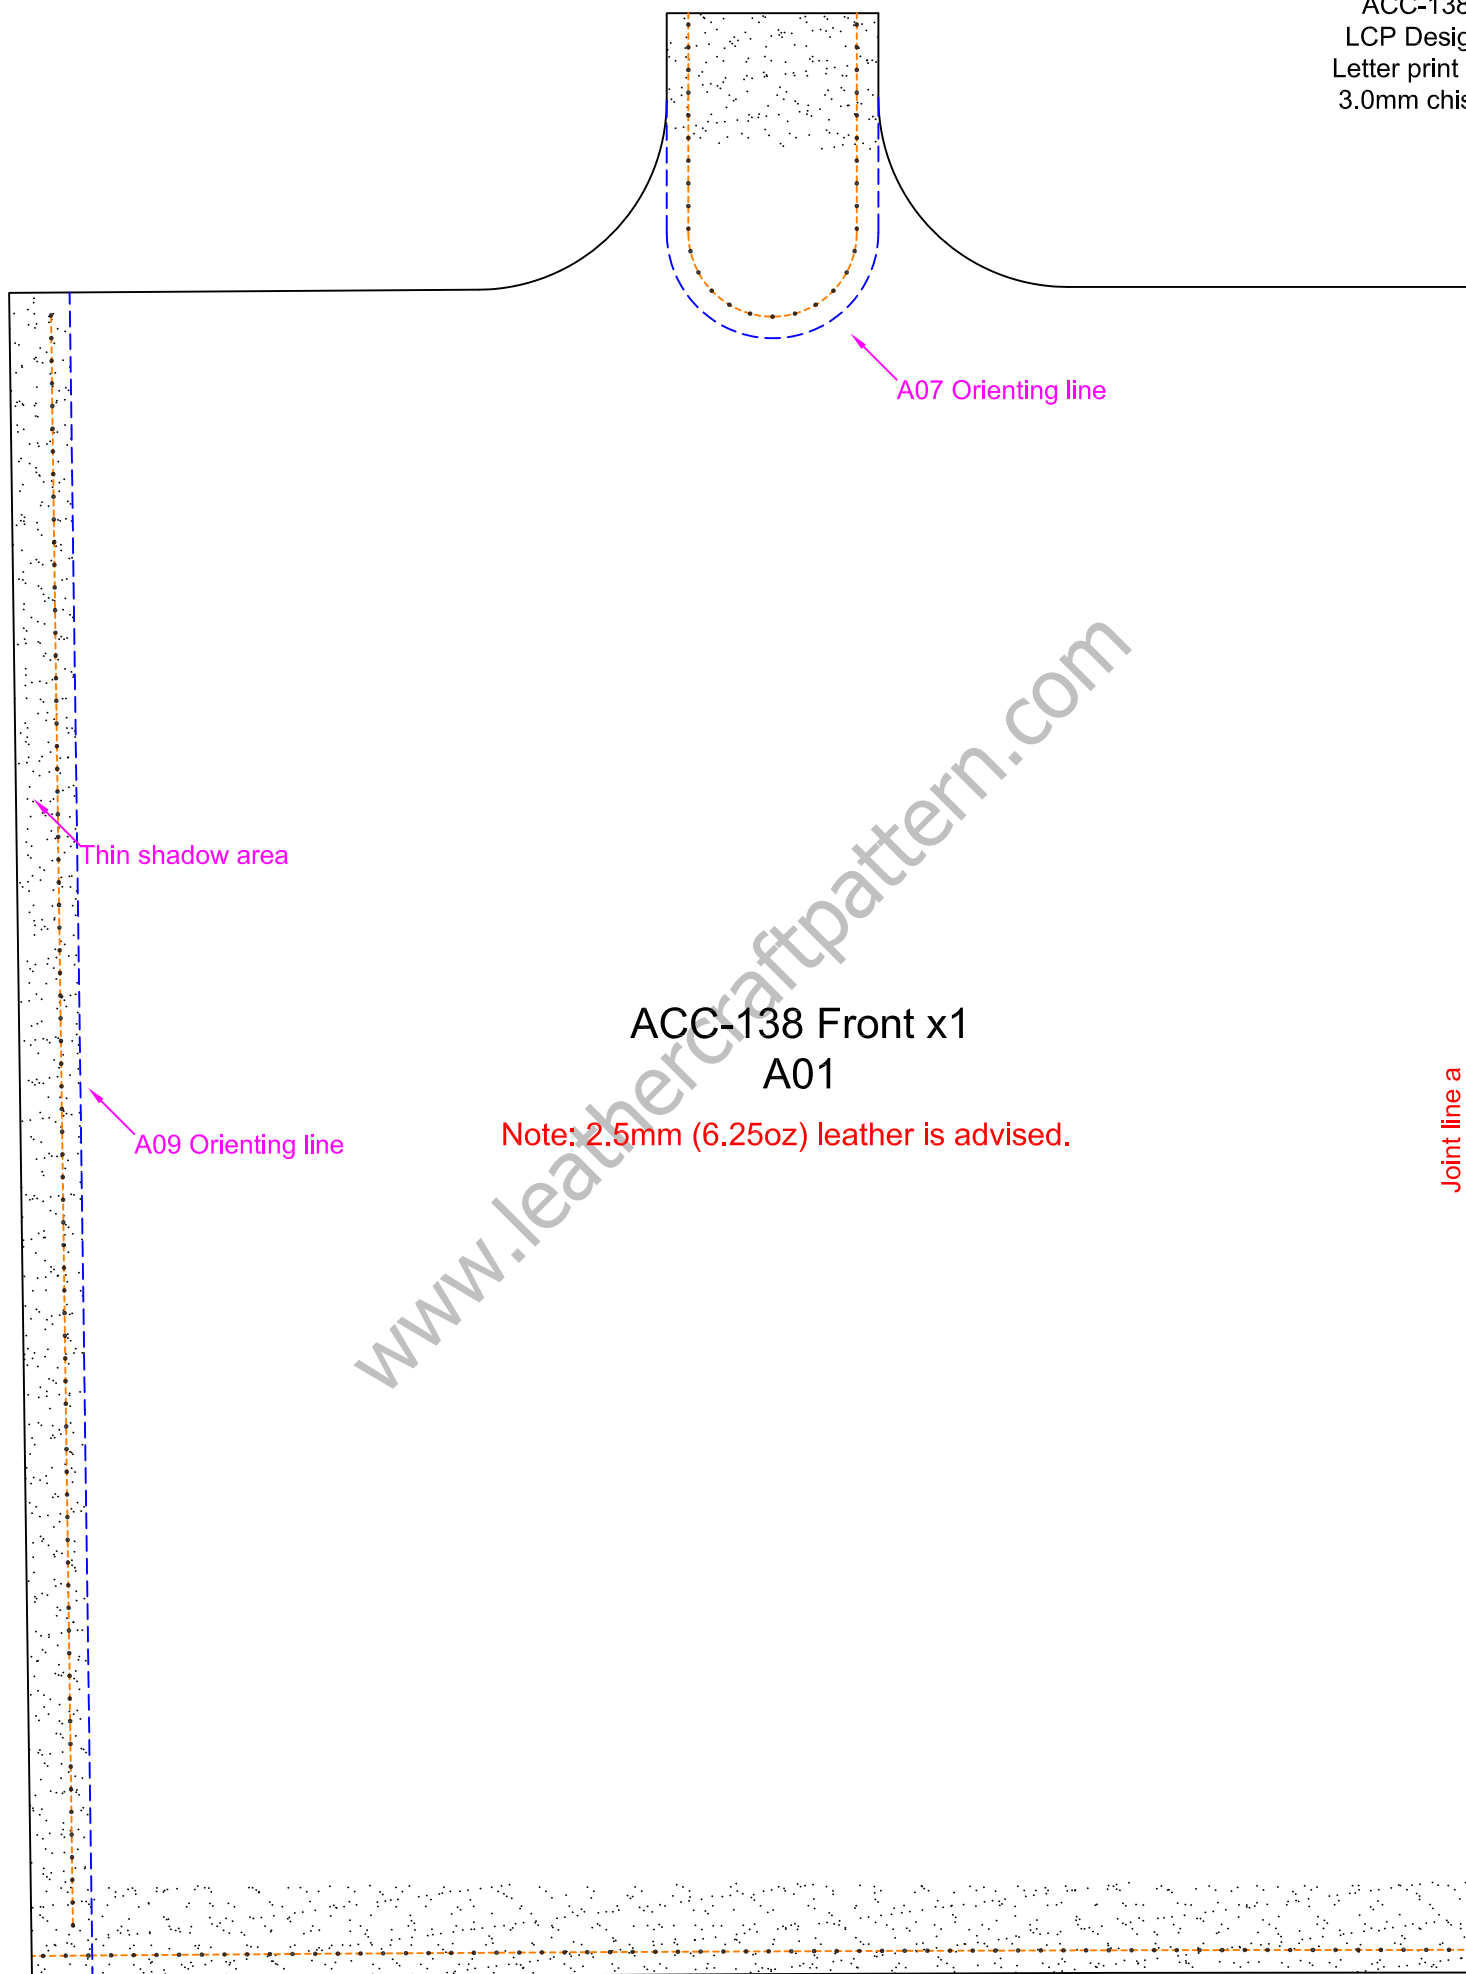



ACC-138 Front x1
A01


Note: 2.5mm (6.25oz) leather is advised.


Joint line a

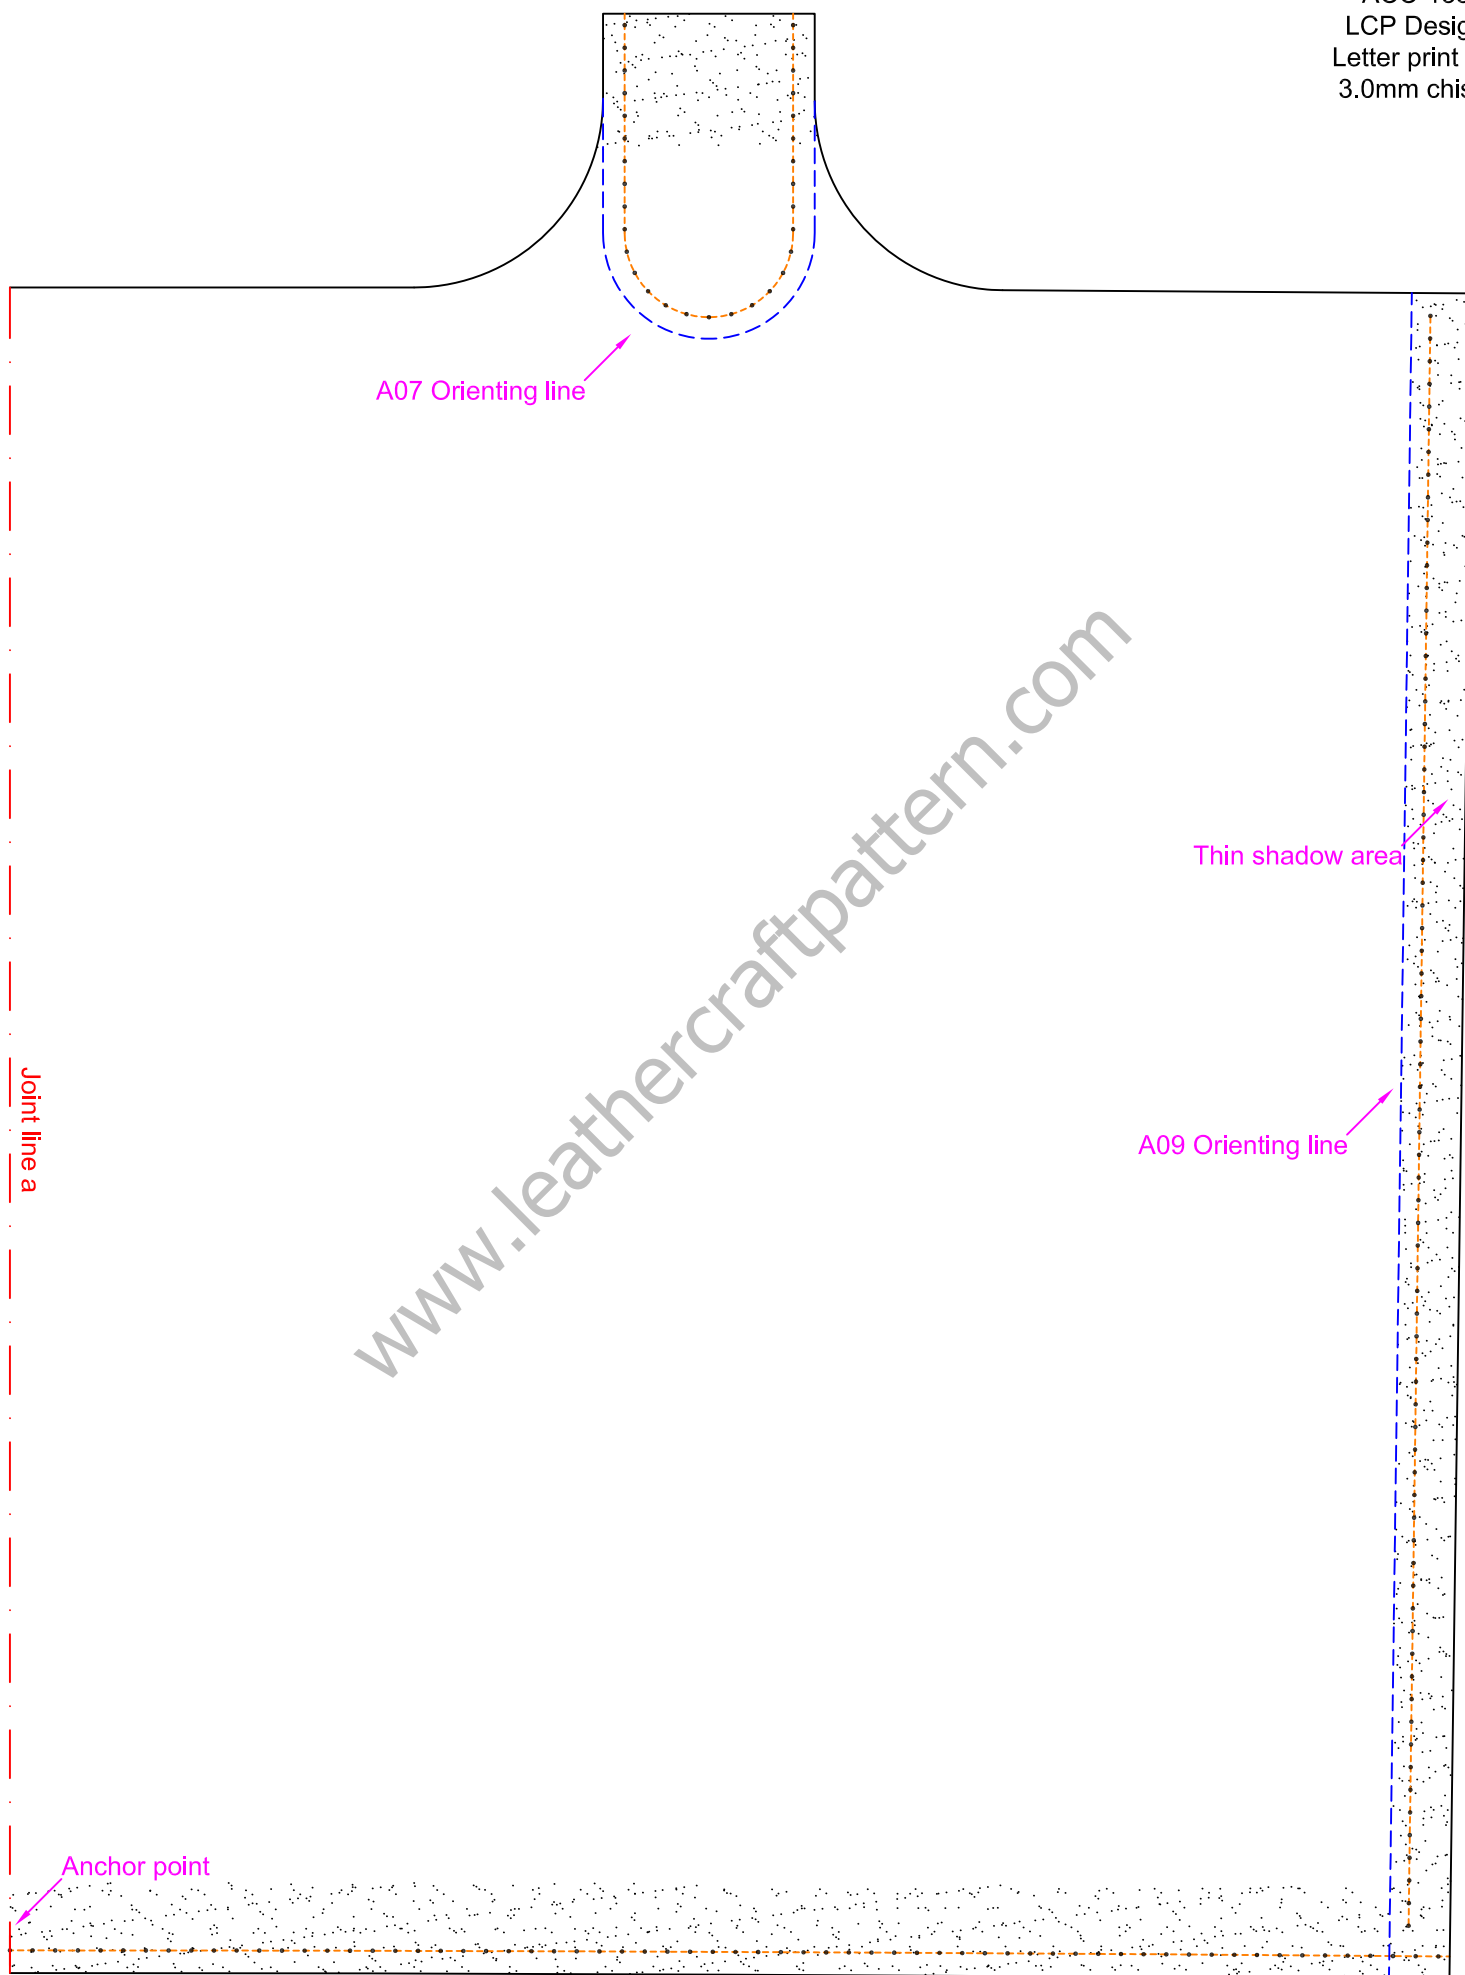

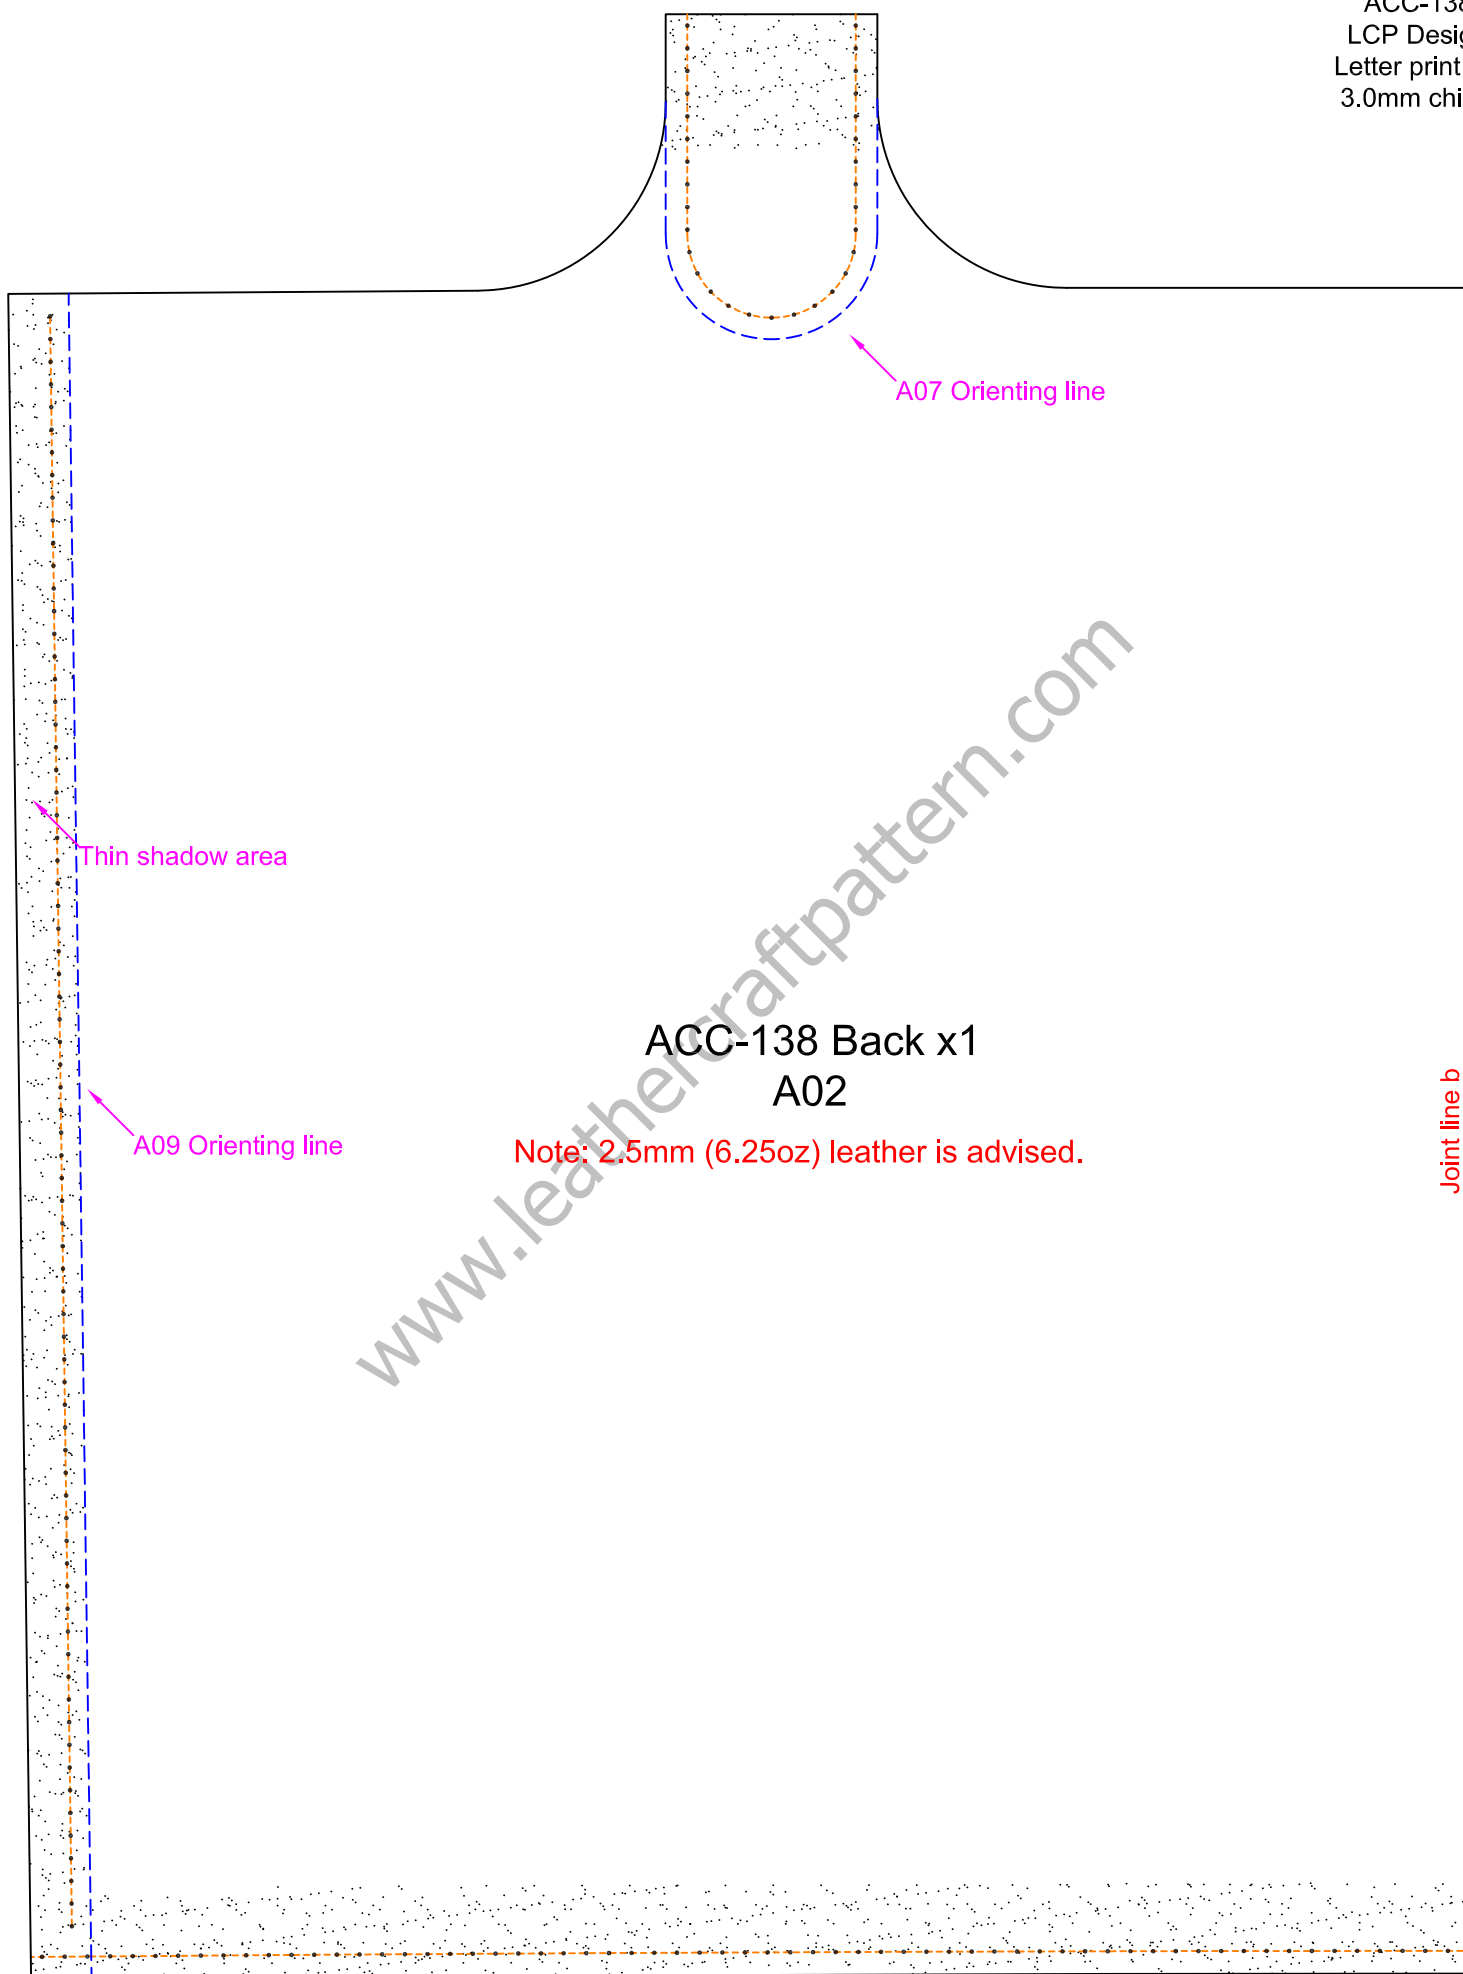

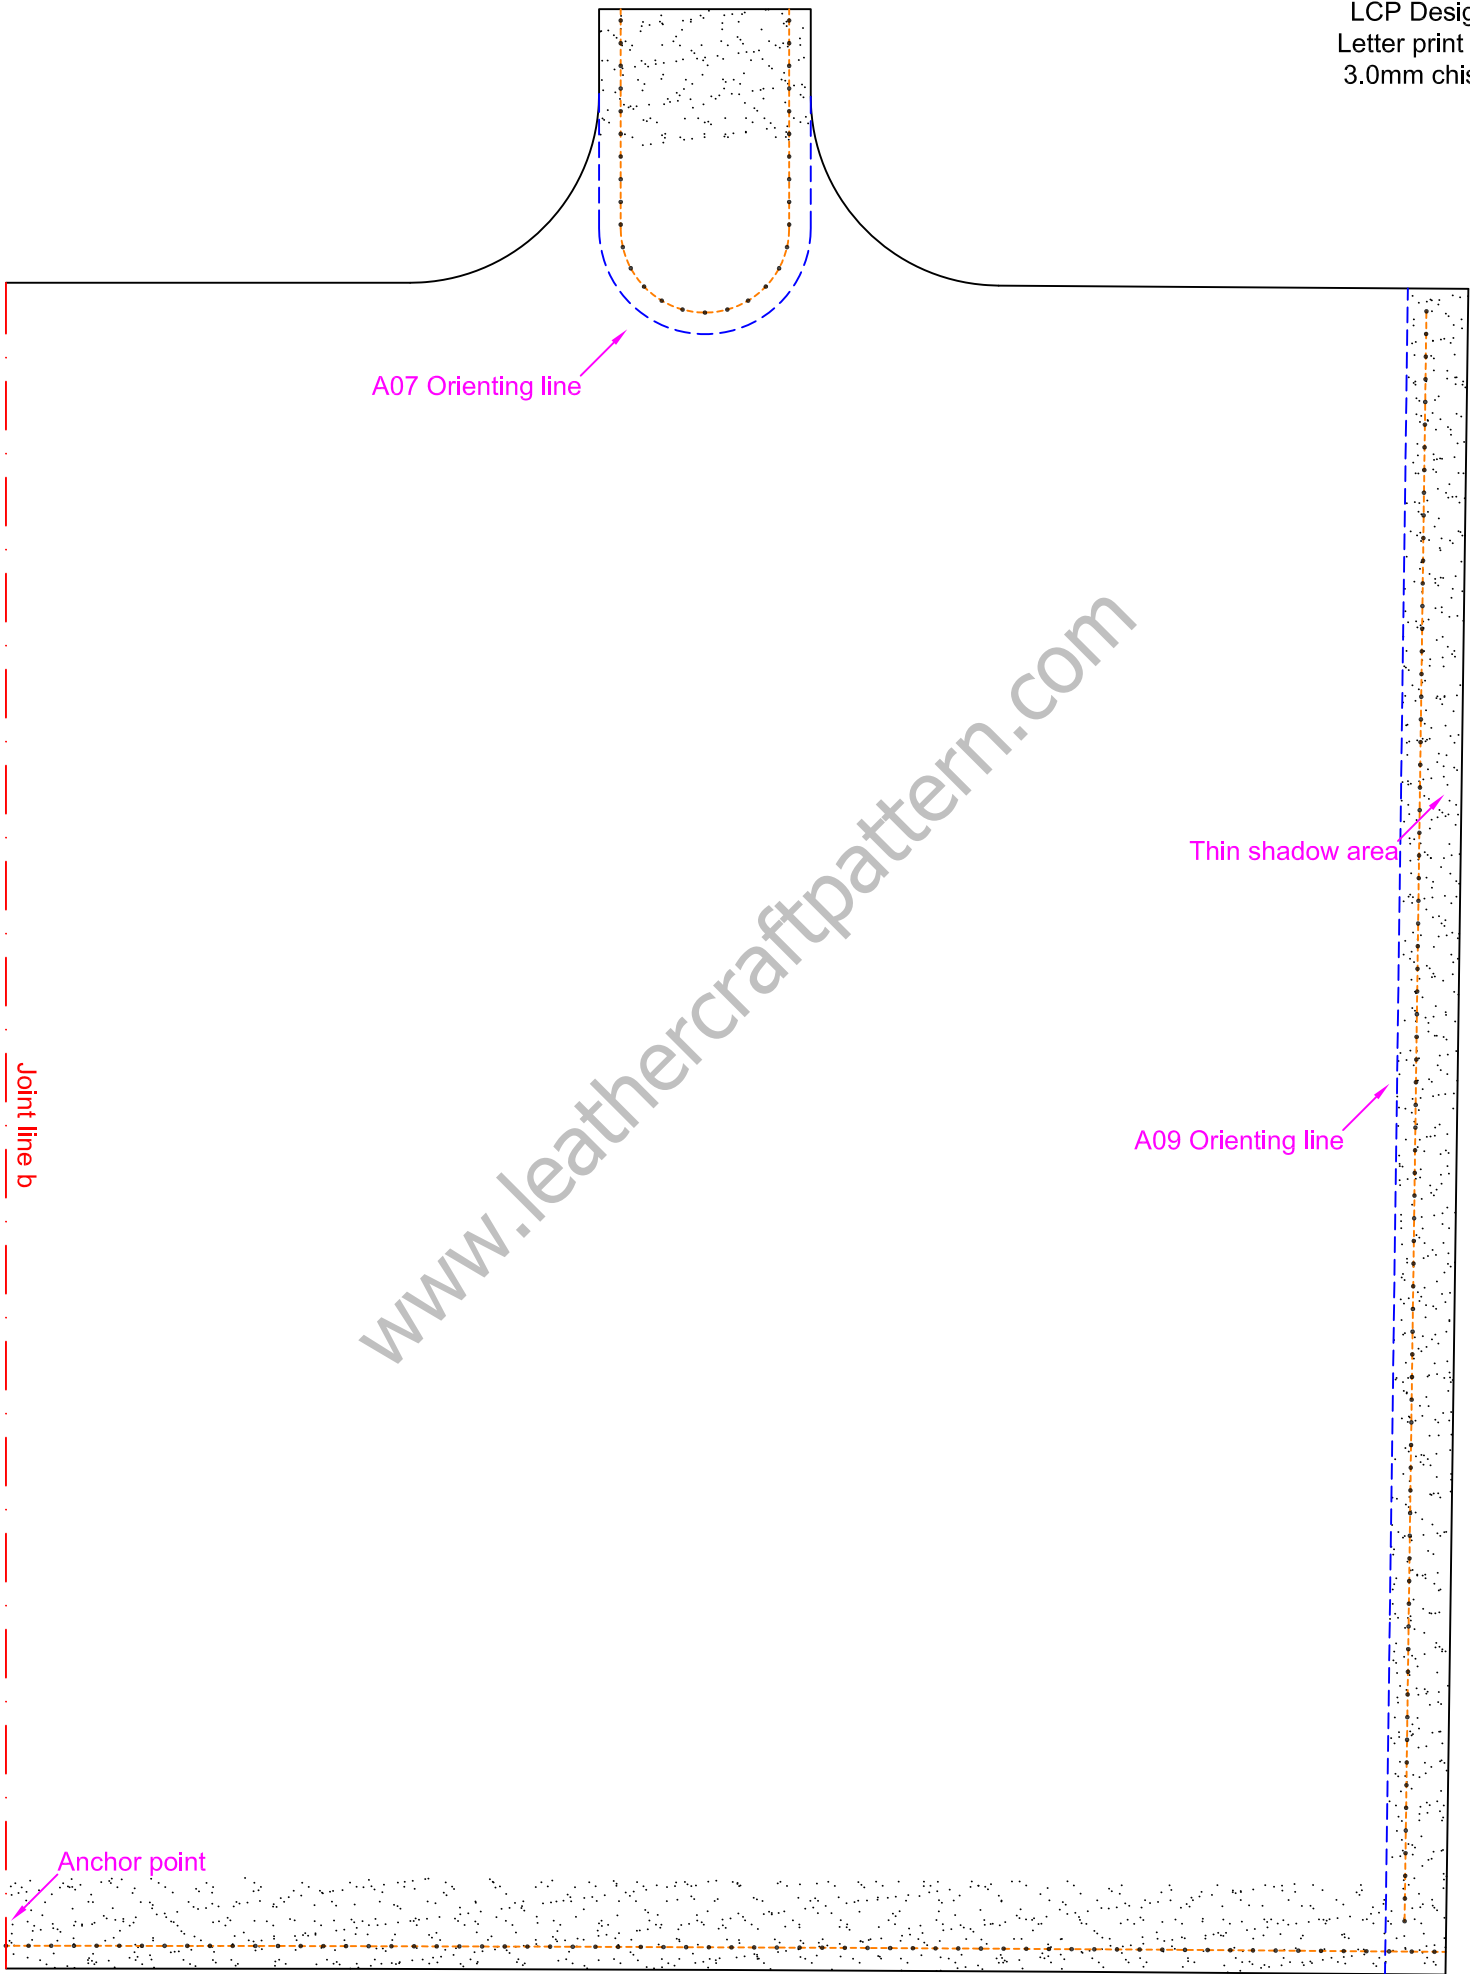

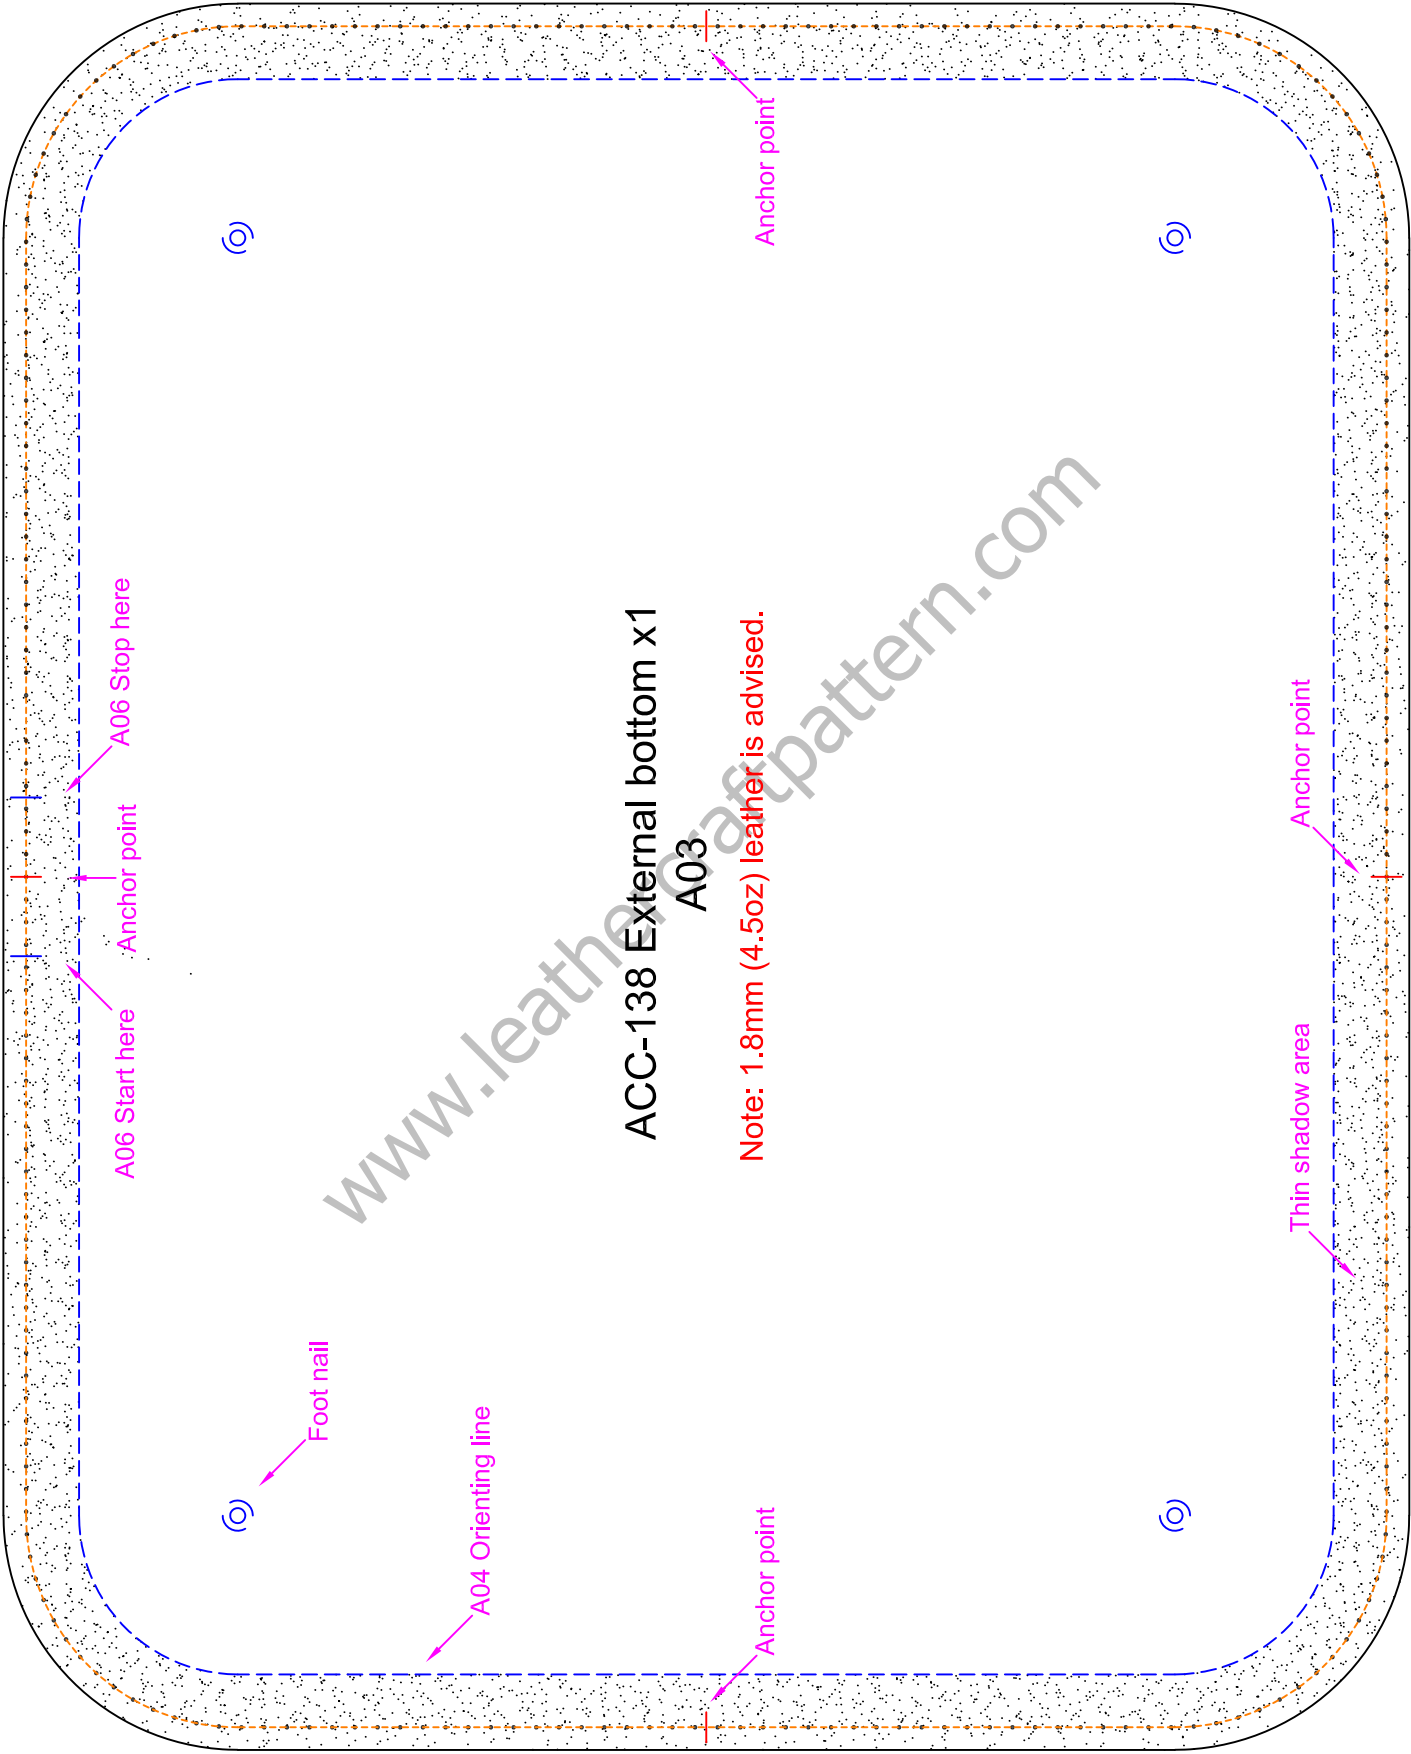


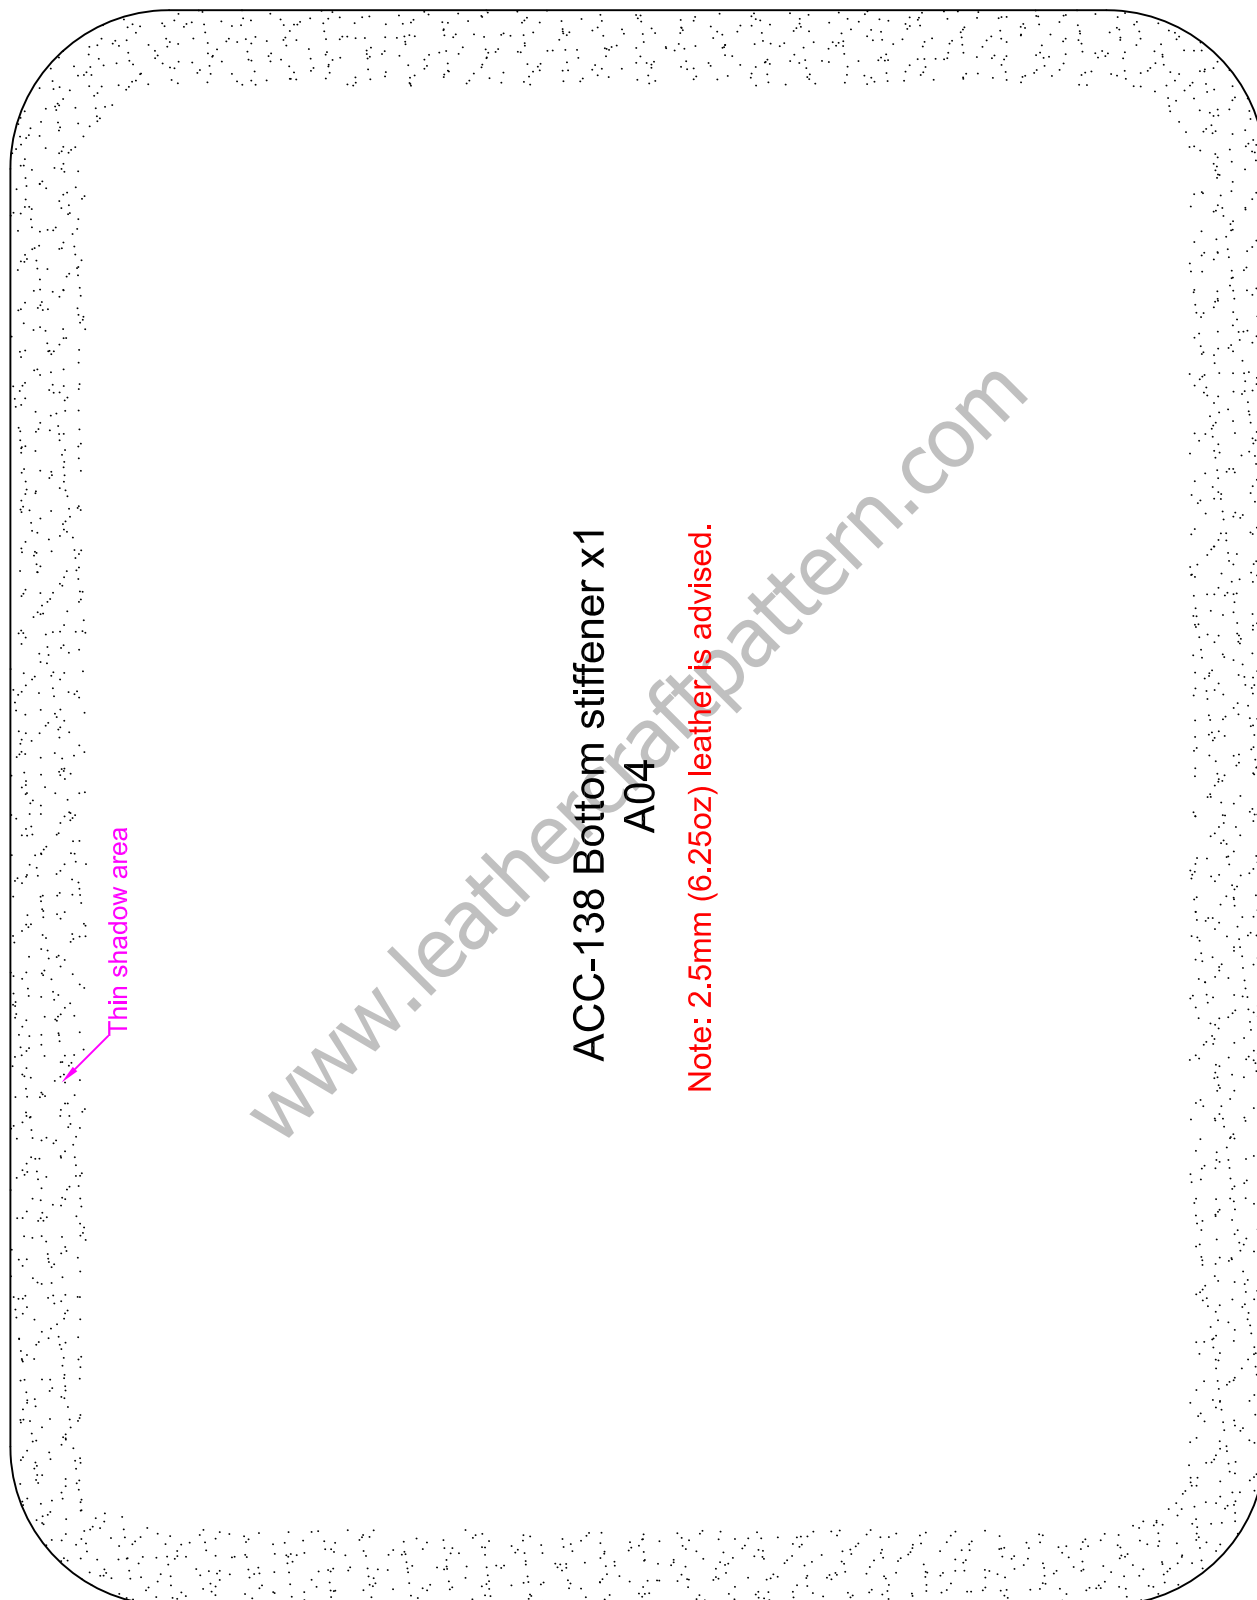



ACC-138 Bottom stiffener x1
A04



Note: 2.5mm (6.25oz) leather is advised.

www.leathercraftpattern.com

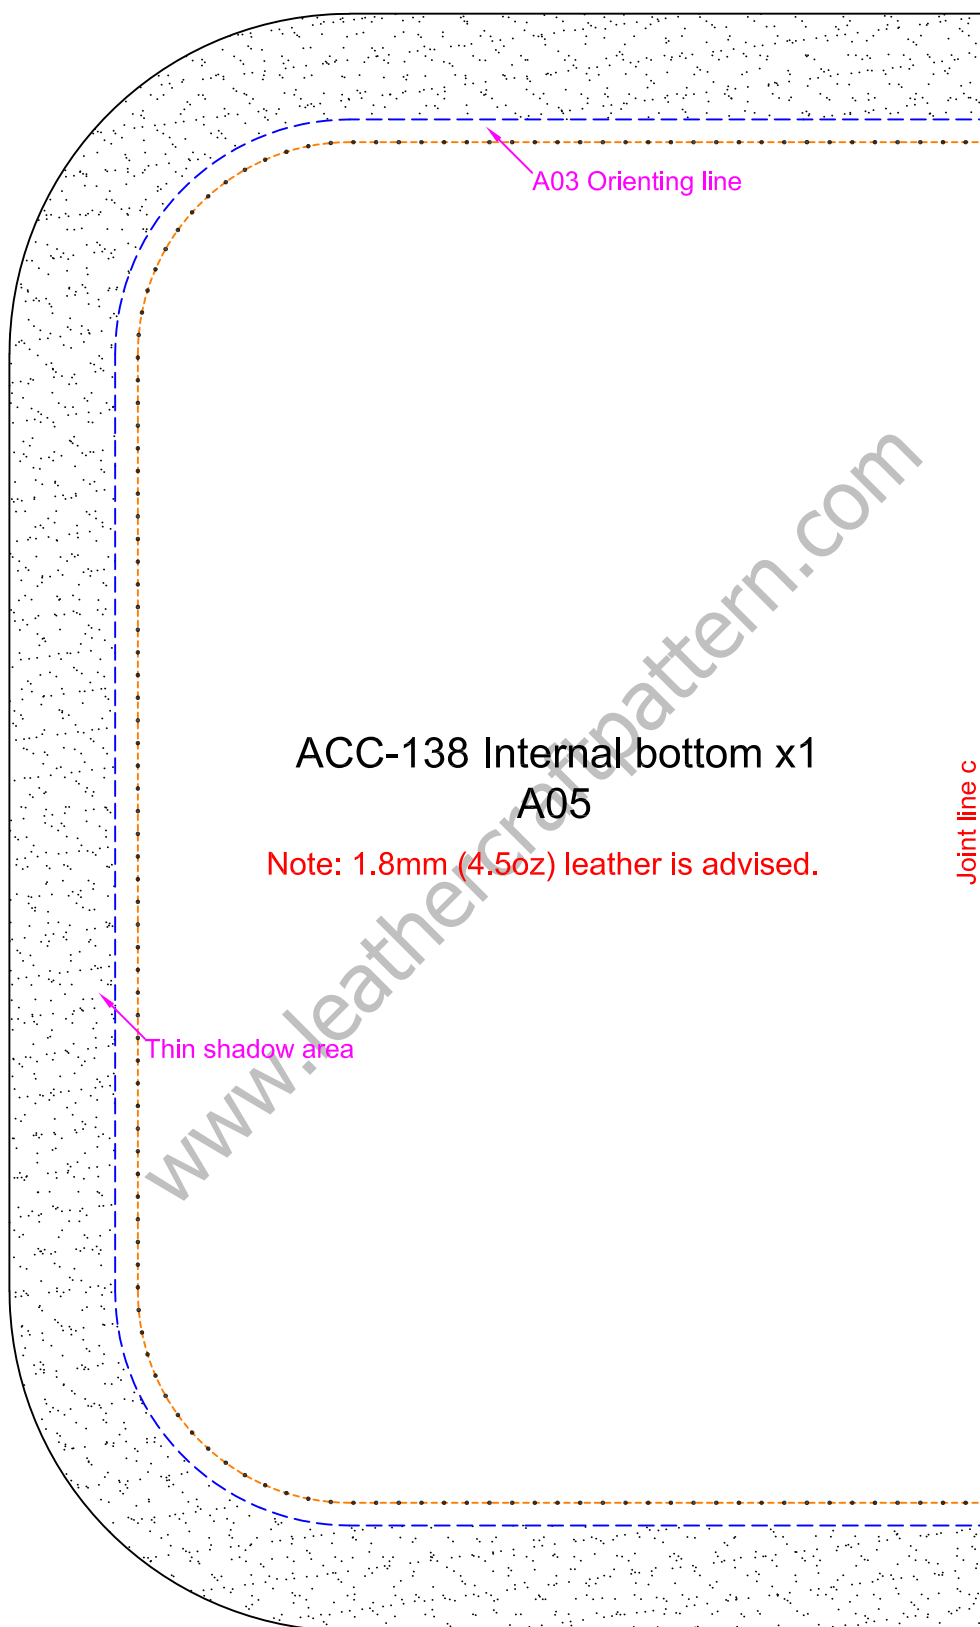

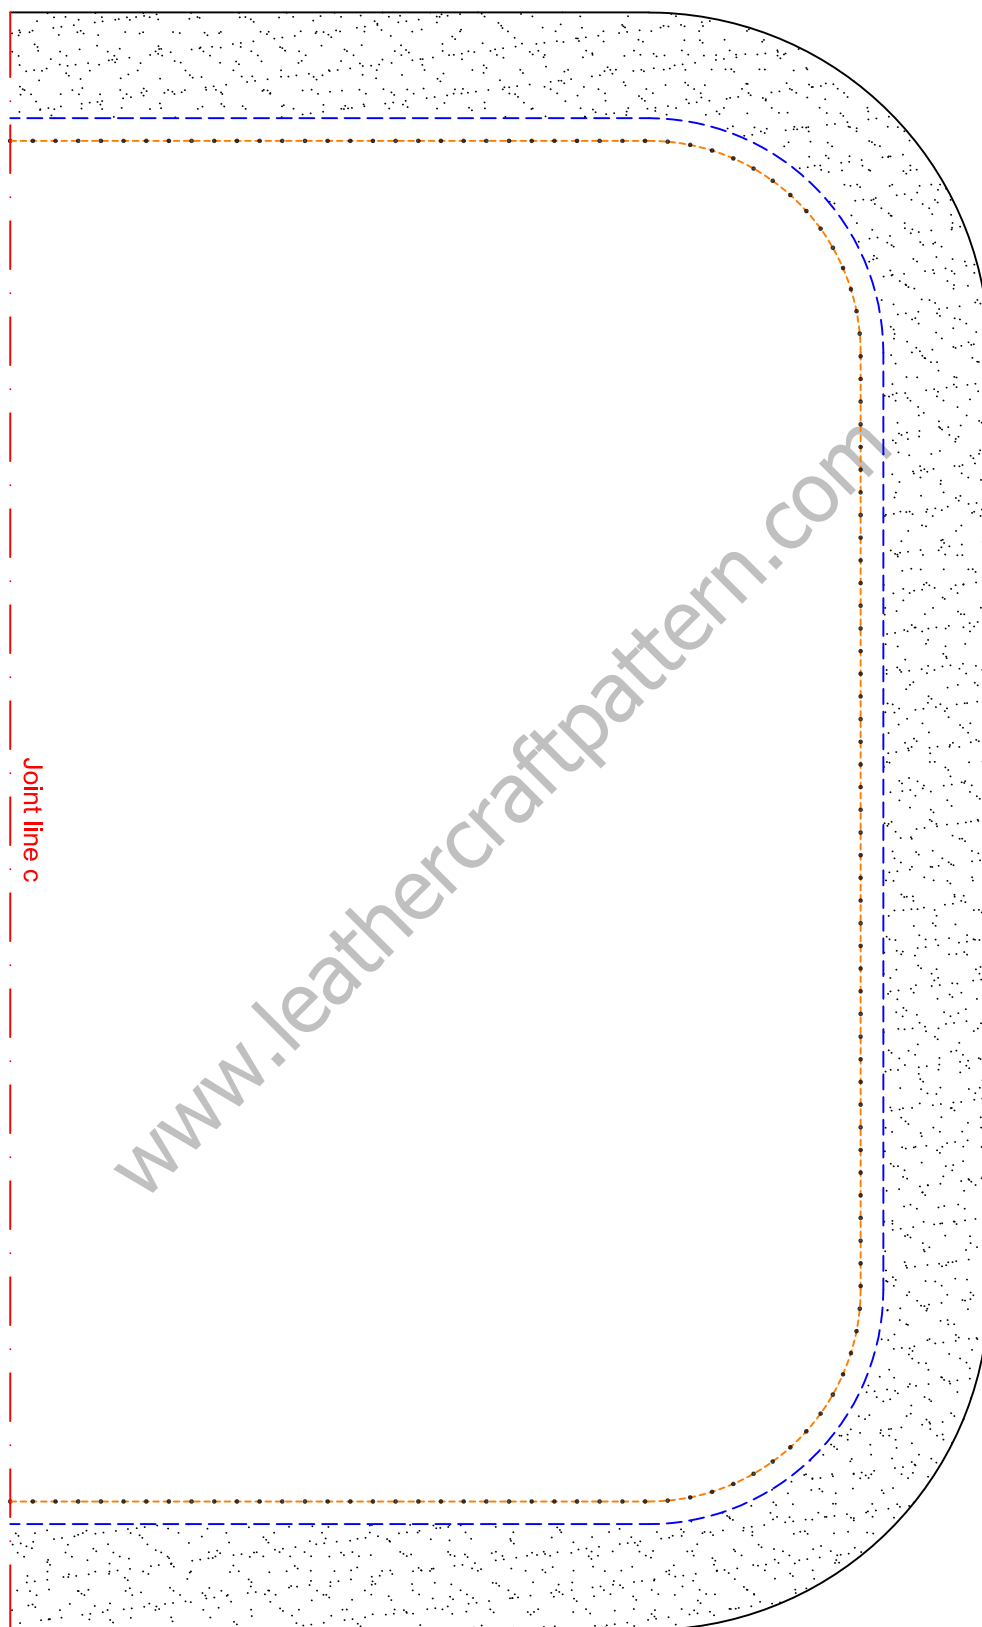


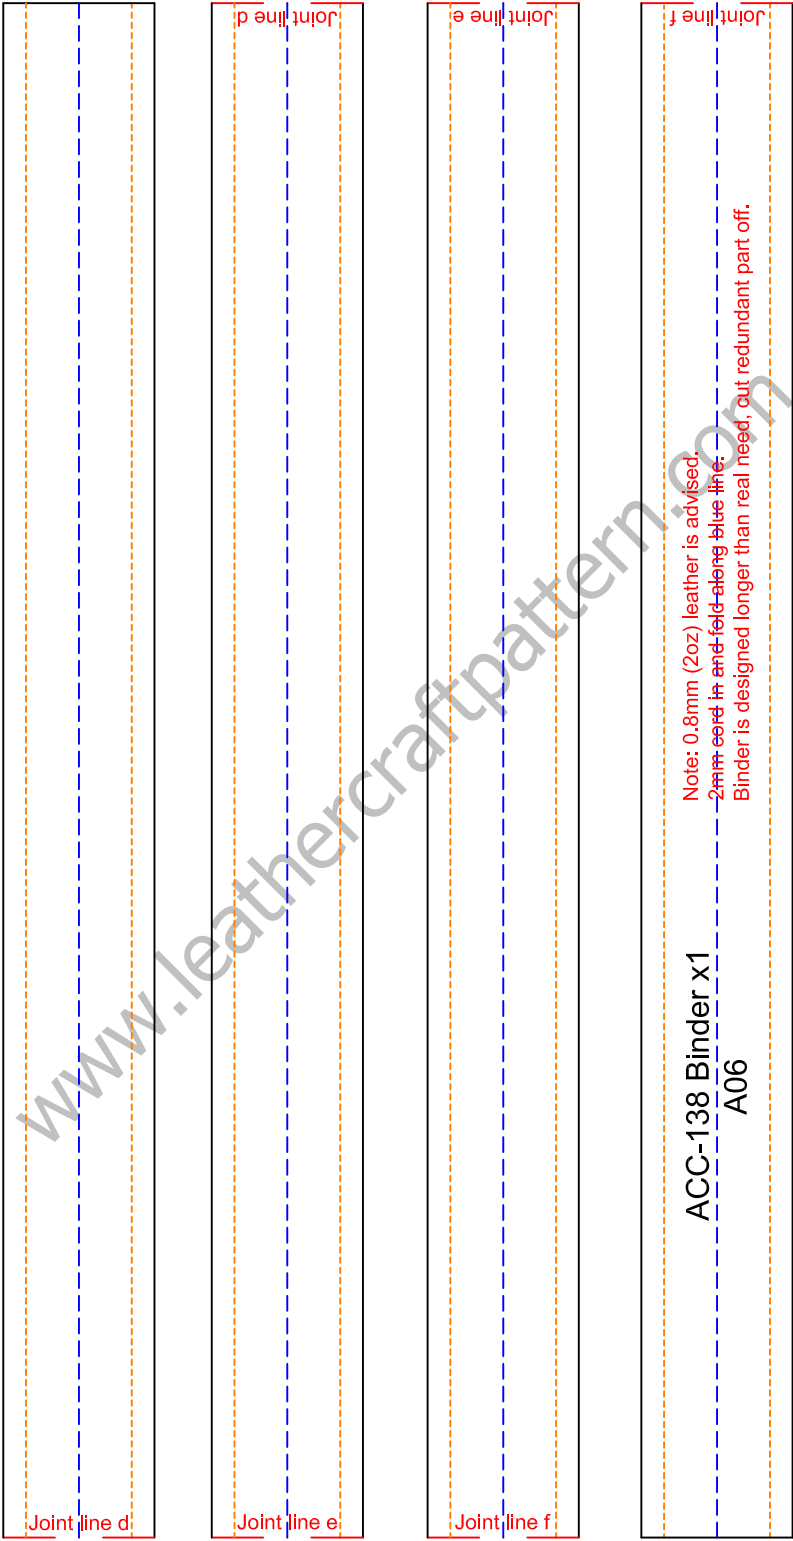


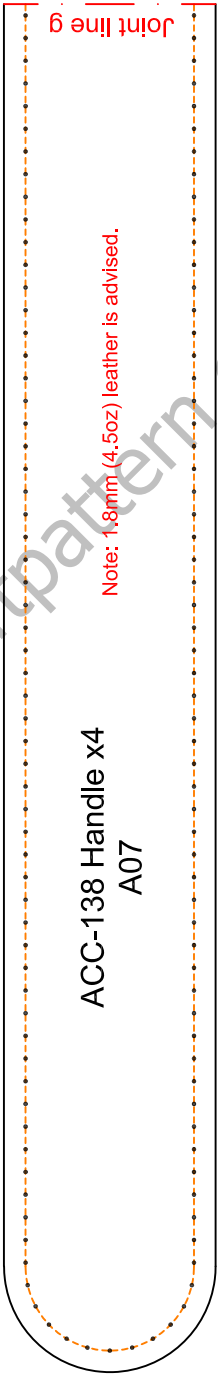
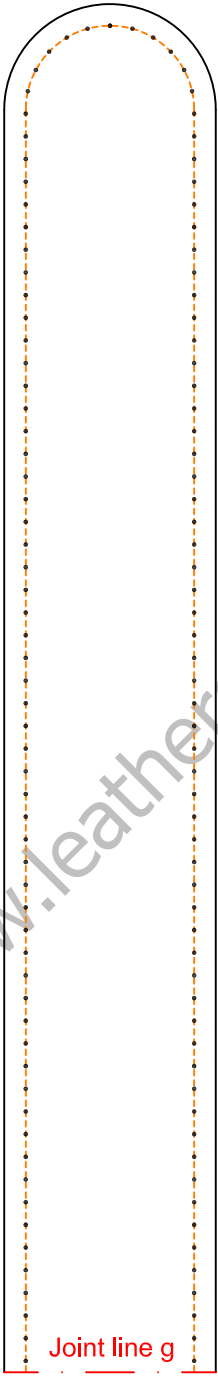


ACC-138 Handle x4
A07

Note: 1.8mm (4.5oz) leather is advised.

www.leathercraftpattern.com

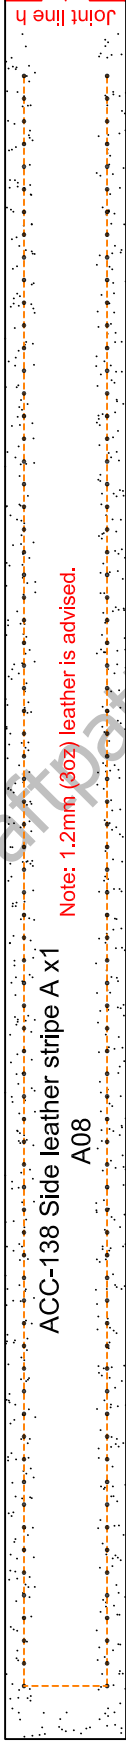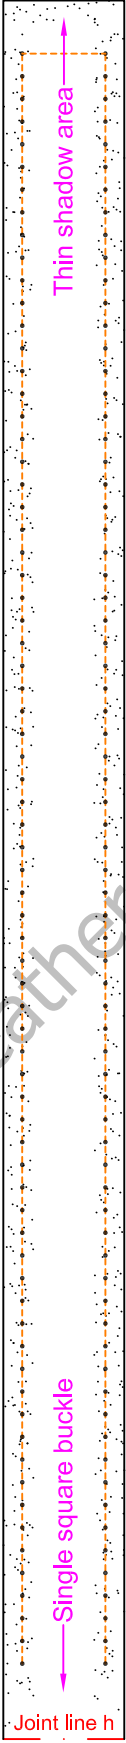

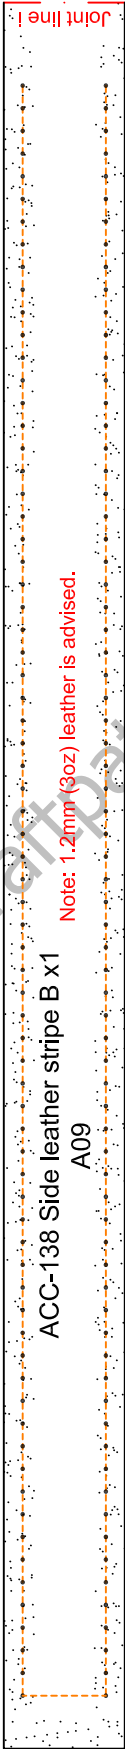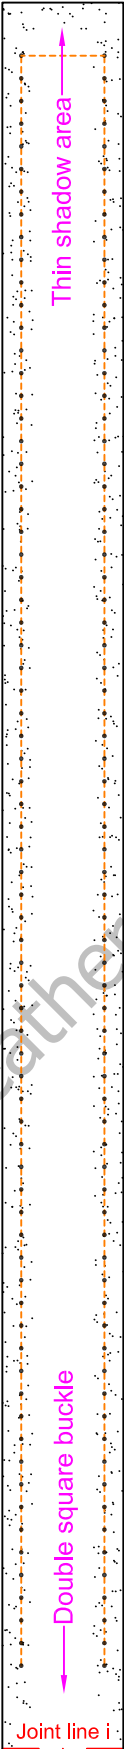

www.leathercraftpattern.com

