

Purse Pattern ©Tony Allen Bernier 2020


For a complete breakdown of the entire process check out my YouTube video. Search for


Tony Allen Bernier on YouTube or type in the link below. <https://youtu.be/FRqhMsAIT40>


To print on a home printer select 100% or true to scale in your printer settings (depending on your printer/software). As far as overseas printers go I have heard people have printed it with an A4 printer/pages with success. Another setting that sometimes gets overlooked is the poster setting. With some software it must be selected so that it prints all the pages. You may also need to select separate pages to multiple sheets before you are allowed to select print at 100%.

Materials needed:


- 6.5 square feet for purse body. I suggest around a 5 or 6oz veg tan.
- 3 square feet for purse lining. A 4 or 5oz chrome tan works great.
- 2x 3/4" D-rings.
- 2x strap end clips. I recommend 3/4" swivel clips.
- 1x closure latch. I use Tandy Leathers Tuck lock clasp large, part # 11399-03
- 1/16" hole punch or size of your choosing. You may also use a lacing chisel as long as every hole is centered in the pre-marked stitching holes.
- Utility knife or cutting utensil.
- If you chose to use my method for making the fold in the lining opening you'll need 2 square feet of 3/4" wood and something to cut and sand it with.
- The pattern for the lining has every stitching hole pre-marked like the main section of the purse. However if you wish to use a sewing machine you'll obviously need one of those ;)

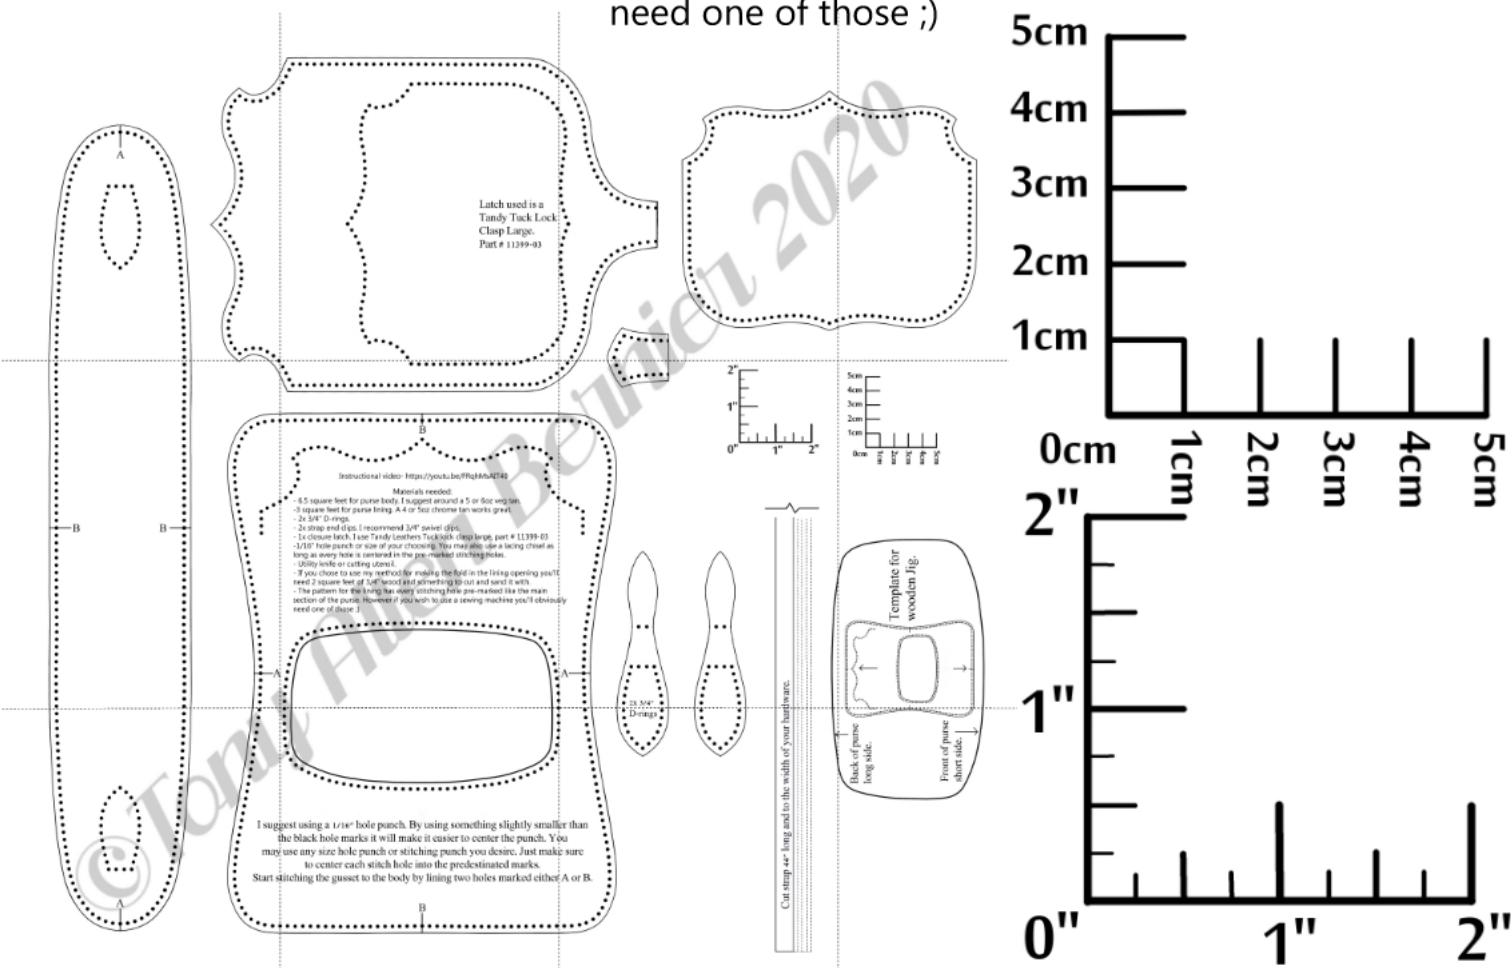


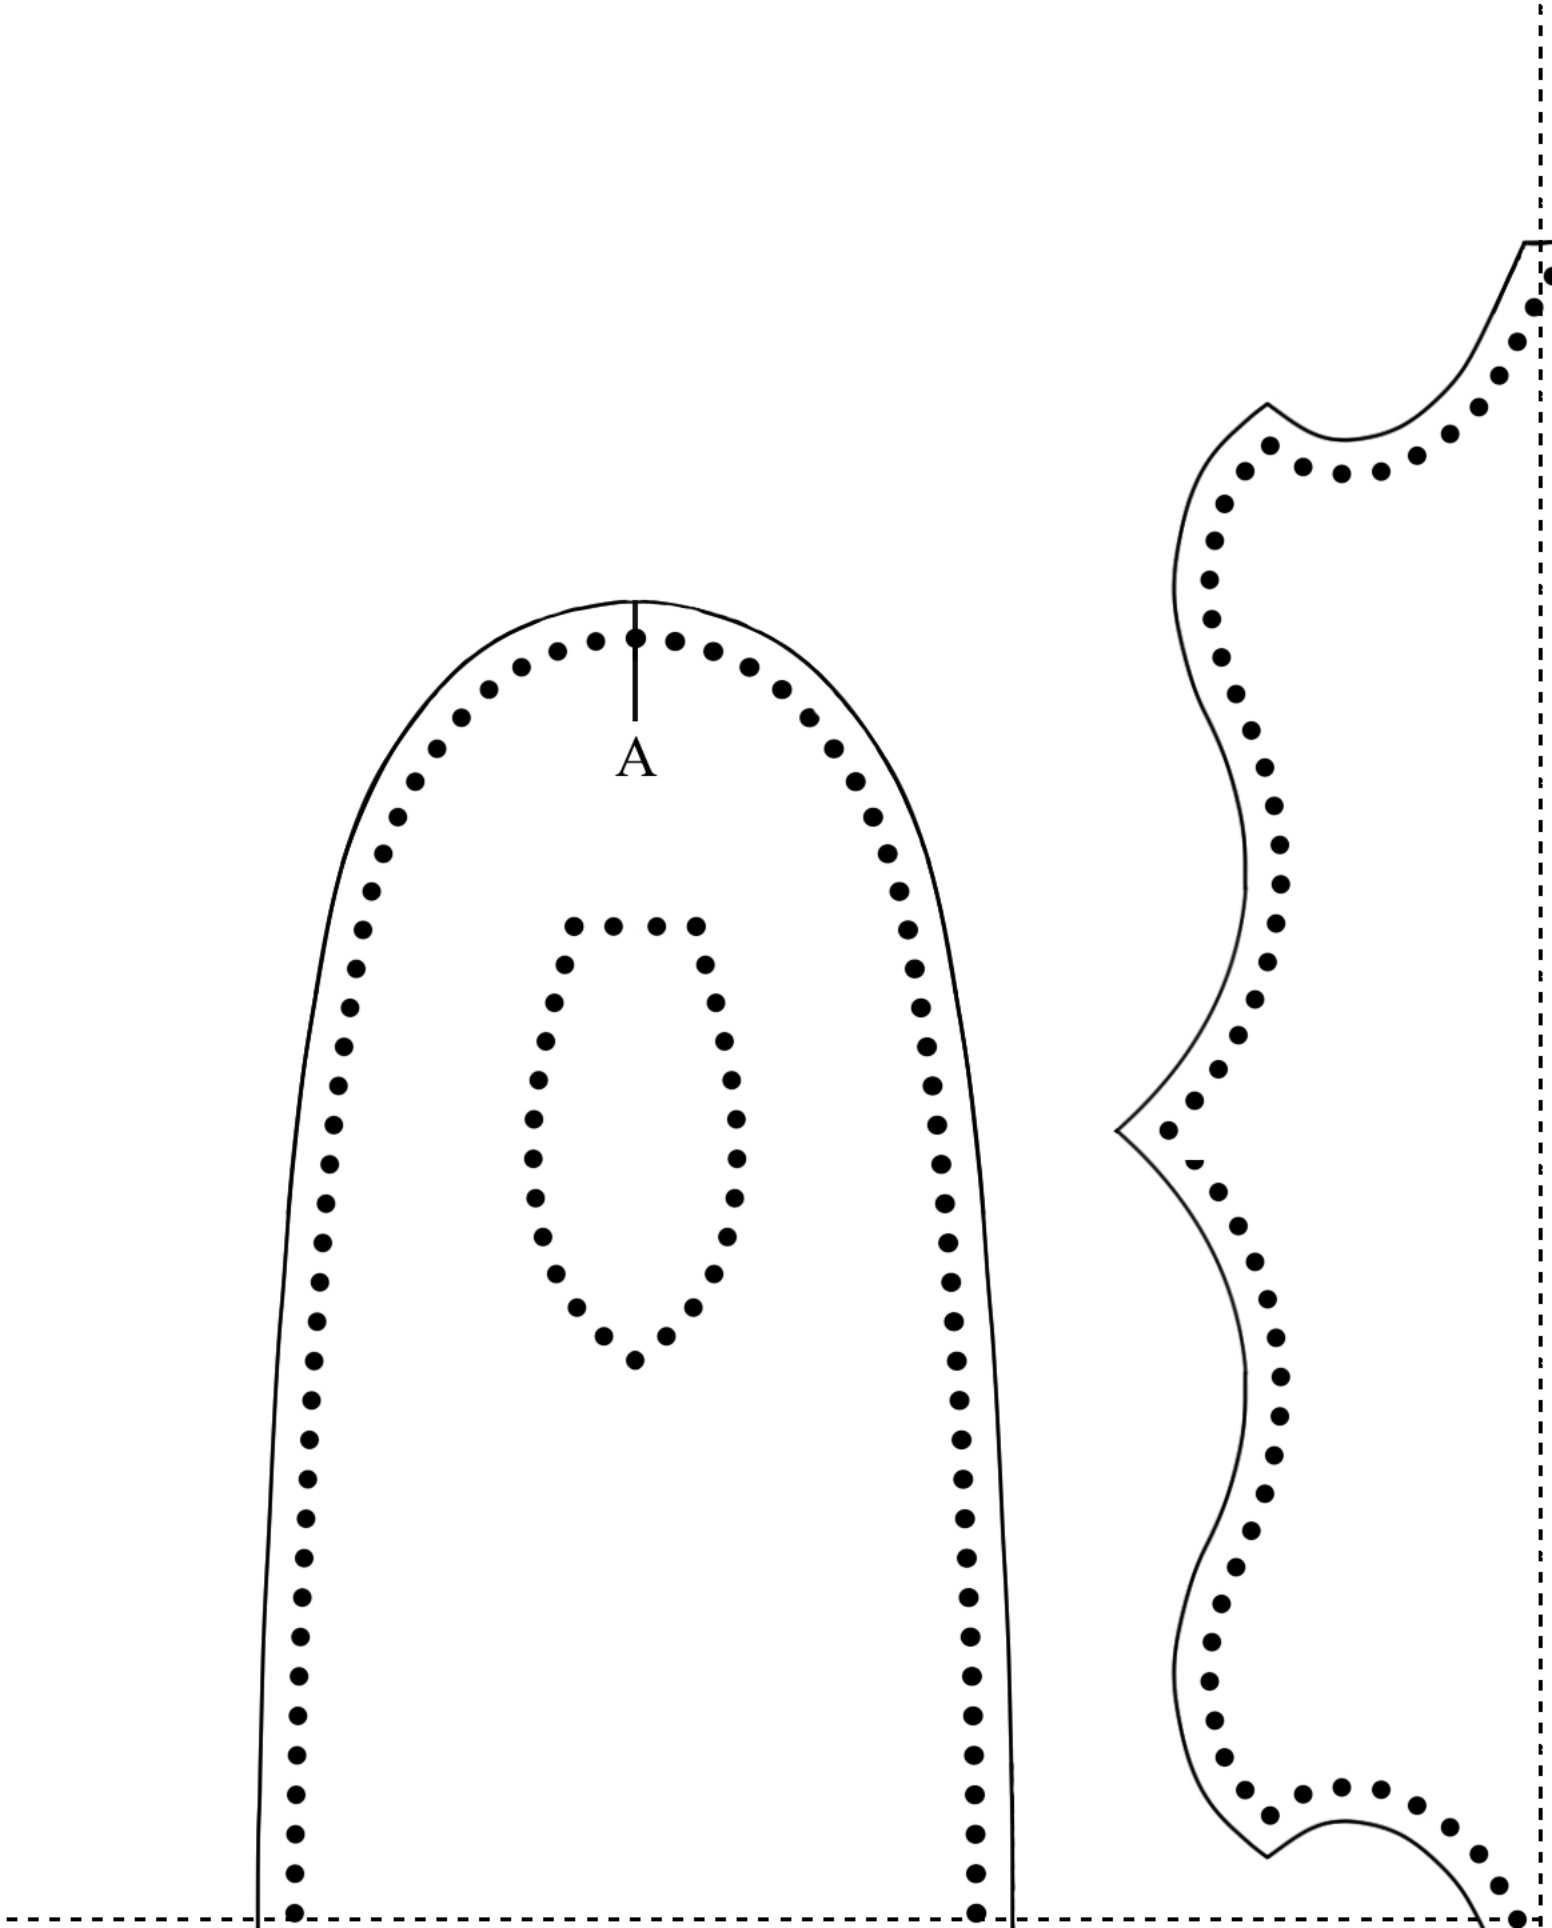


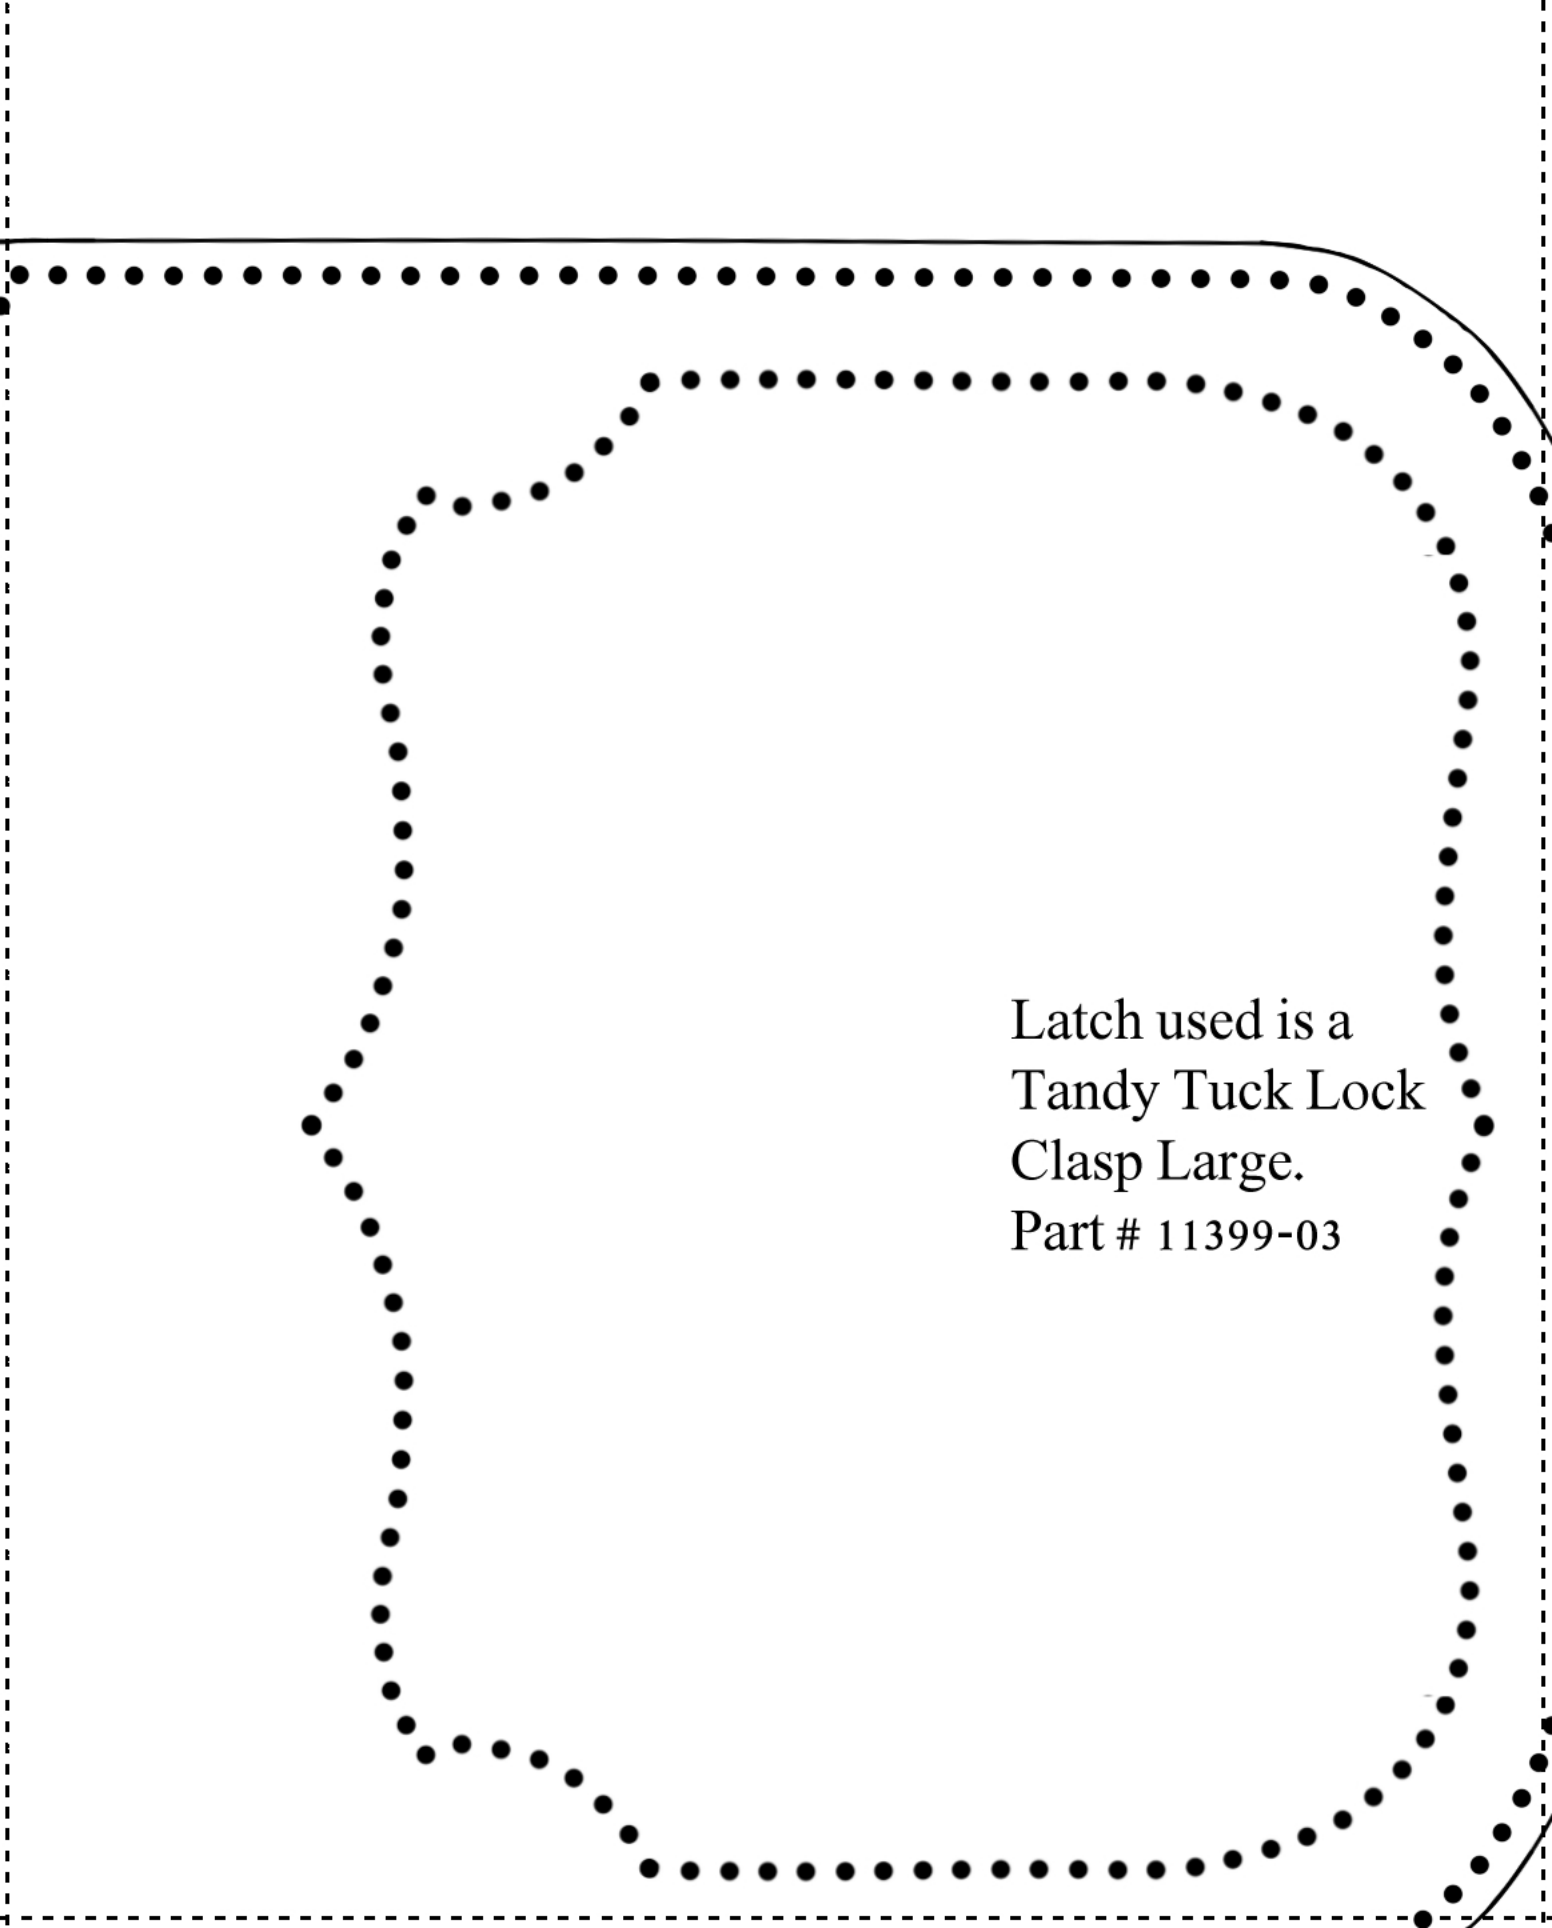


Latch used is a  
Tandy Tuck Lock  
Clasp Large.  
Part # 11399-03

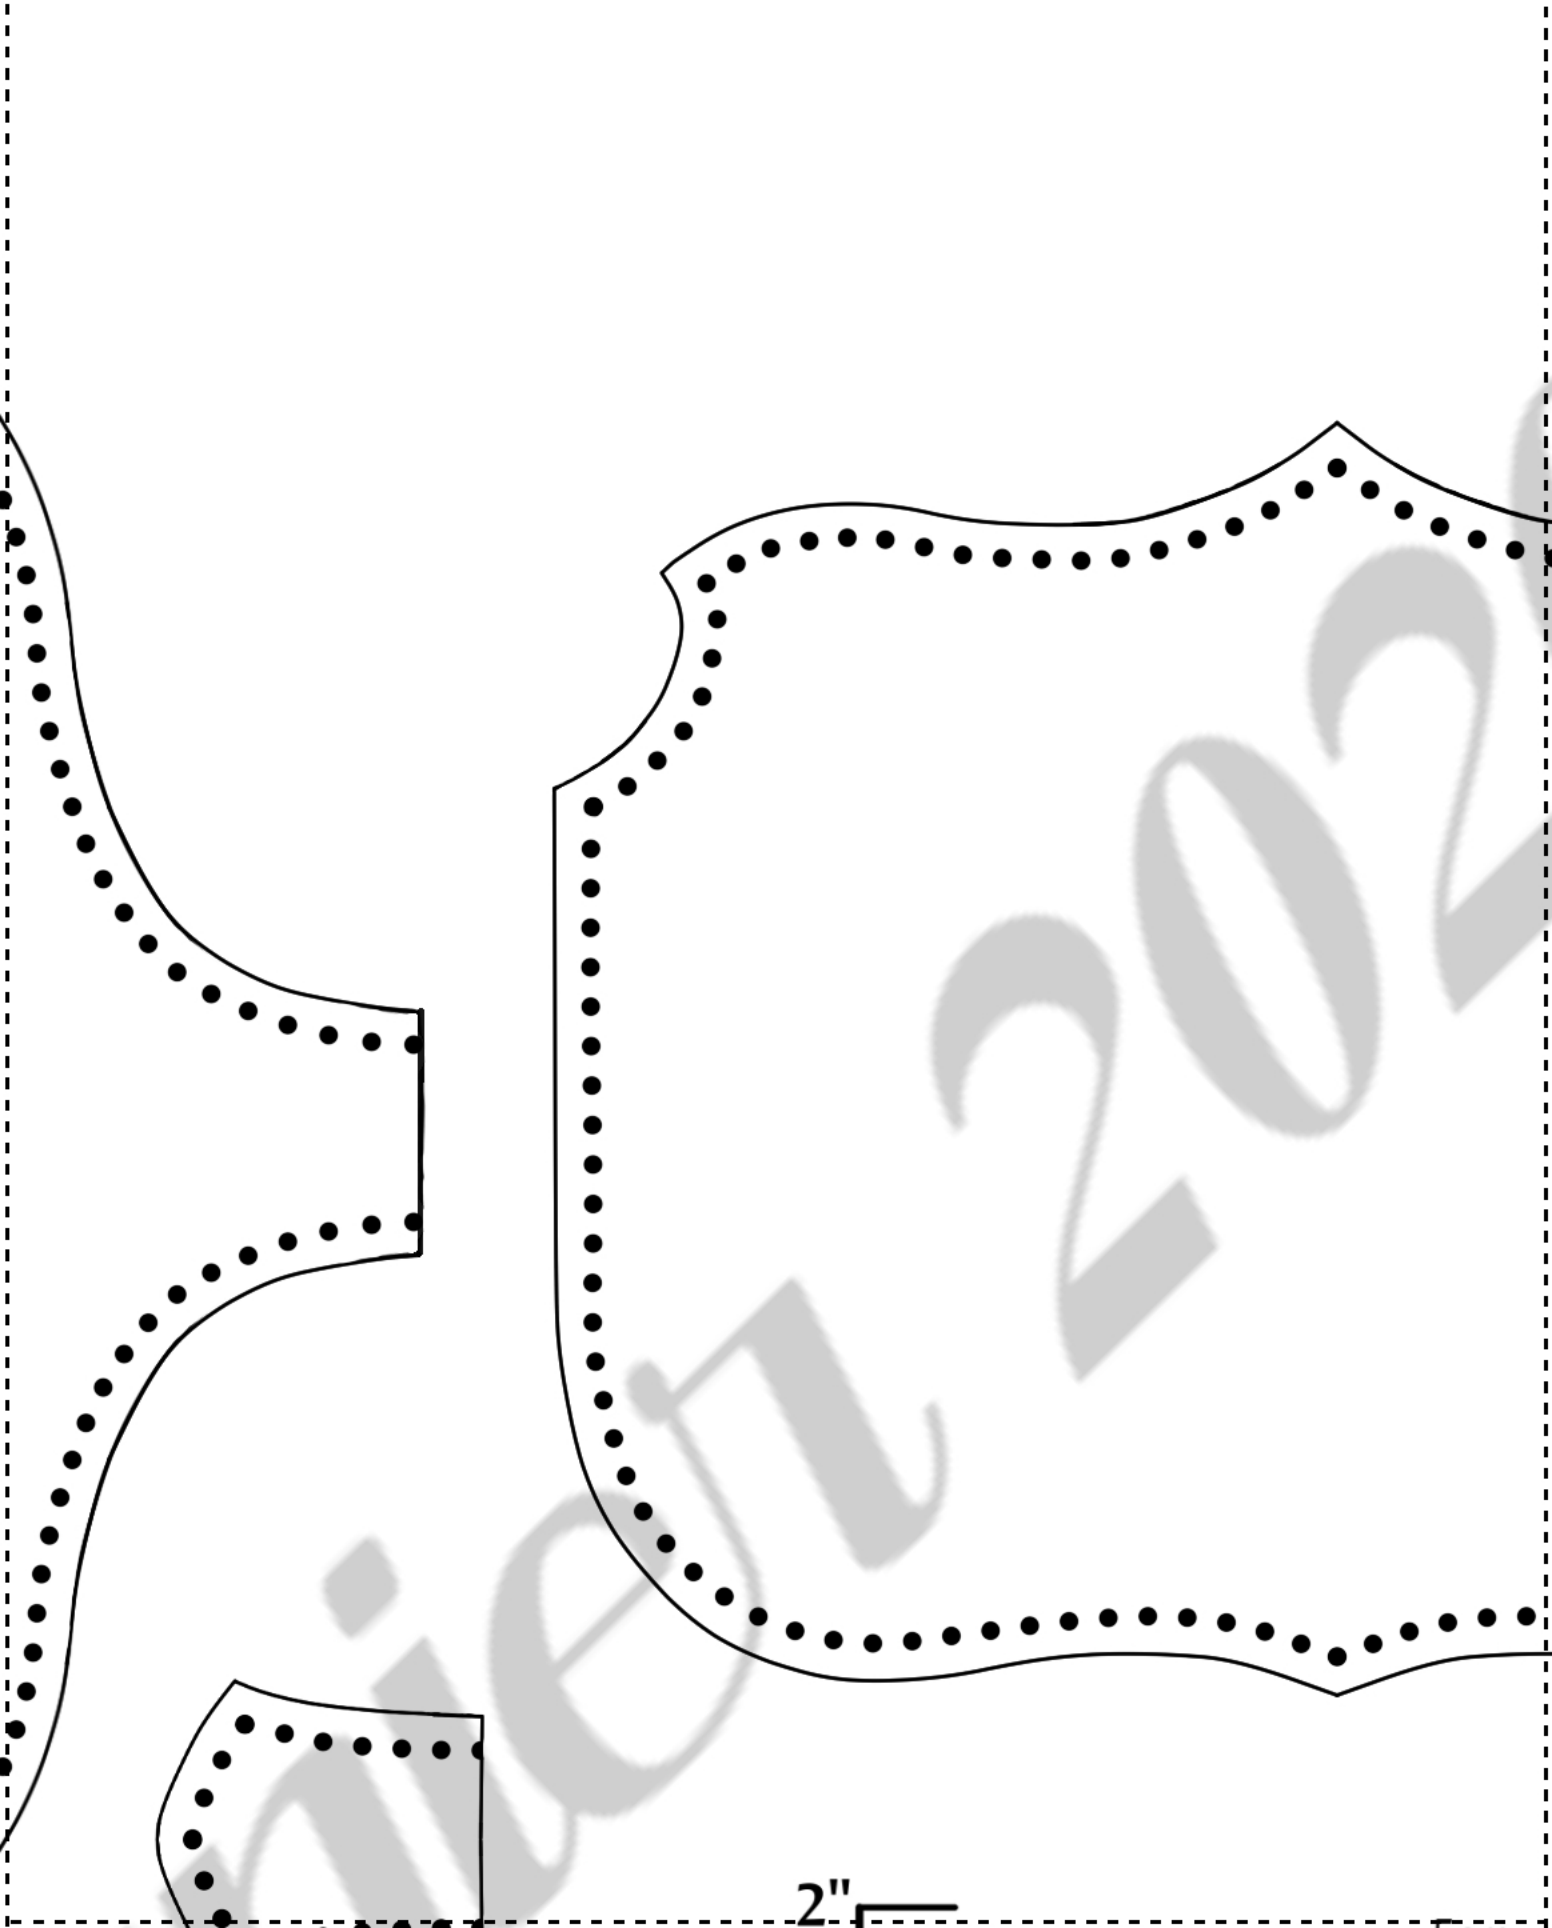

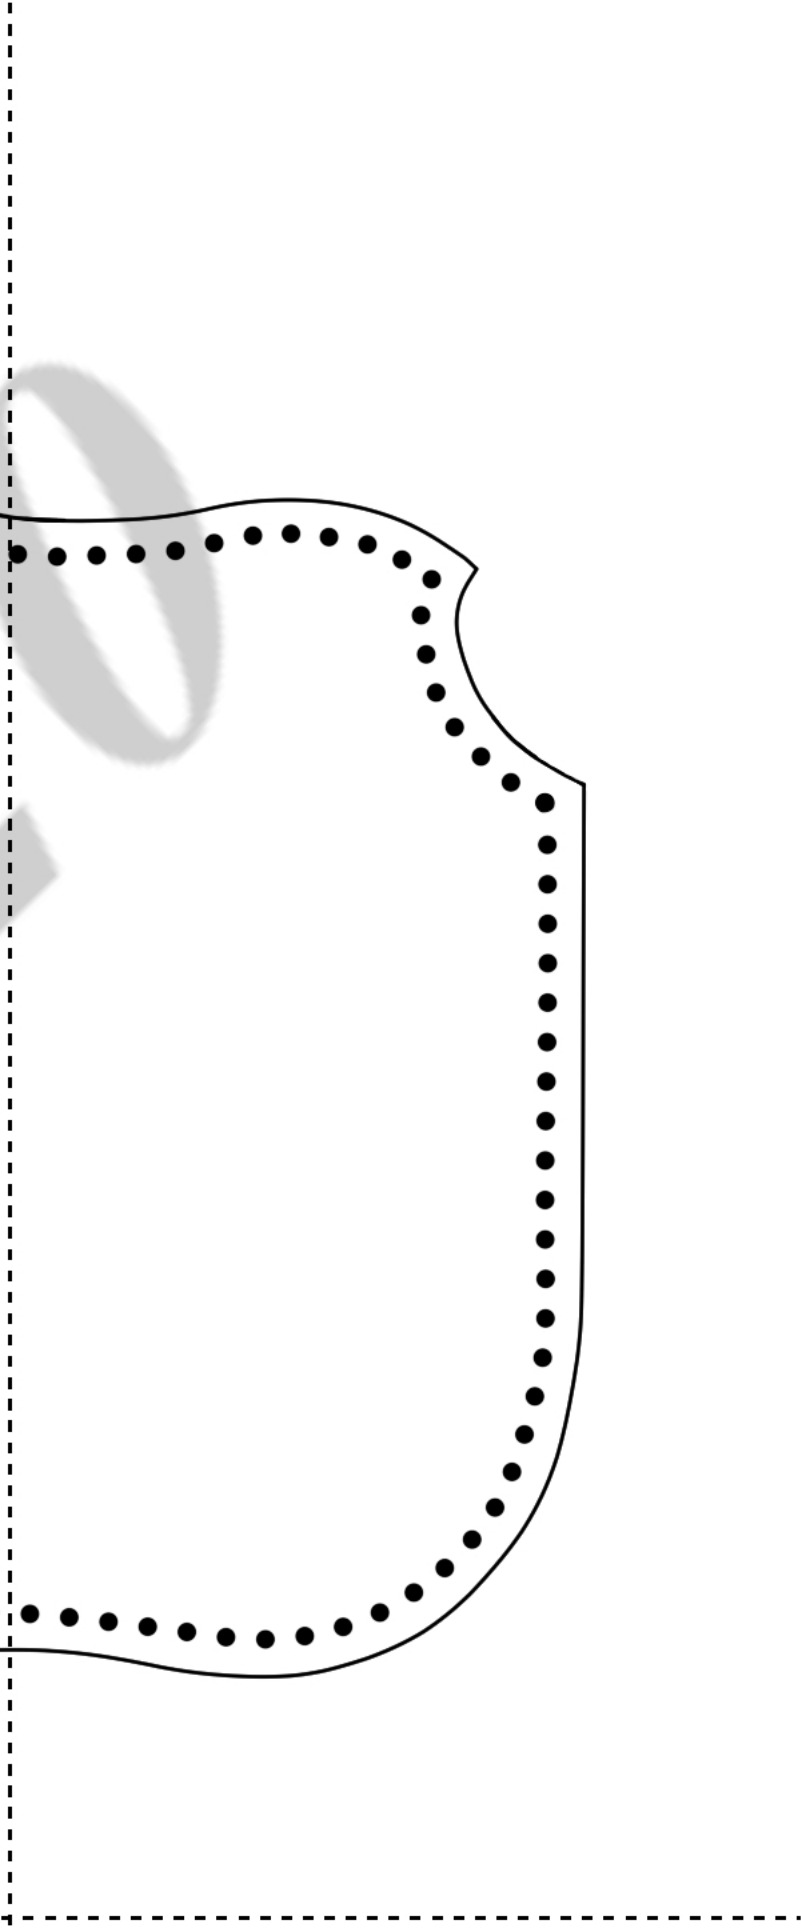

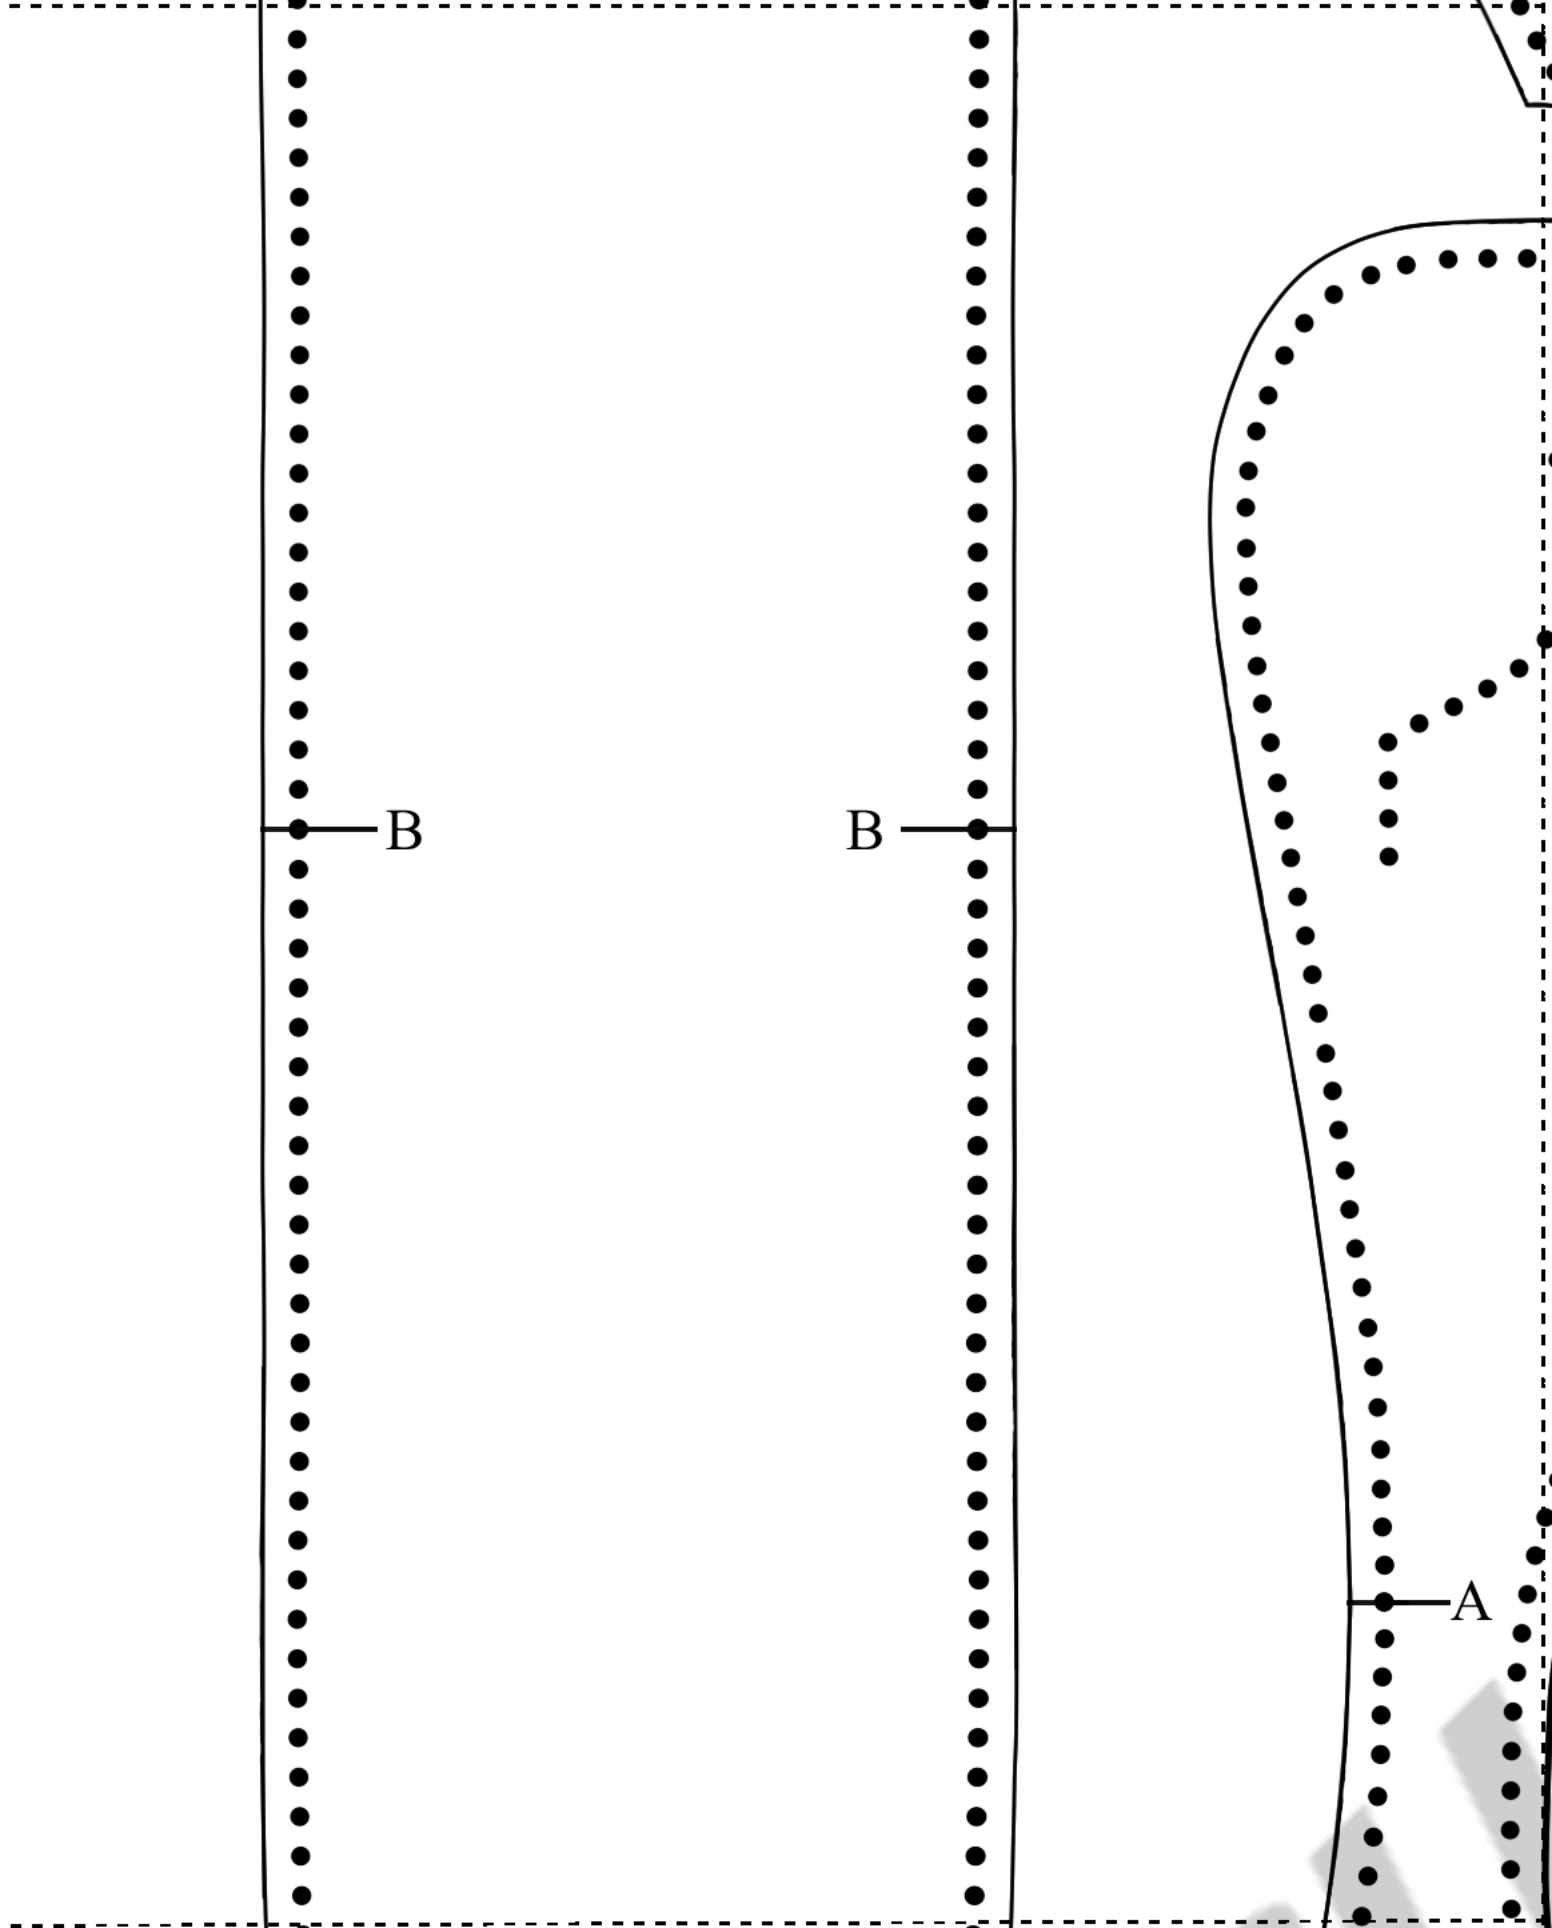

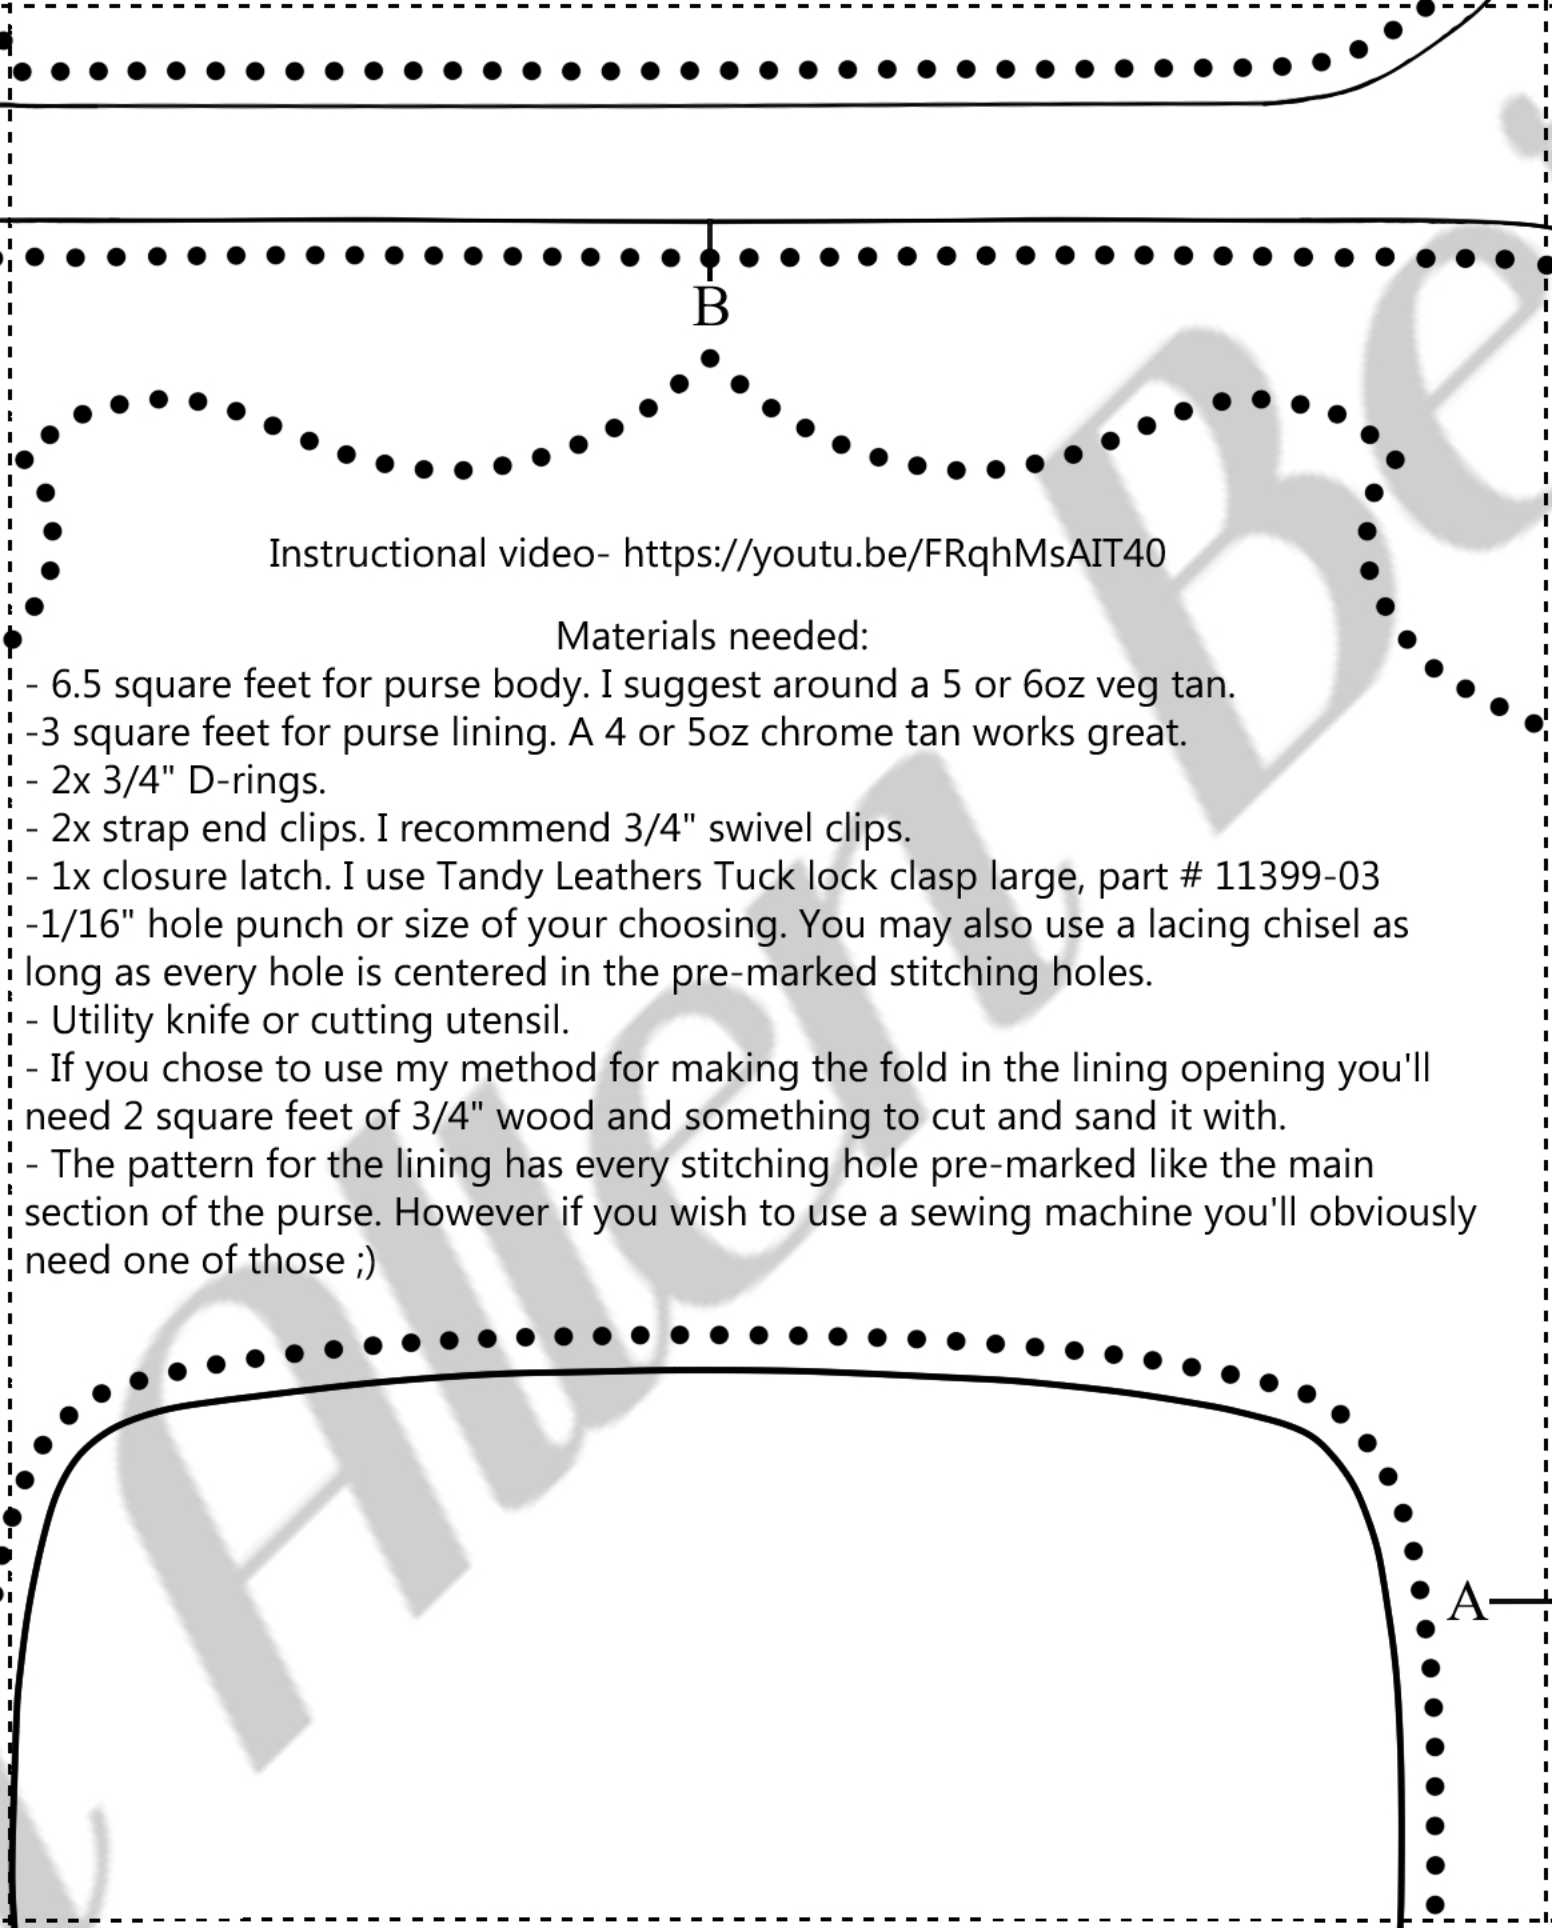


B


Instructional video- <https://youtu.be/FRqhMsAIT40>



#### Materials needed:

- 6.5 square feet for purse body. I suggest around a 5 or 6oz veg tan.
- 3 square feet for purse lining. A 4 or 5oz chrome tan works great.
- 2x 3/4" D-rings.
- 2x strap end clips. I recommend 3/4" swivel clips.
- 1x closure latch. I use Tandy Leathers Tuck lock clasp large, part # 11399-03
- 1/16" hole punch or size of your choosing. You may also use a lacing chisel as long as every hole is centered in the pre-marked stitching holes.
- Utility knife or cutting utensil.
- If you chose to use my method for making the fold in the lining opening you'll need 2 square feet of 3/4" wood and something to cut and sand it with.
- The pattern for the lining has every stitching hole pre-marked like the main section of the purse. However if you wish to use a sewing machine you'll obviously need one of those ;)

A

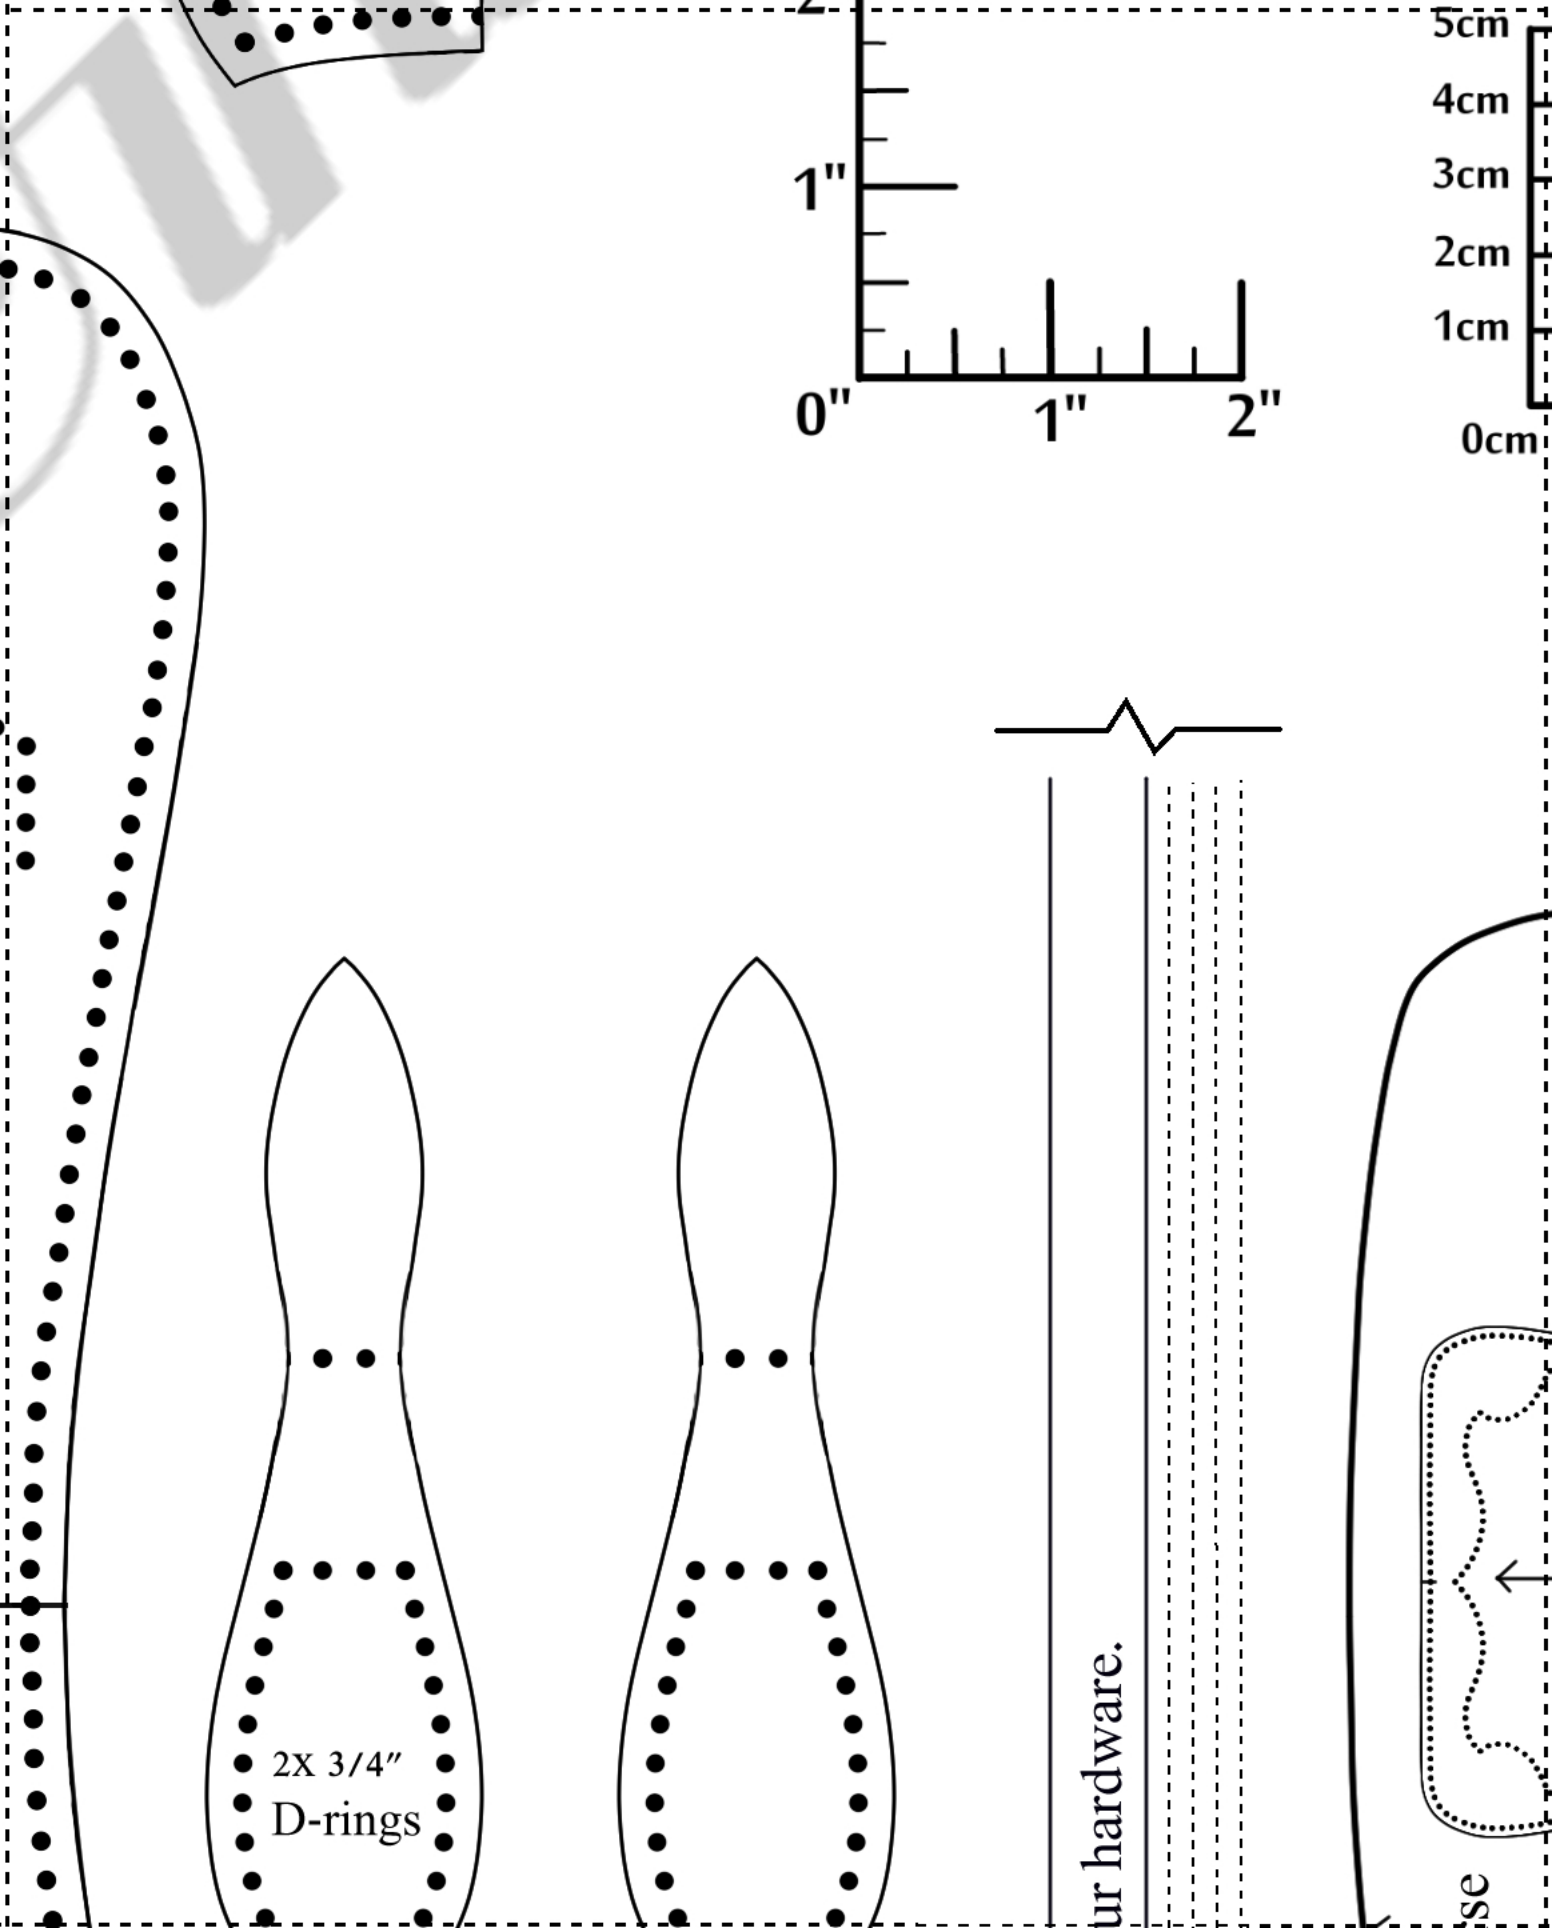


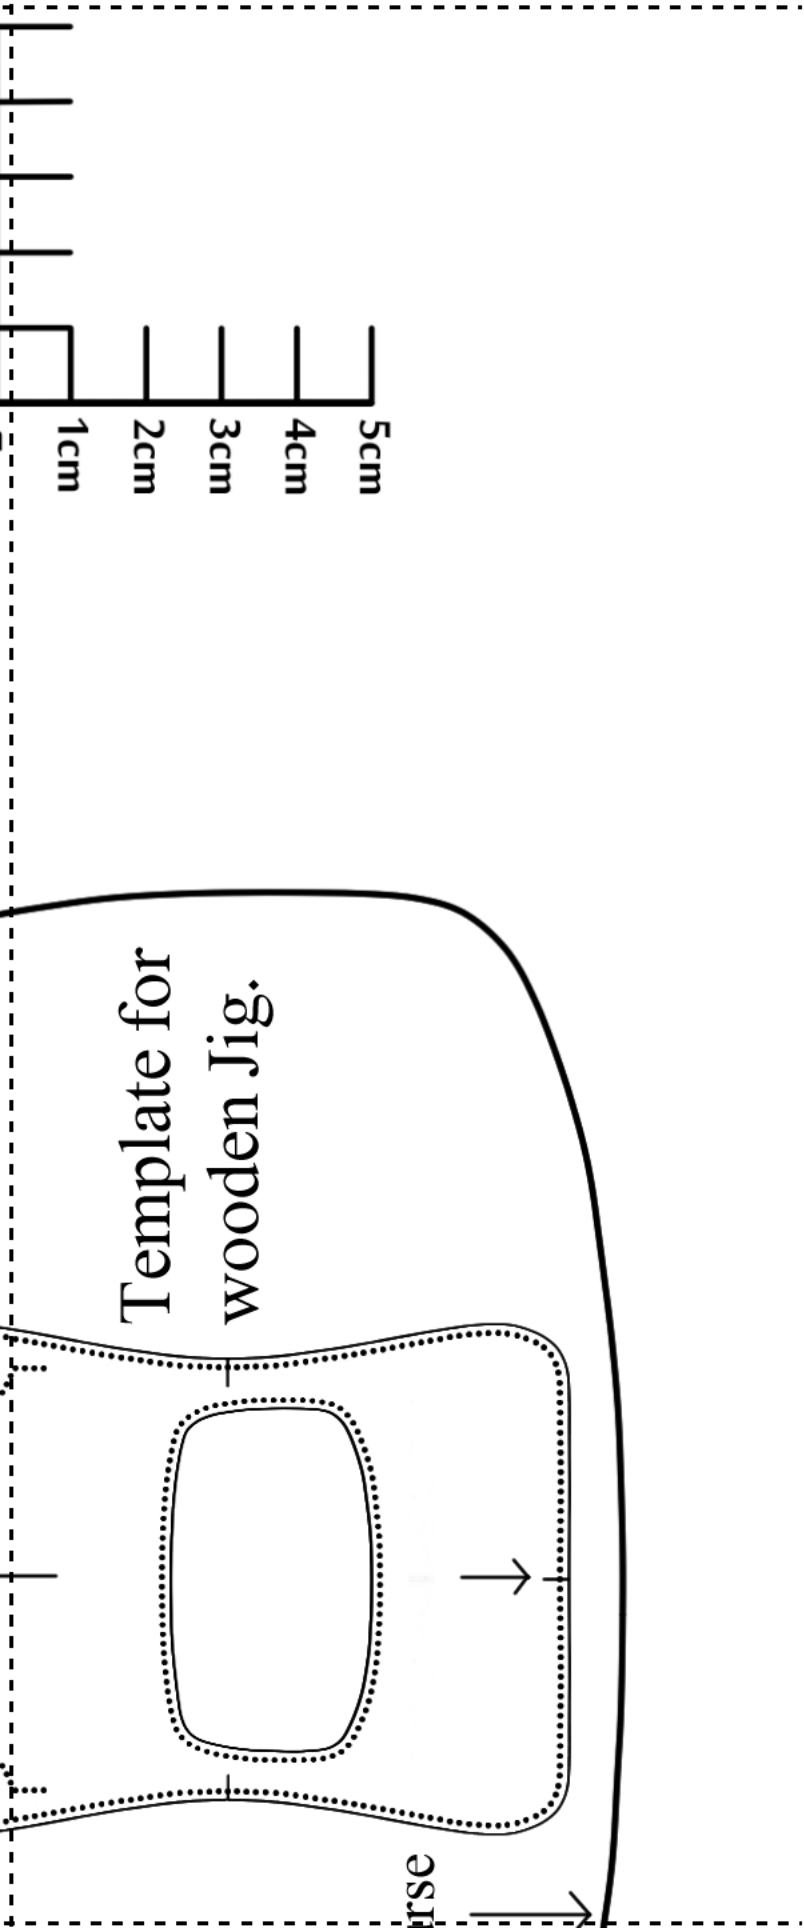

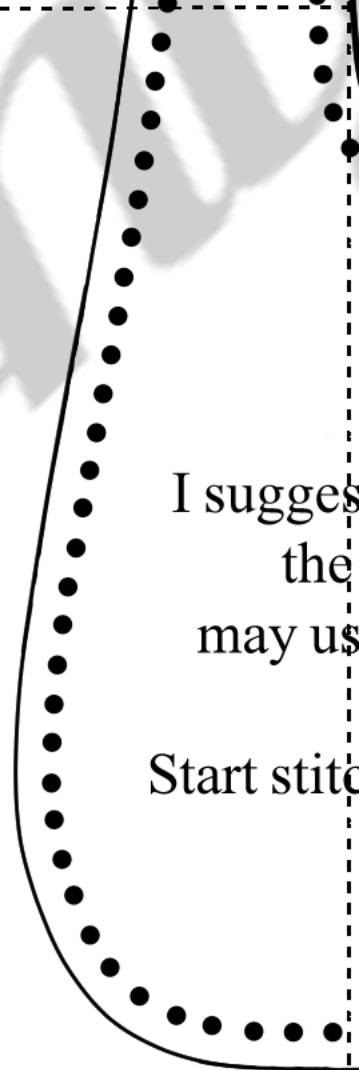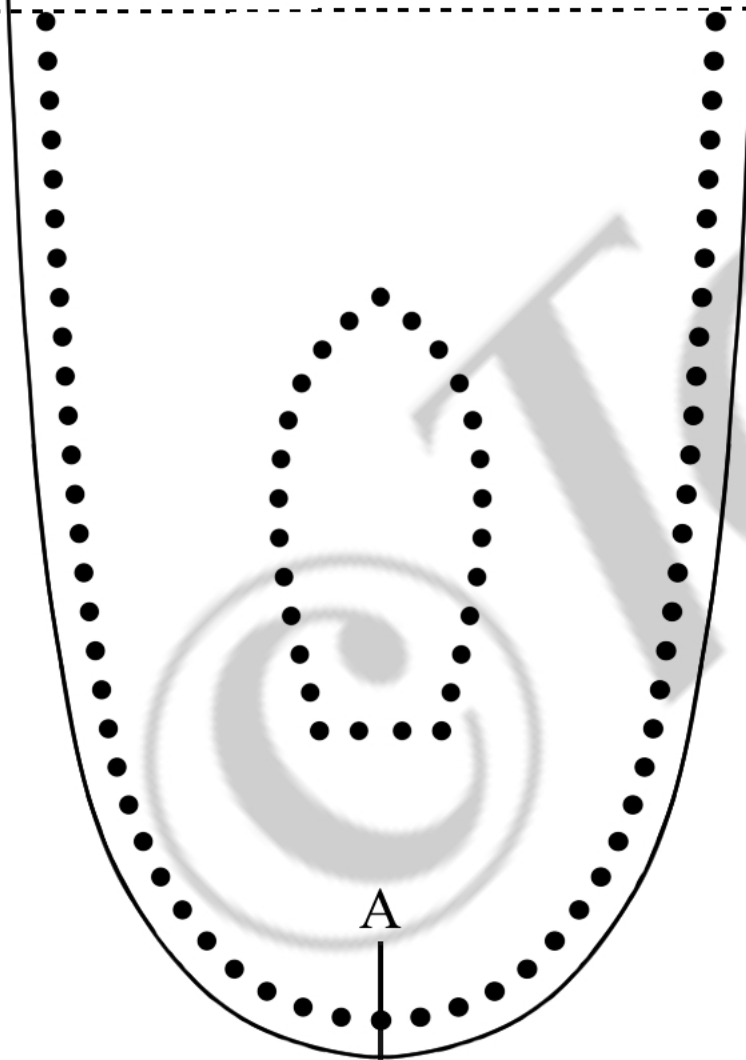


I suggest  
the  
may us


Start stit

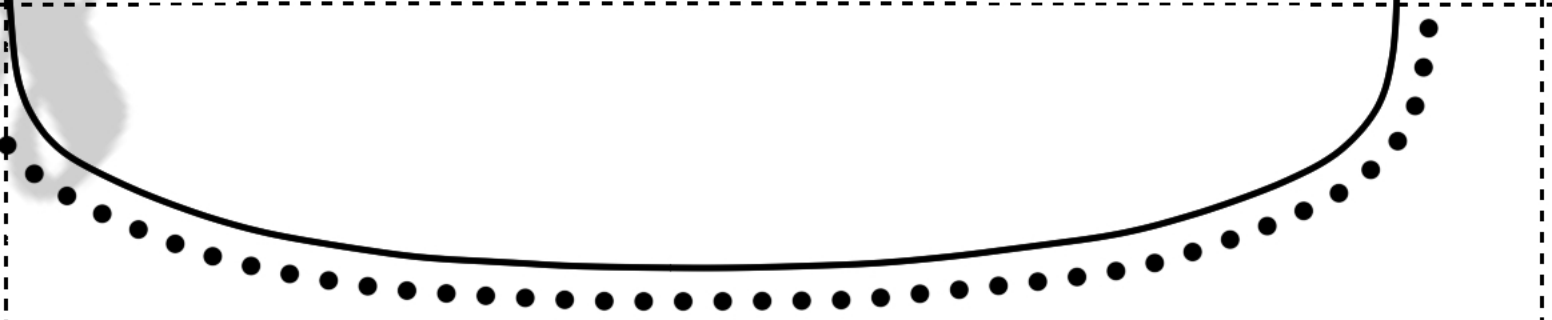


st using a 1/16" hole punch. By using something slightly smaller than the black hole marks it will make it easier to center the punch. You can use any size hole punch or stitching punch you desire. Just make sure to center each stitch hole into the predestinated marks.

atching the gusset to the body by lining two holes marked either A or

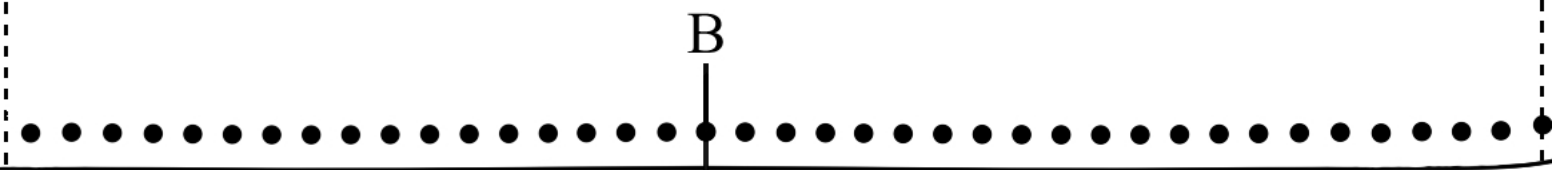

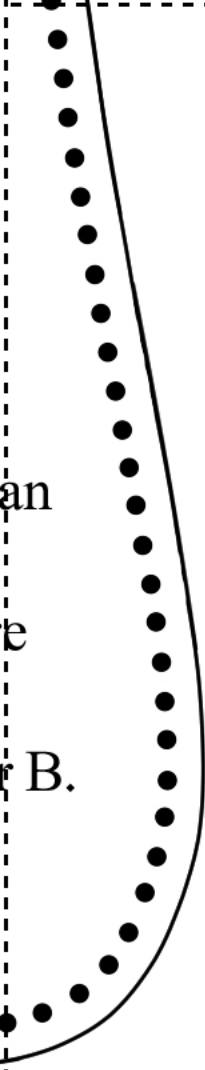

an  
e  
r B.

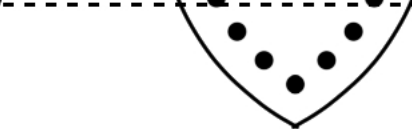

Cut strap 44" long and to the width of your



Back of pur  
long side

LONG SIDE.

Front of pul  
short side.

