

Bag Flap: Cut 1 from fashion fabric

theantibromide.com

theantibromide.com



bag |

theantibromide.com


theantibromide.com

theantibromide.com


theantibromide.com

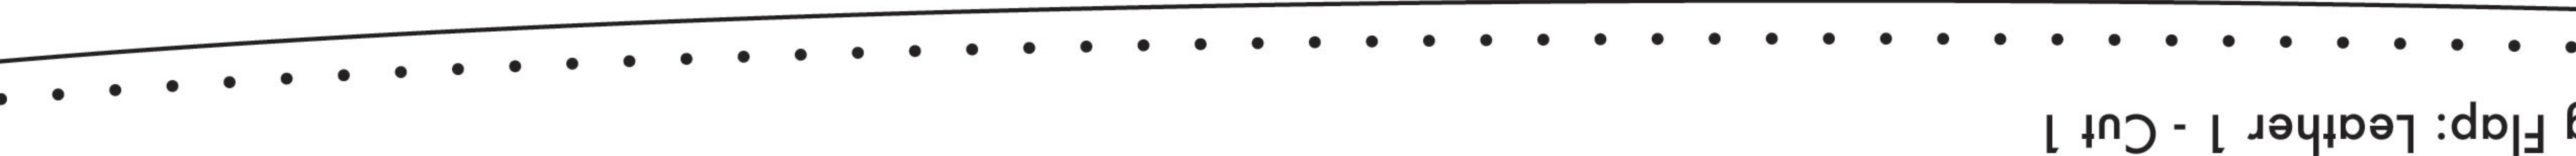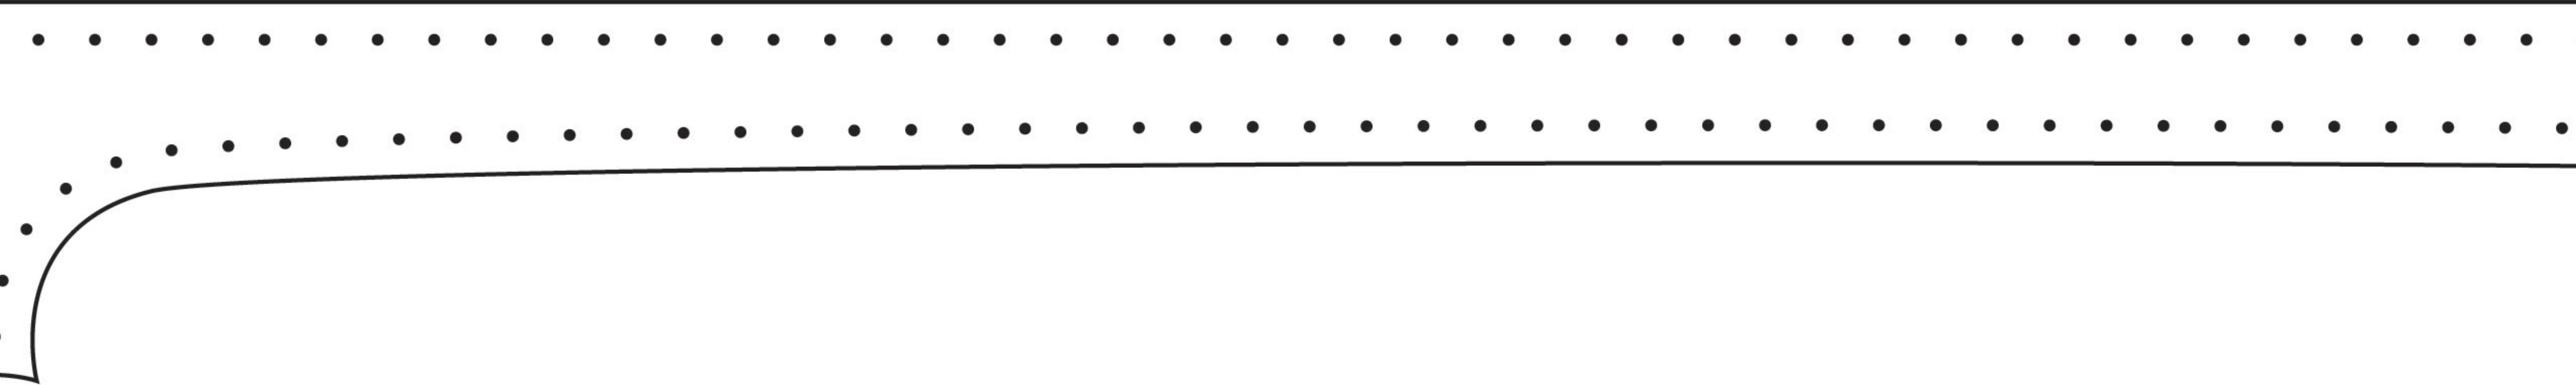

Flap: Leather 1 - Cut 1

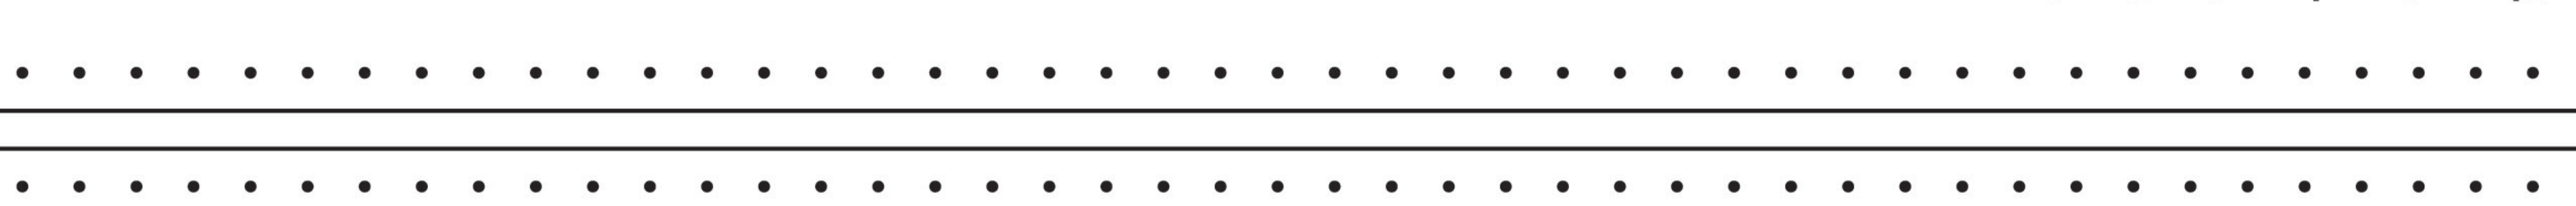

Bag Panel: Leather 1 - Cut 2

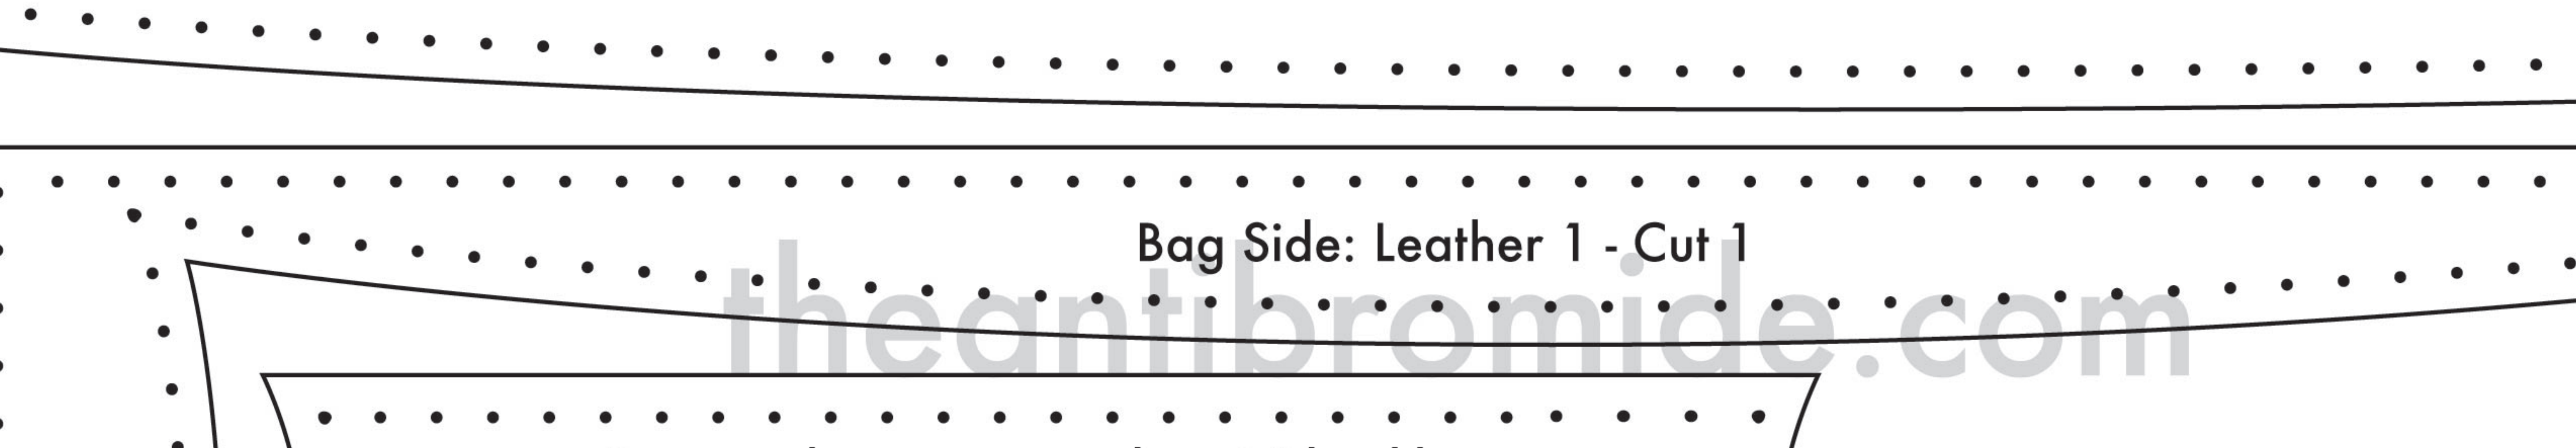


Bag Side: Leather 1 - Cut 1


theantibromide.com

theantibromide.com

Bag Flap: Lec

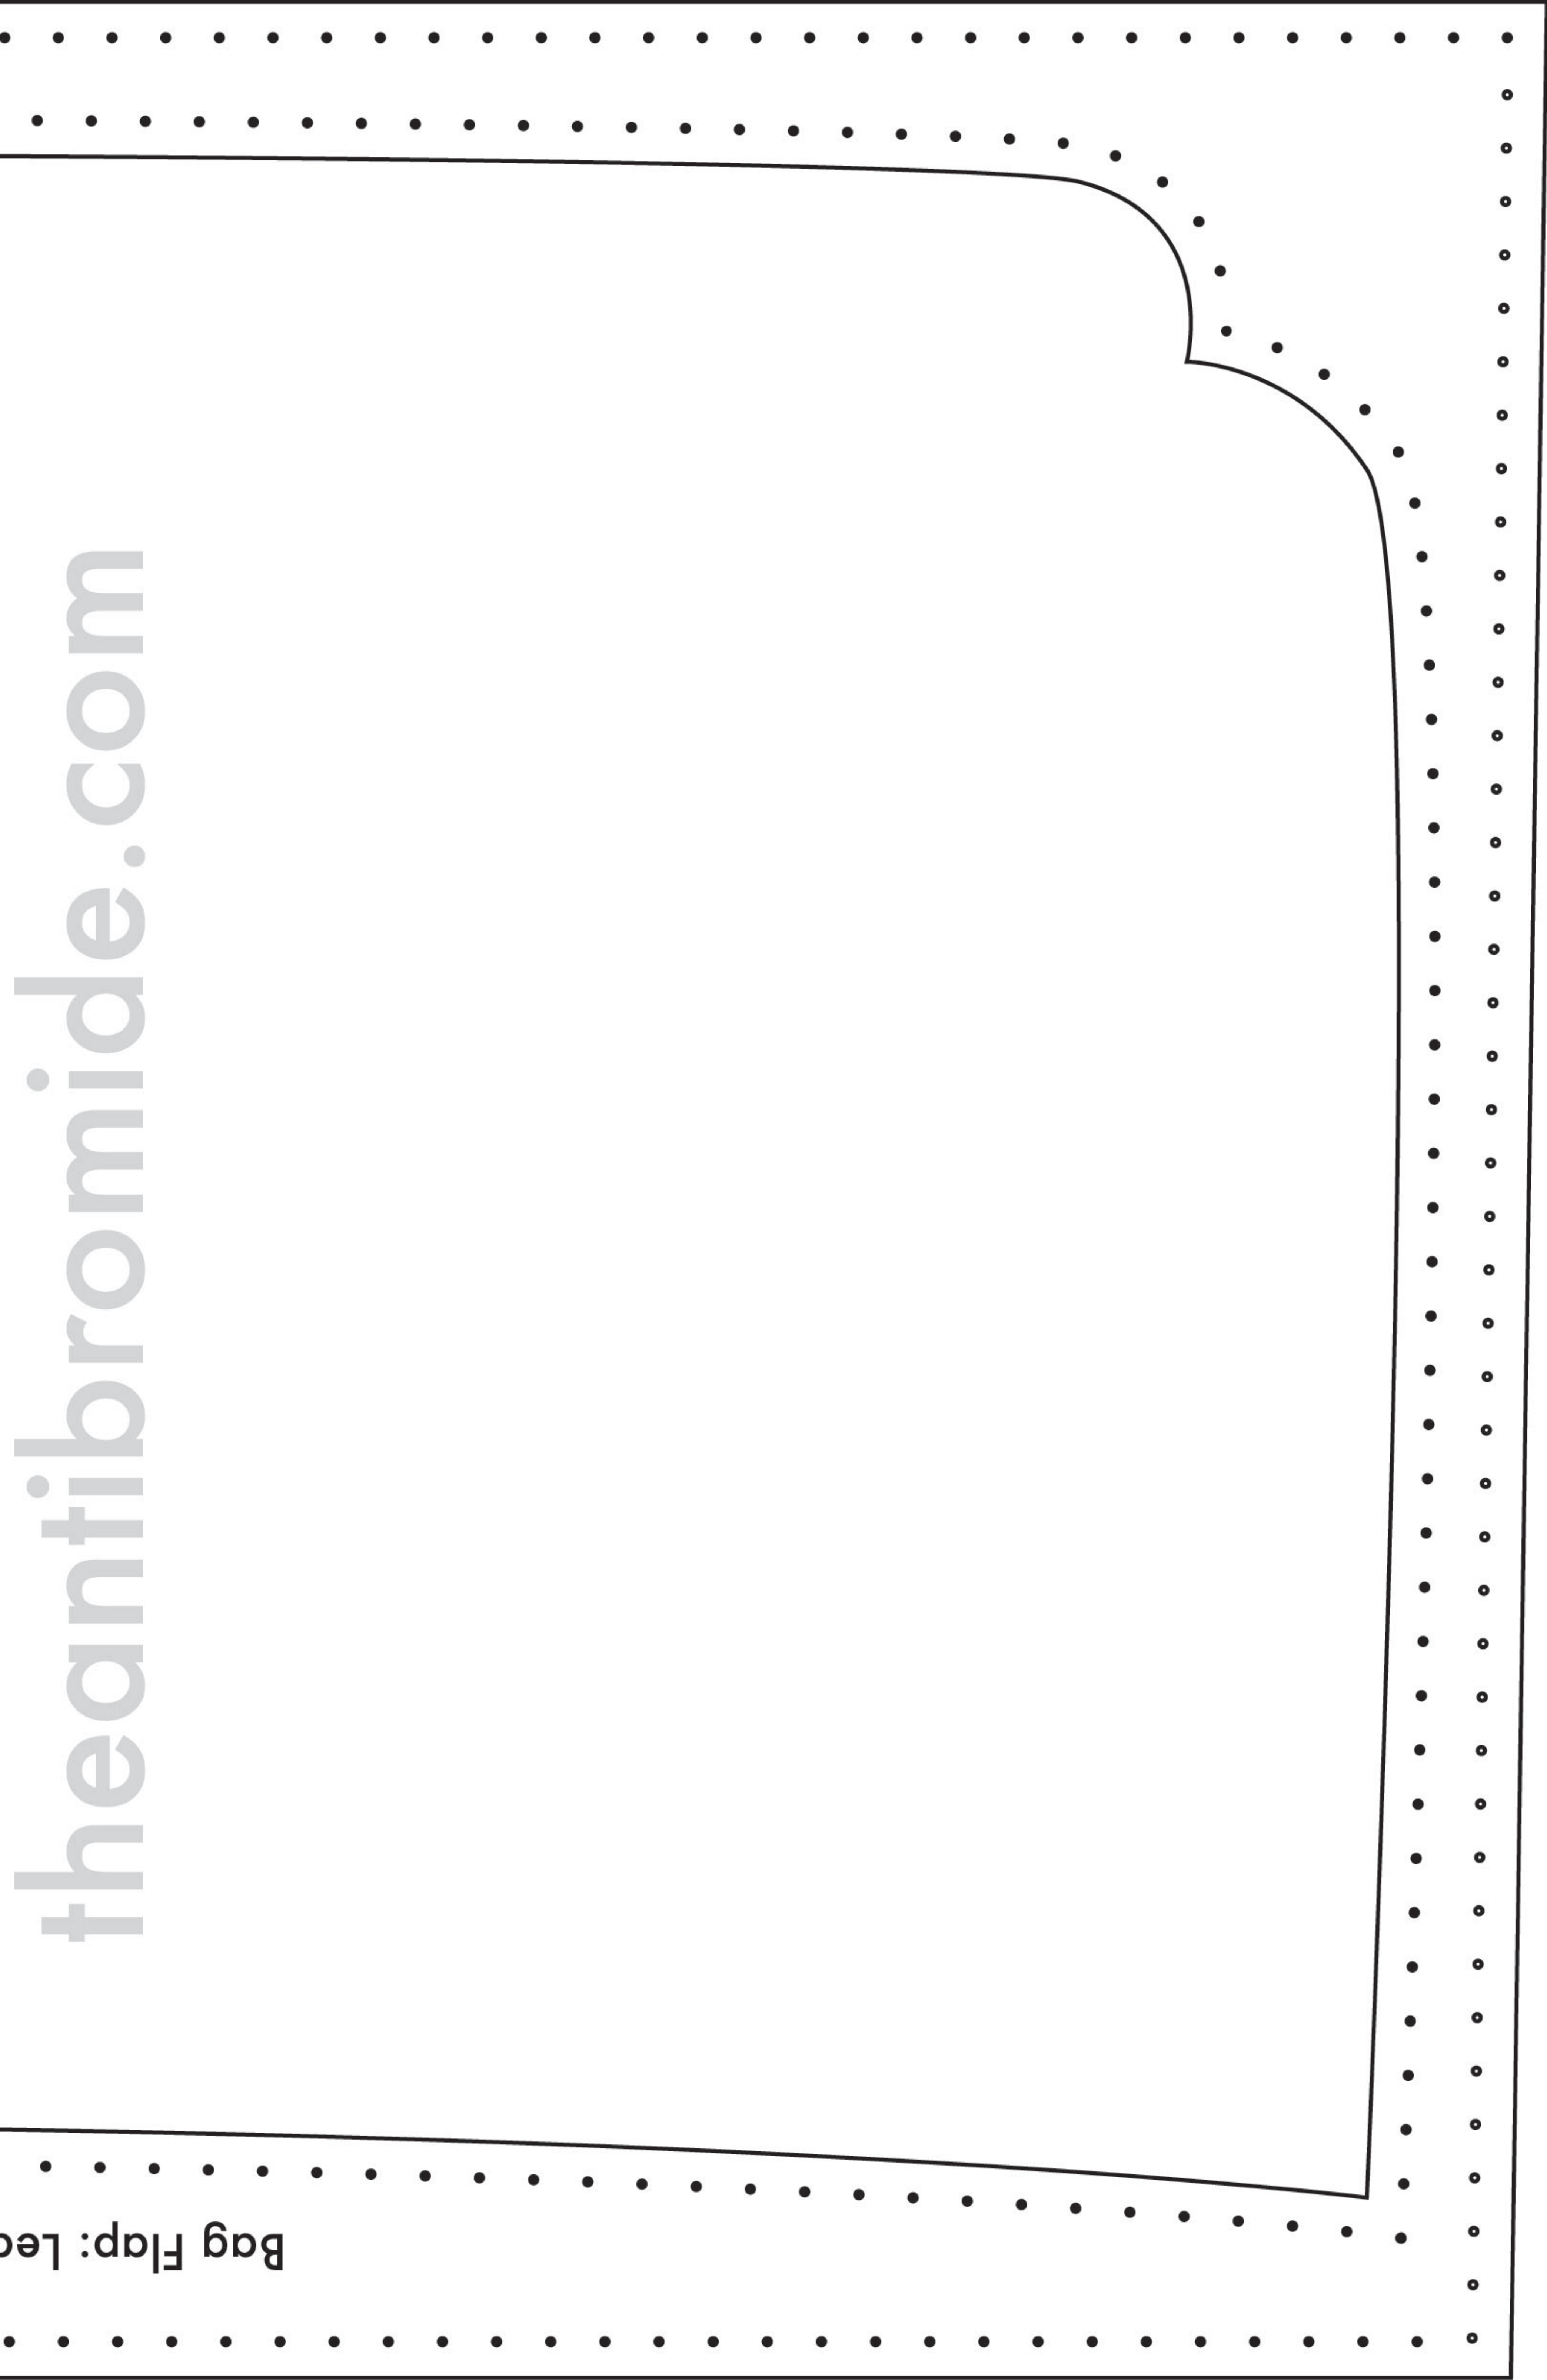

Closure Backing
Cut 2 from Fabric

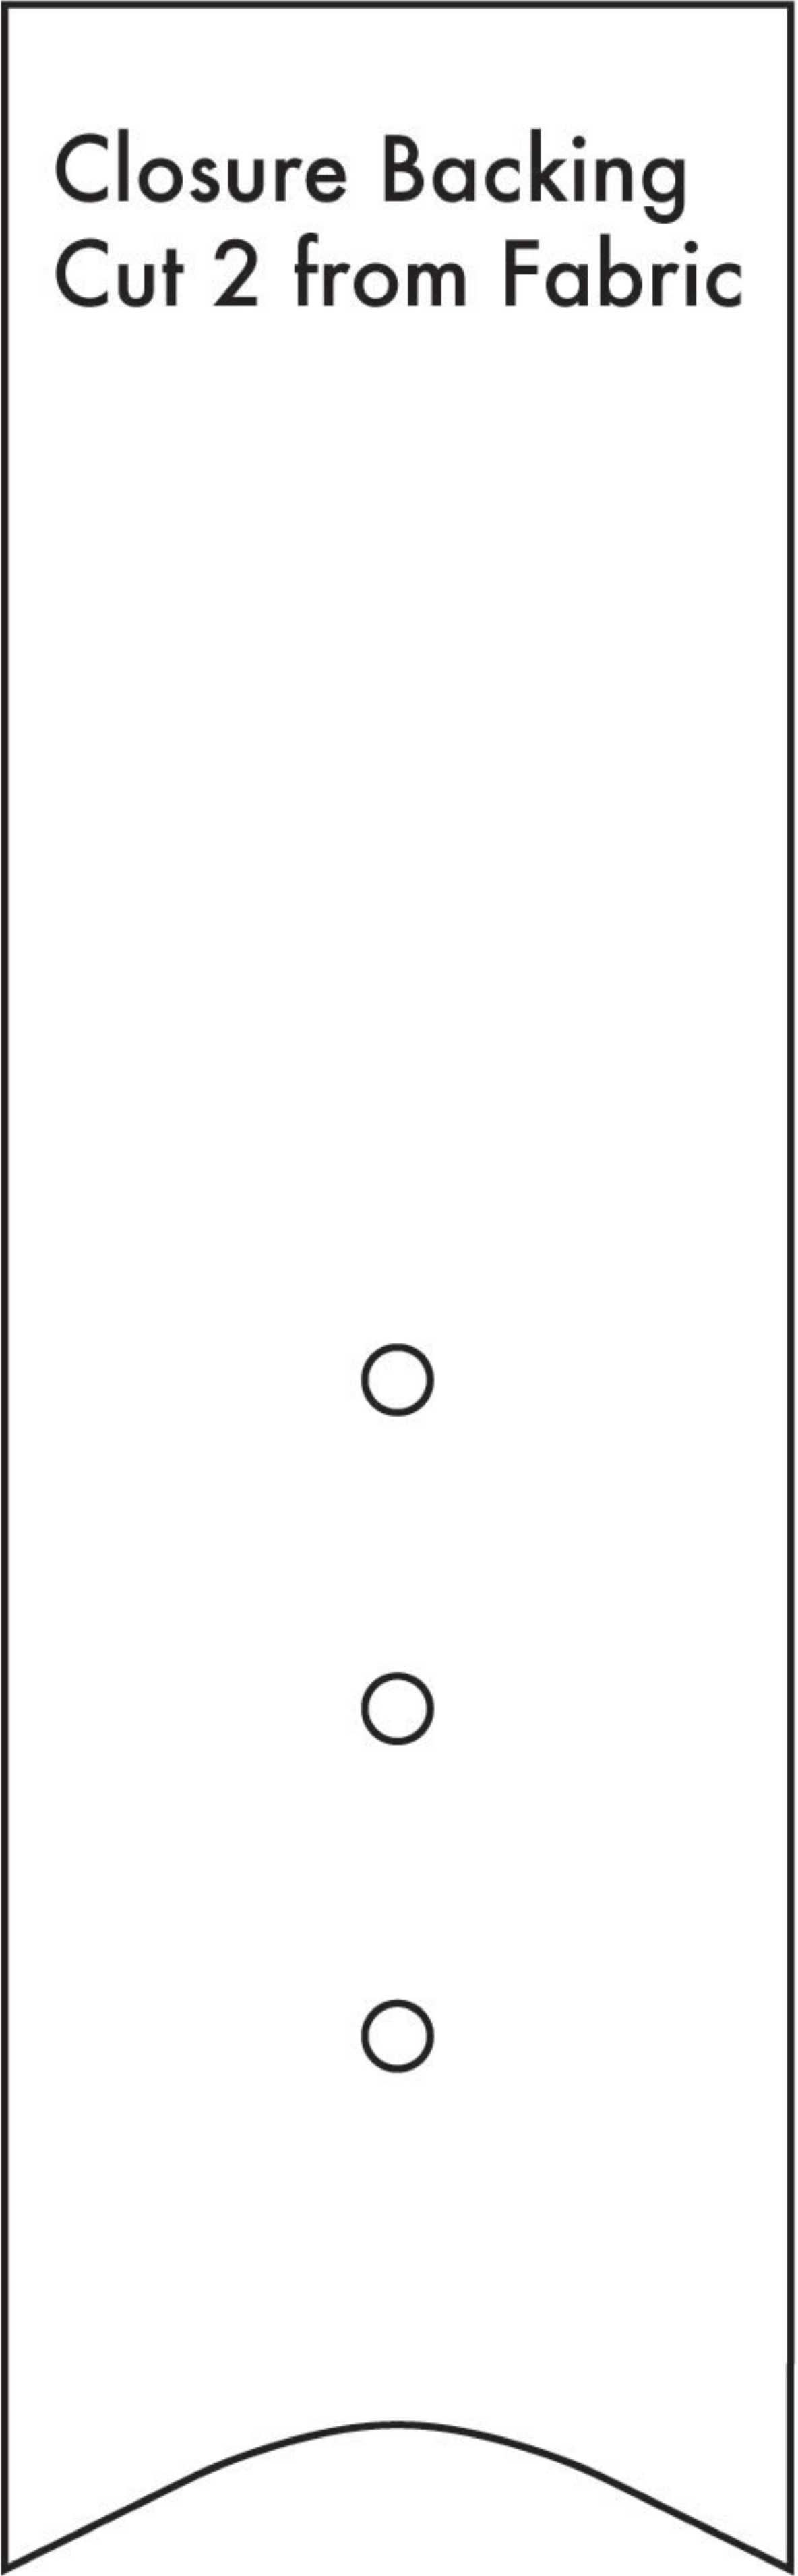

Handle Backing
Cut 1 from Fabric


theantibromide.com



Bag Side Interior
Leather 2 Cut 2




Designed to
accommodate
1" buckles

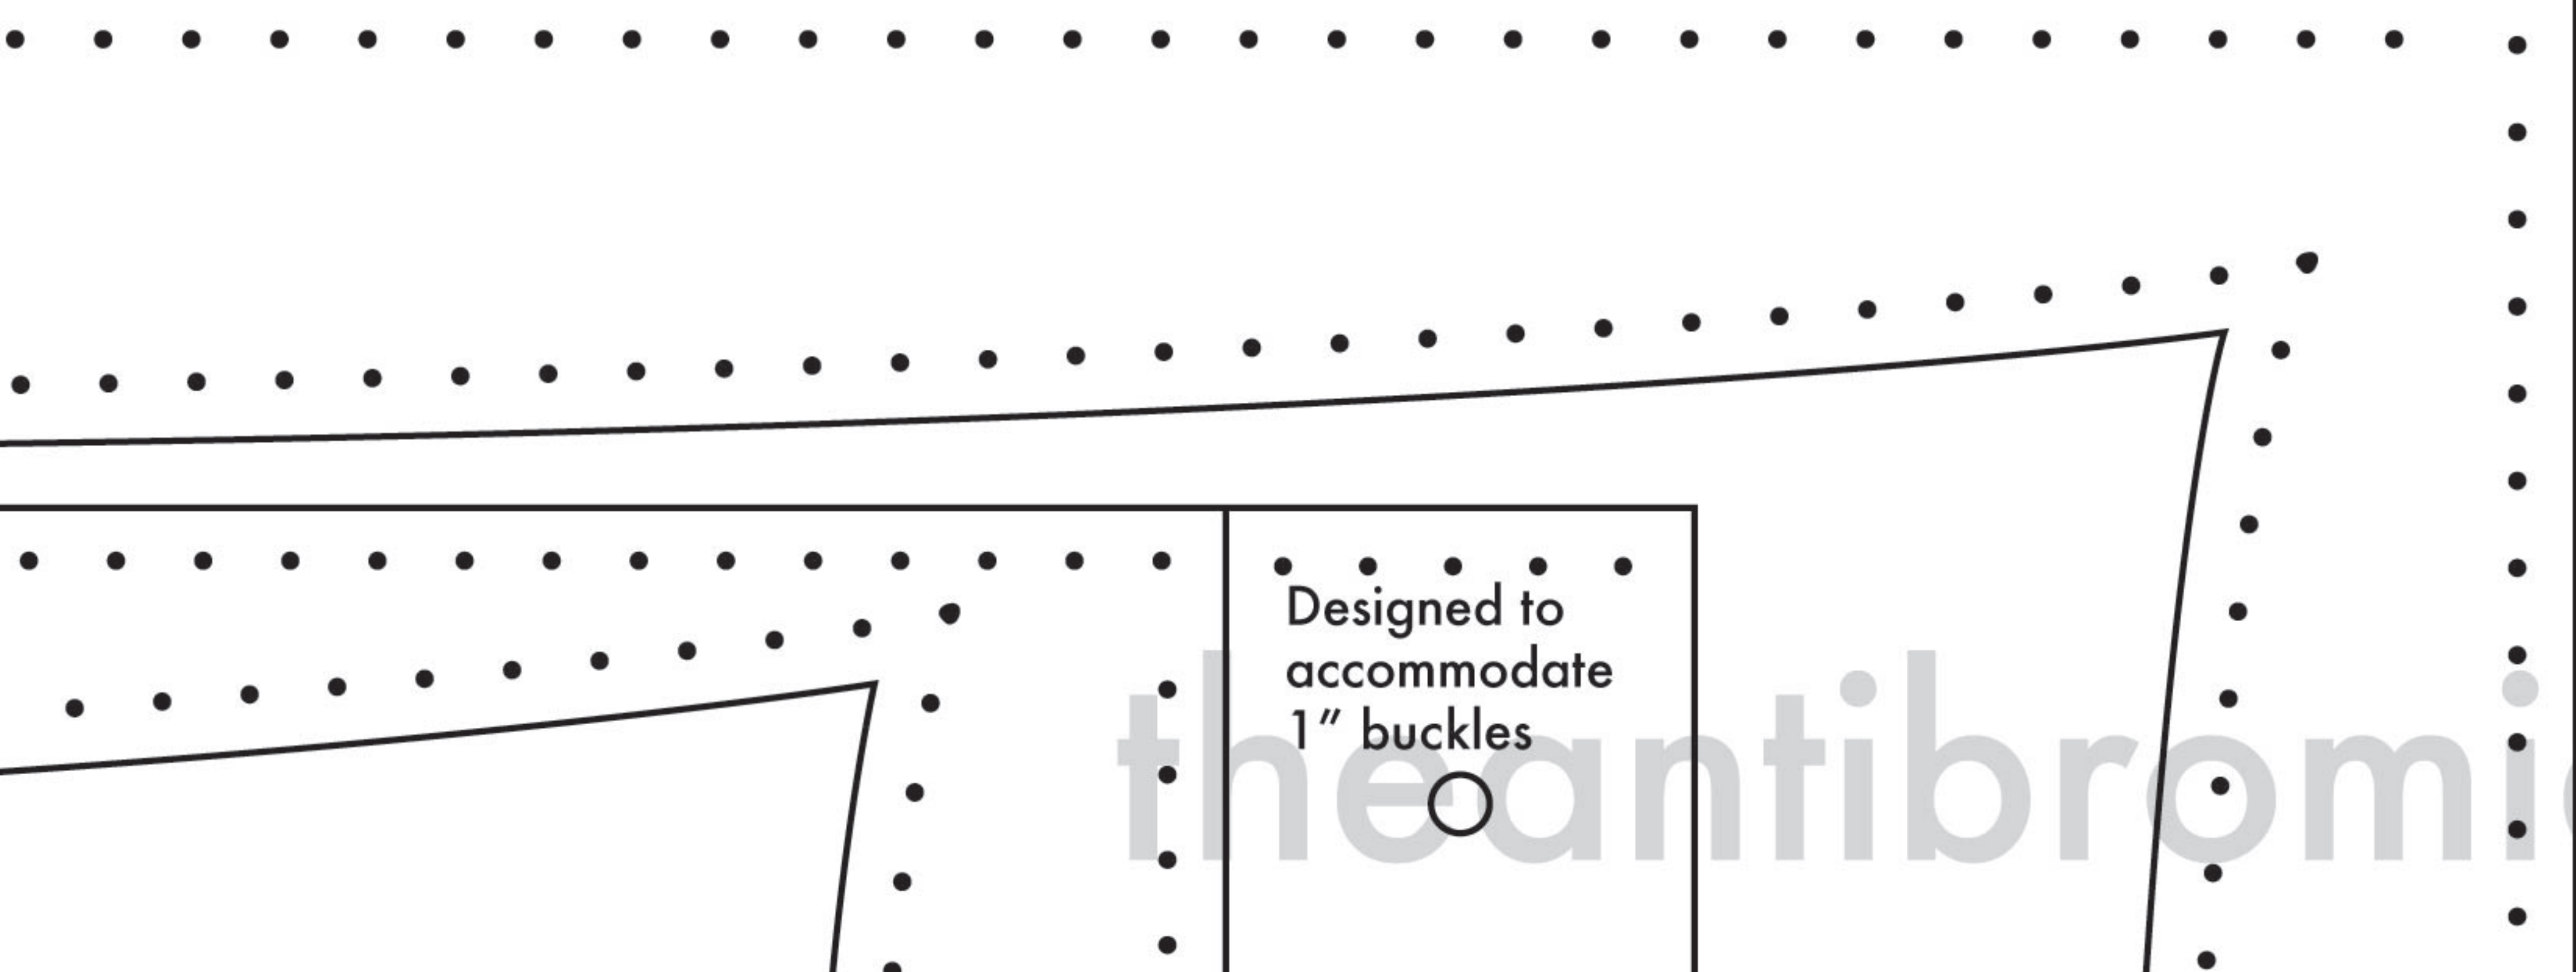


theantibromide.com

Handle Backing
Cut 1 from Fabric

Flap Interior: Leather 2 Cut 1

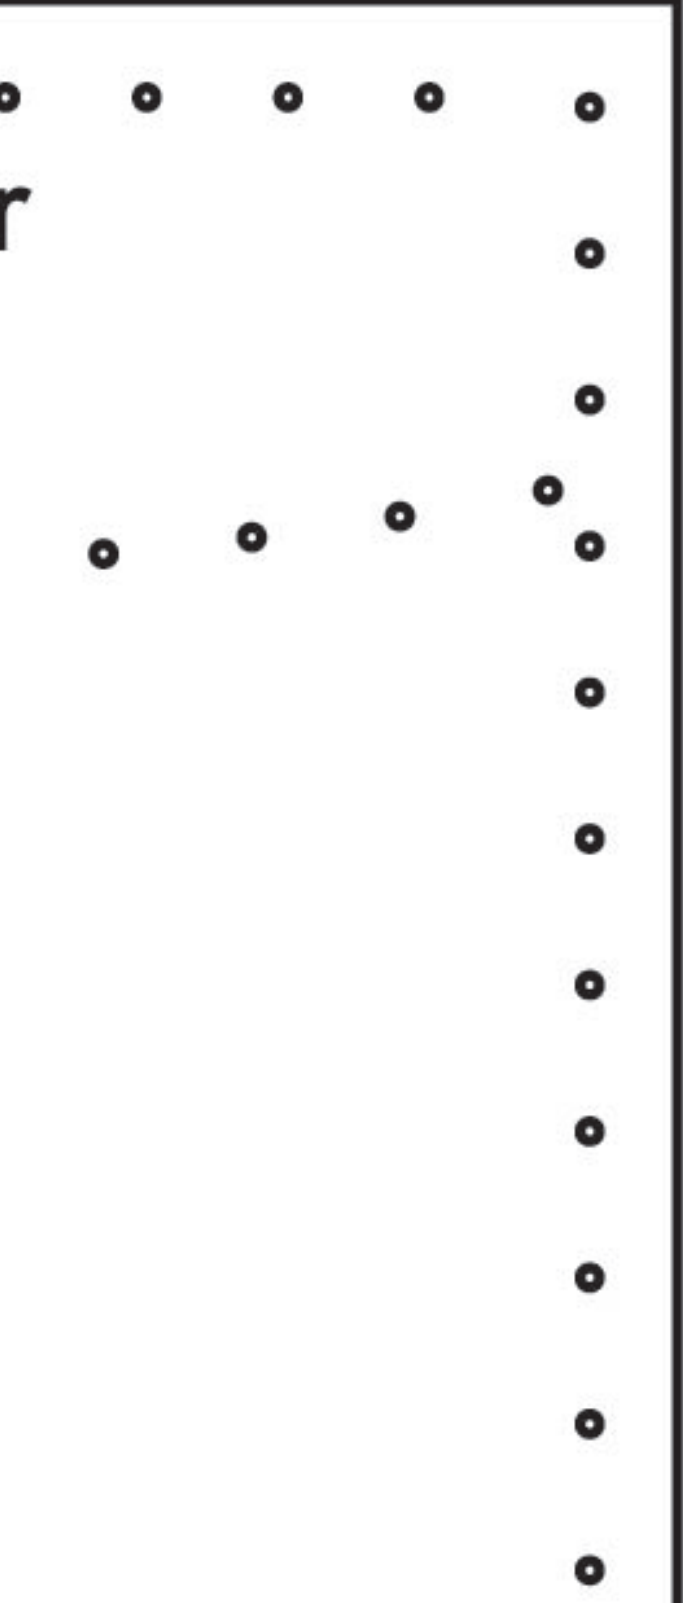


Bag Panel Interior: Leather 2 Cut 2

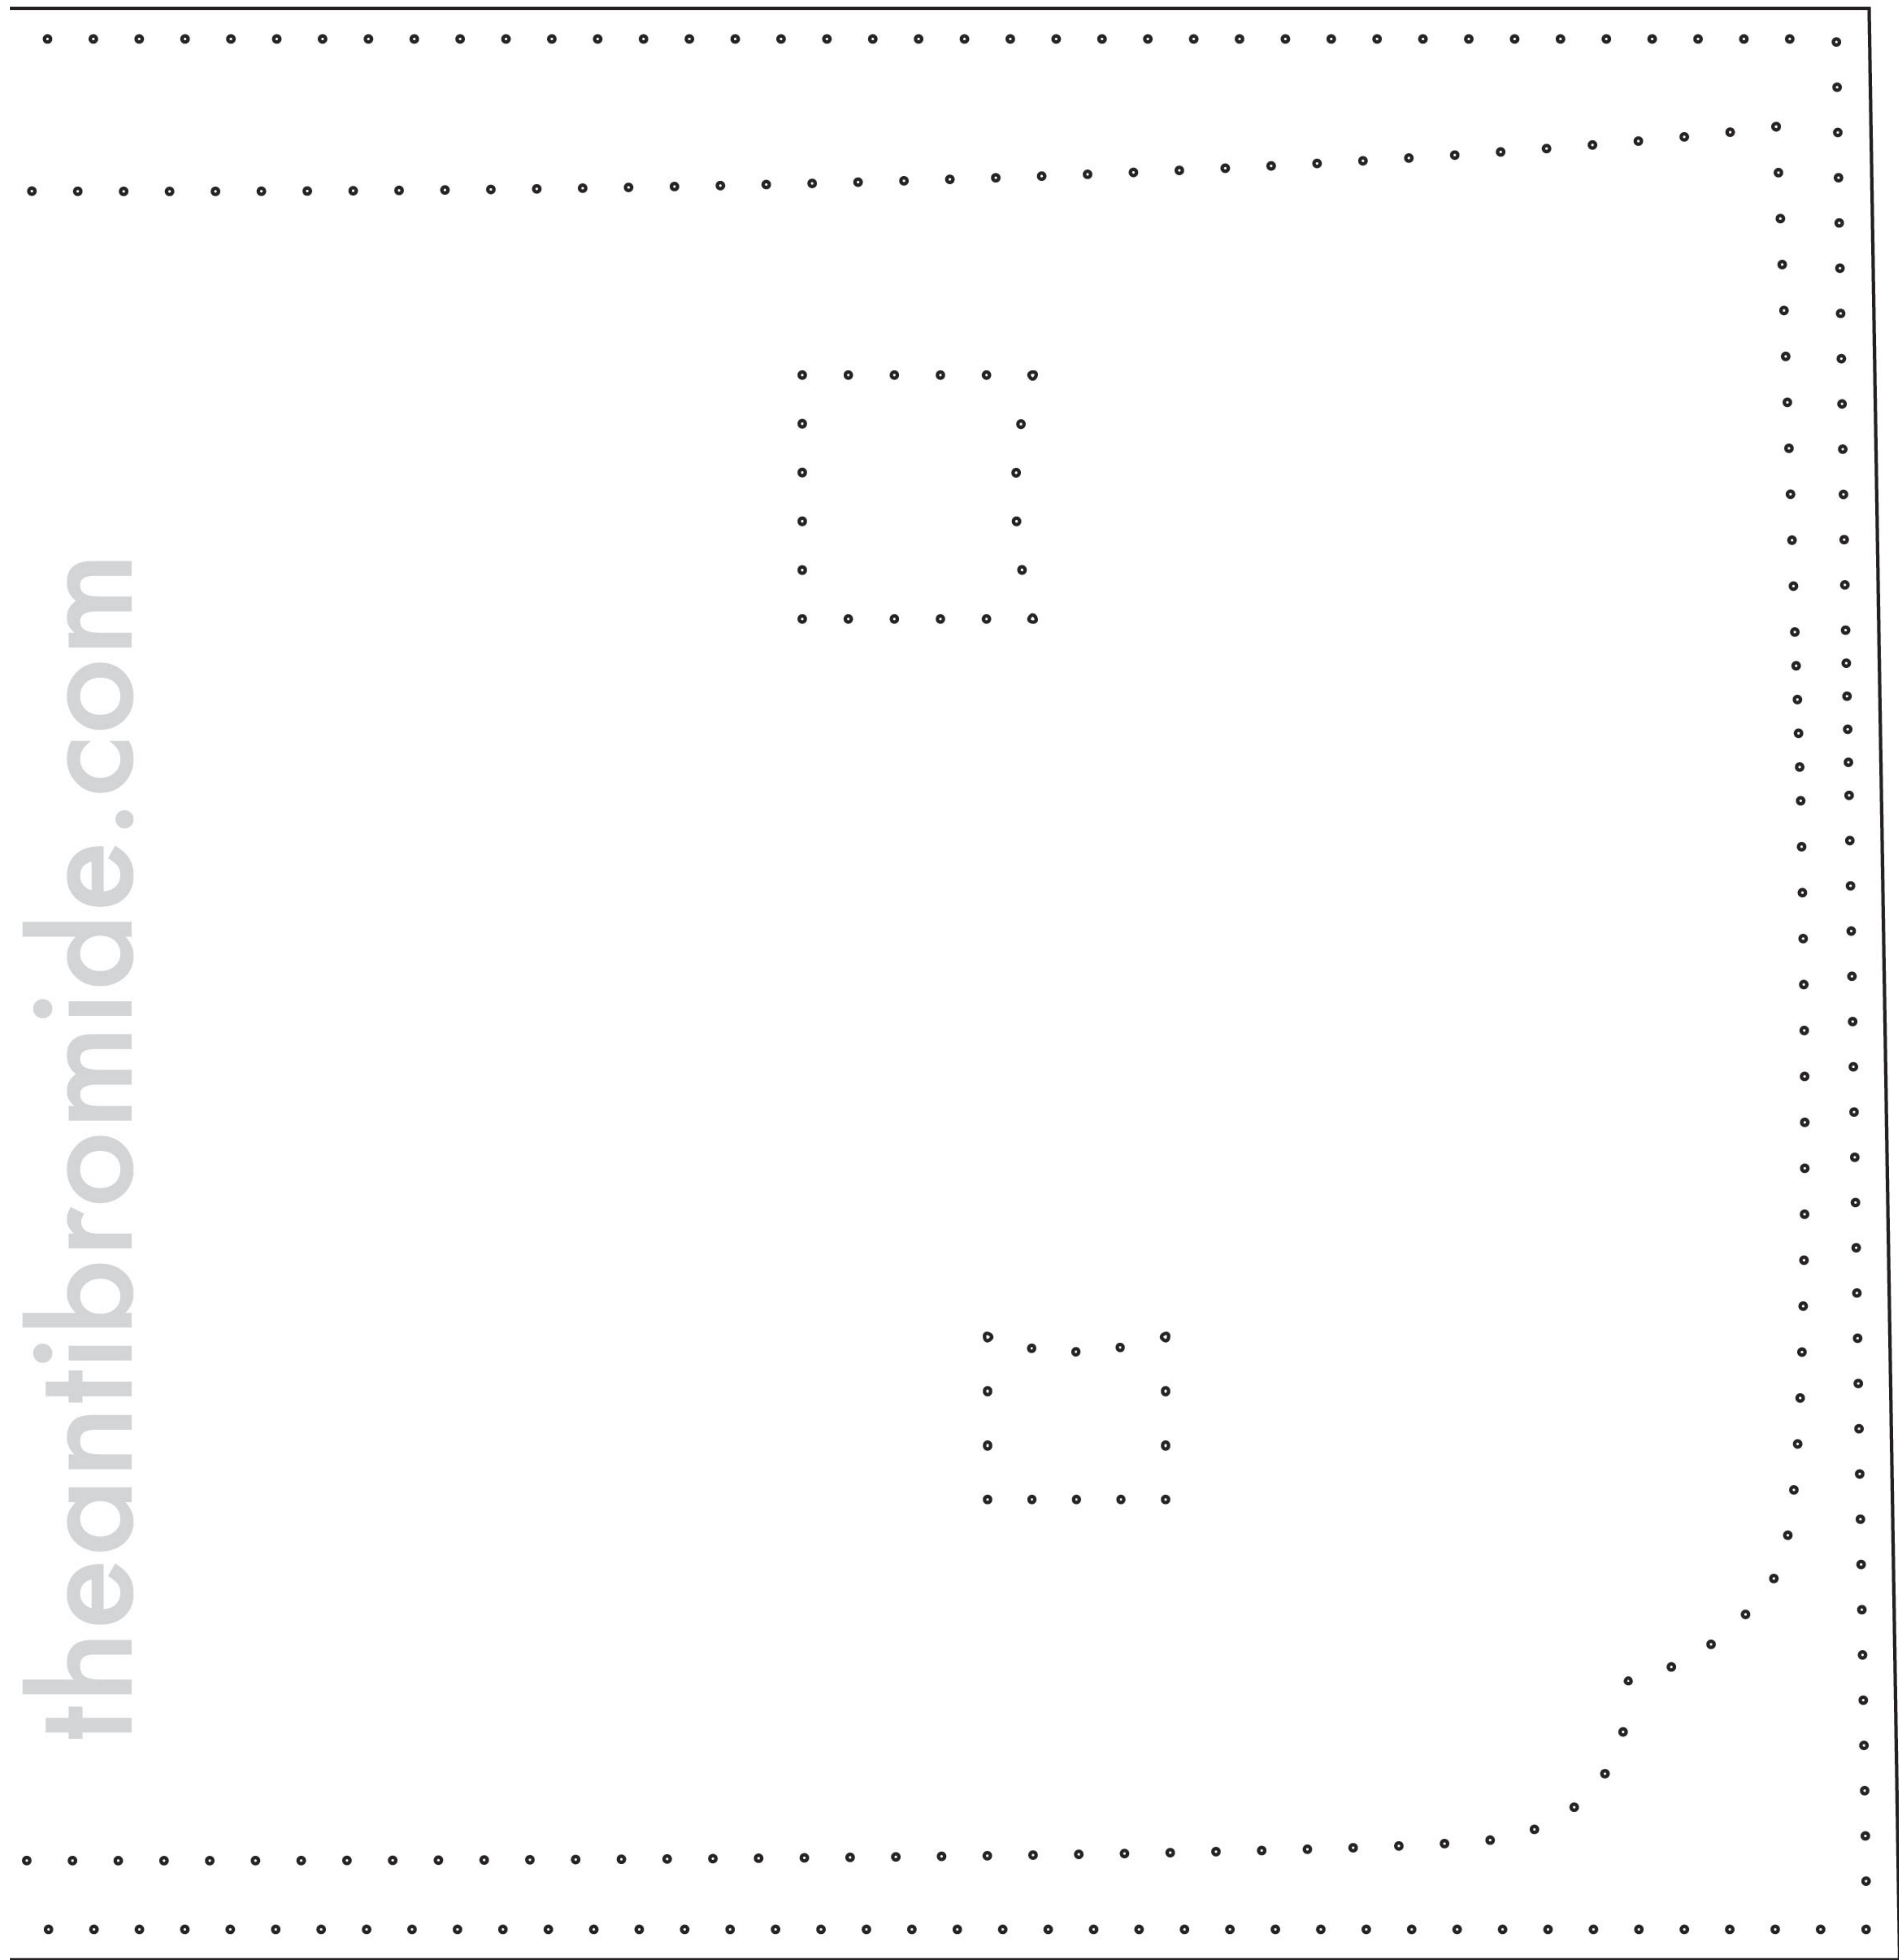


theantibromide.com

theantibromide.com

theantibromide.com

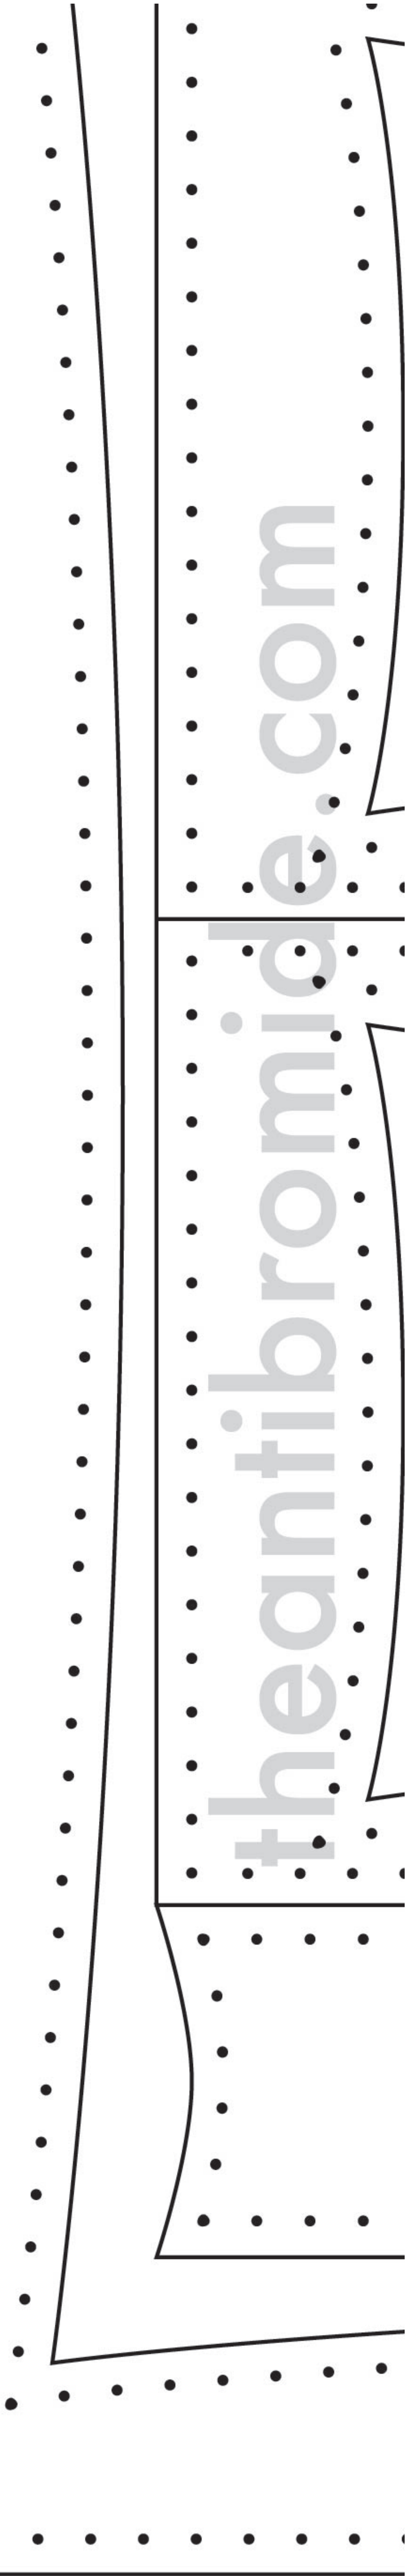

Bag Bottom: Leather 1 - Cut 1

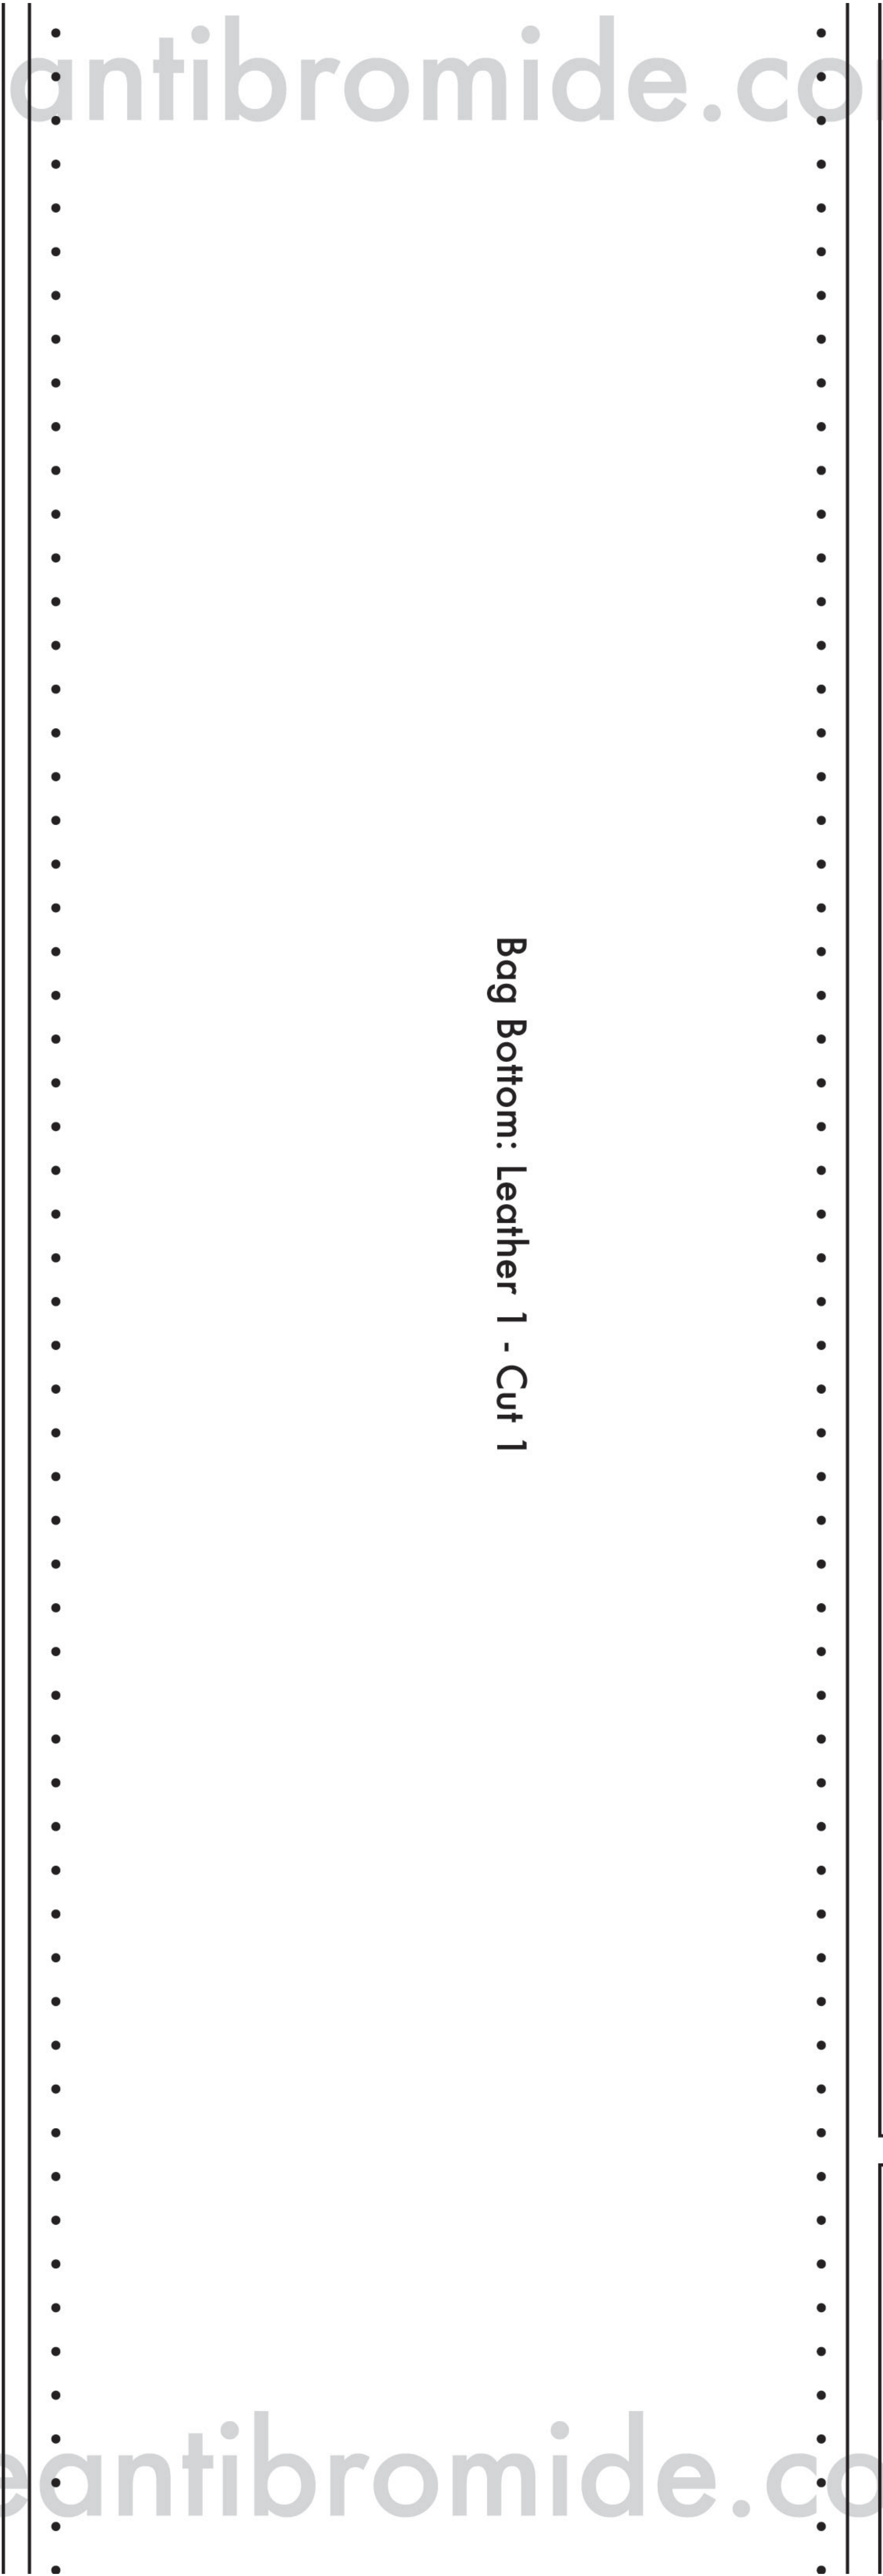

bag Panel: Cut 2 from fashion fabric


Bag Side: Leather 1 - Cut 1

Designed to accommodate 1" buckles
Closure: Leather 1 - Cut 1


Designed to accommodate 1" buckles
Closure: Leather 1 - Cut 1

Bag Side: Leather 1 - Cut 1

Bag Handle: Leather 1 - Cut 1

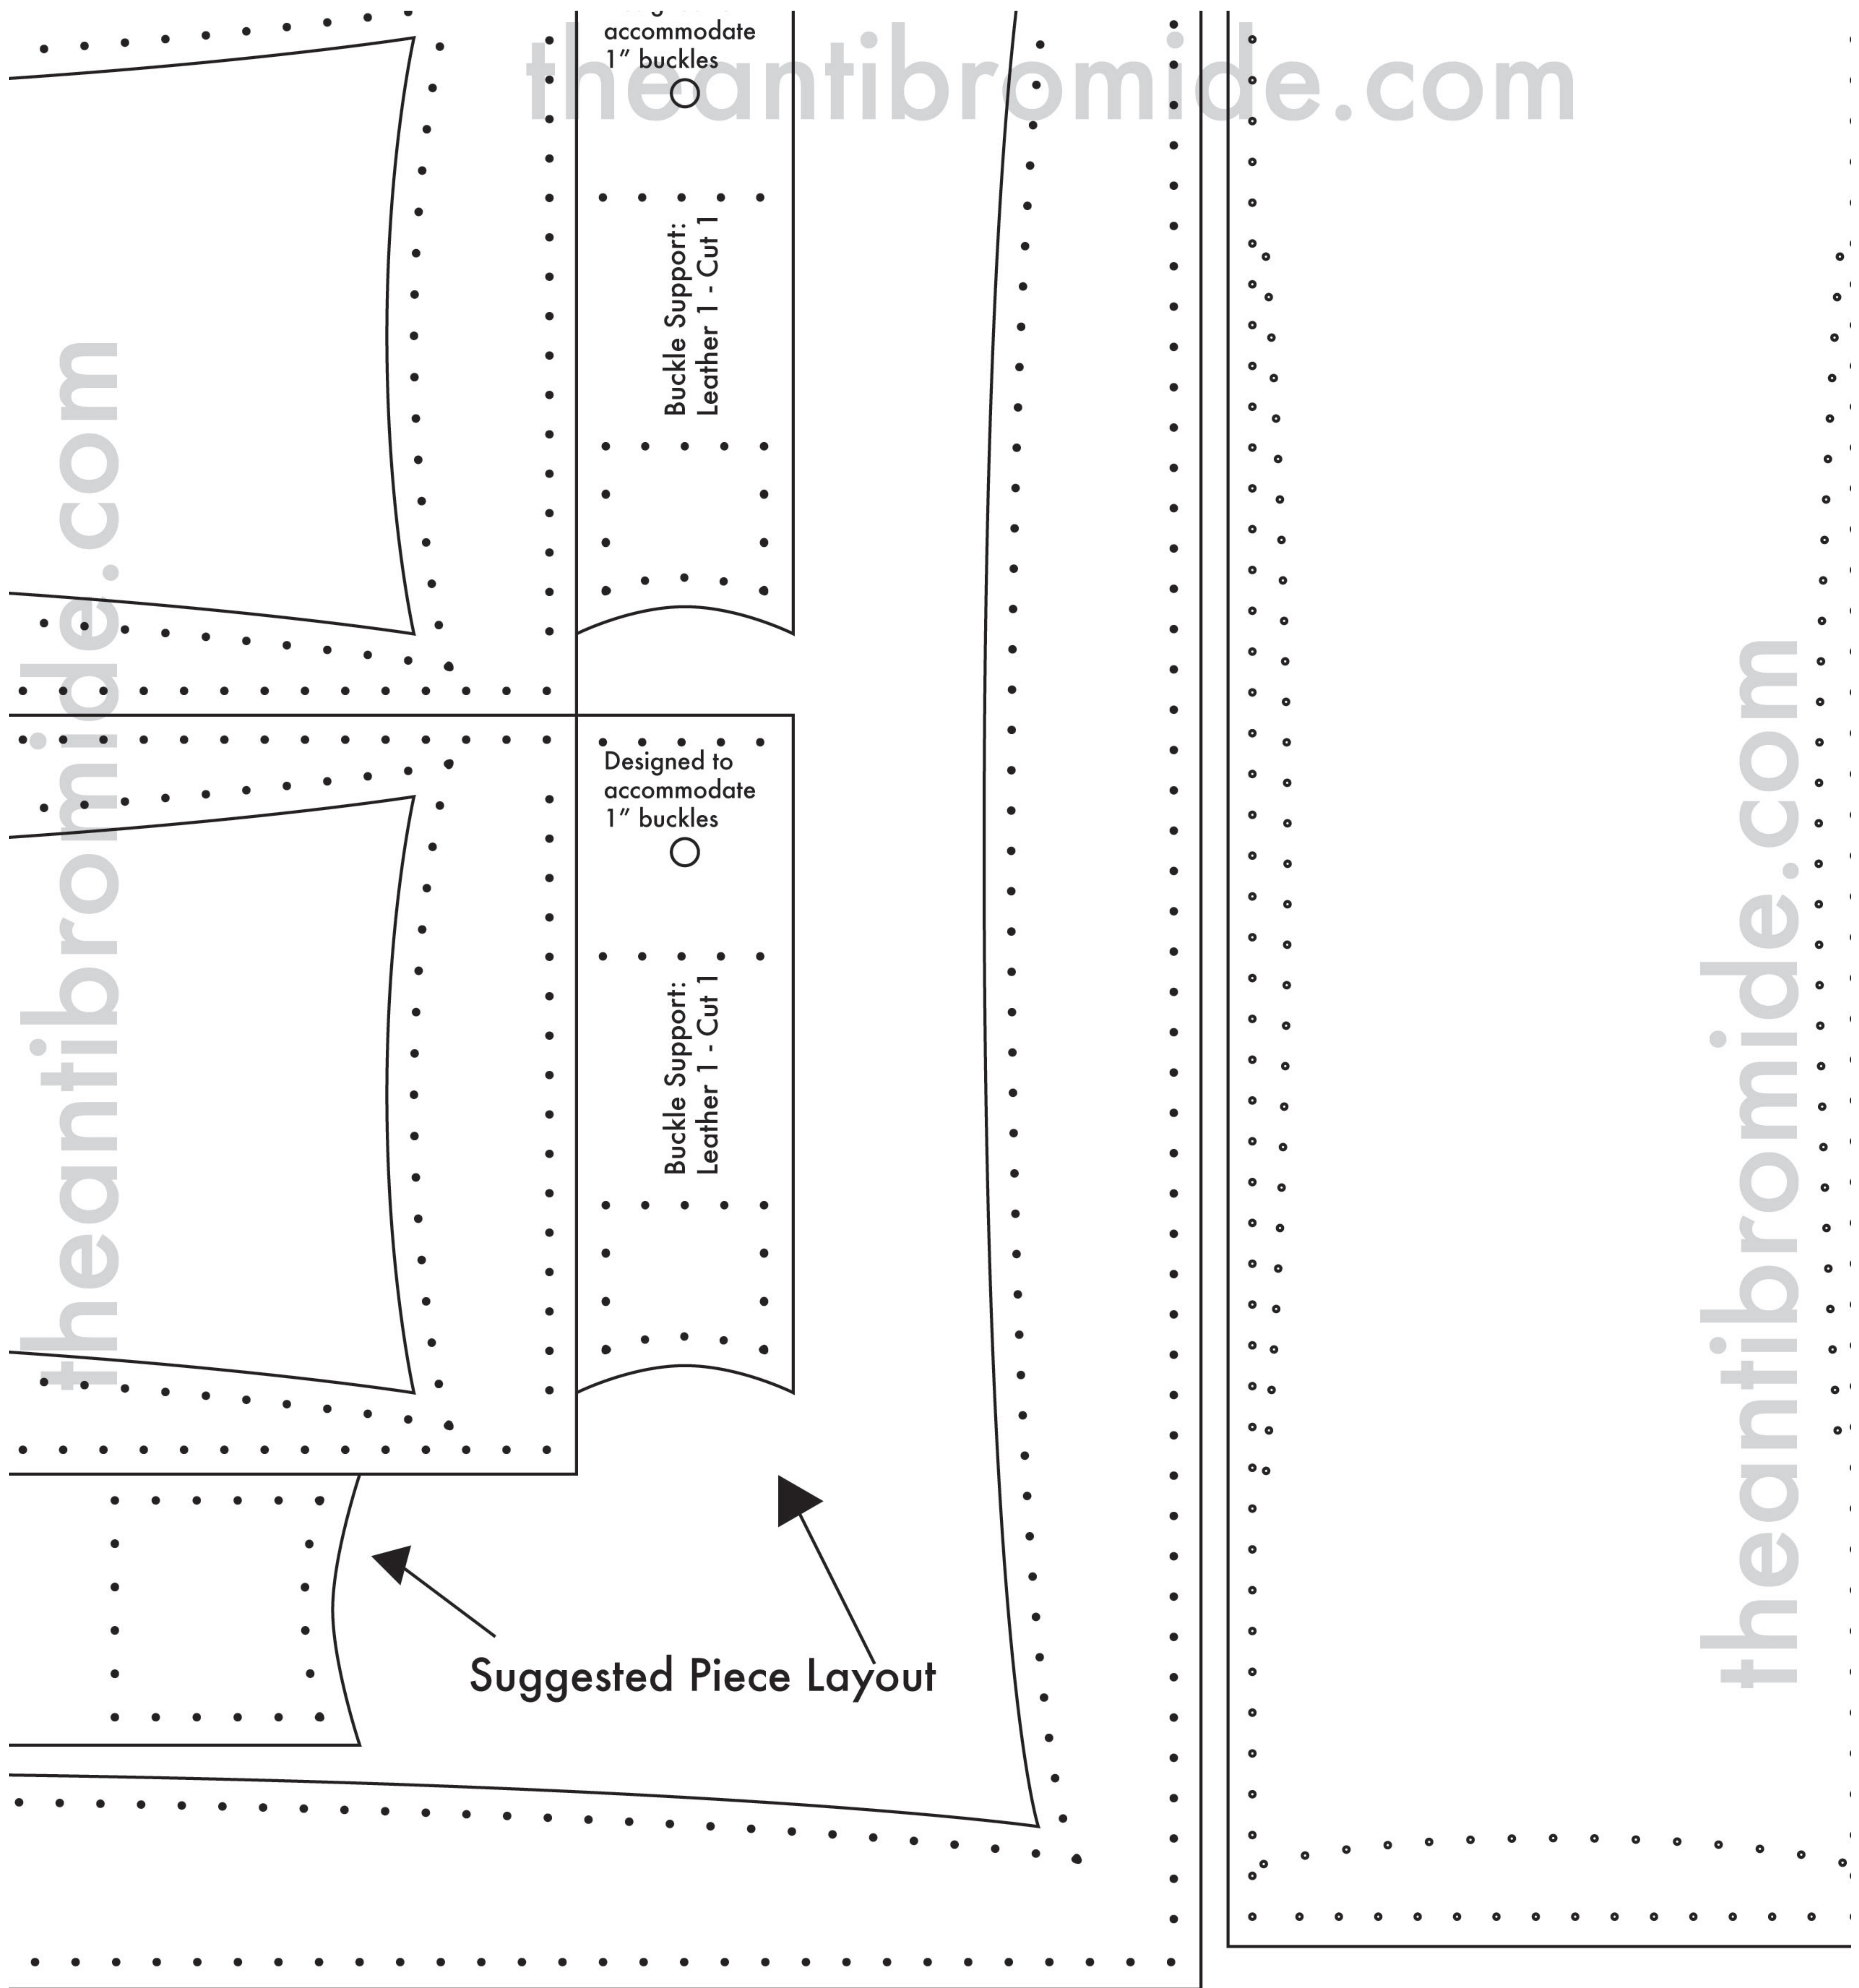



Fold line - fold to the wrong side when attaching

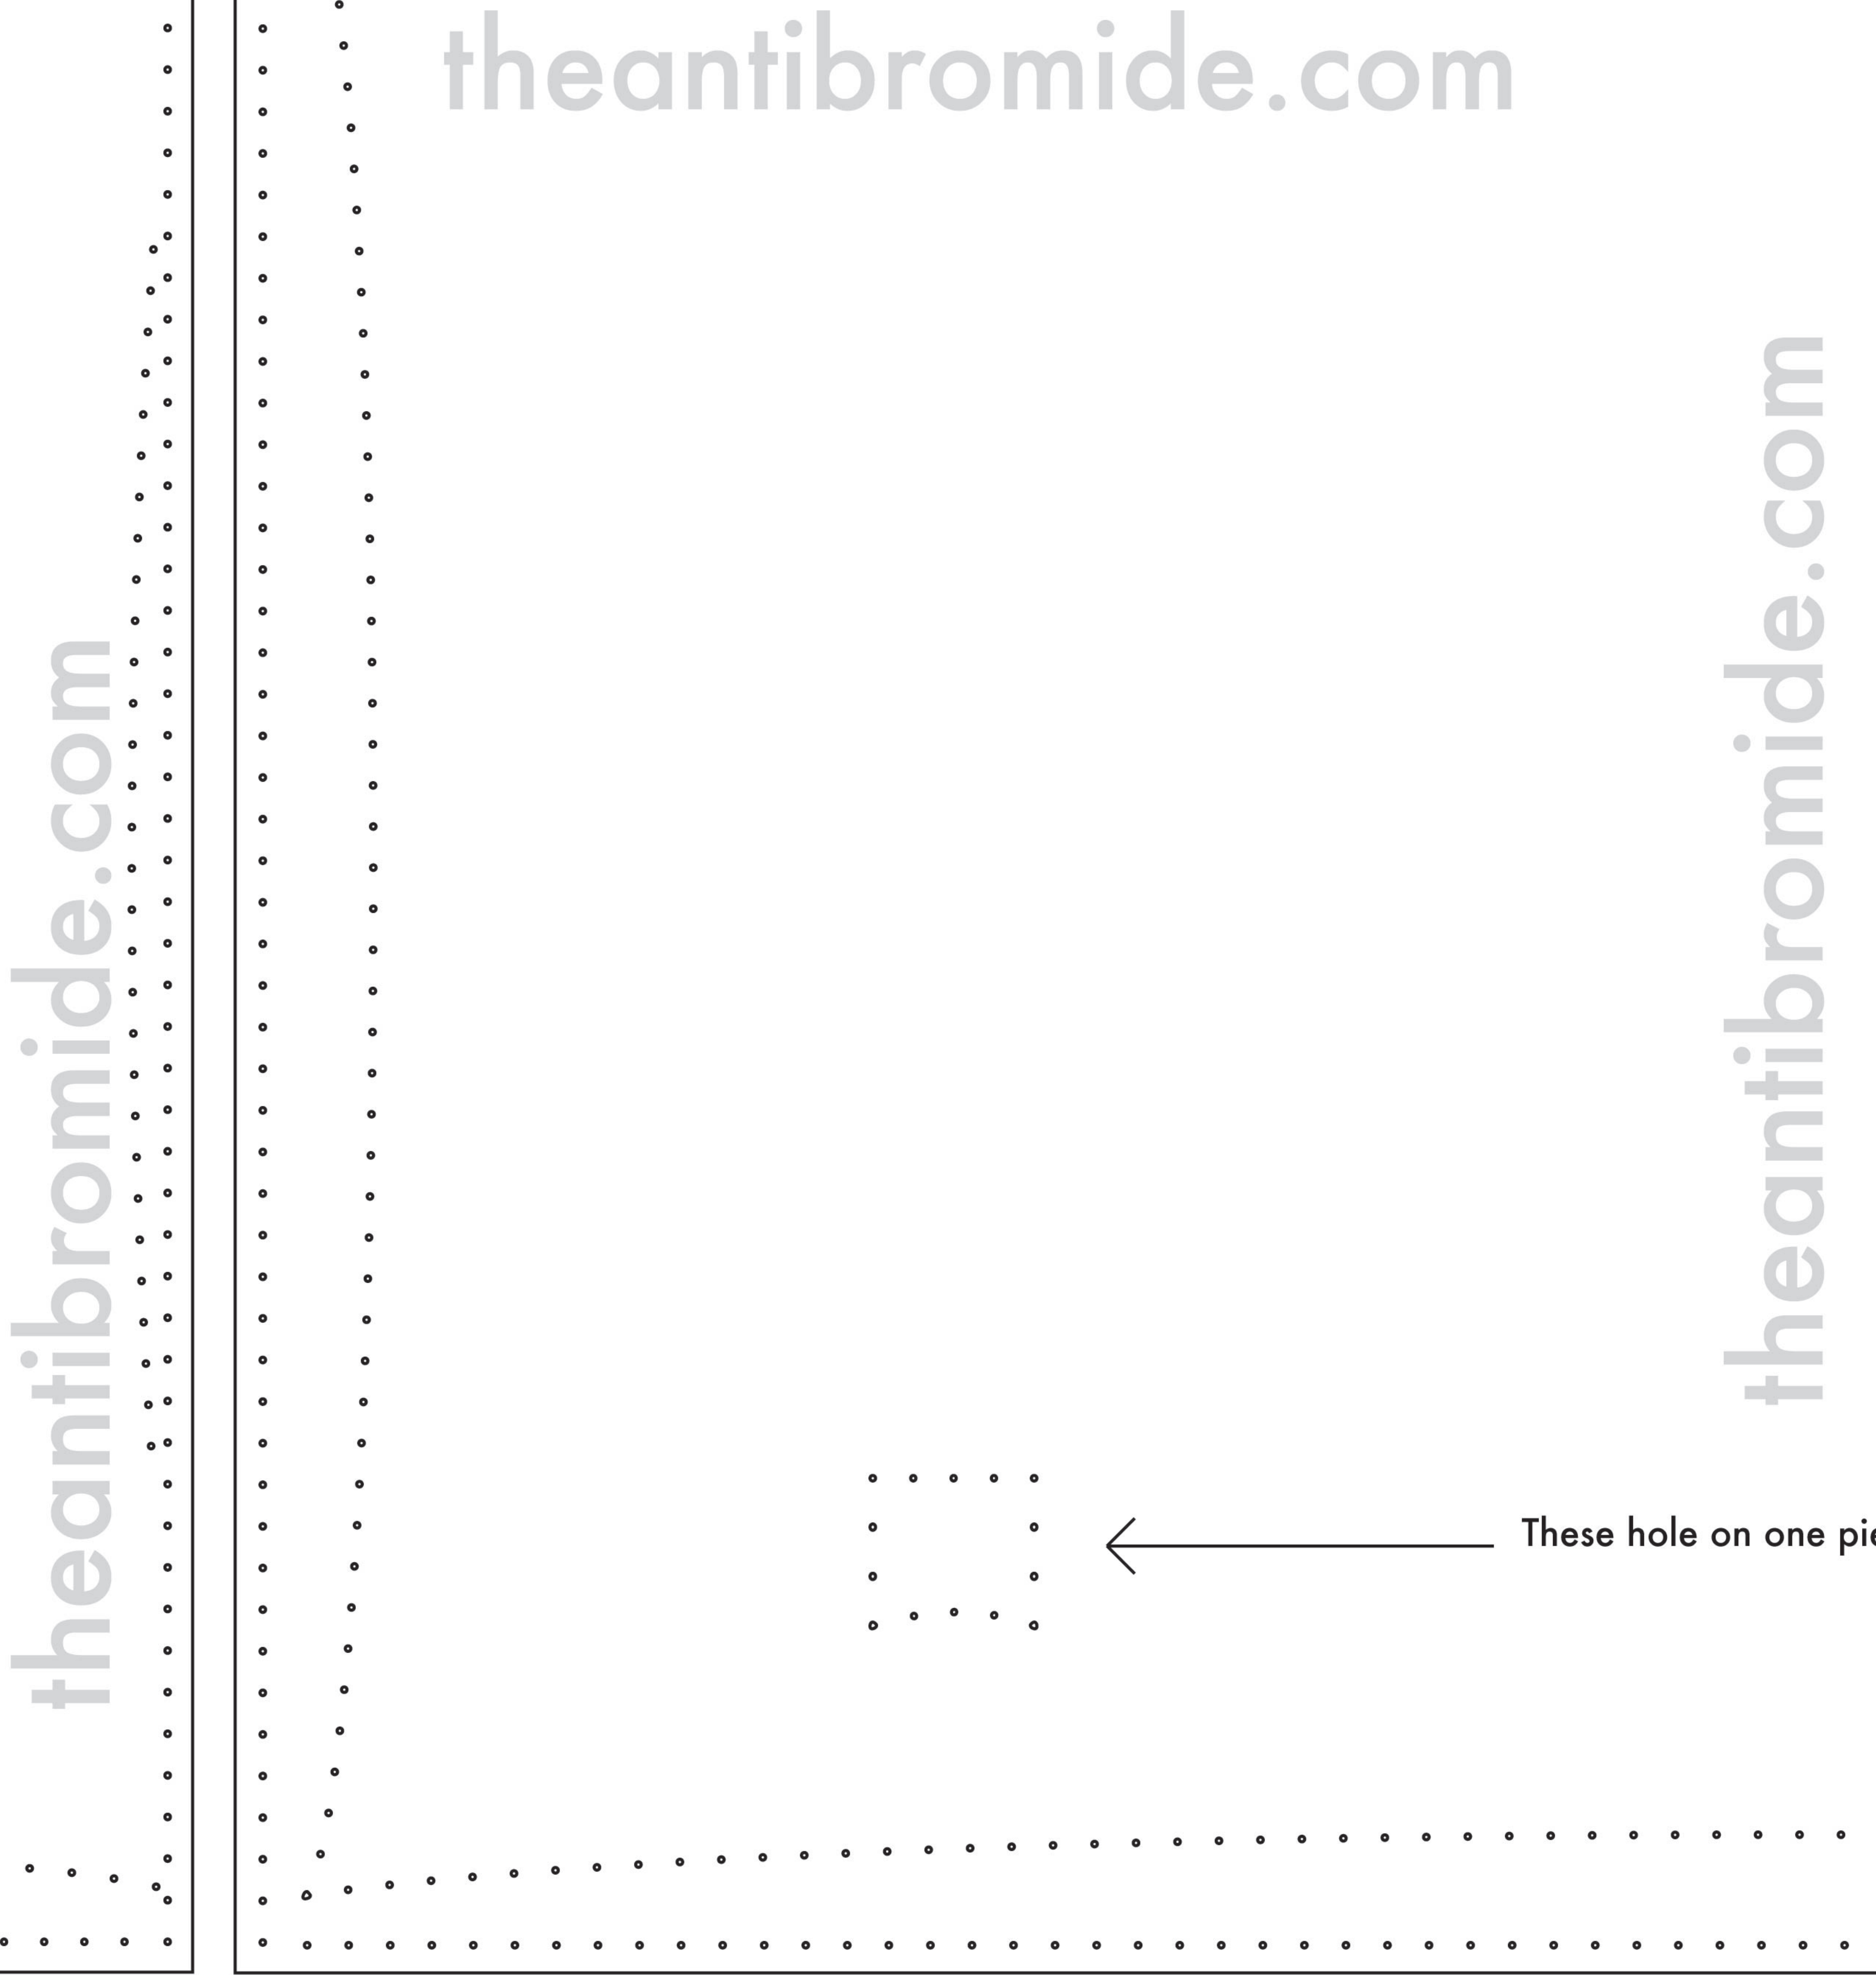


attaching the fabric backing to the leather strap

Cut bag strap from fabric to desired length + 2"


on one piece only!

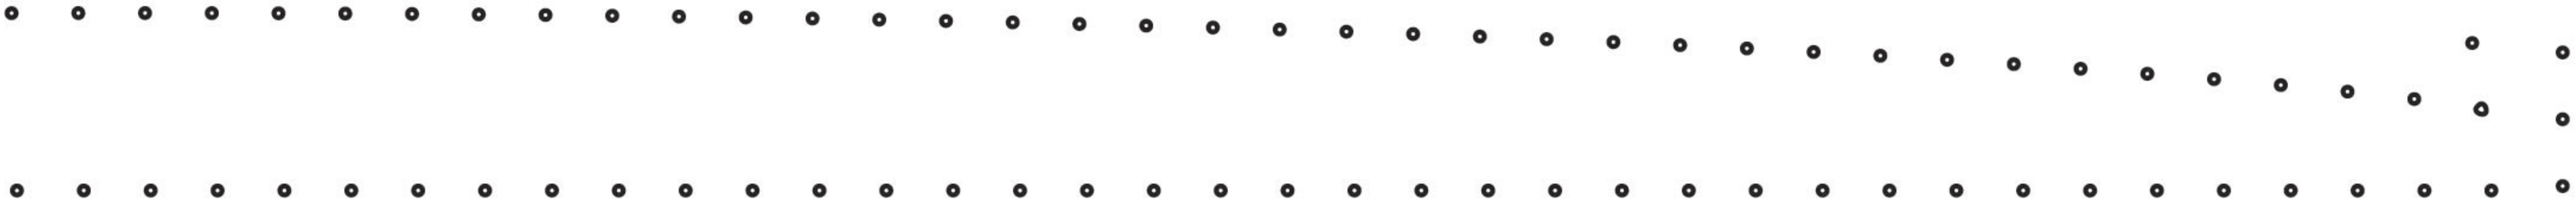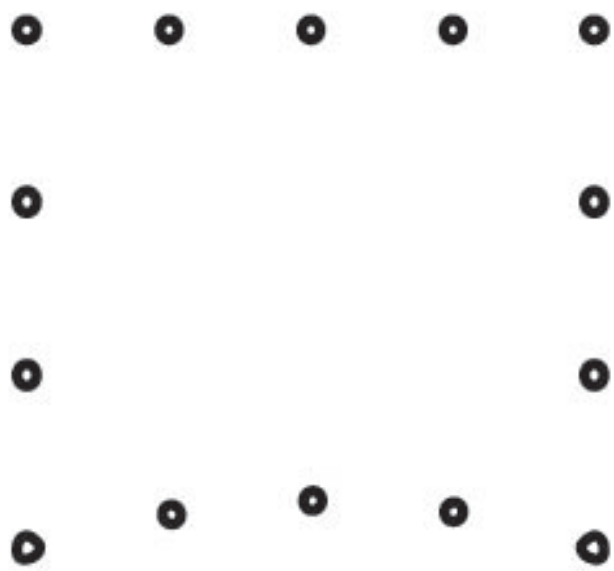

Bag side: Cut 2 from fashion fabric



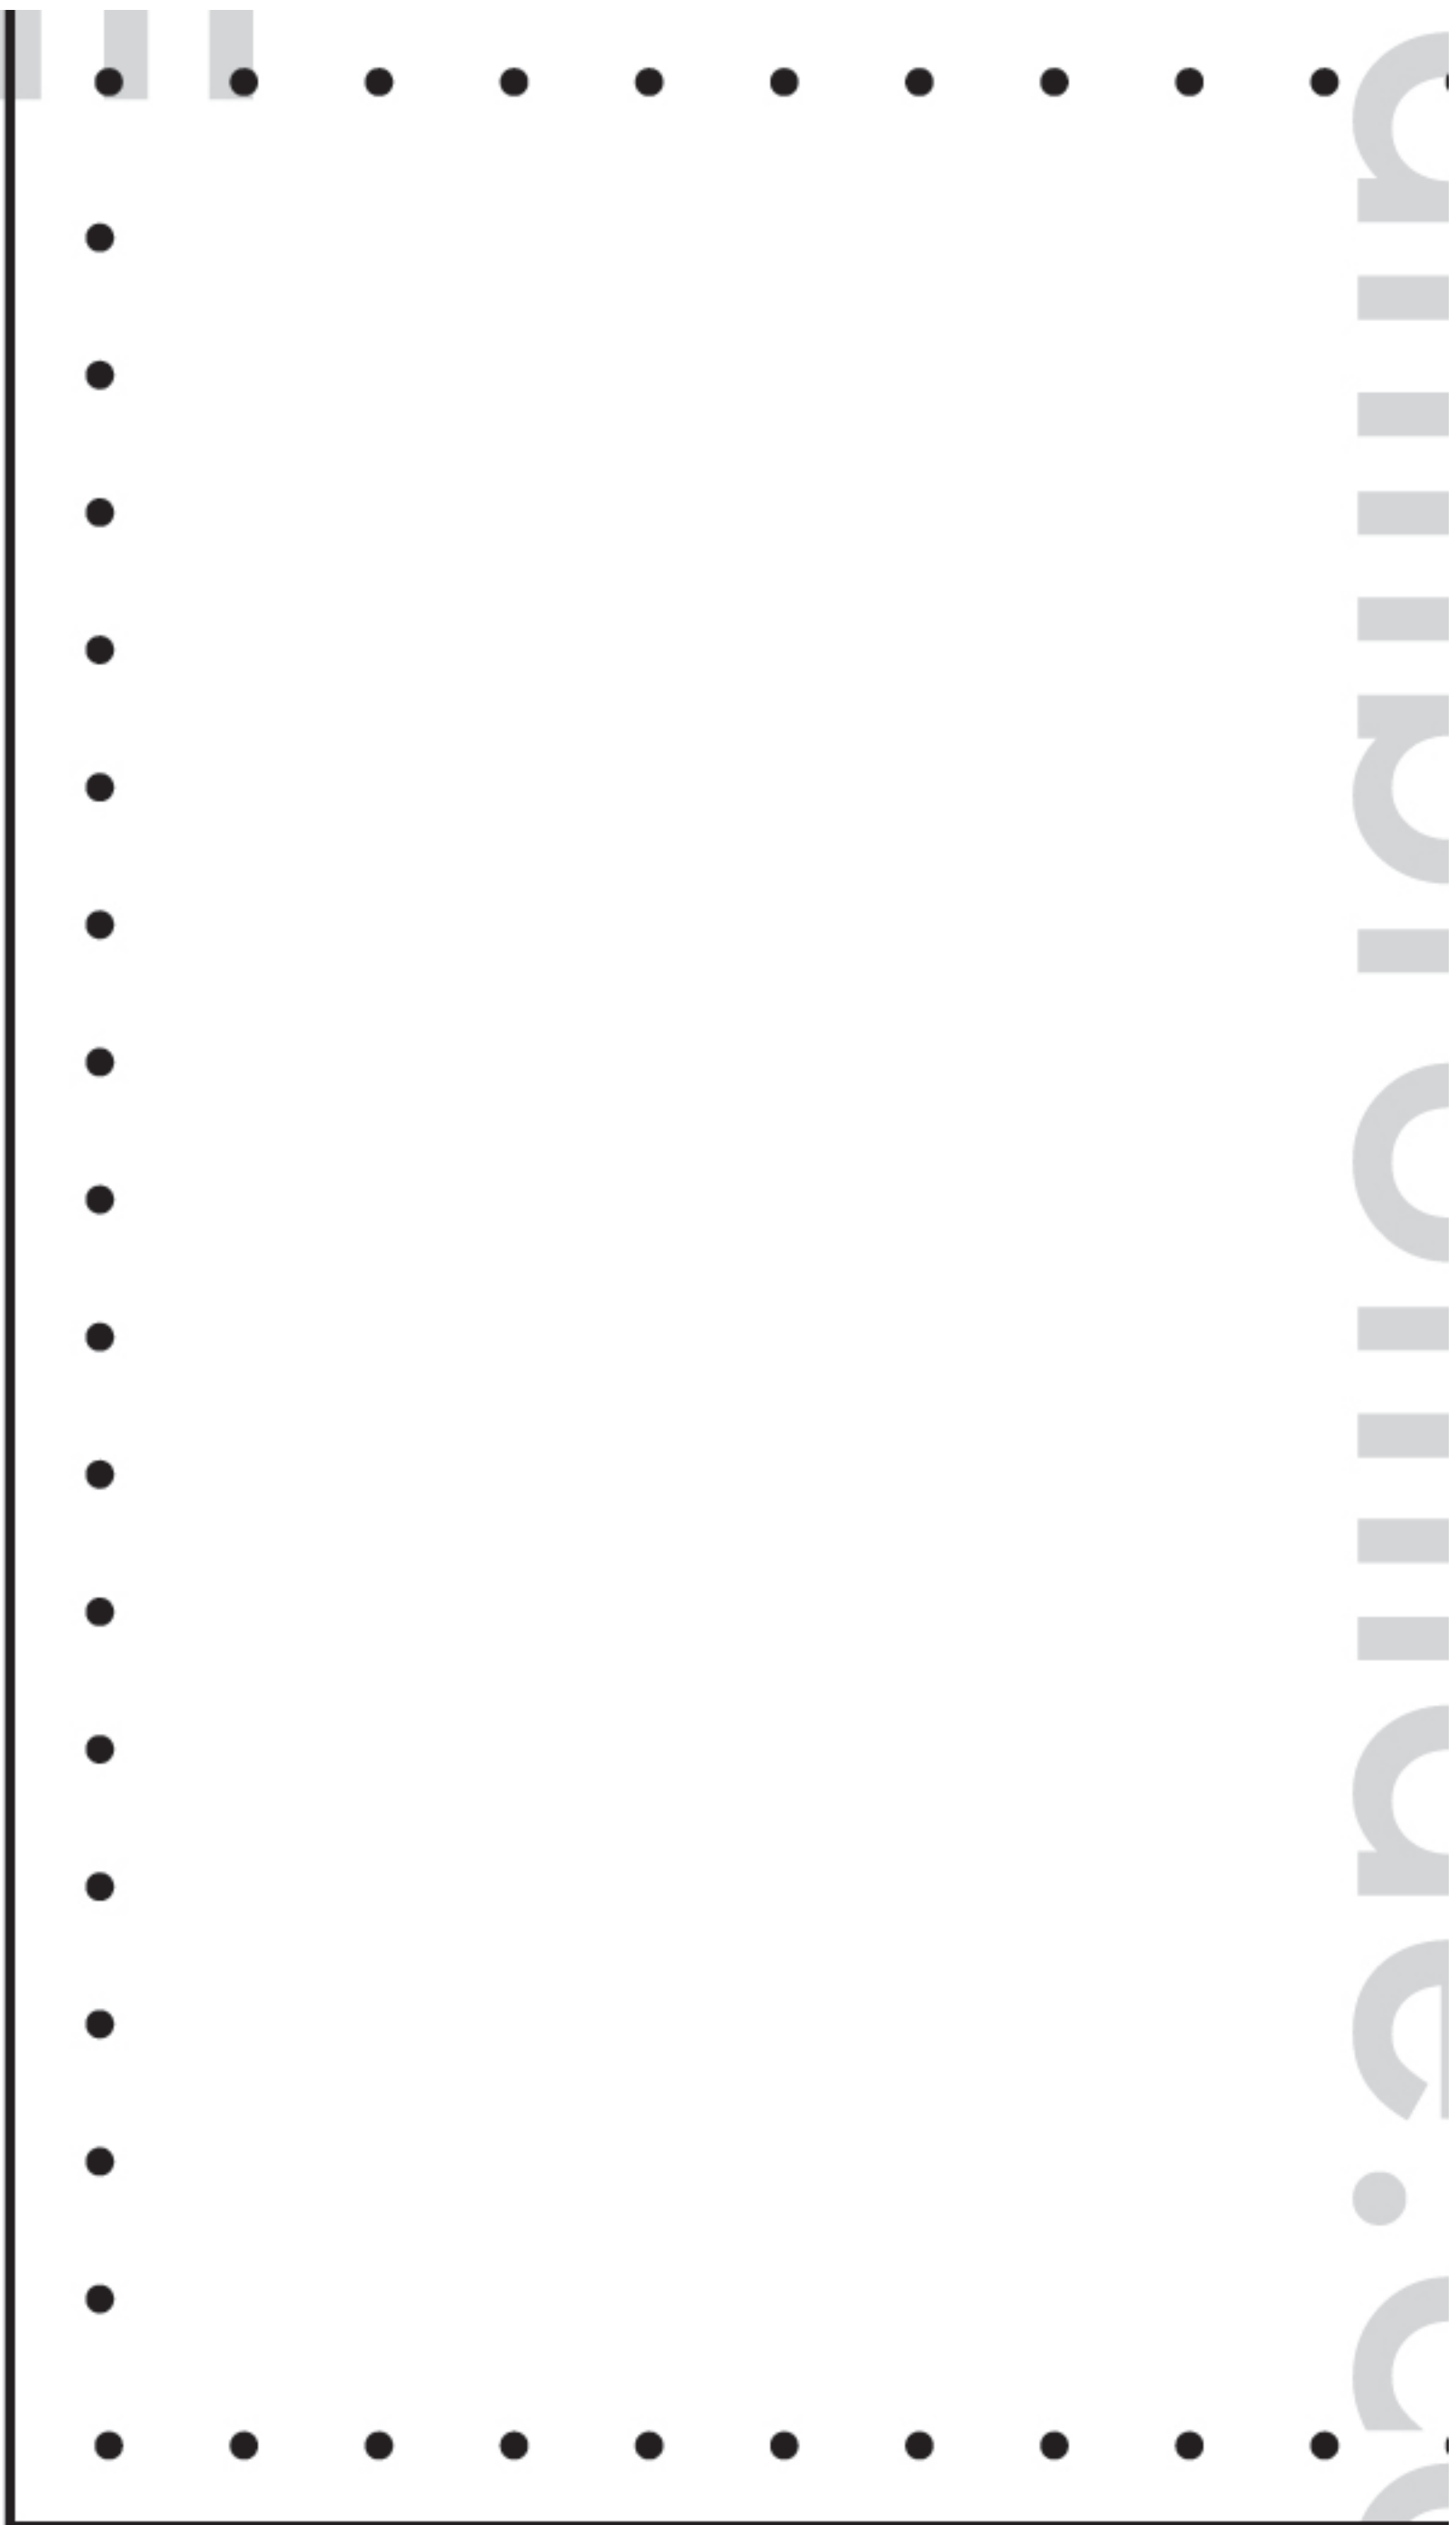



Cut 1 from a lightweight
Interfacing support

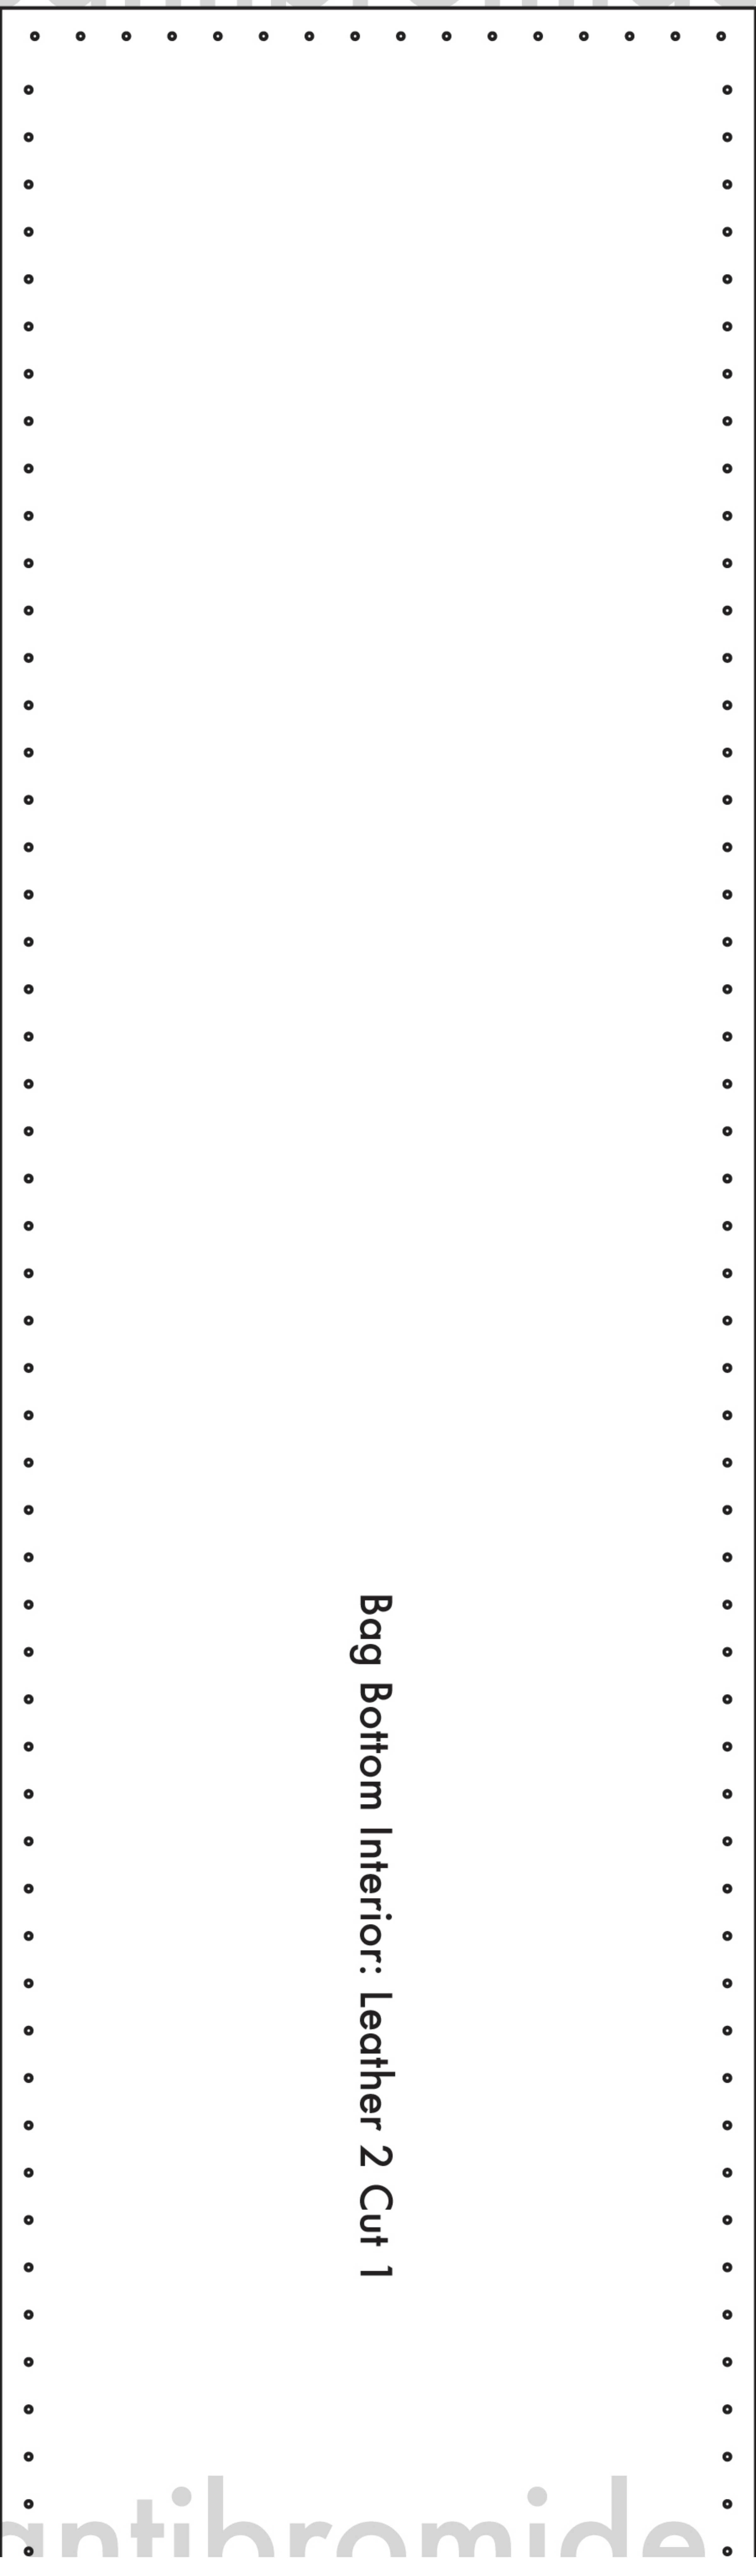

Bag Bottom Interior: Leather 2 Cut 1

woven fabric such as muslin
between bag and flap.

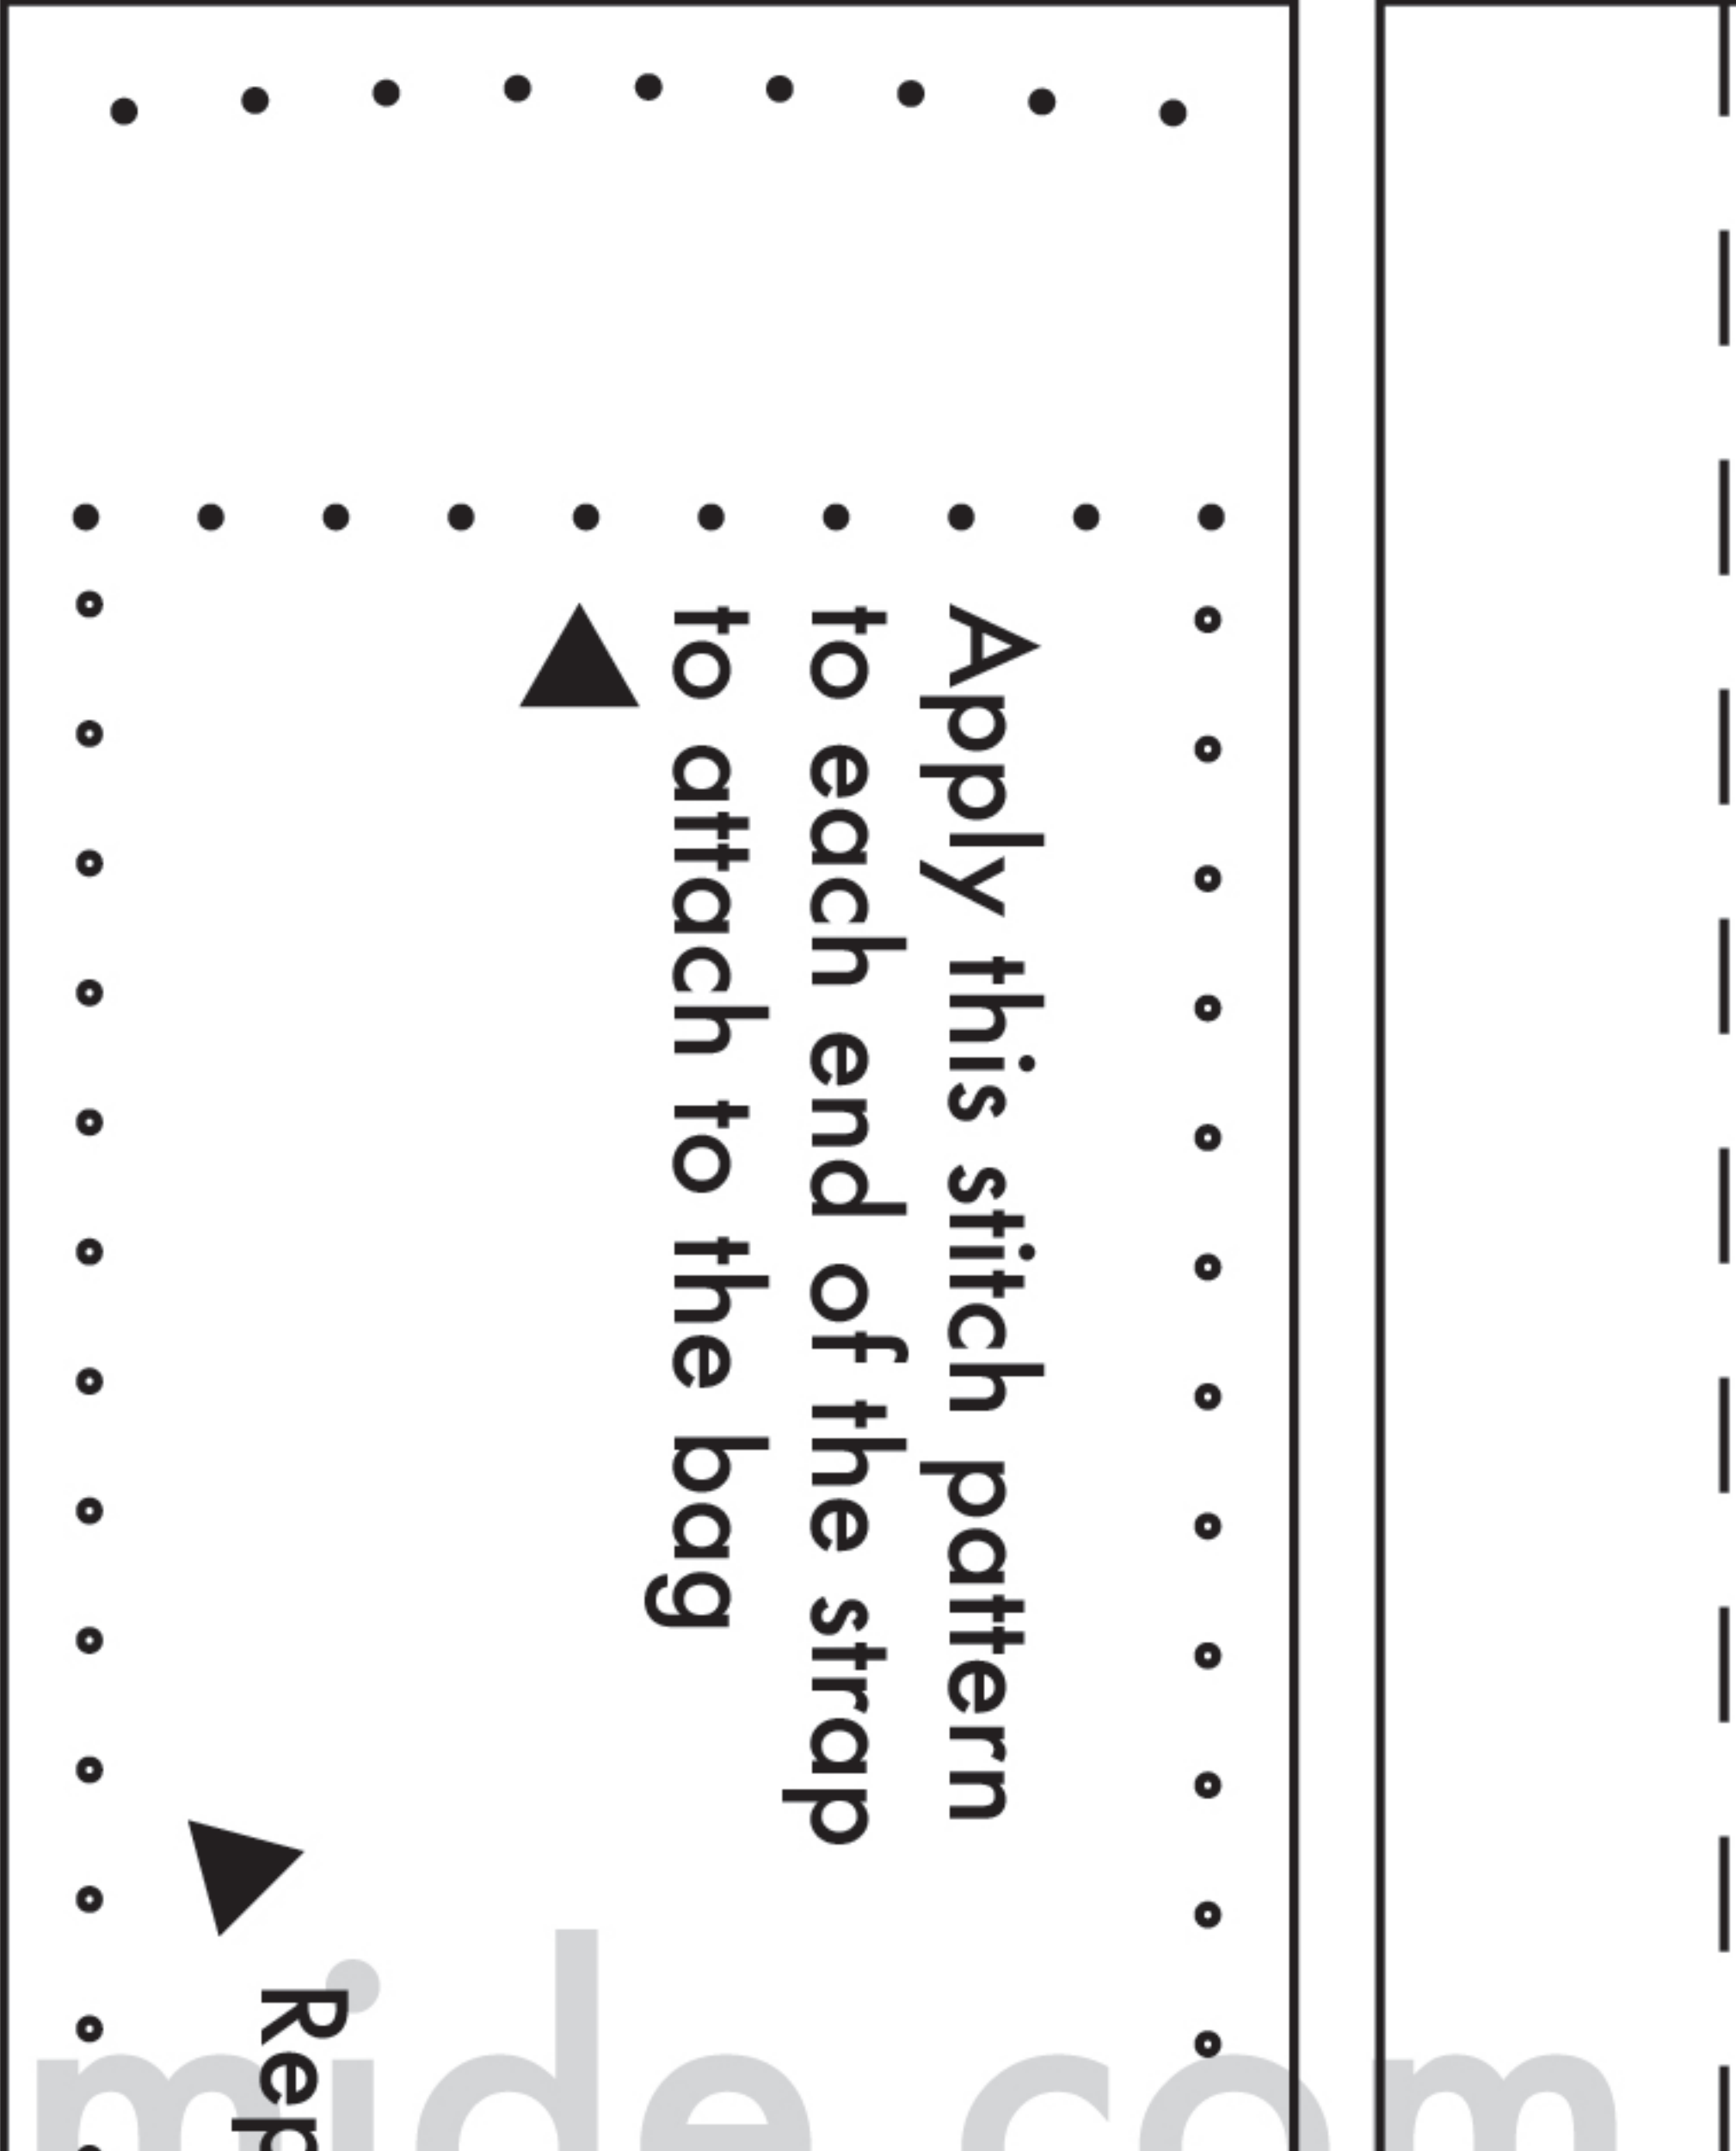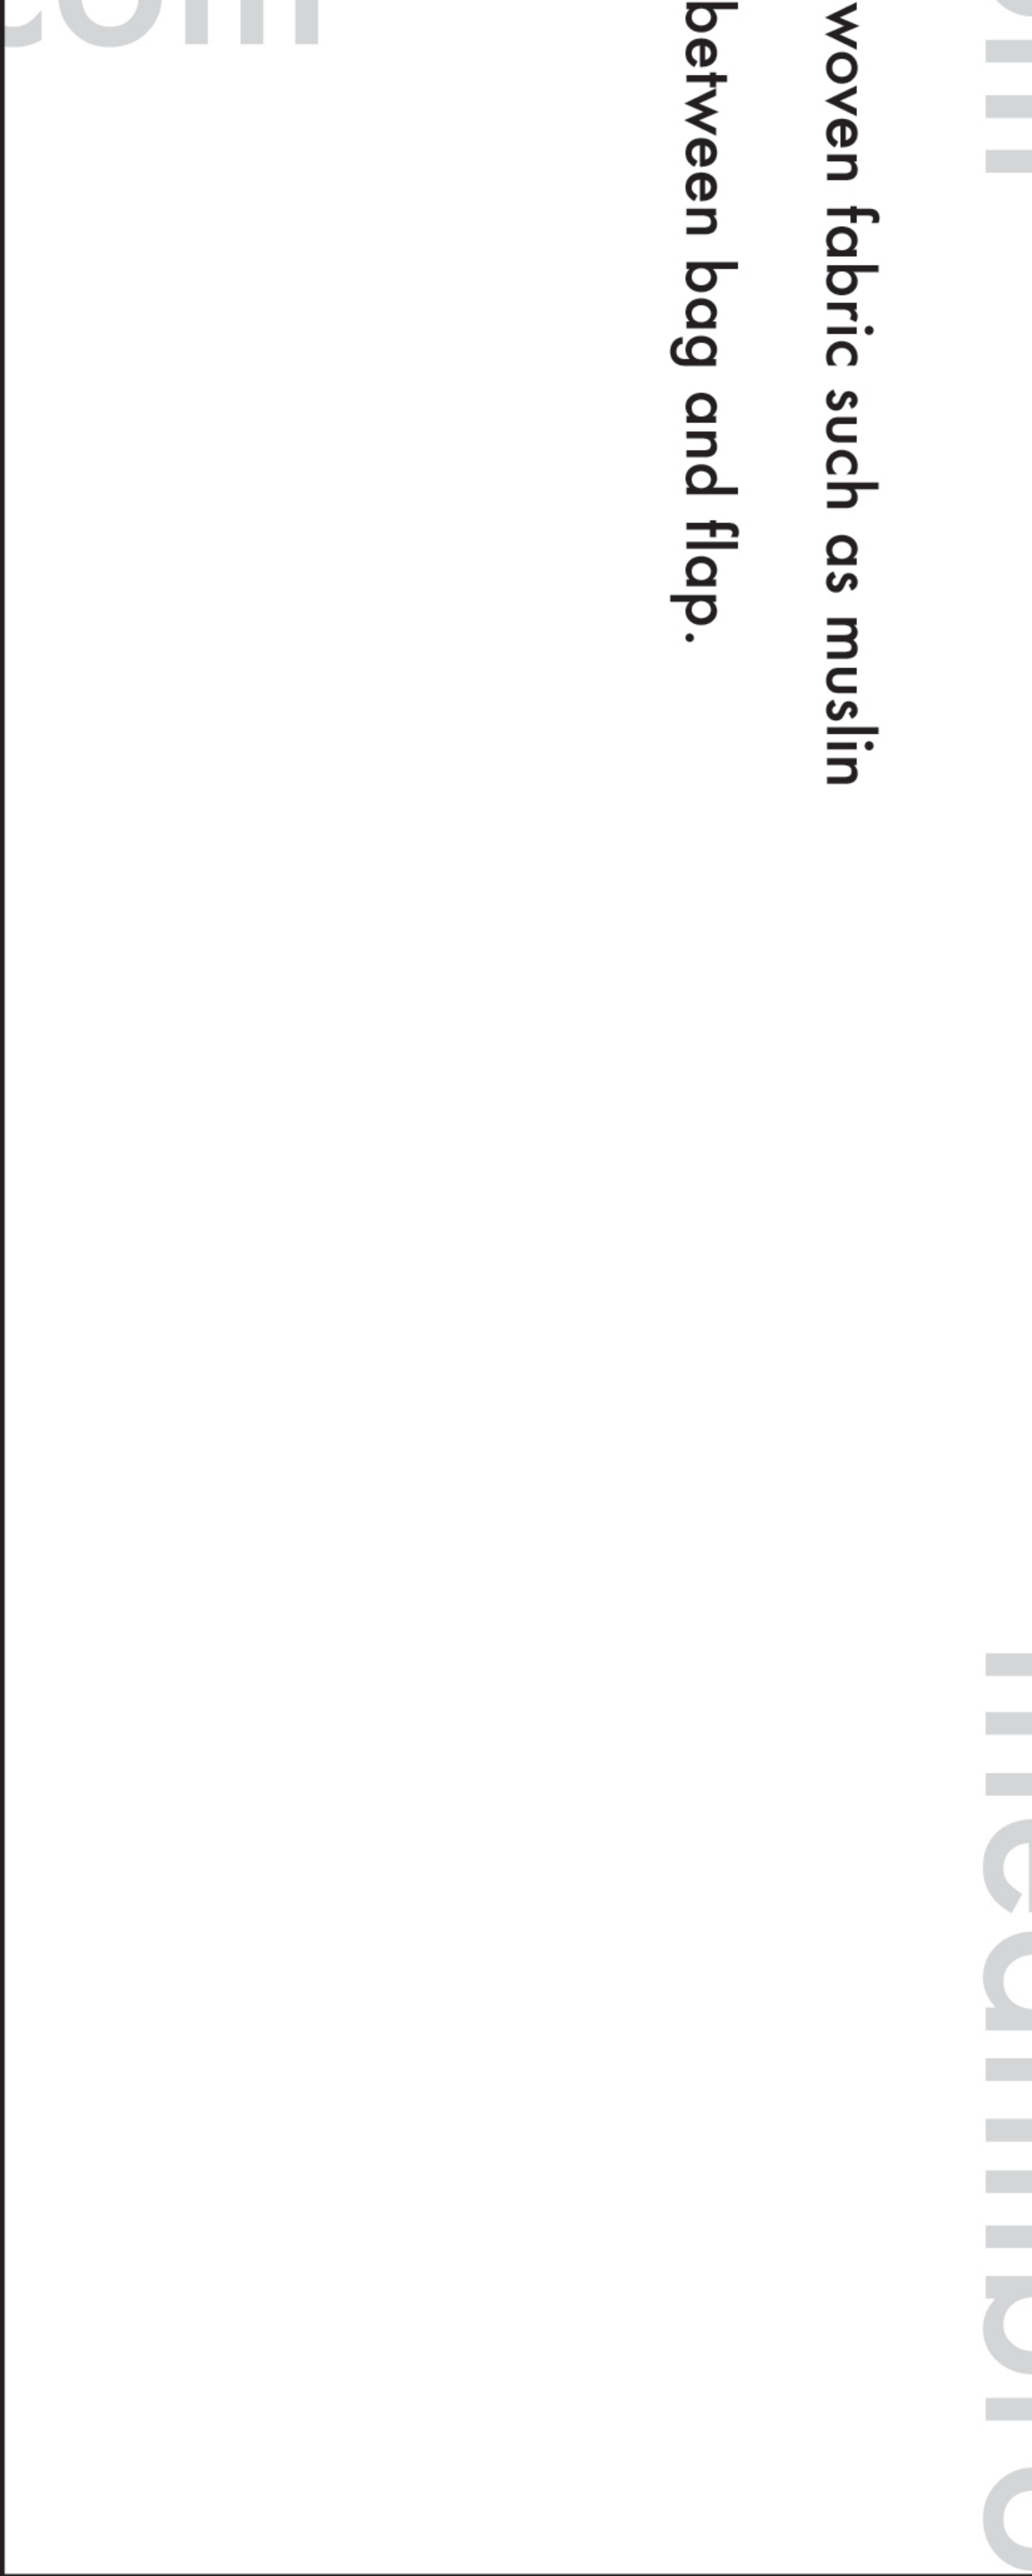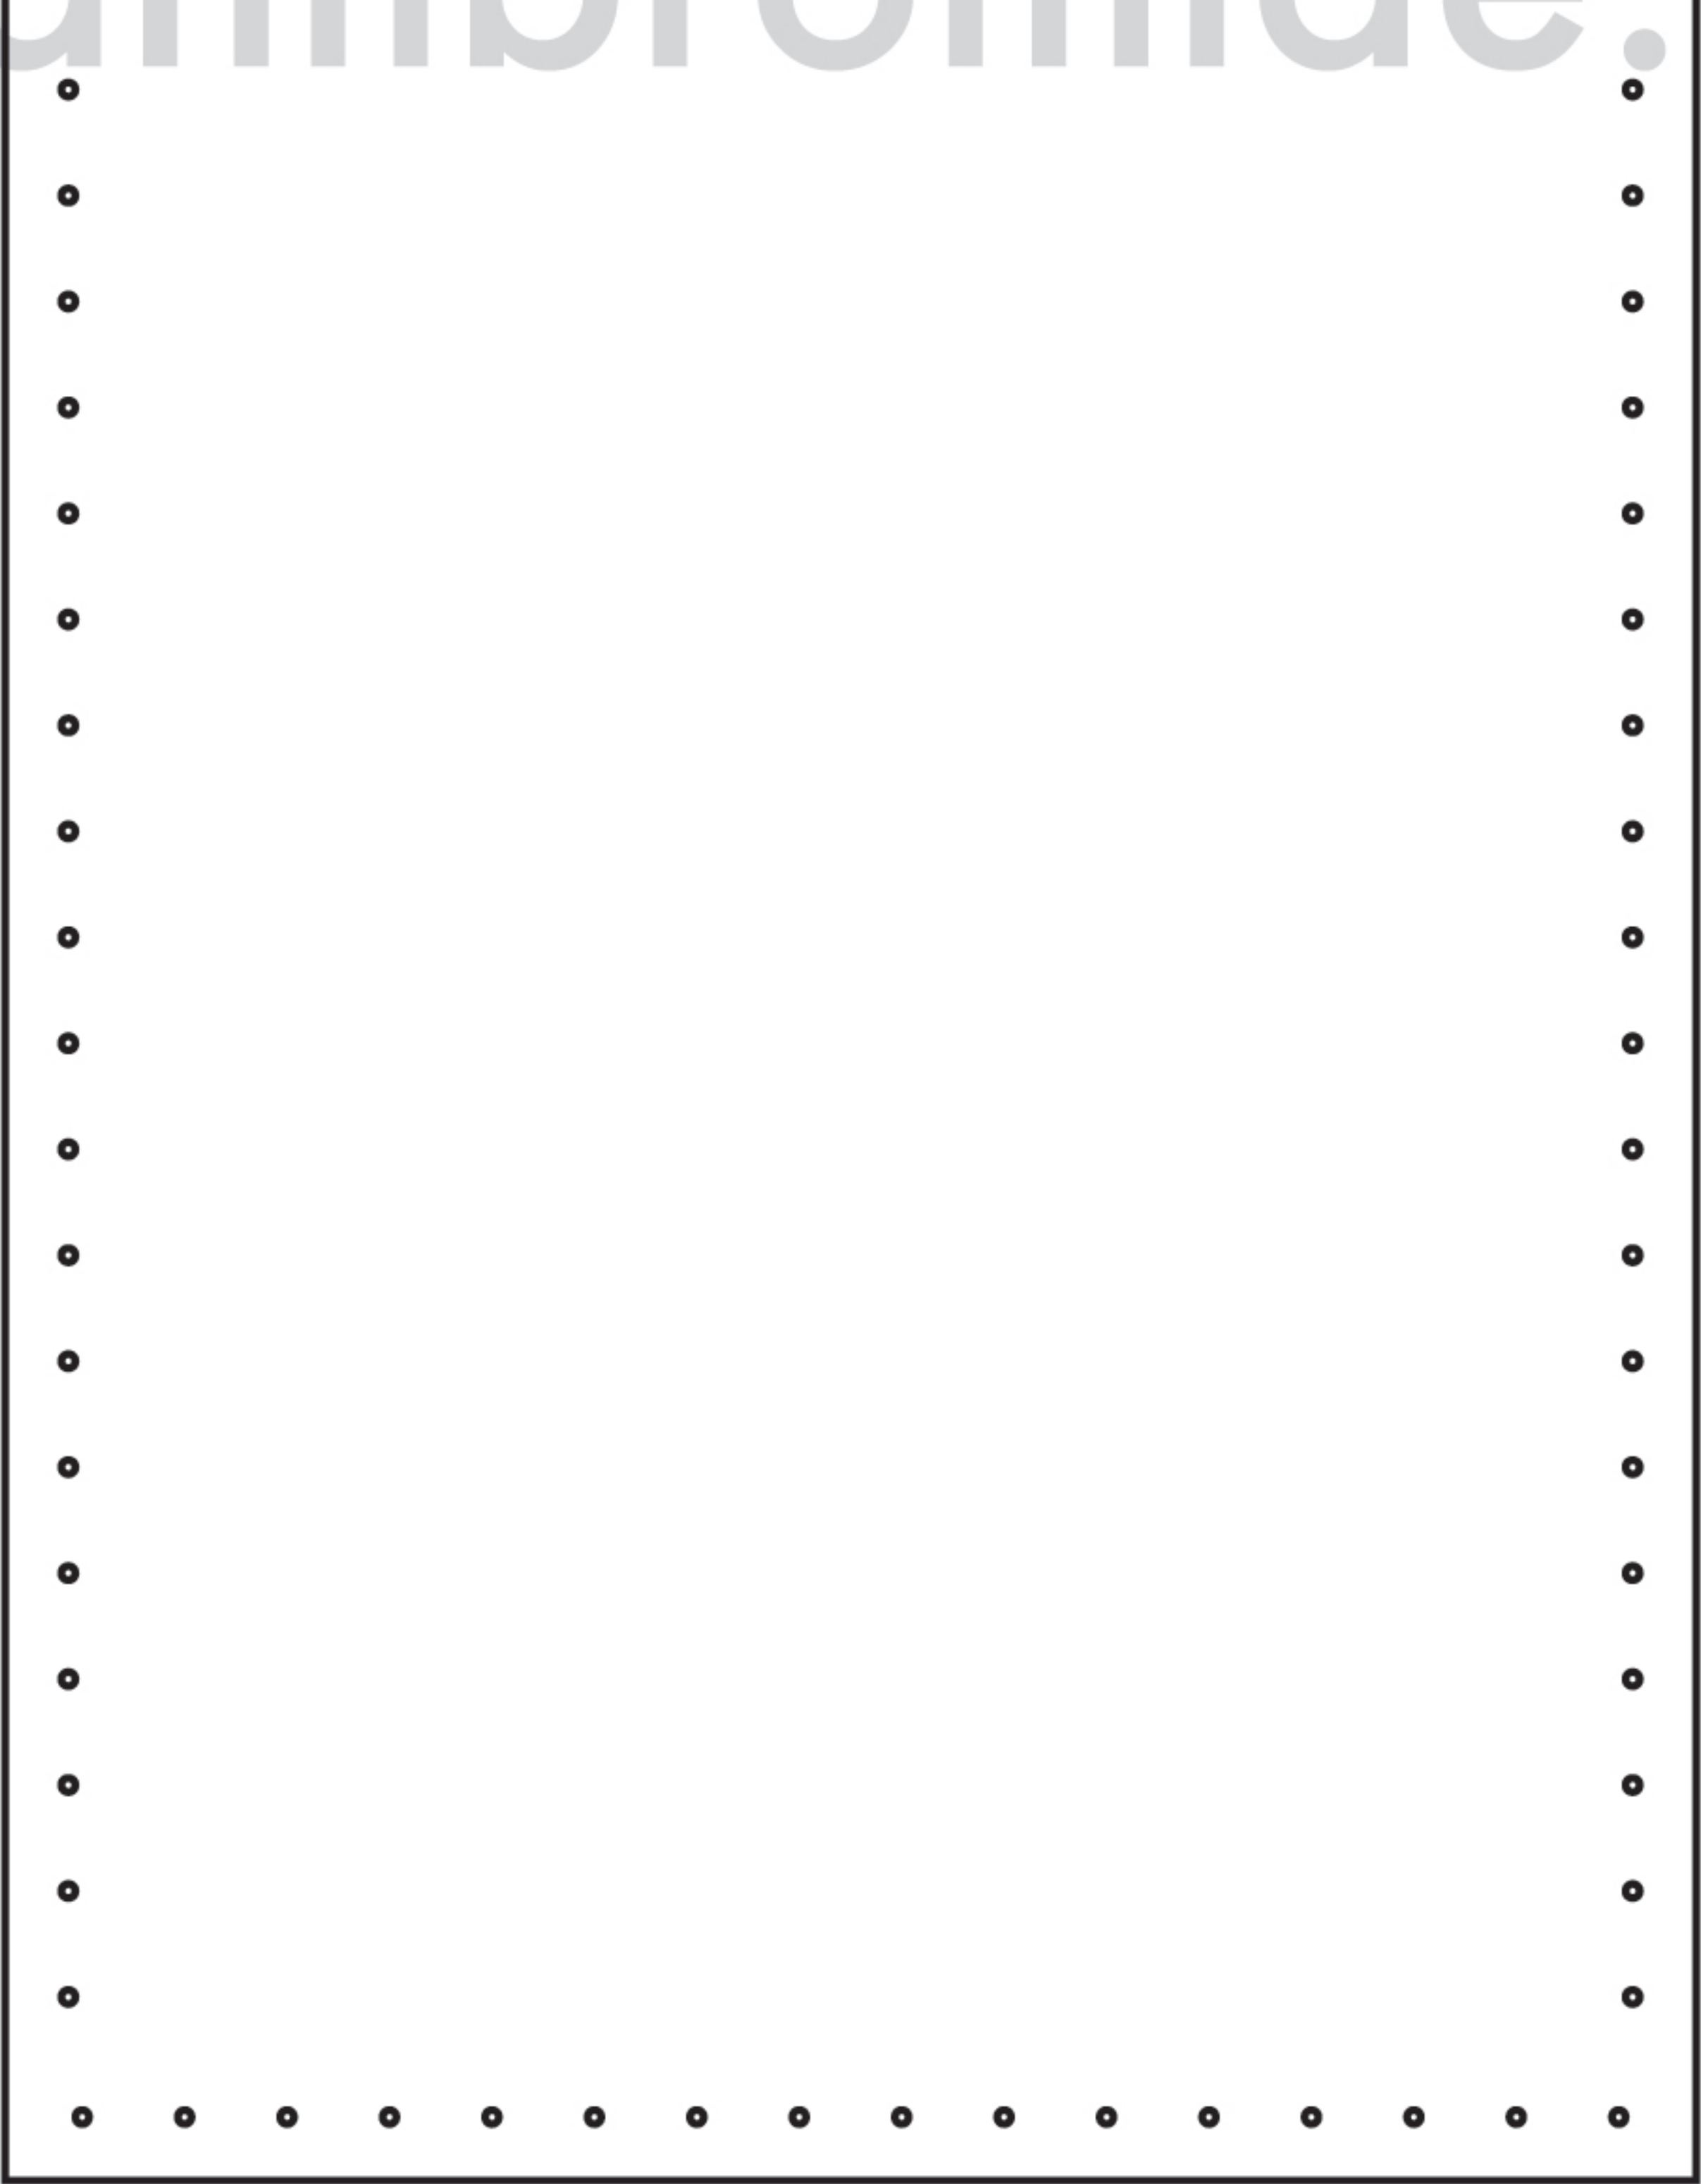

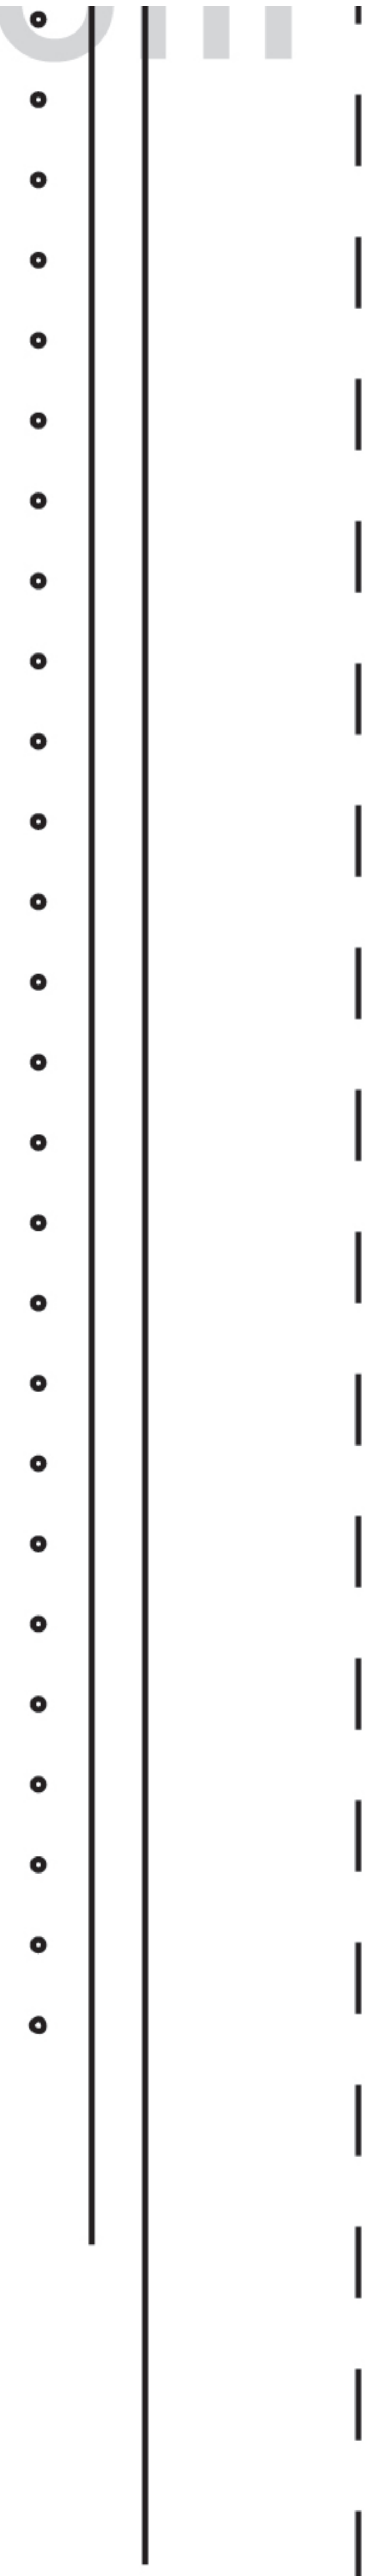

Cut bag strap from leather to desired length + 2"

Repeat this stitch pattern along either side of the bag strap

