



ACC-118 Instruction


Step 1: Glue A06 in A05, fold A05 and sew A05 and A06 together.

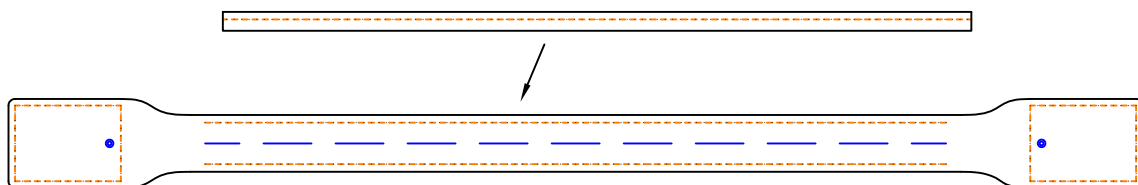


Step 2: Sew A15 on A01 and A02, sew A07 on A01, then sew A01 and A02 together by overlapping each other, Glue 2 pieces of A10 on, here please notice that, A10 is designed longer a little, so when you glue it, please glue from tip to tip, and cut the redundant part.

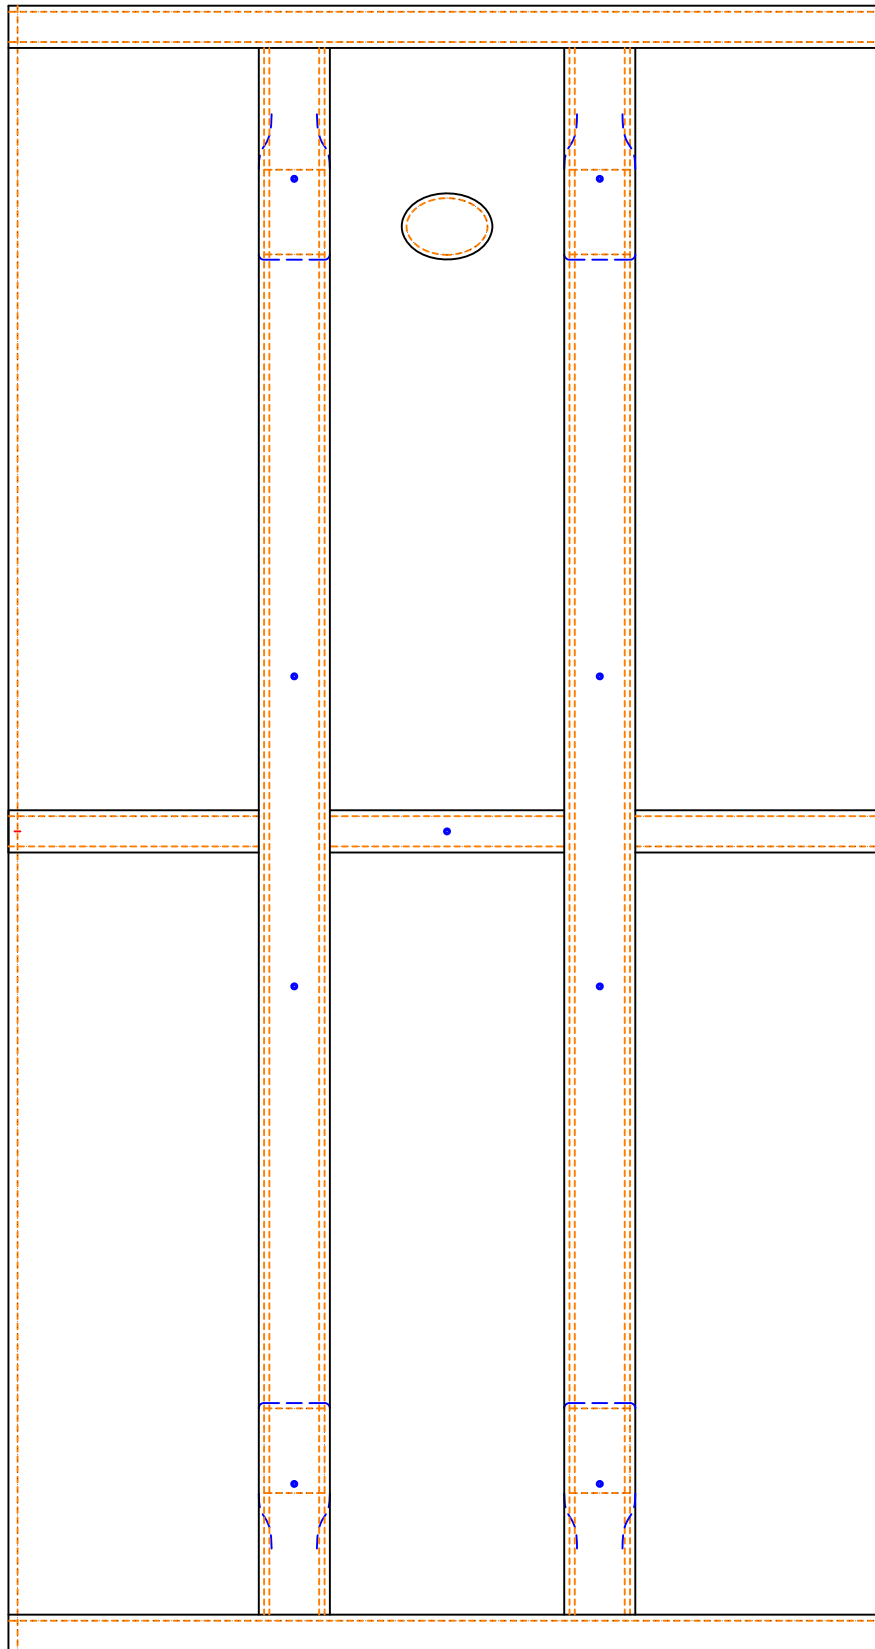

Step 3: Shoot rivet with handles.

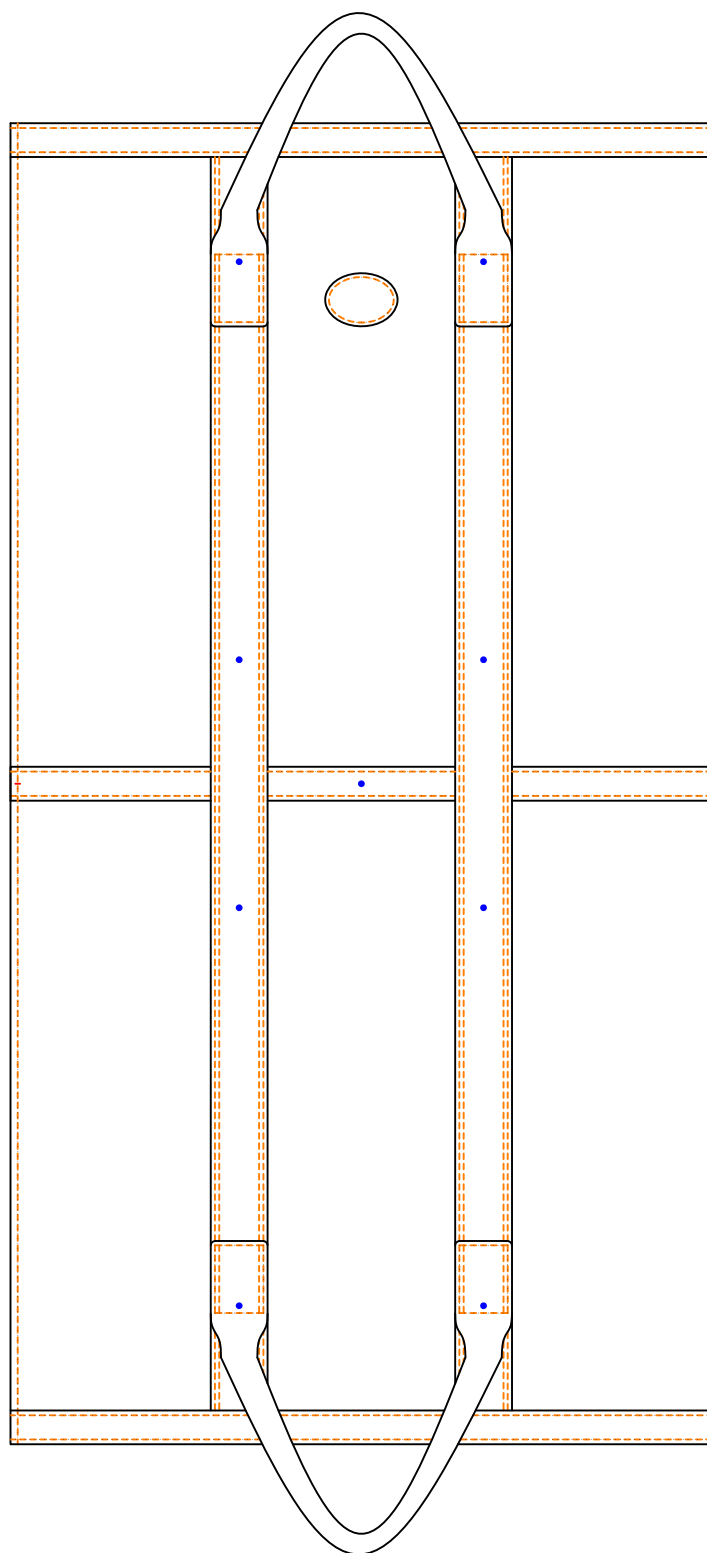

Step 4: Sew A08 on A03 with D-ring, and Sew A09 on, please try to adjust A09's real place to get a nice looking. Then glue A04 on A03, only glue the edge.

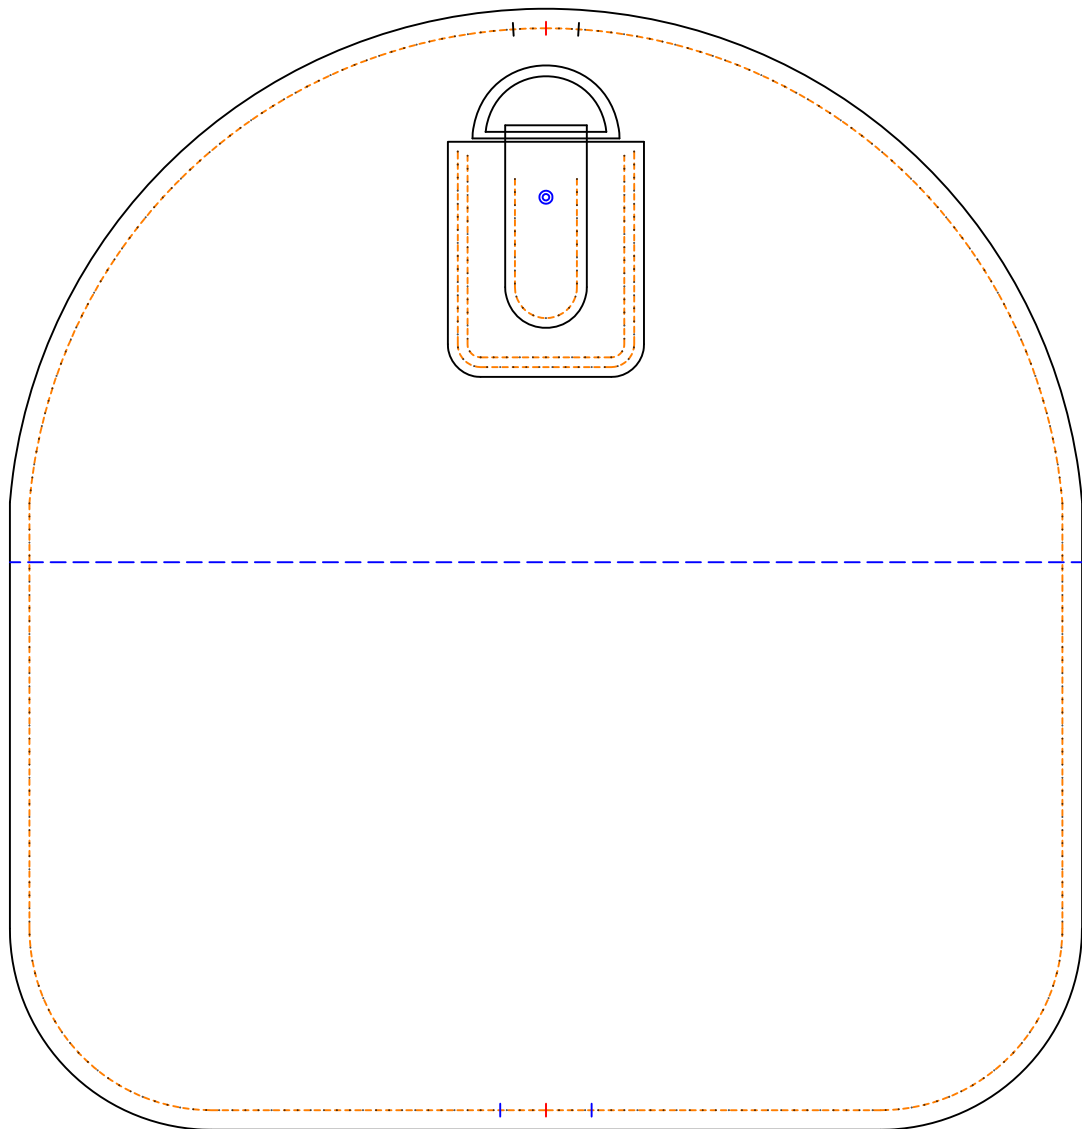

Step 5: Fold A11 along the blue dotted line, then glue it along the flesh edge of A03, sew A03 with Step 3's combination with flesh side outside. After sewing, convert the grain side outside, the bag is almost finished.

We don't offer the step how to make belt, because it is very easy.

Notice:

1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;

2, Thin the edge before sewing is always advised;

3, 1oz=0.4mm;

4, Here is the line instruction.

