

CREATIVE AWL

leather patterns

TOTE BAG

PREPARED BY:

Patryk Ku,
www.CreativeAwl.com

LET'S GO:

PRINT THE PATTERN

01

- Open your pattern in Adobe Acrobat Reader. Set up options of your printer on A4 paper with 0 margins.
- Every page has a measure - check does it fit.
- Every printed page **MUST HAVE** a border around! If doesn't - move paper left/ right and print again

02

FOLLOW VIDEO INSTRUCTIONS

Video tutorial:

<https://youtu.be/pqkoHAK1ktU>

Cutting patterns:

https://www.youtube.com/watch?v=2TNUI_Tlk64

03

GIVE A SMILE TO OTHER PEOPLE!

Give a ready product to you family or freind. Give them a smile :)))

Also Check www.CreativeAwl.com for more patterns

JOIN OUR FB GROUP

04

Go there to share your work. Also get more DIY&ideas. We will support you & answer all questions.

<https://www.facebook.com/groups/CreativeAwlPatterns>

YOU NEED

TOOLS

- sharp knife
- 1mm hole puncher or pricking irons or awl
- hammer
- 2 needles
- paper tape
- a home printer

MATERIALS

- Soft Leather (preferable 5oz, and at l
- Waxed thread (preferable 0,8-1 mm)
- few rivets
- 20mm karabineer for key holder
- 4 x 25mm d -rings
- zipper 32cm / 13" long




SHARE YOUR WORK

<https://www.facebook.com/groups/CreativeAwlPatterns>


If you got ANY problem,- don't be shy to ask directly on Etsy or facebook

- The number in the circle shows which holes are to be connected. Example: ①
- Numbers 1, 2, 3 (...) without a circle indicate where the piece lies in the overview drawing.

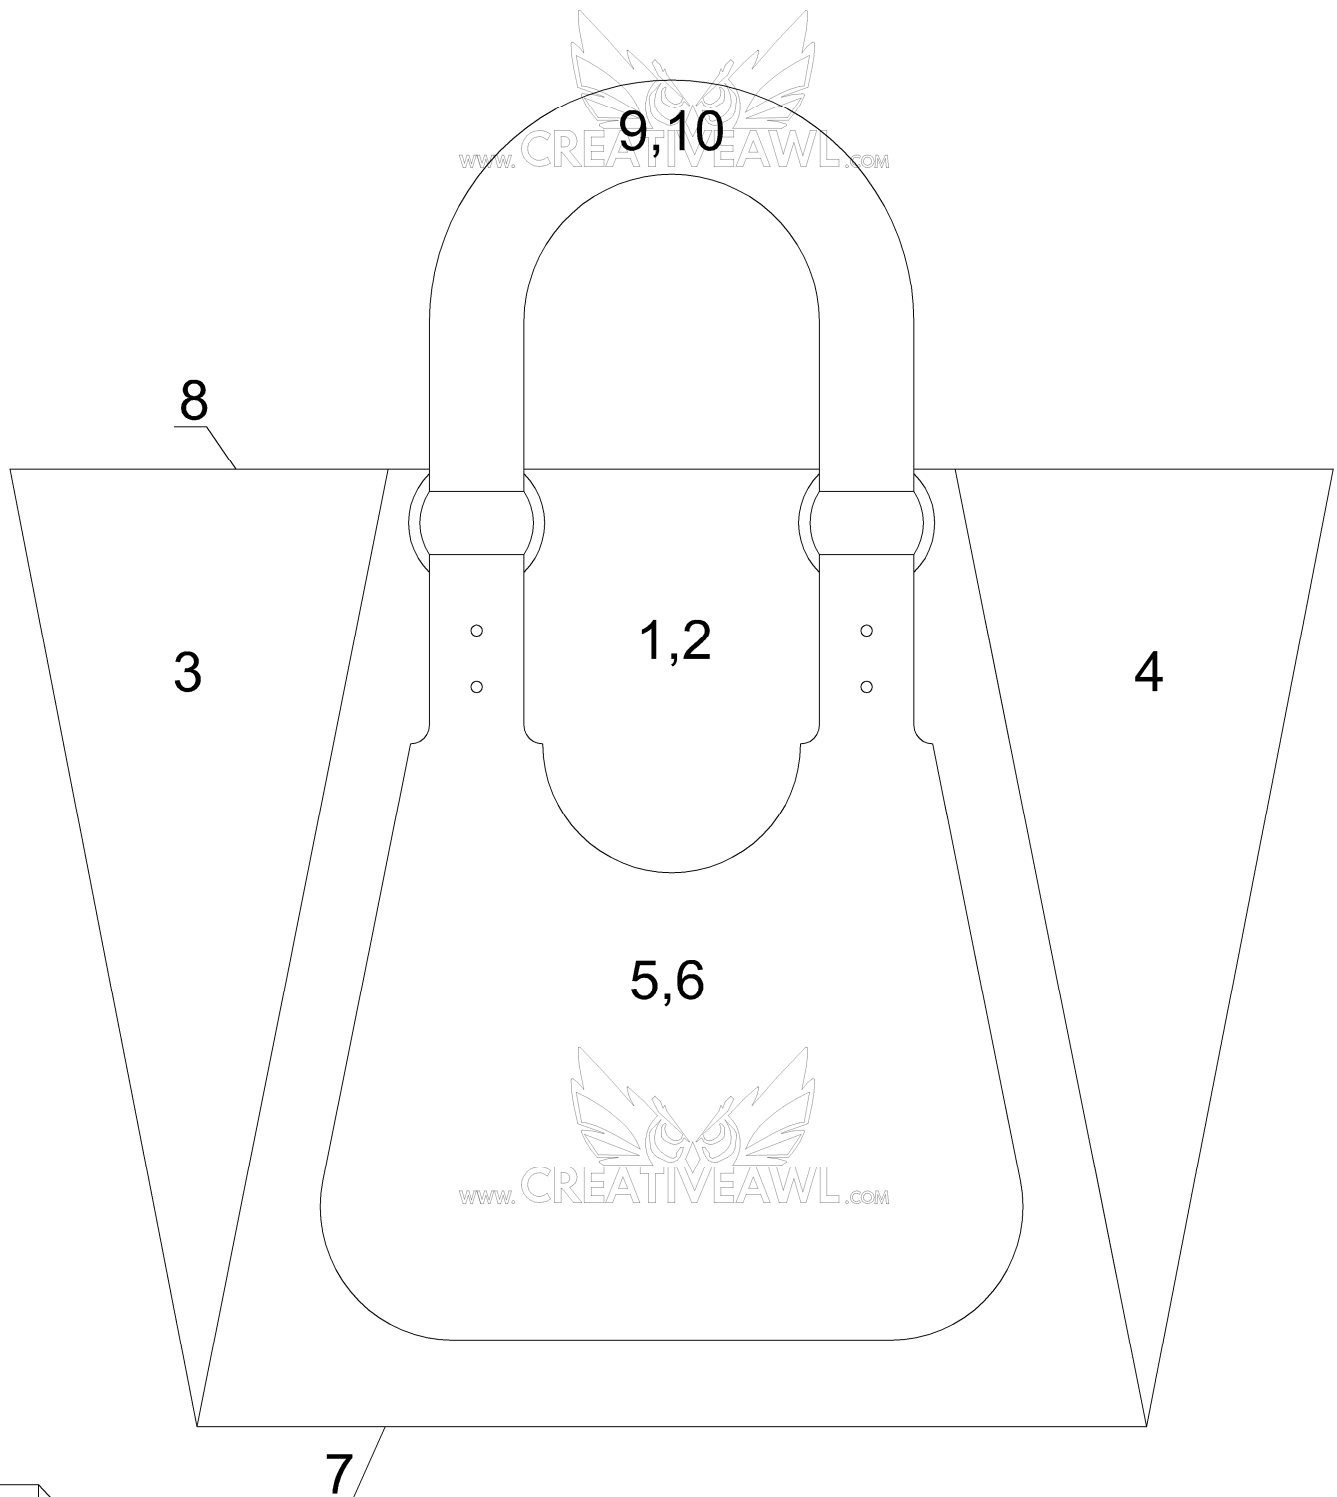

Leather needed for a tote bag:

about 0,65 m²

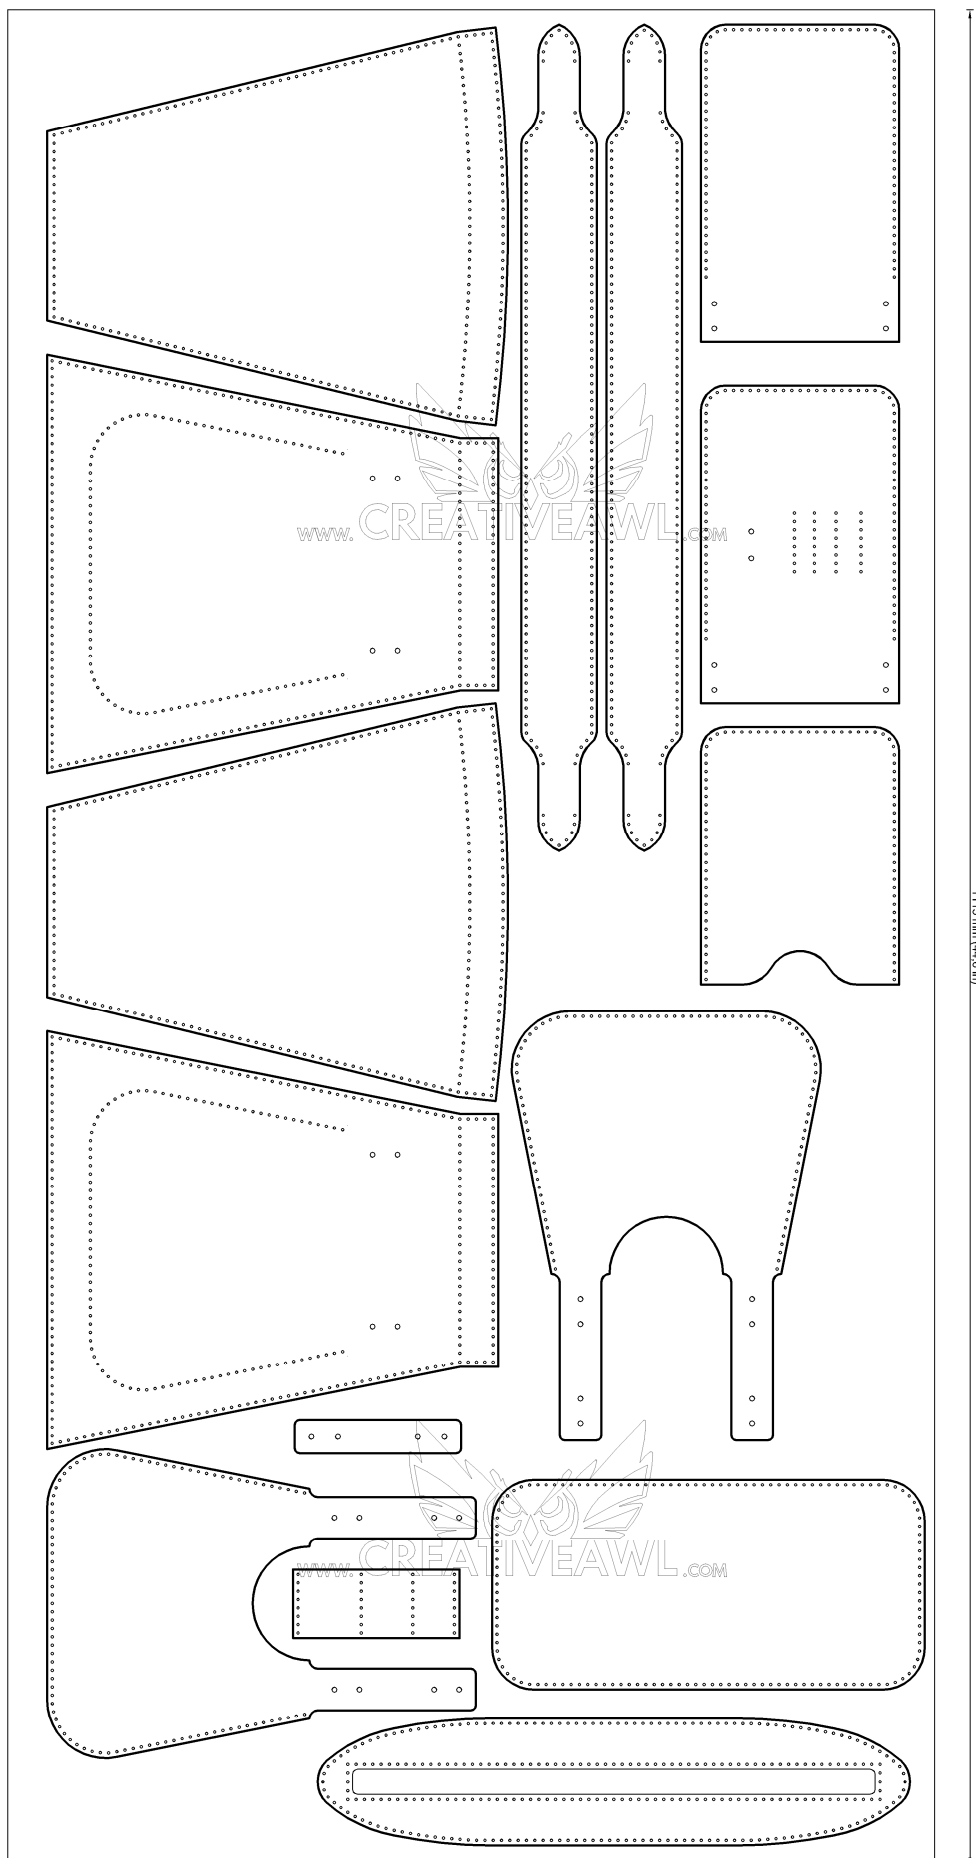

A4

Sketch drawing

Bill of materials





3/1

p1 



tote bag

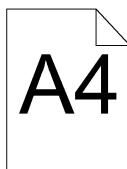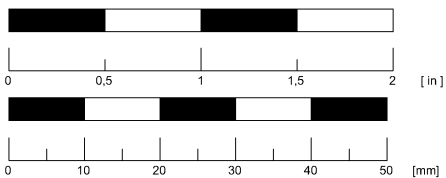

1



3/2


p1





tote bag


3

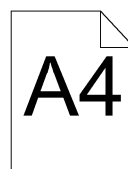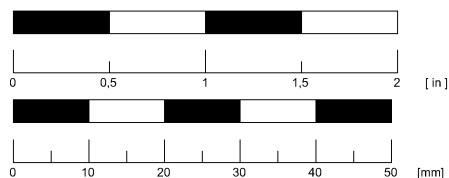


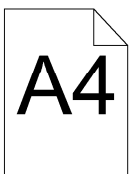




tote bag

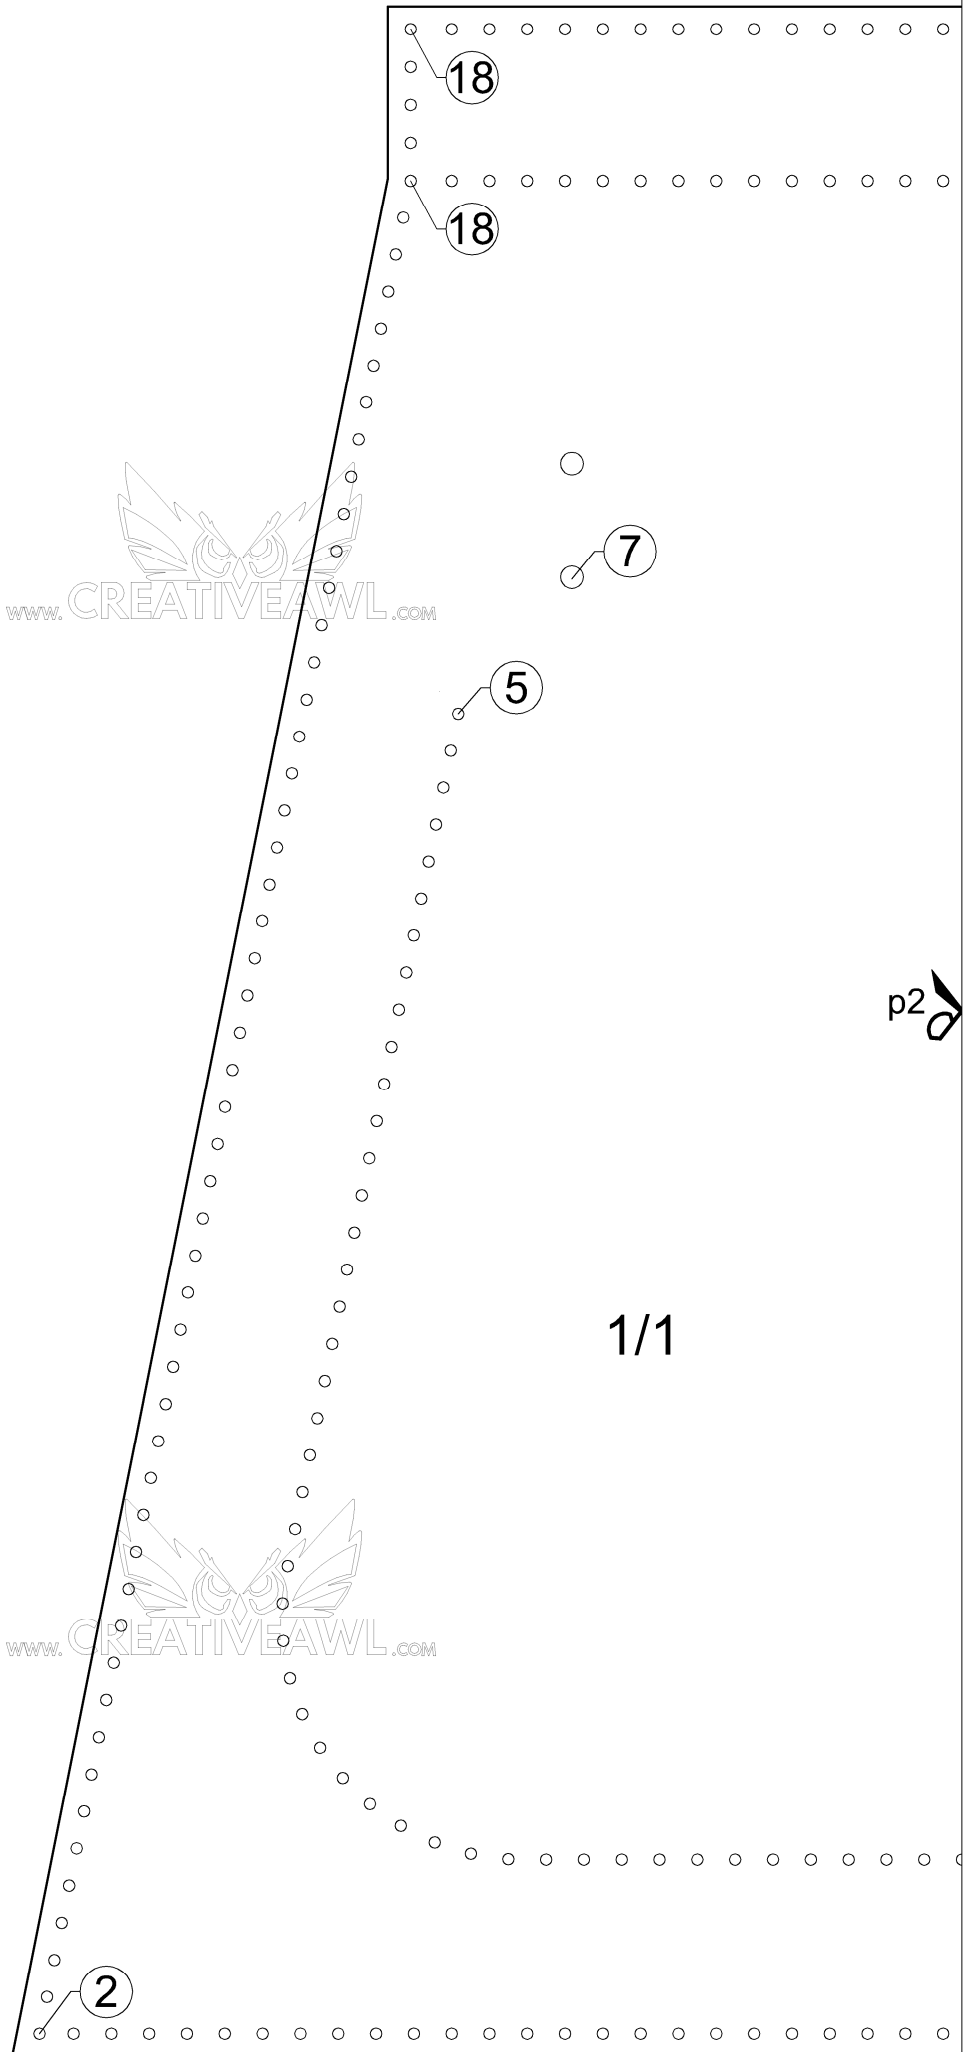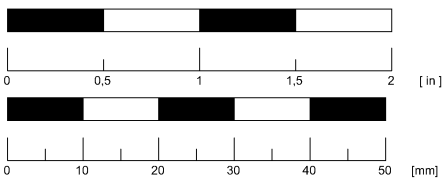

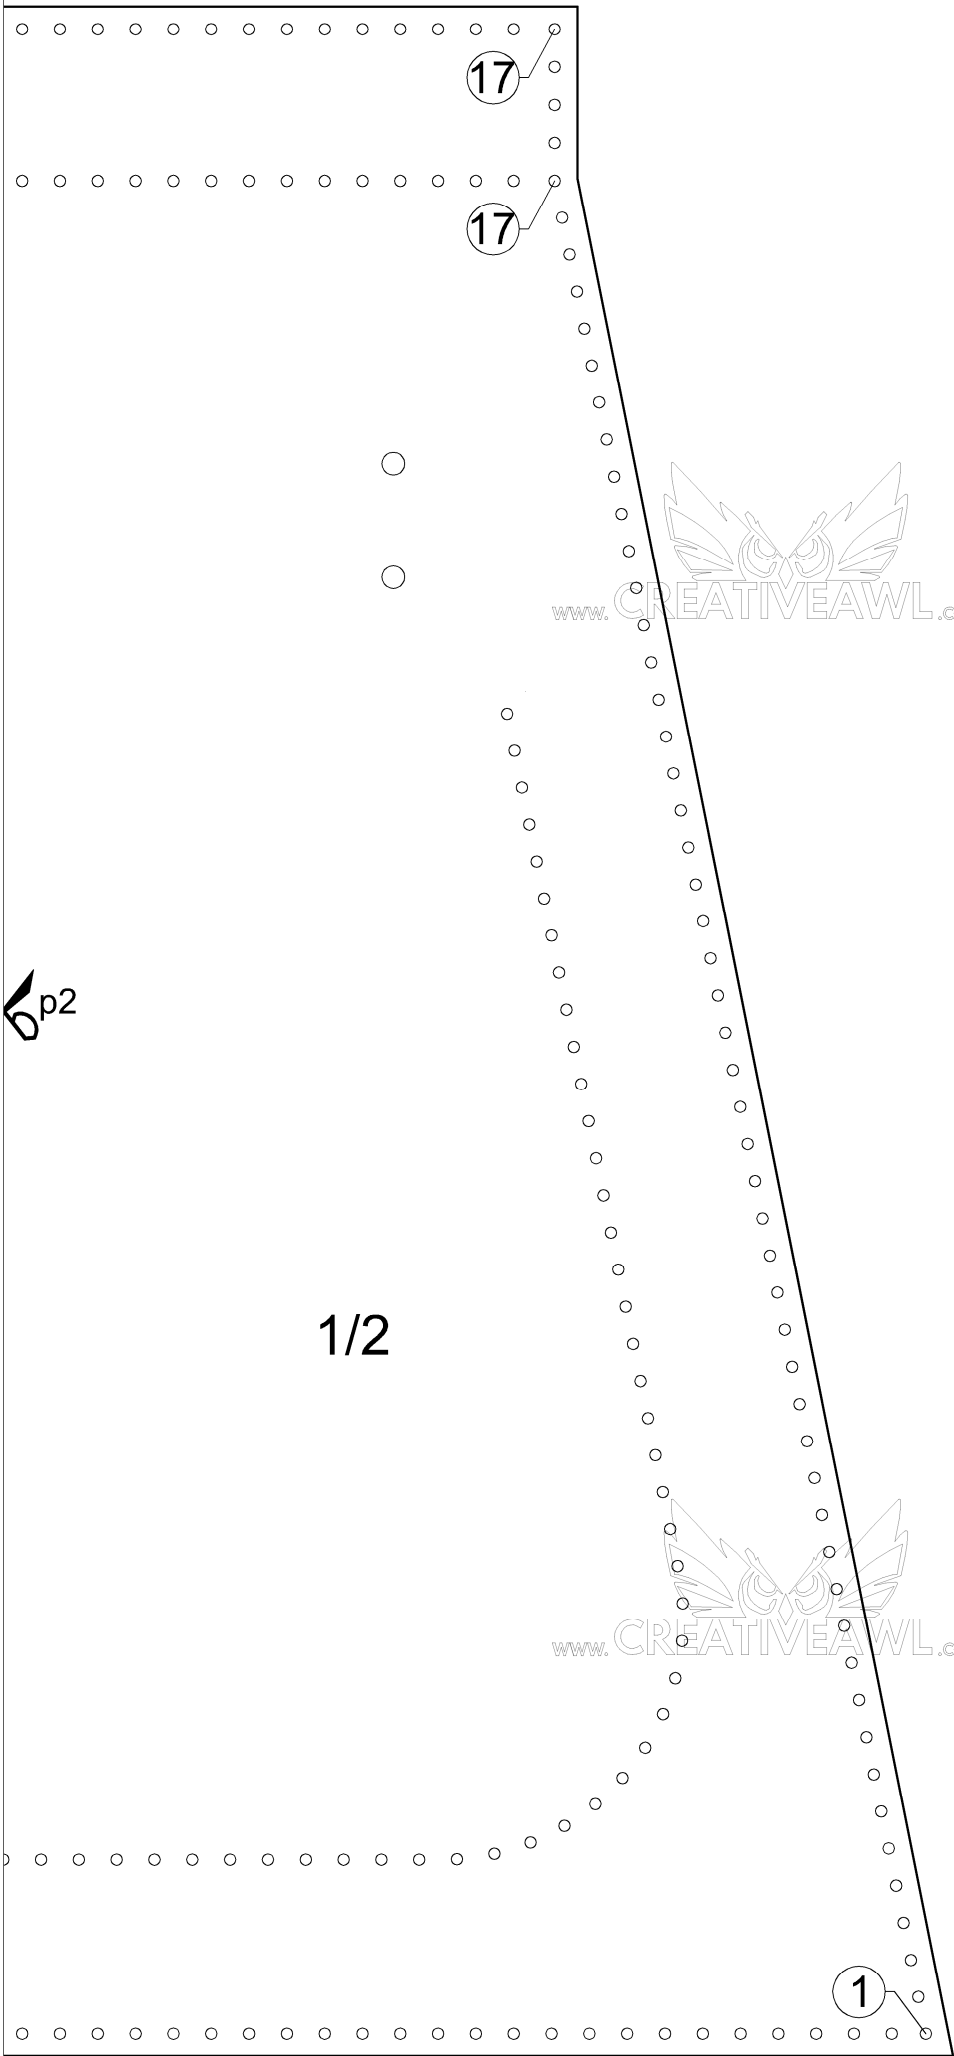

tote bag

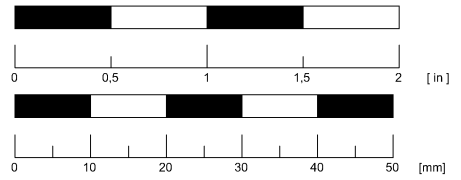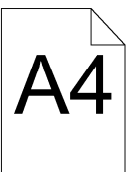

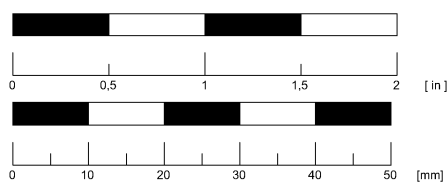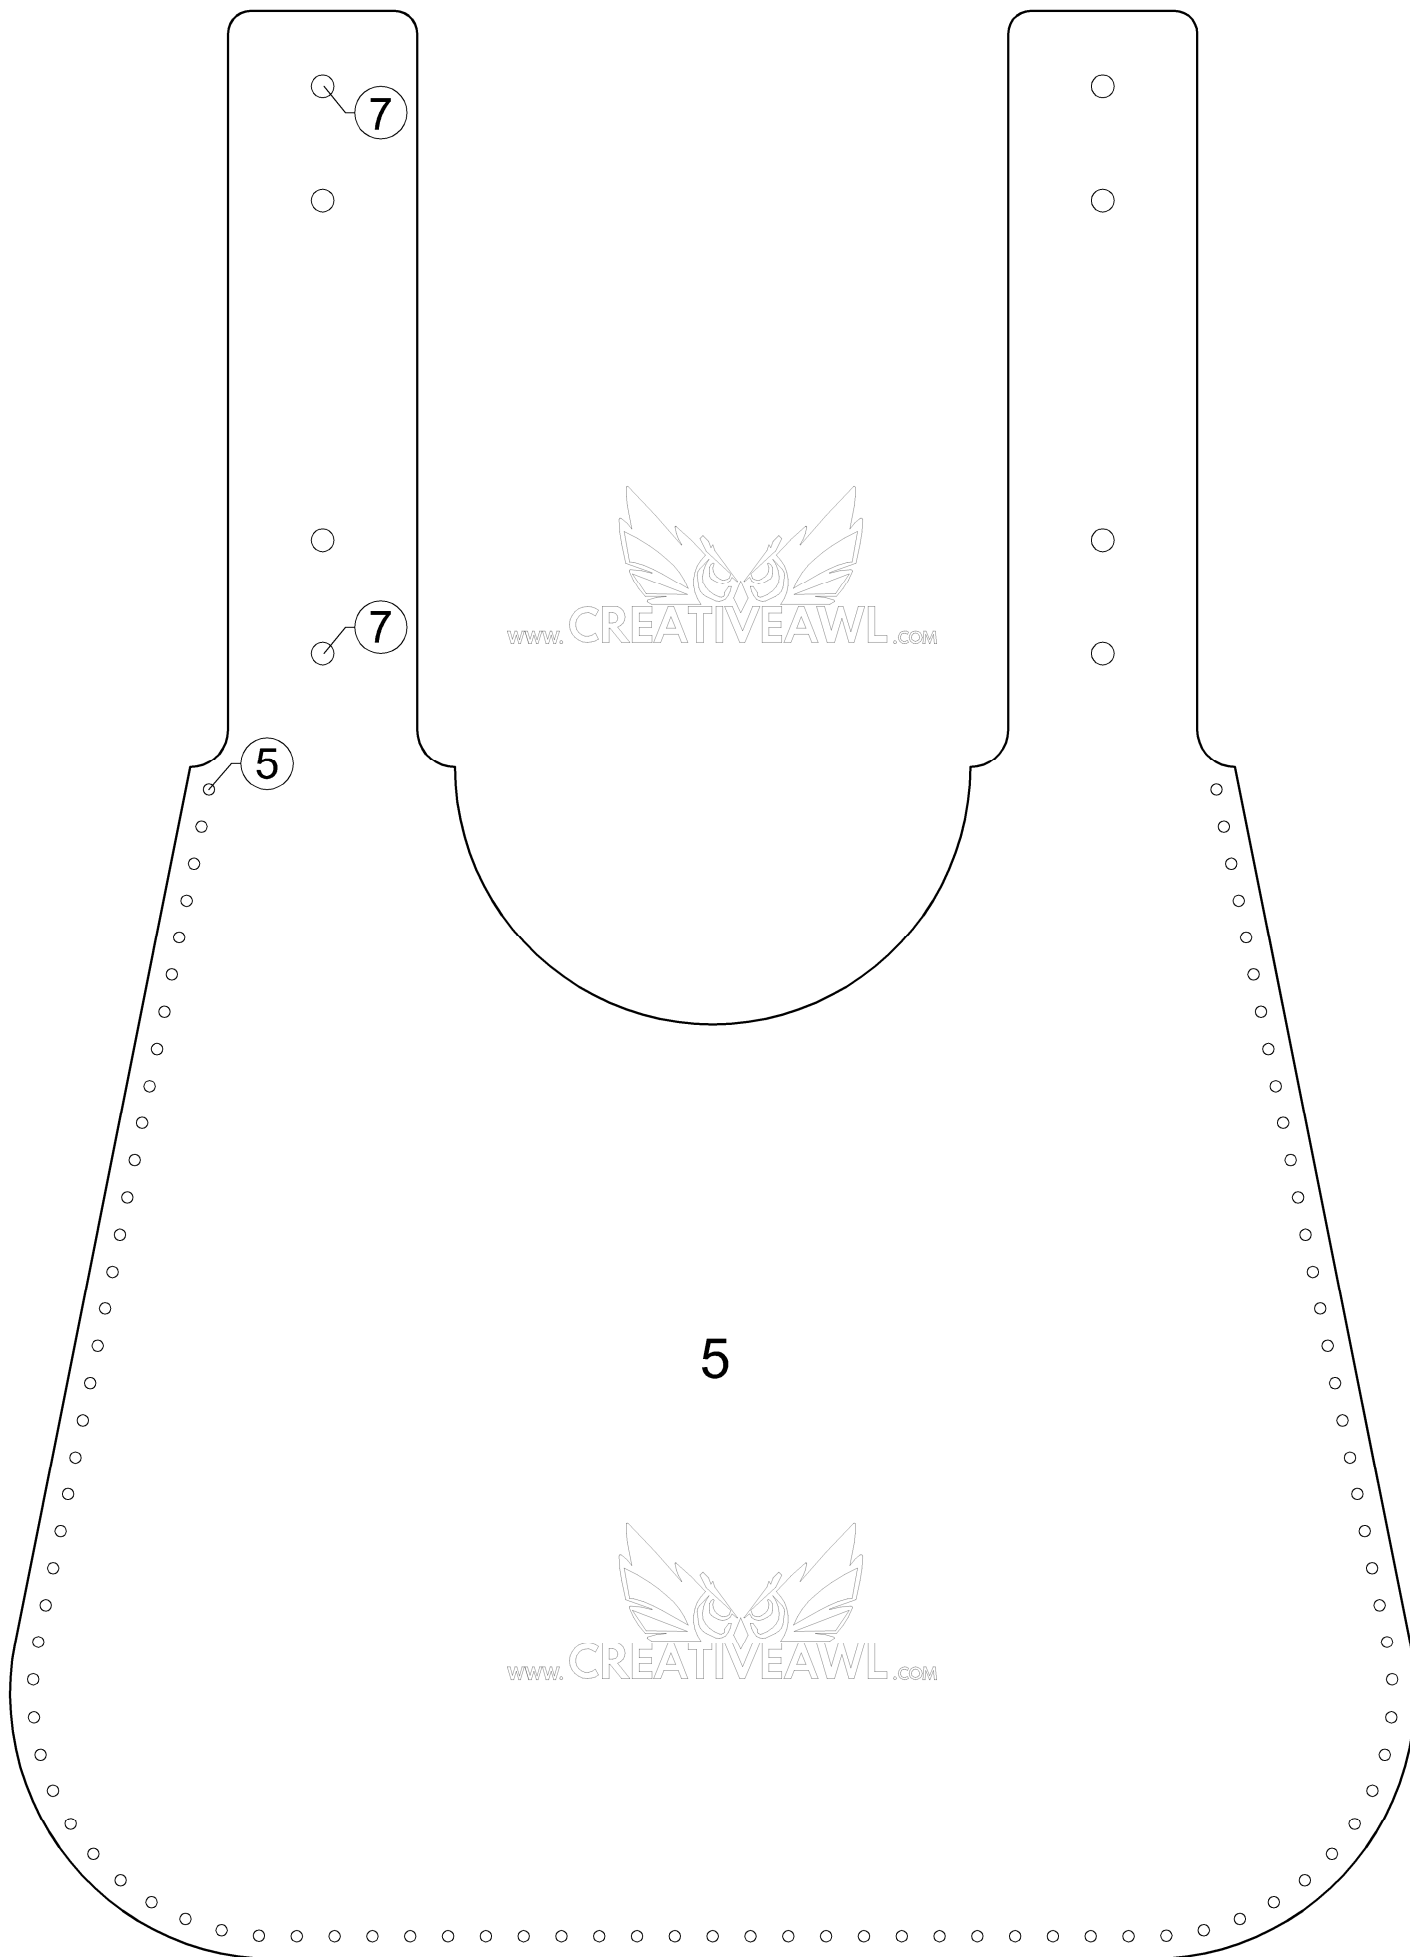

A4





tote bag

put it inside youre handlers if your leather is too soft

p11 

put it inside youre handlers if your leather is too soft



p12 

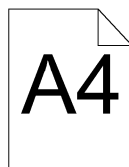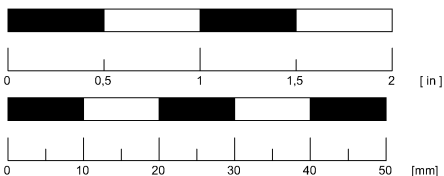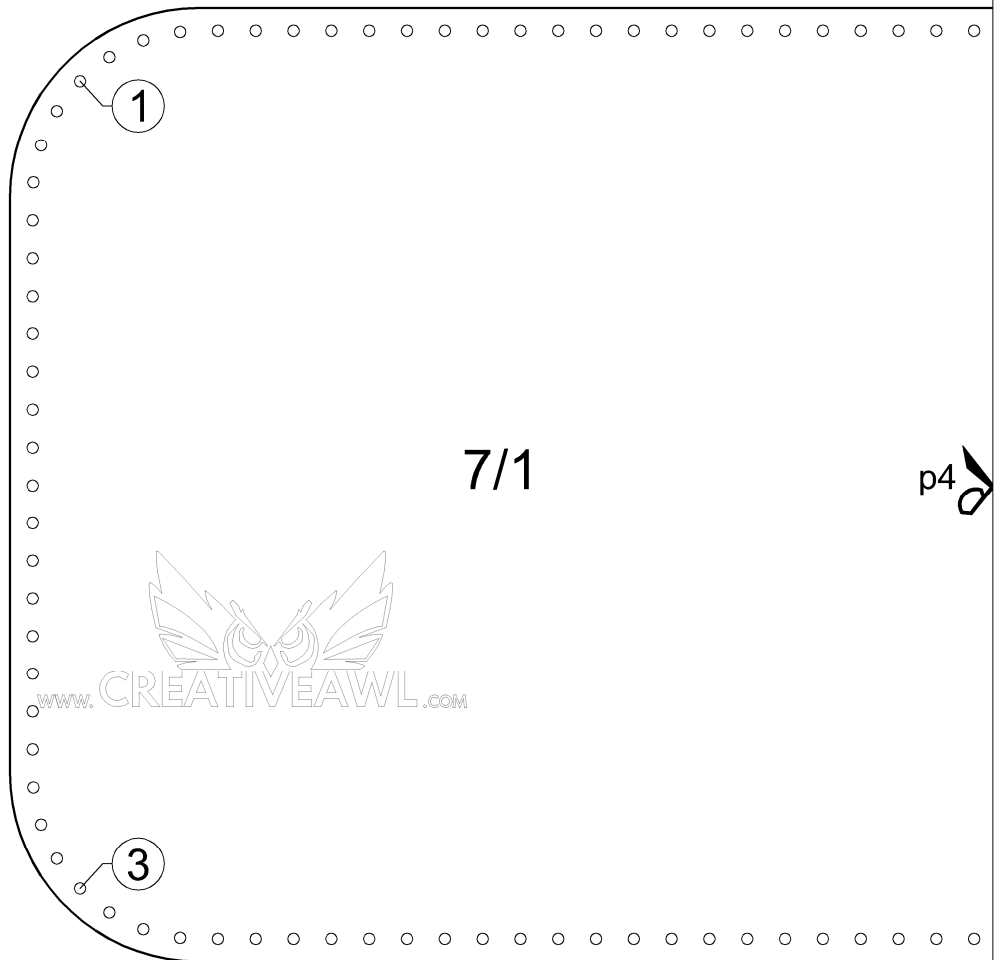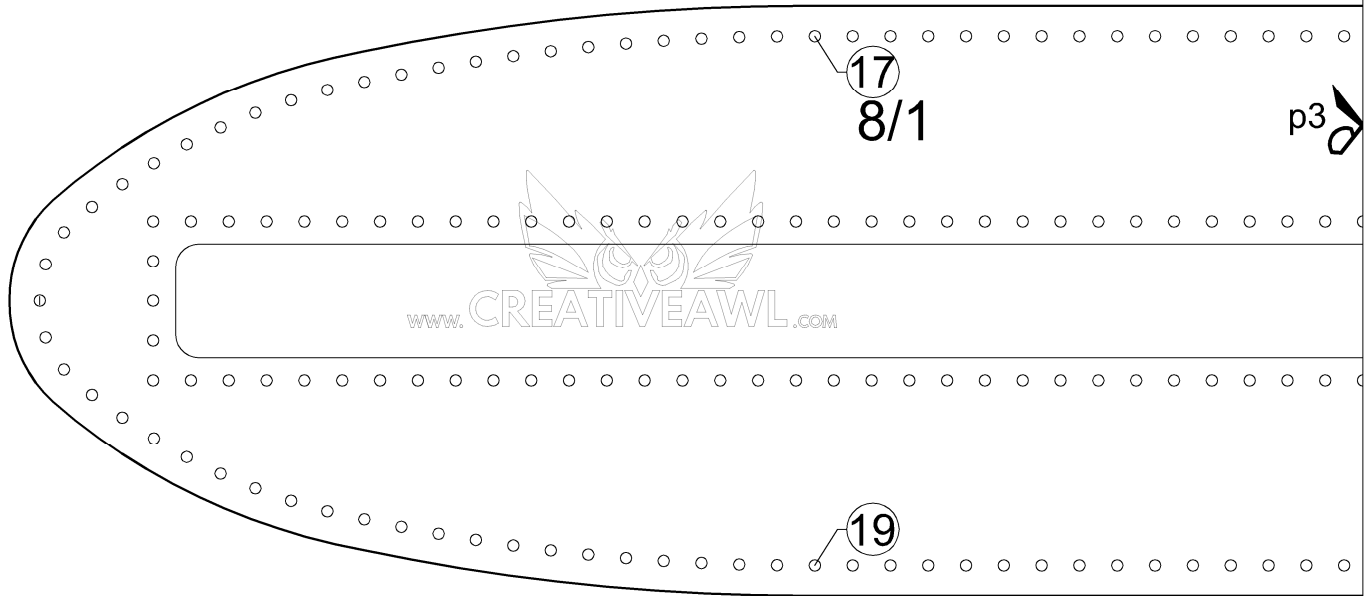



tote bag


p11 put it inside youre handlers if your leather is too soft

p12 put it inside youre handlers if your leather is too soft

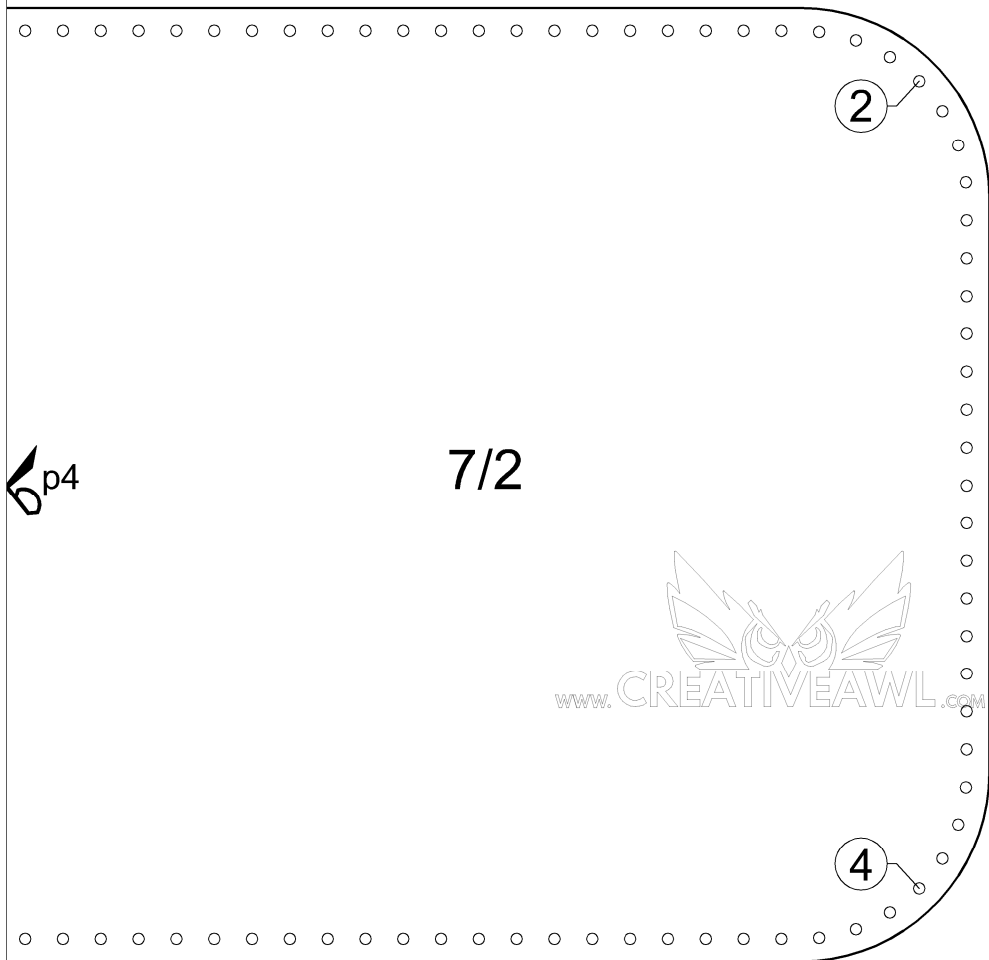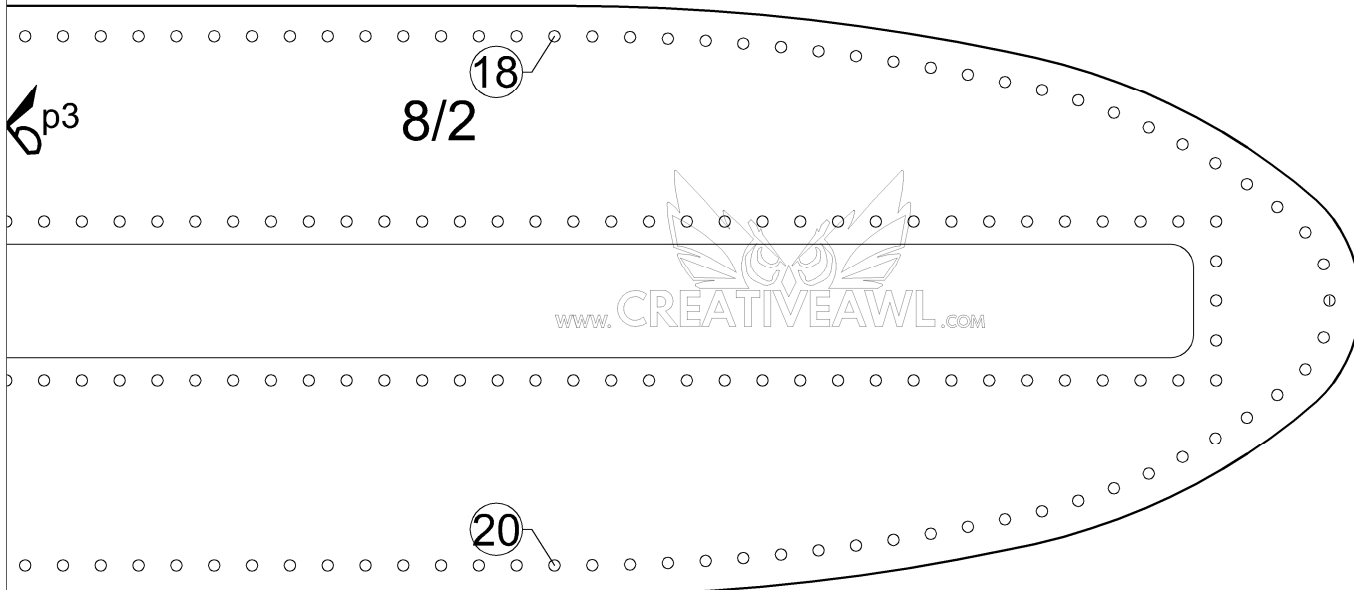

tote bag

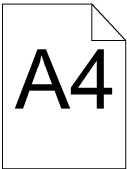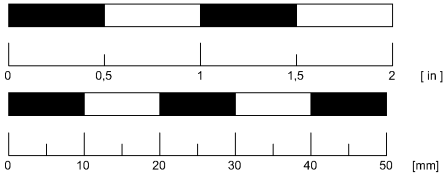

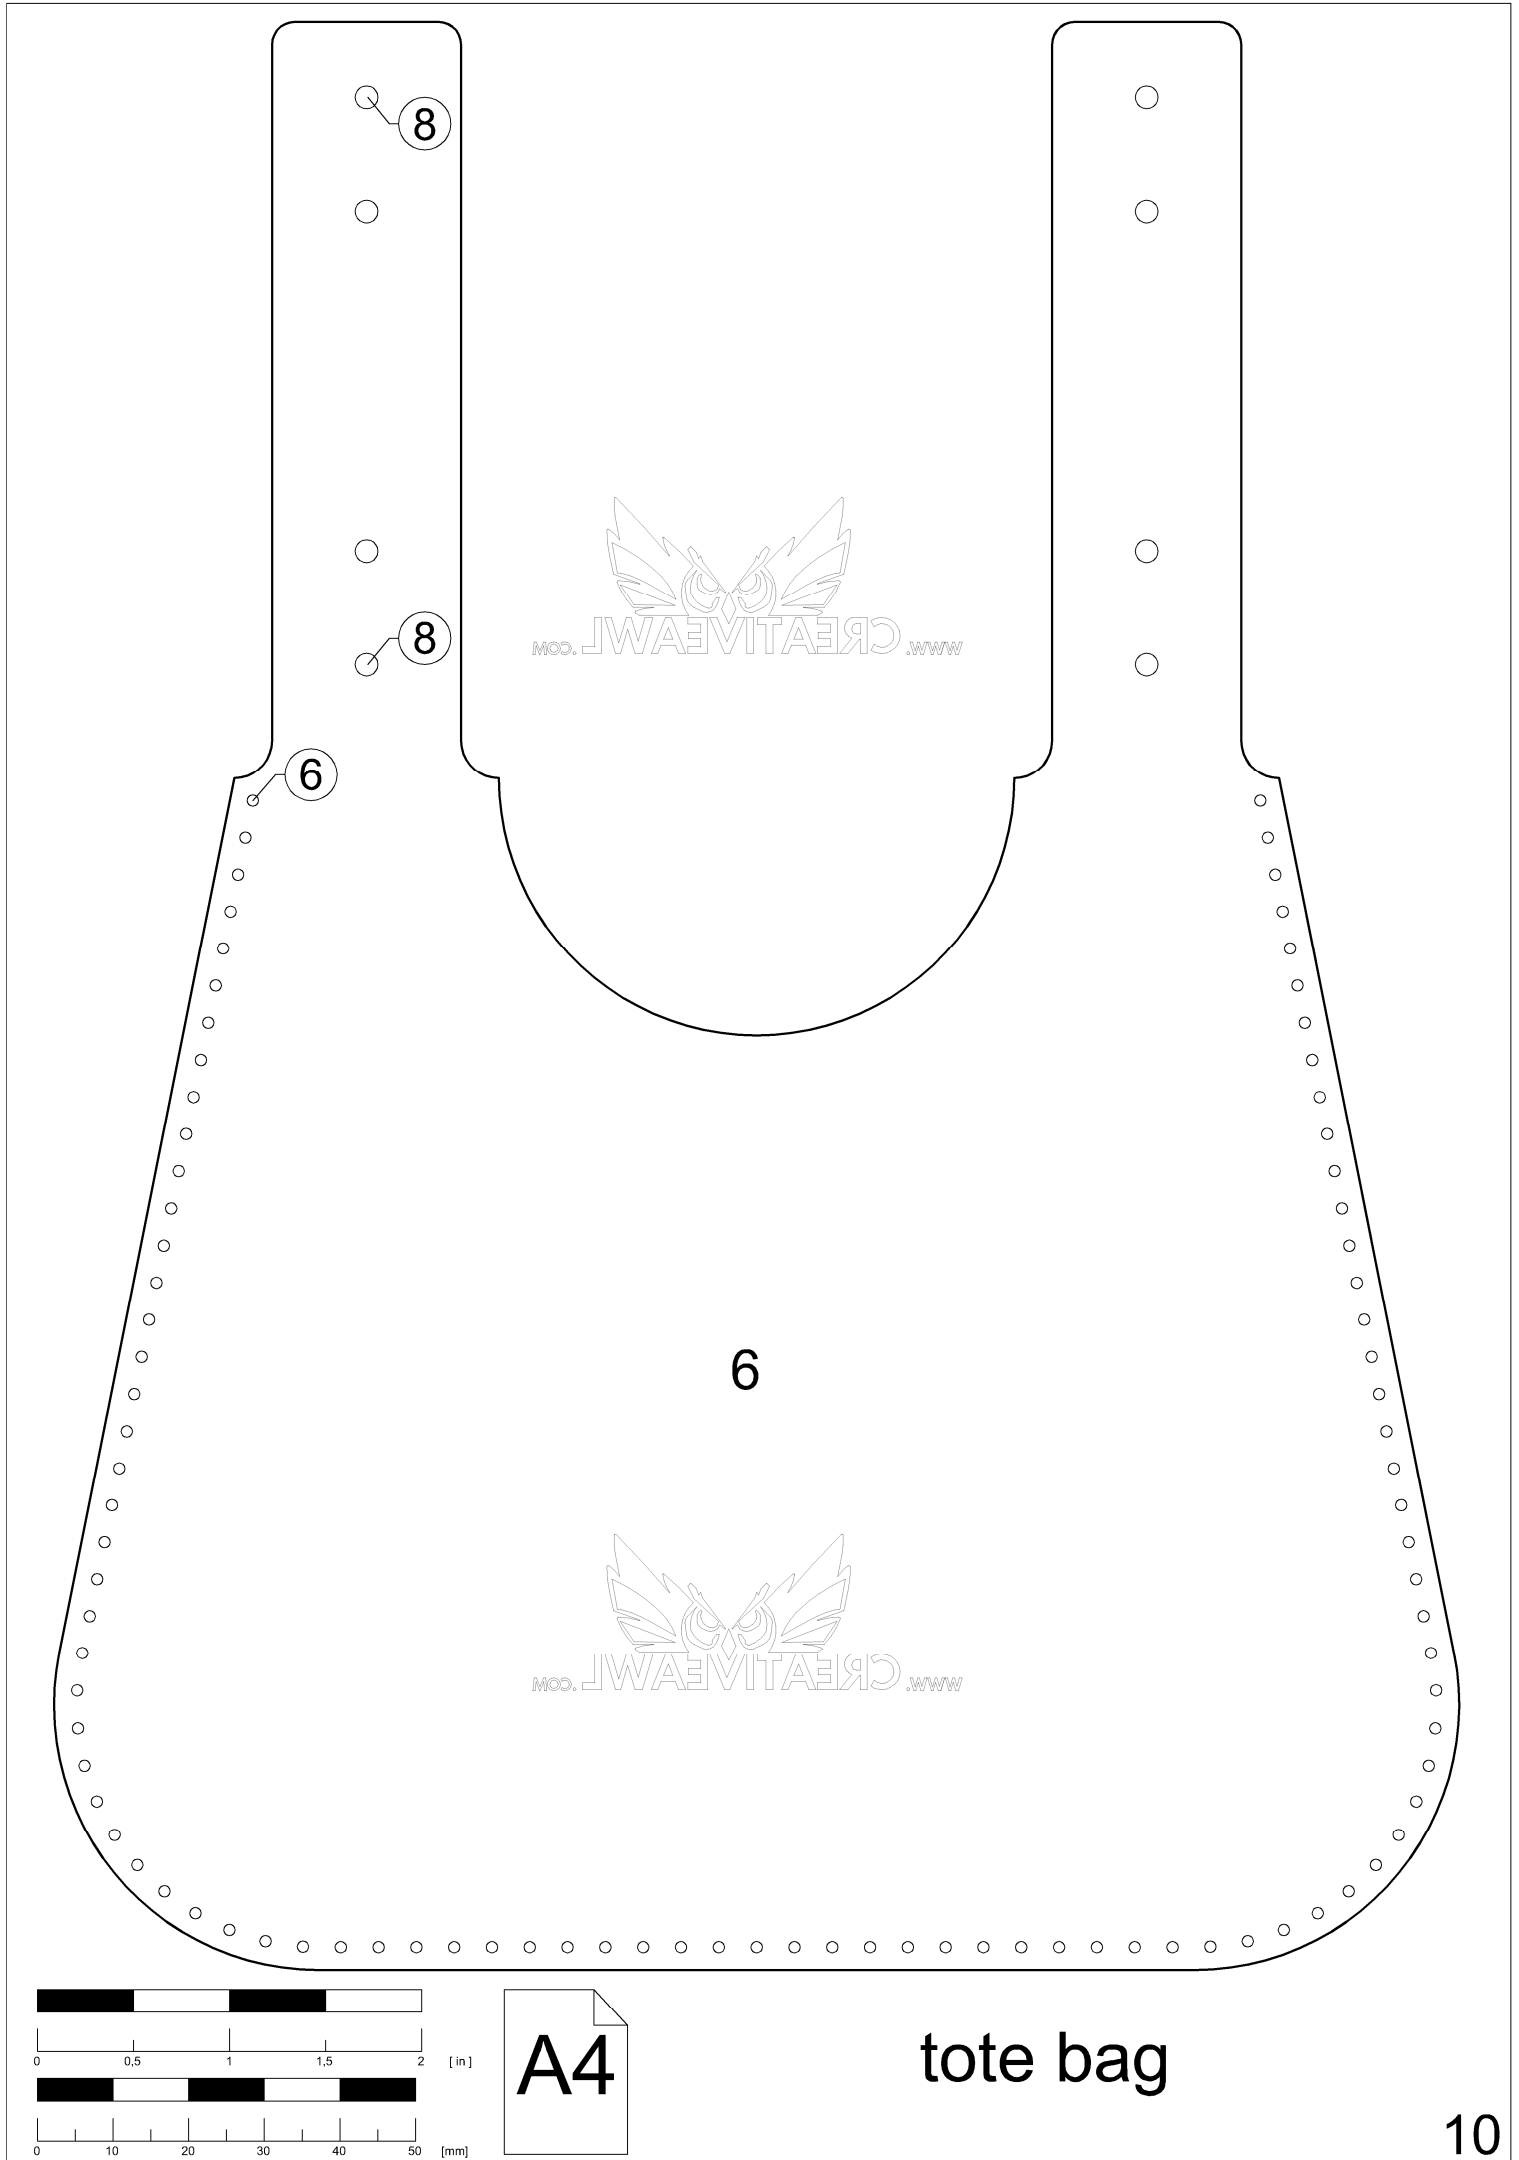

6

8

8


6


www.CREATIVEAWL.COM

www.CREATIVEAWL.COM



tote bag

A4

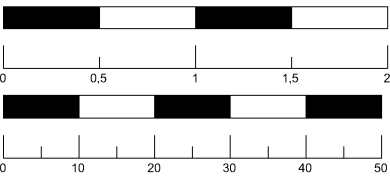

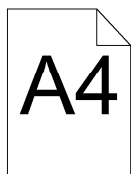


tote bag

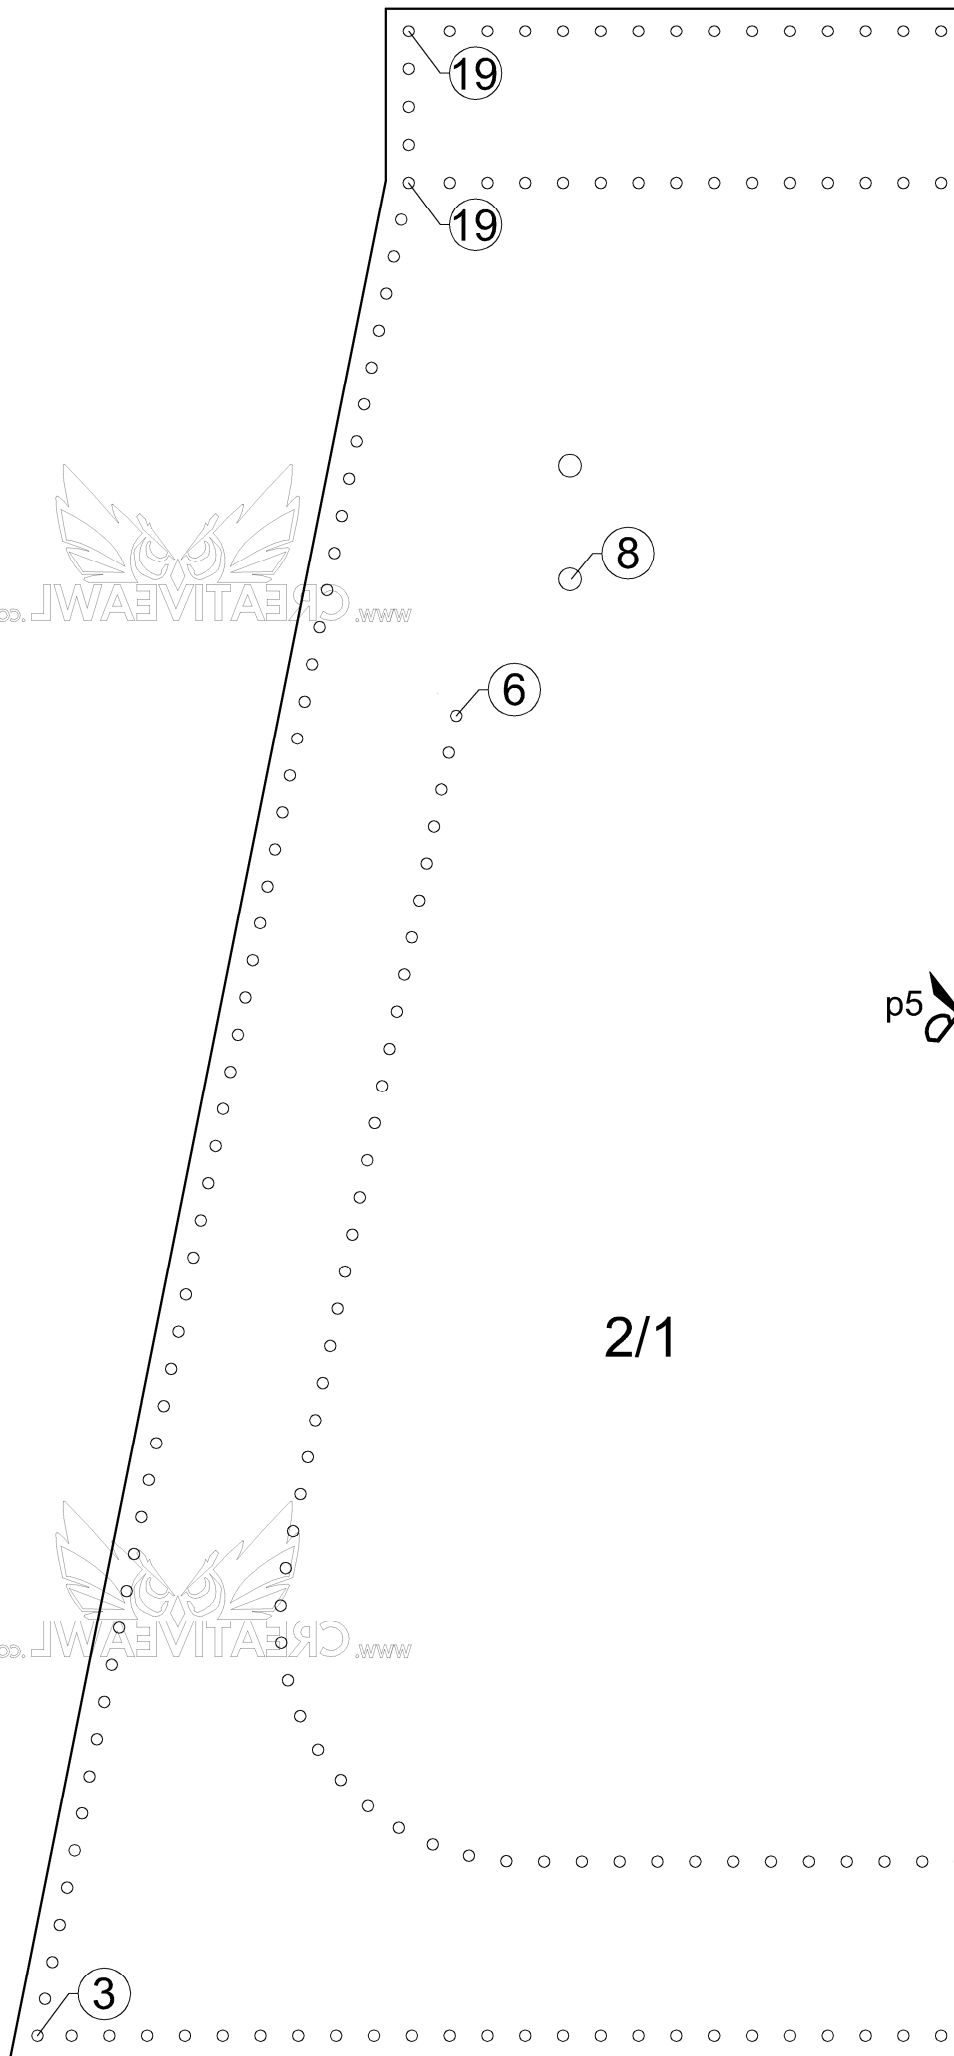
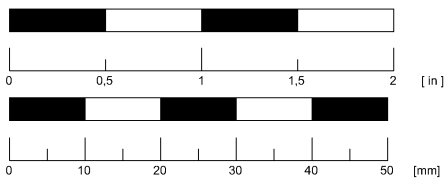


p5

2/1

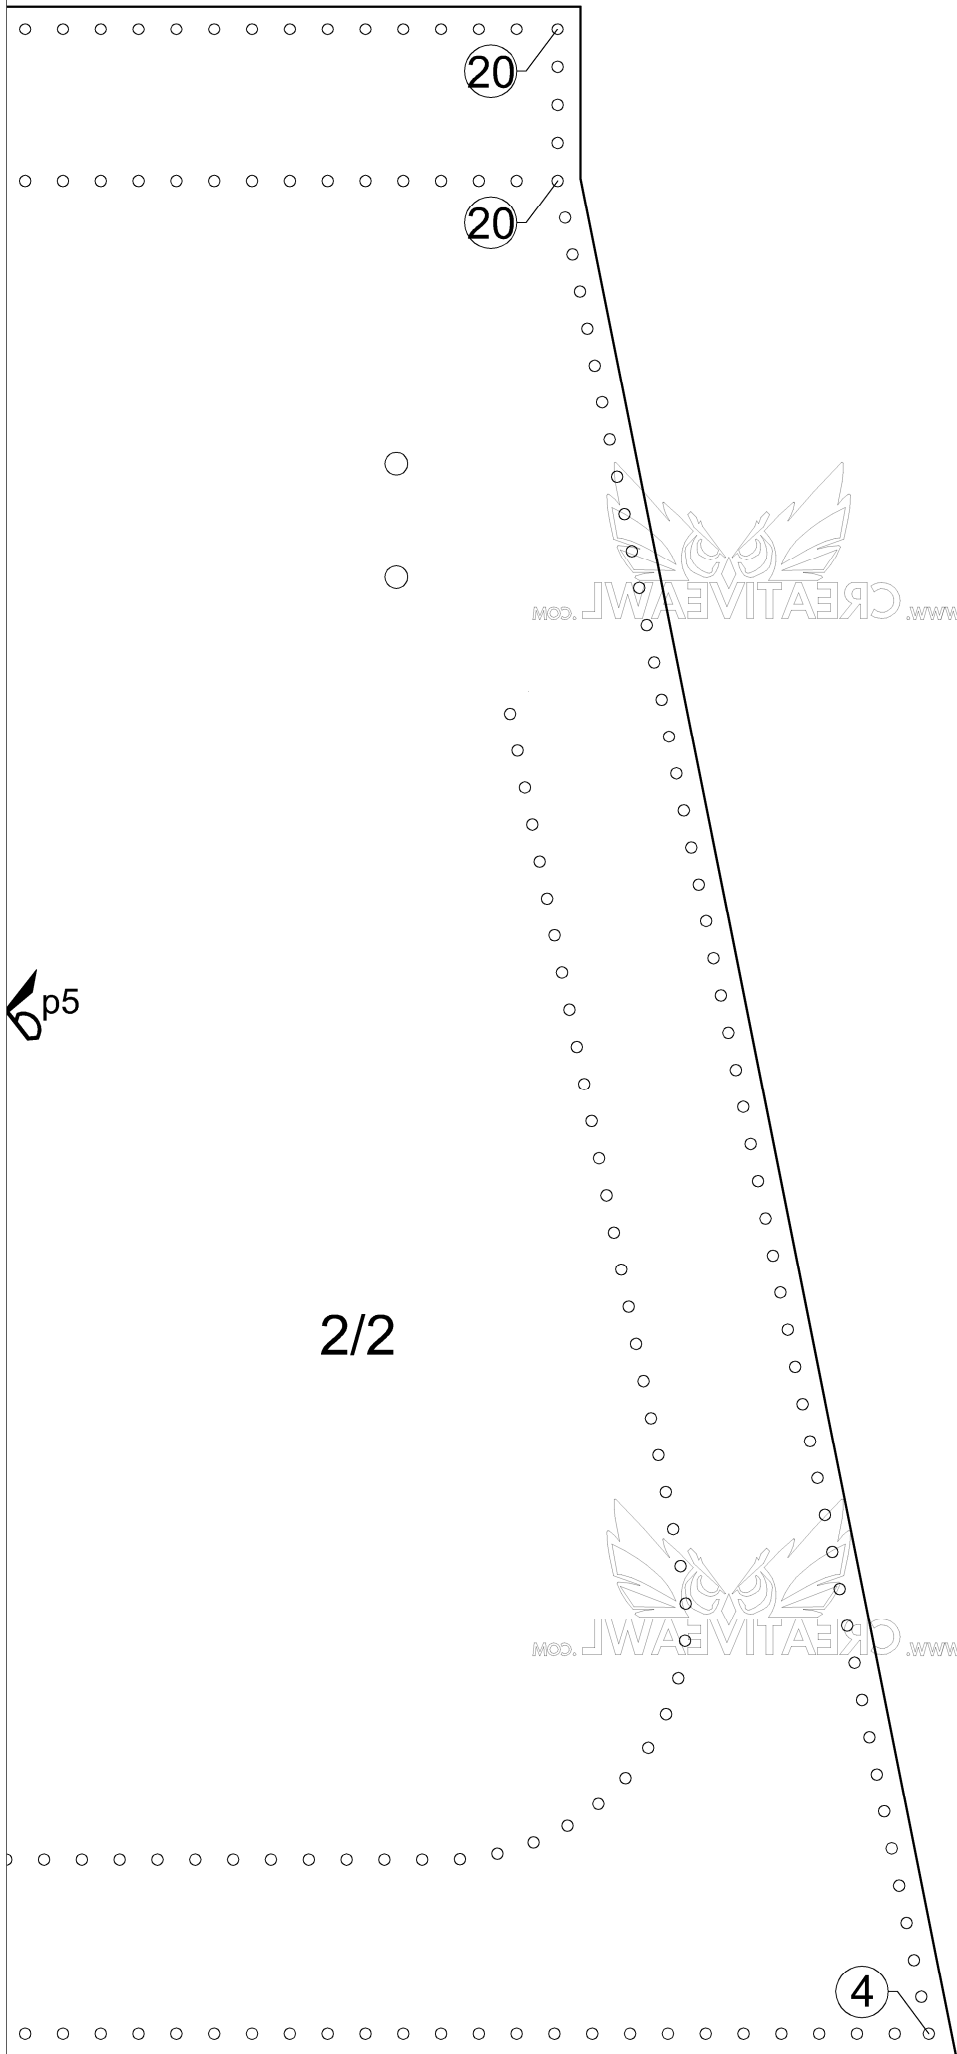

tote bag

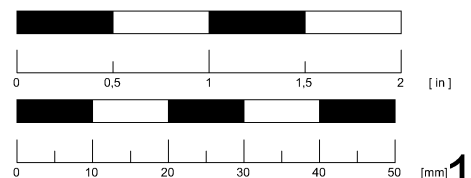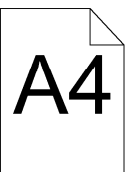




tote bag



0 0.5 1 1.5 2 [in]



0 10 20 30 40 50 [mm]

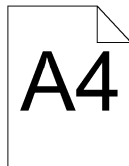

A4


20

20



4/1





p6

4

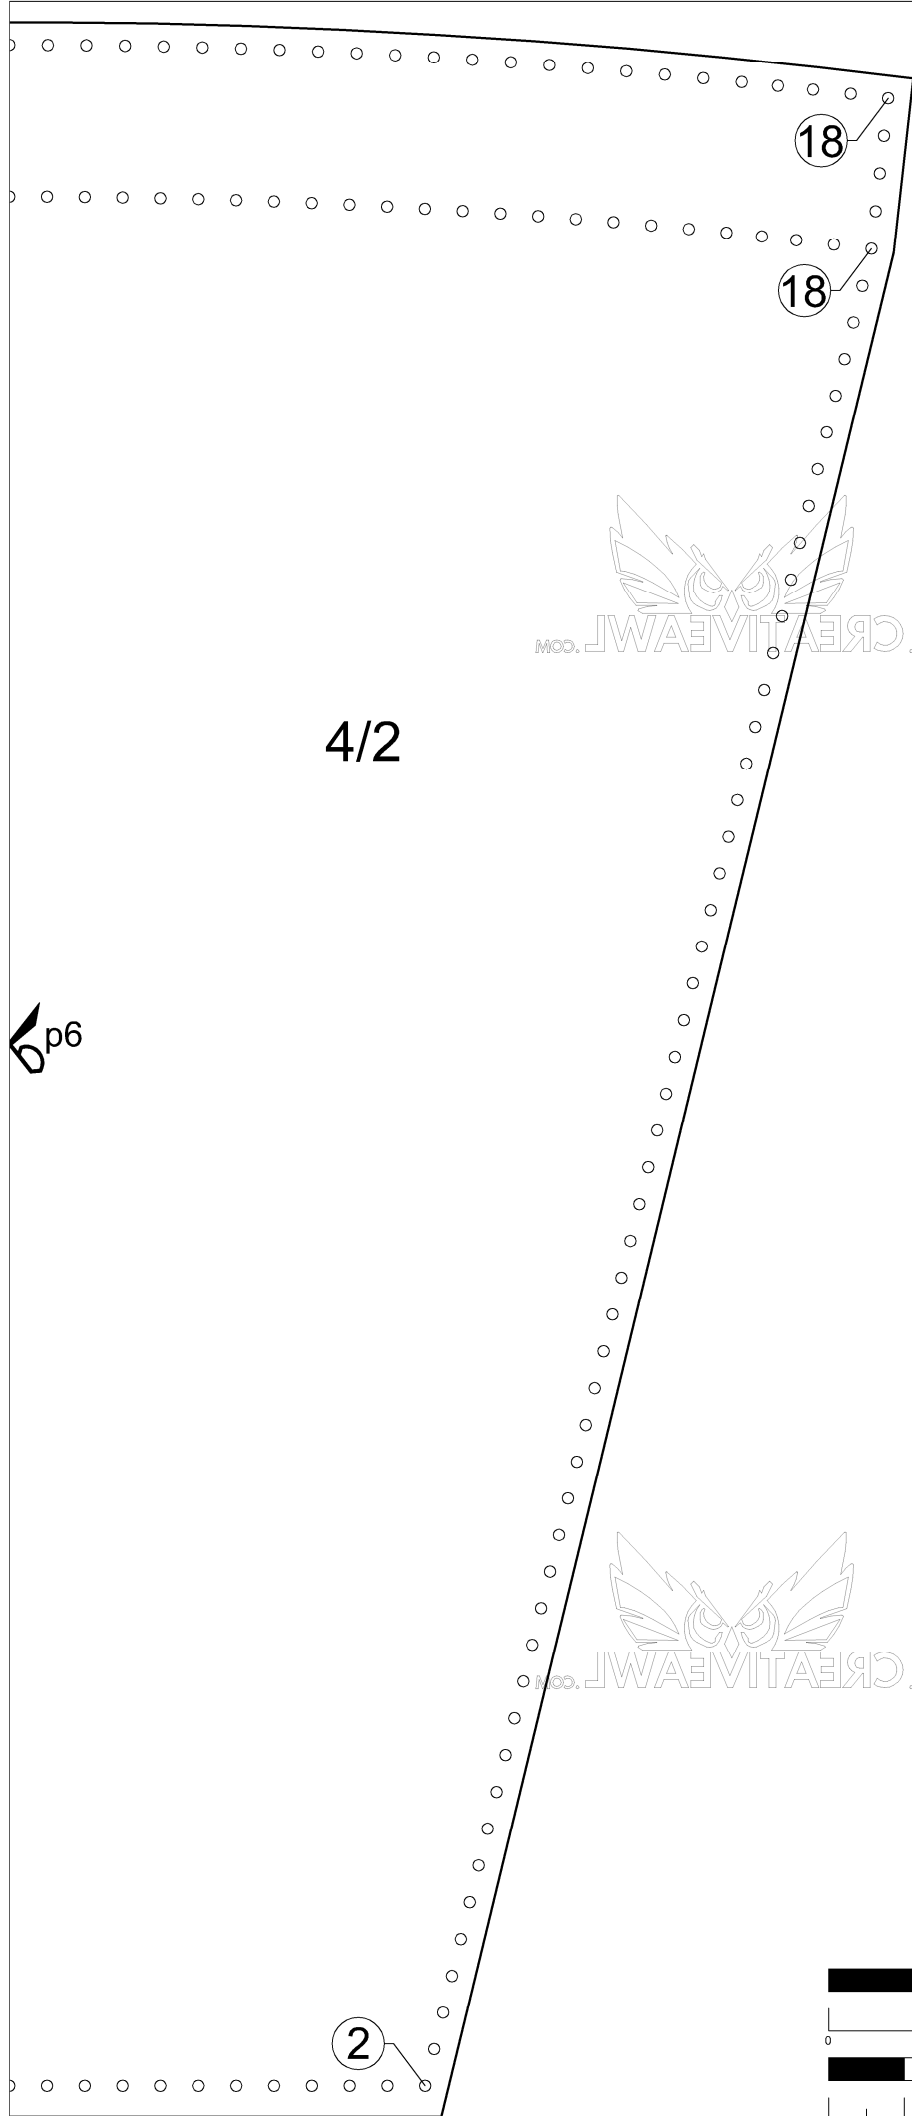


tote bag

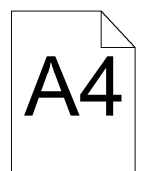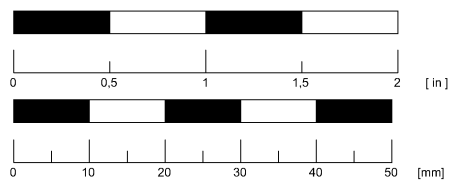

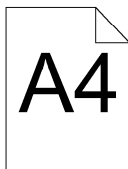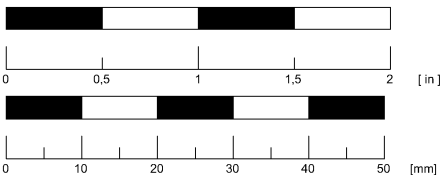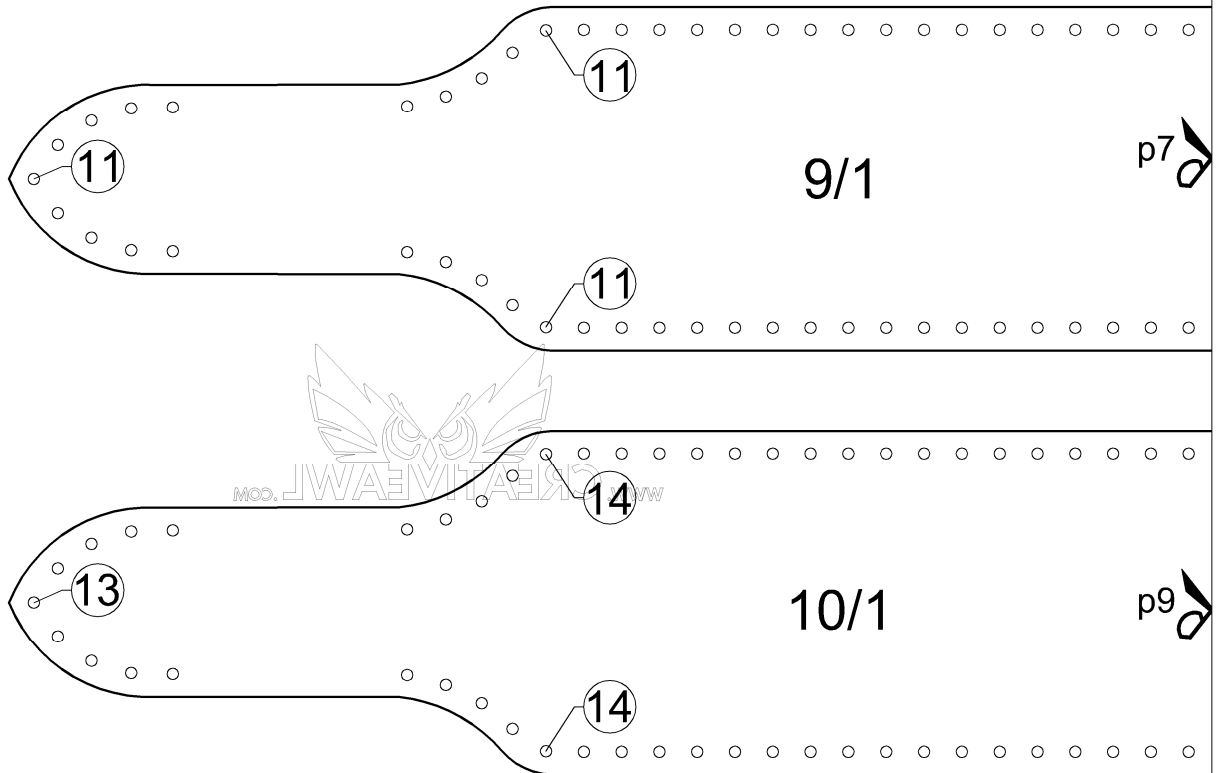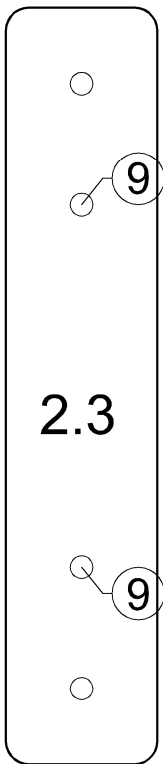

tote bag

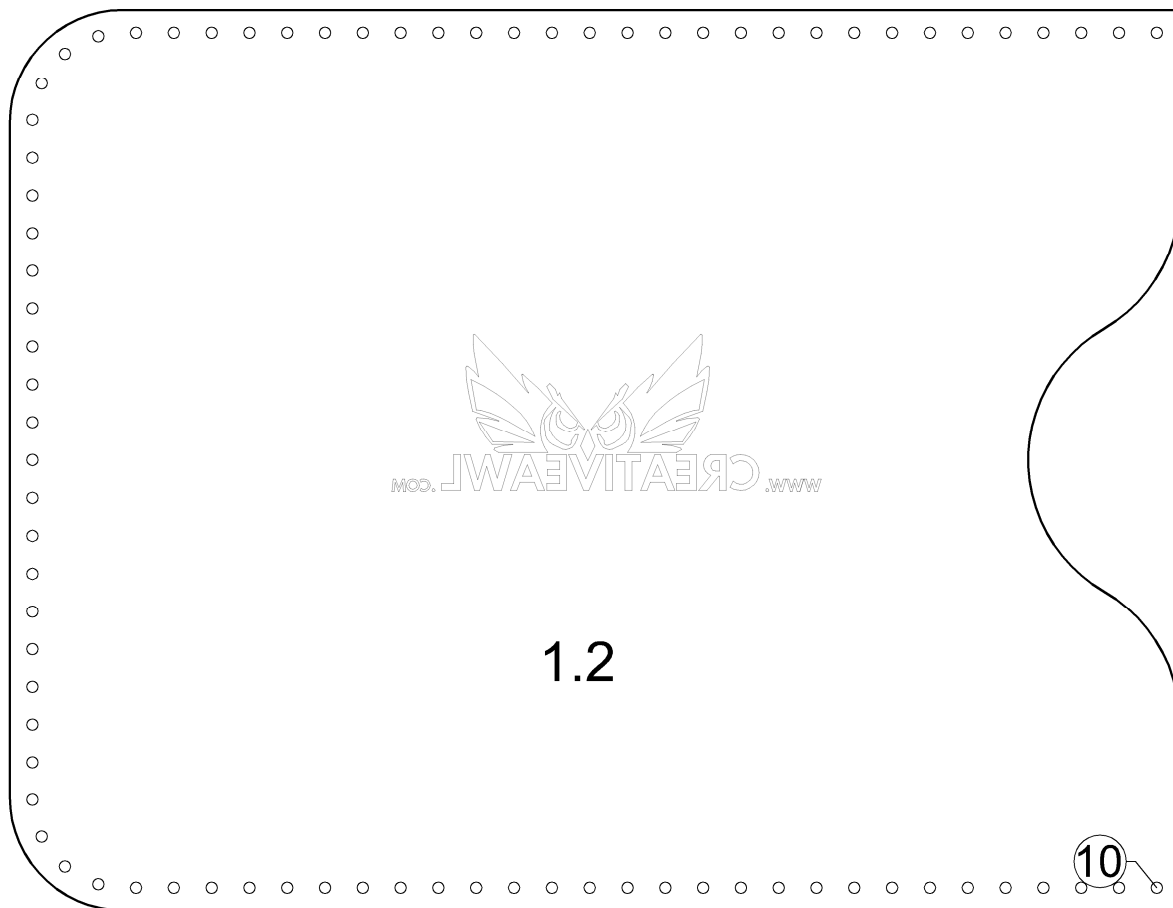

p7

9/1



p8








p9

10/1

p10

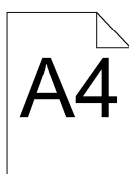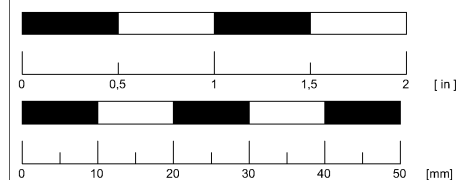

tote bag

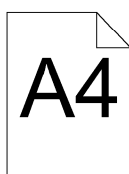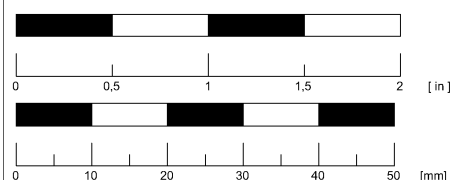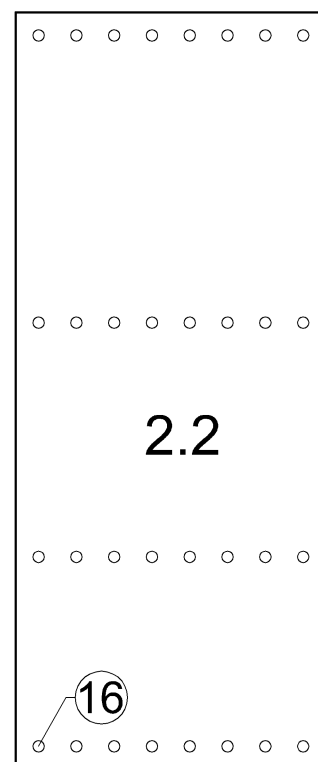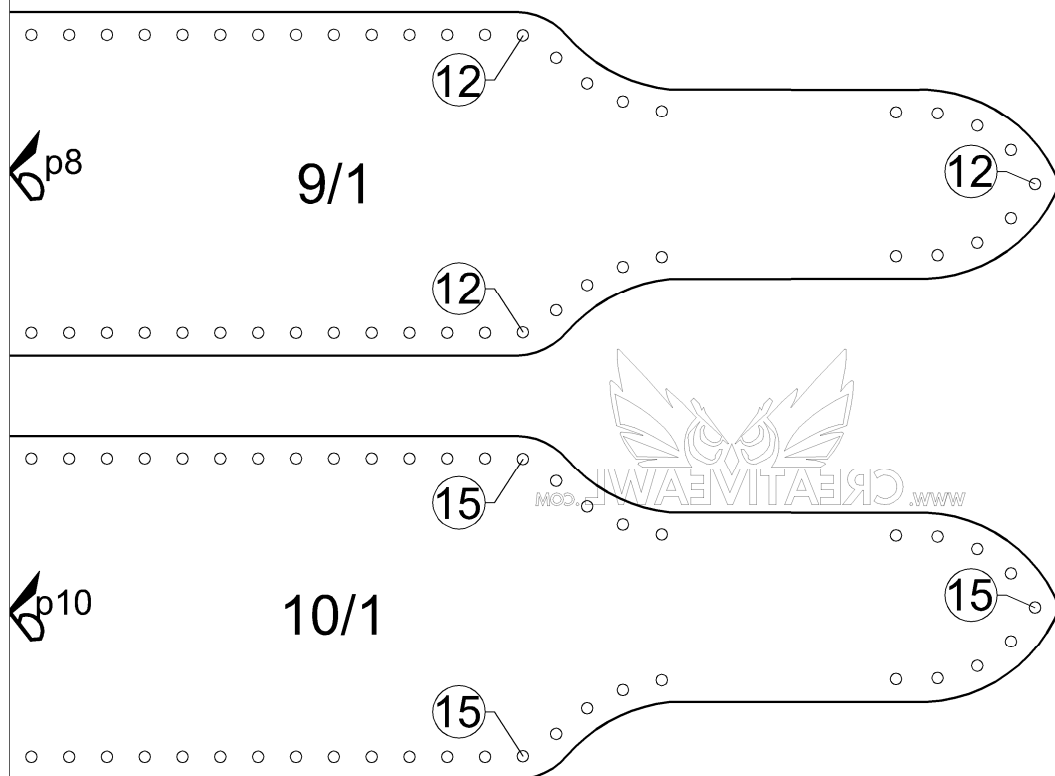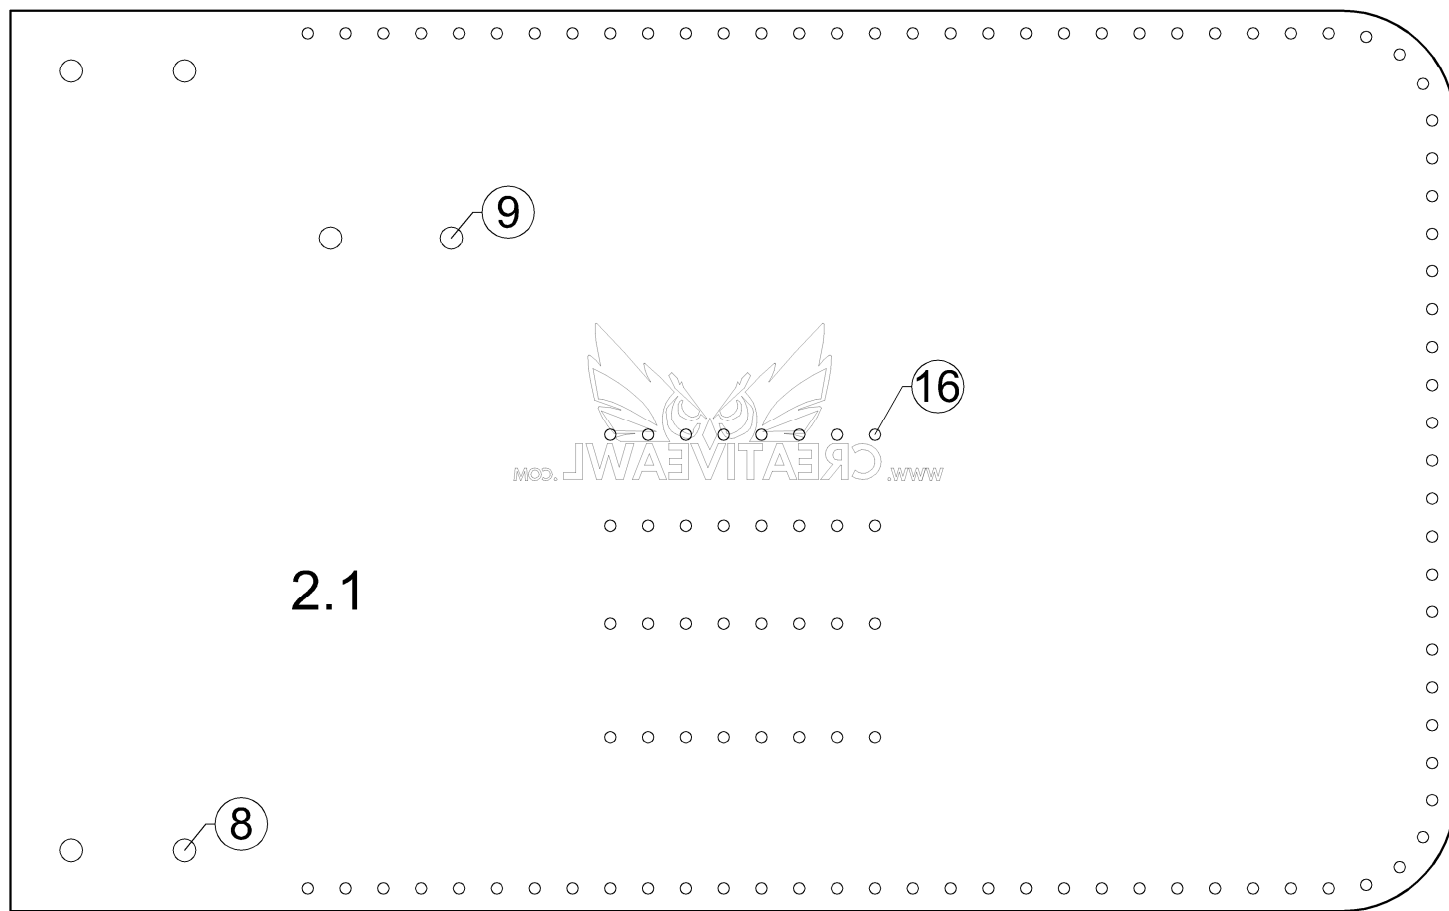

tote bag