



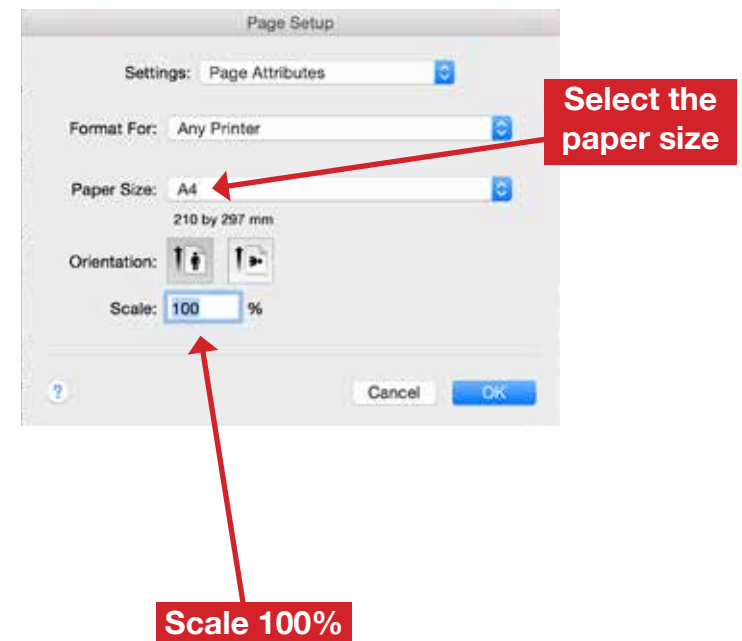

PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”


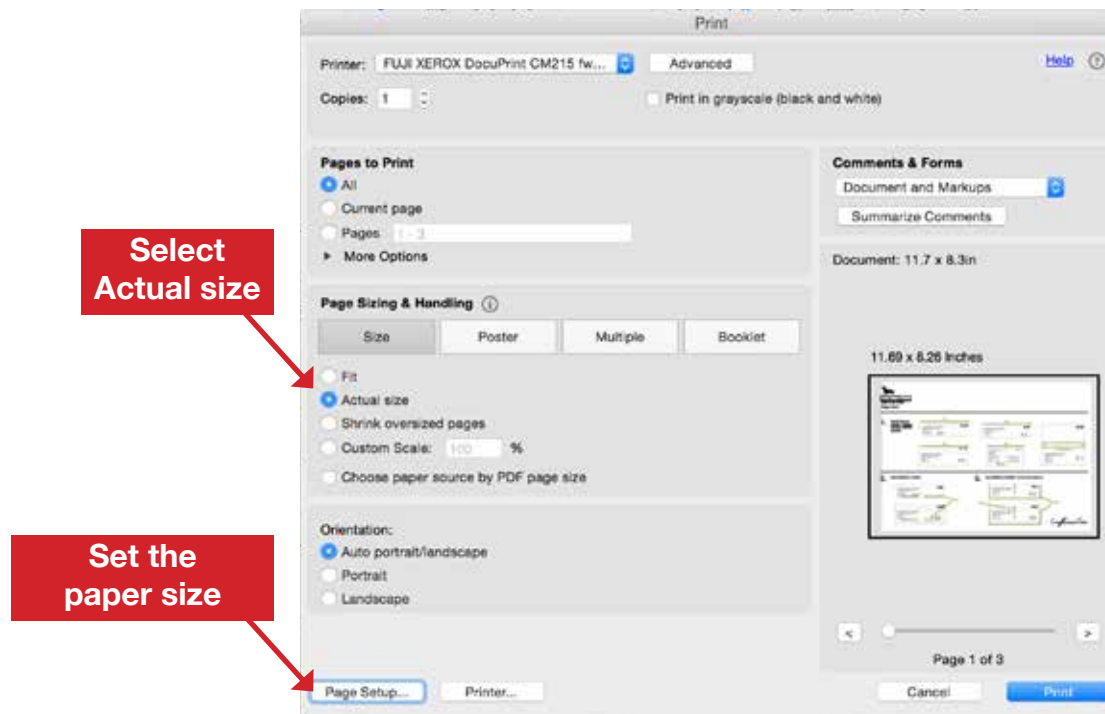



IMPORTANT NOTE:




- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>

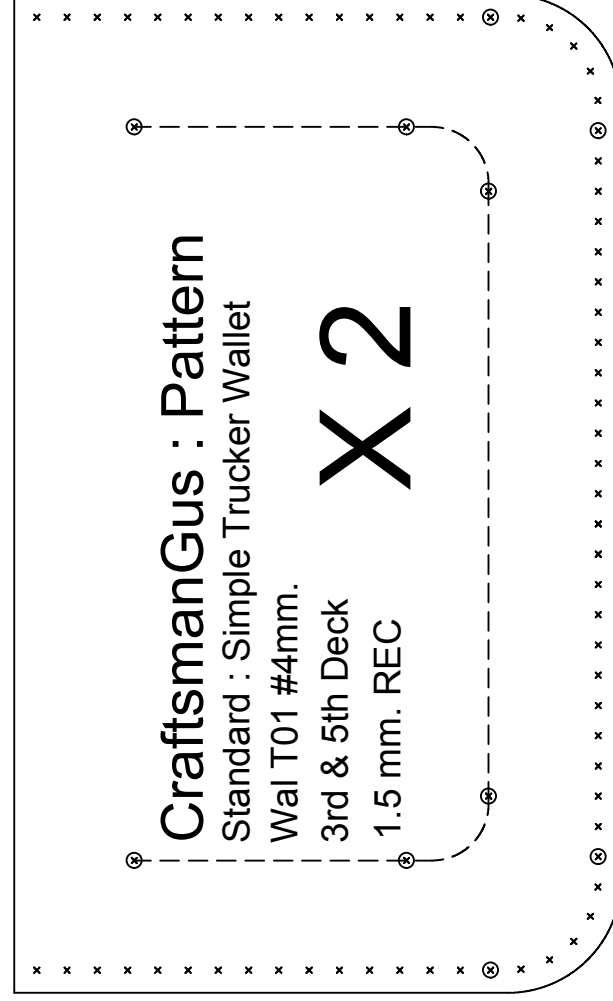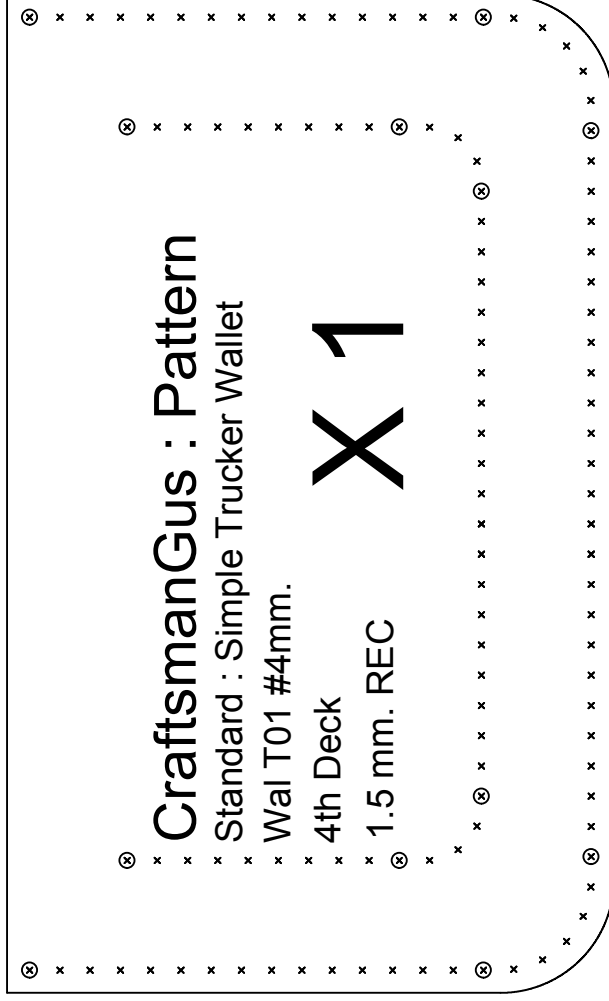

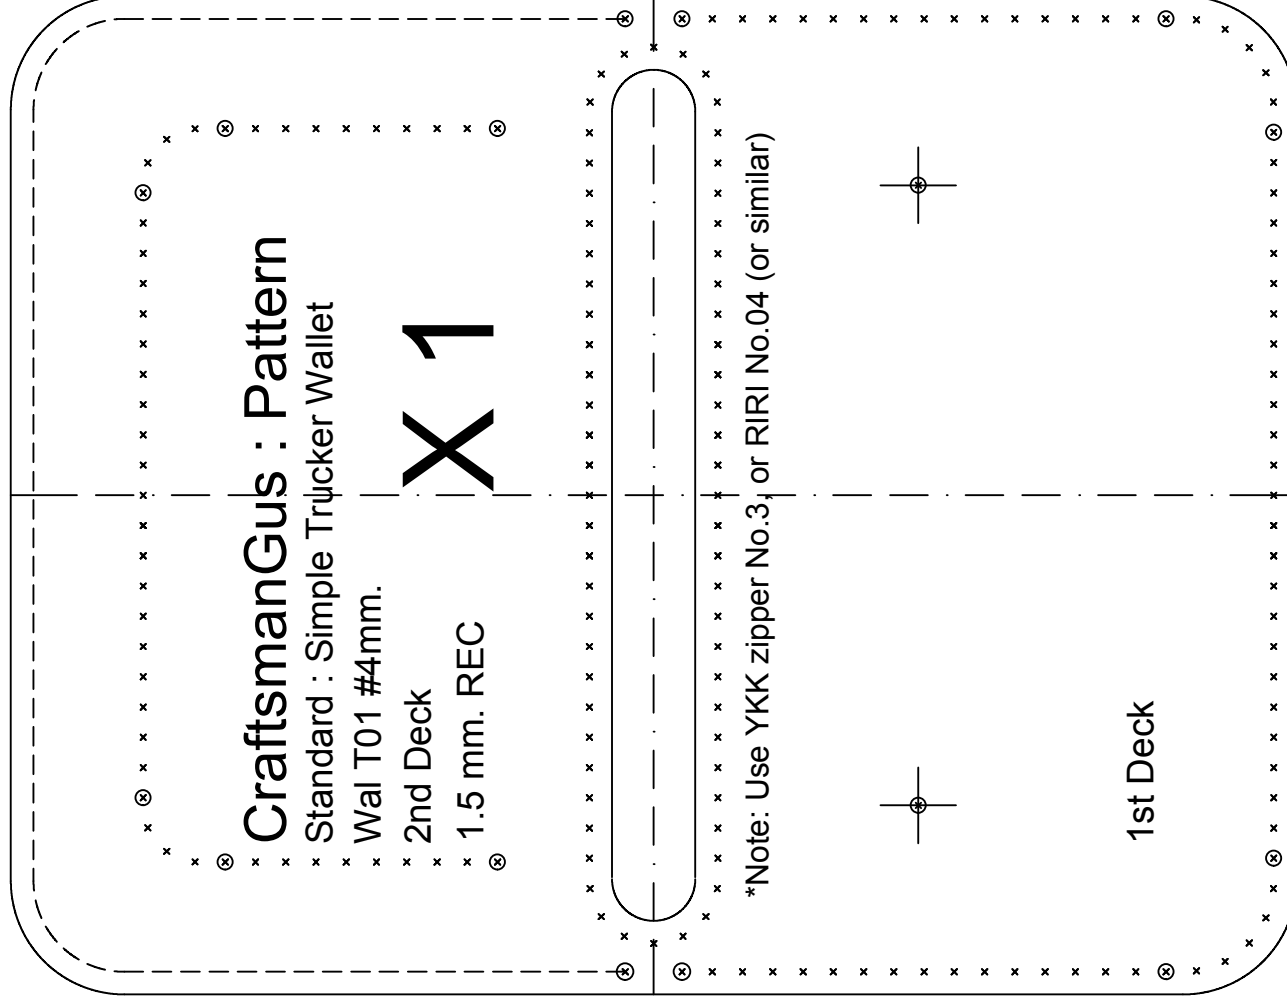

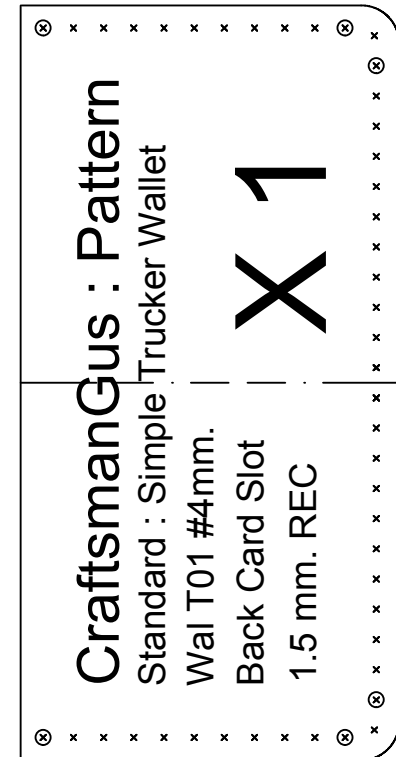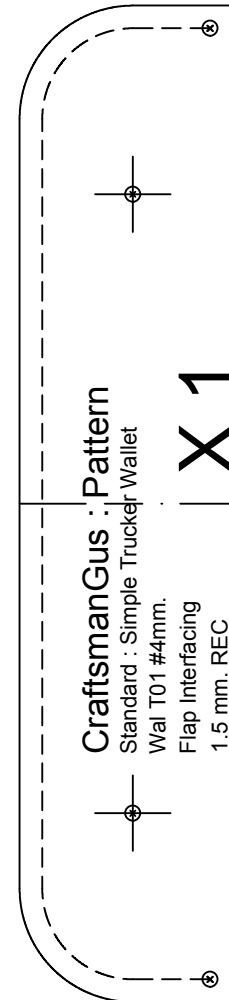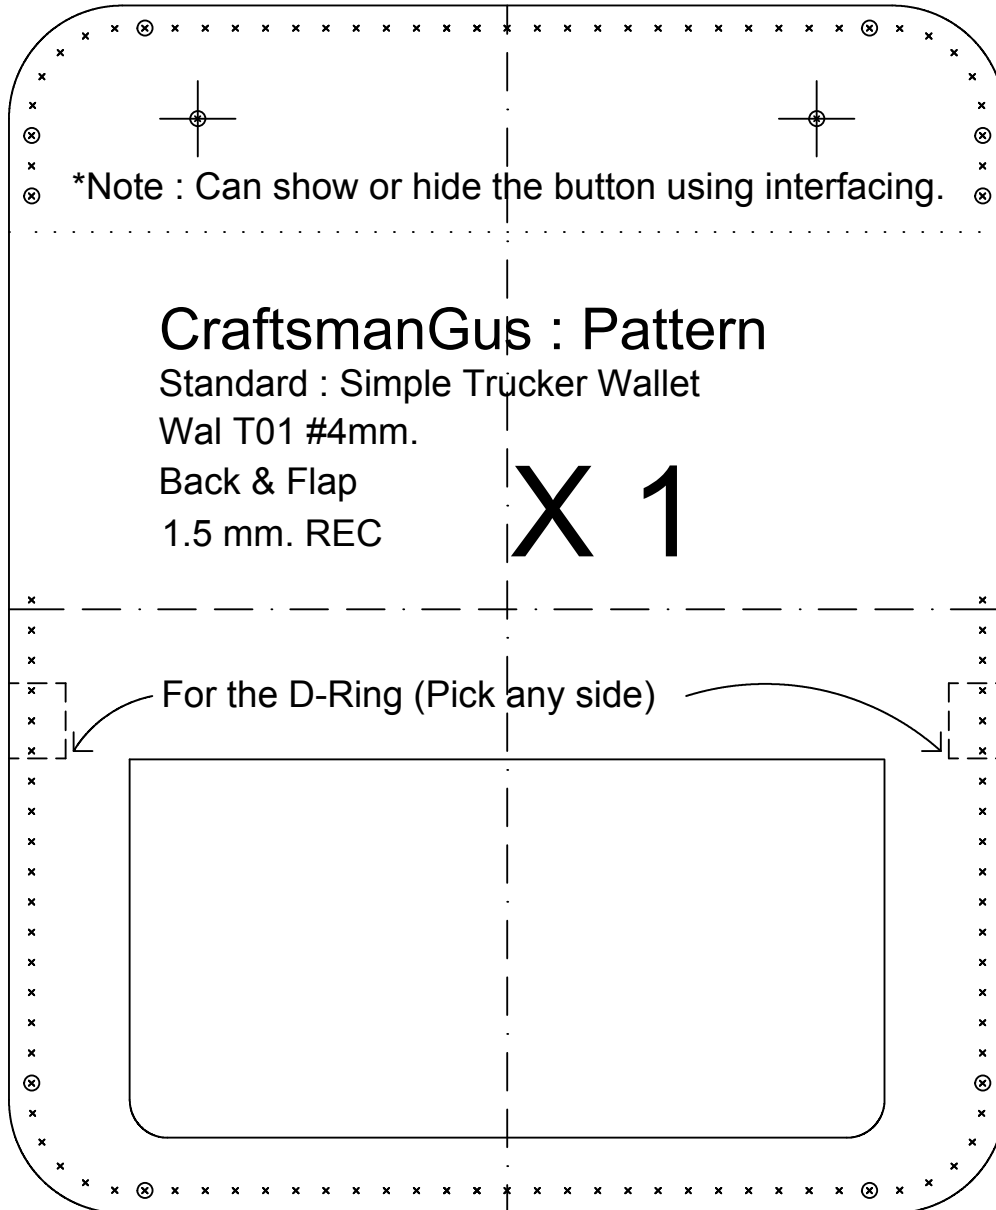

CraftsmanGus : Pattern	
Standard : Simple Trucker Wallet	
Wal T01 #4mm.	
D-Ring Holder (10mm.)	X 1
1.5 mm. REC	