



ACC-93 Instruction


Step 1: Sew zipper on A06 and then sew A06 on A02's lining, and sew A07 on A02's surface. Then full pasted them together.

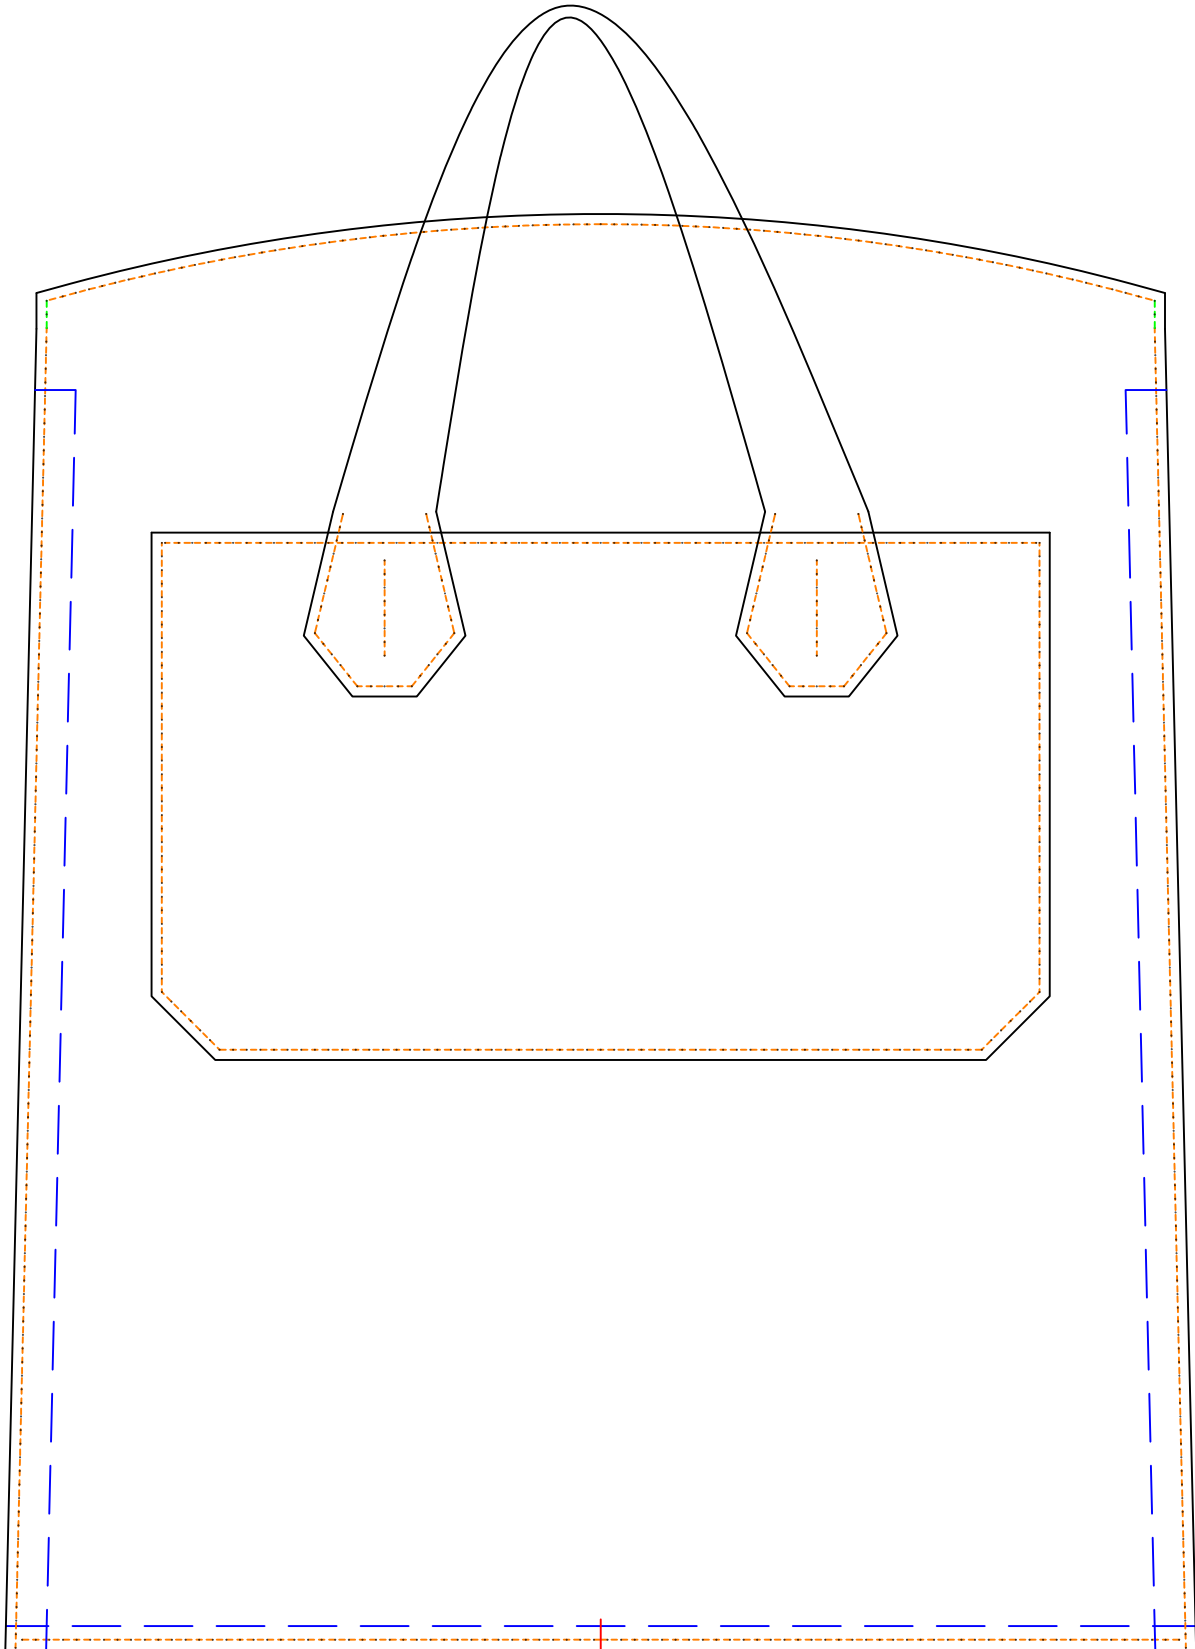


Step 2: Sew A07 on A02's surface. Then full pasted lining together with A02's surface.

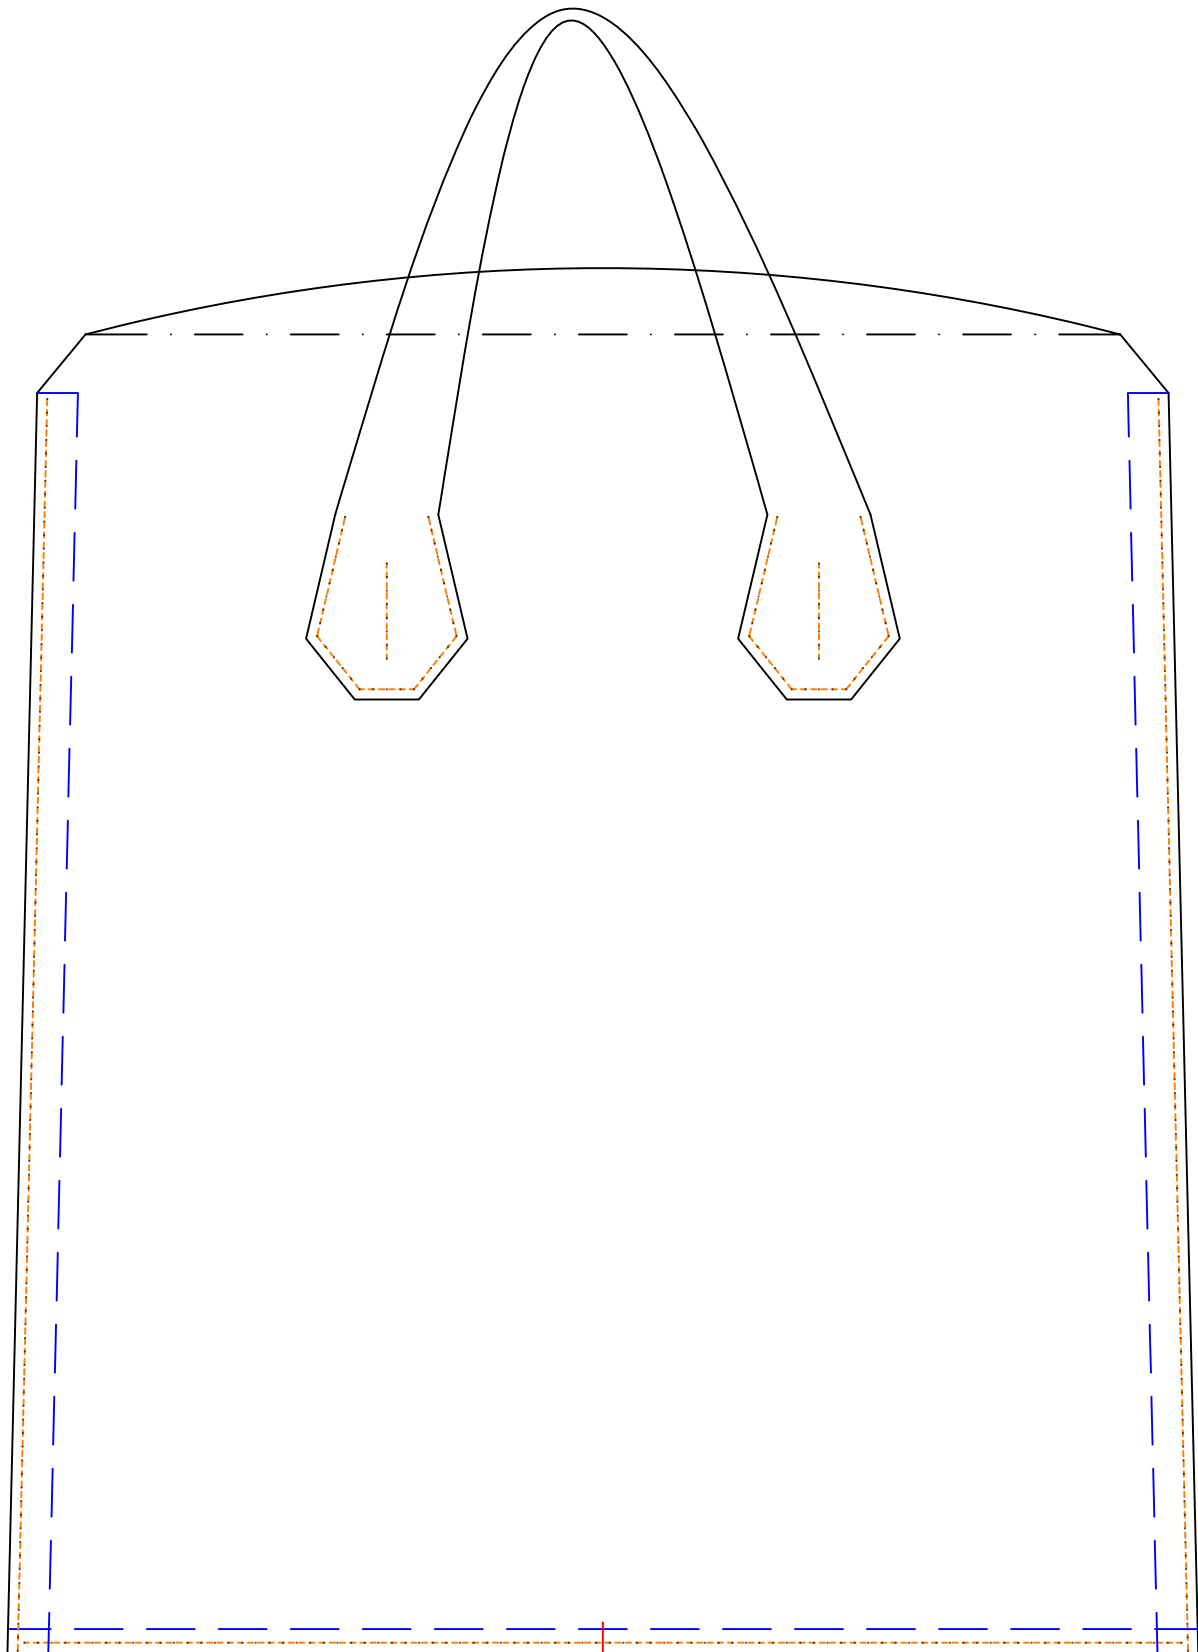

Step 3: Sew A13 on A03's lining, and sew A08 on A03's surface.

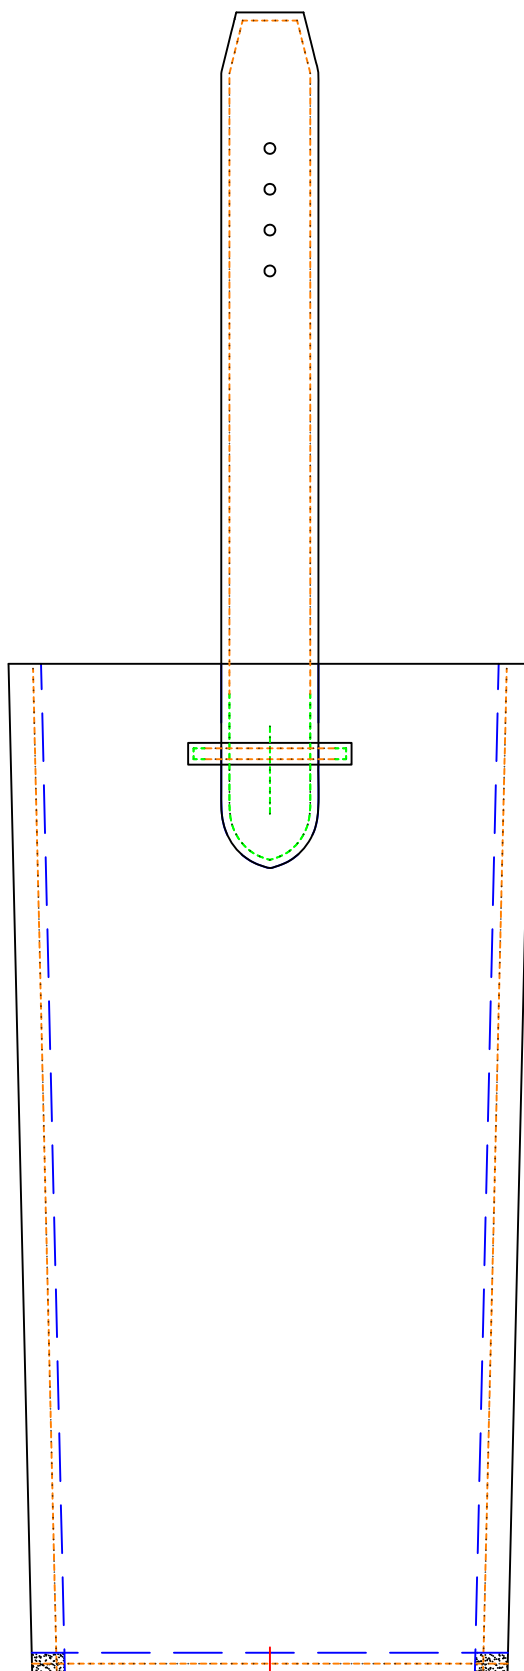

Step 4: Sew all pieces together to form a bucket

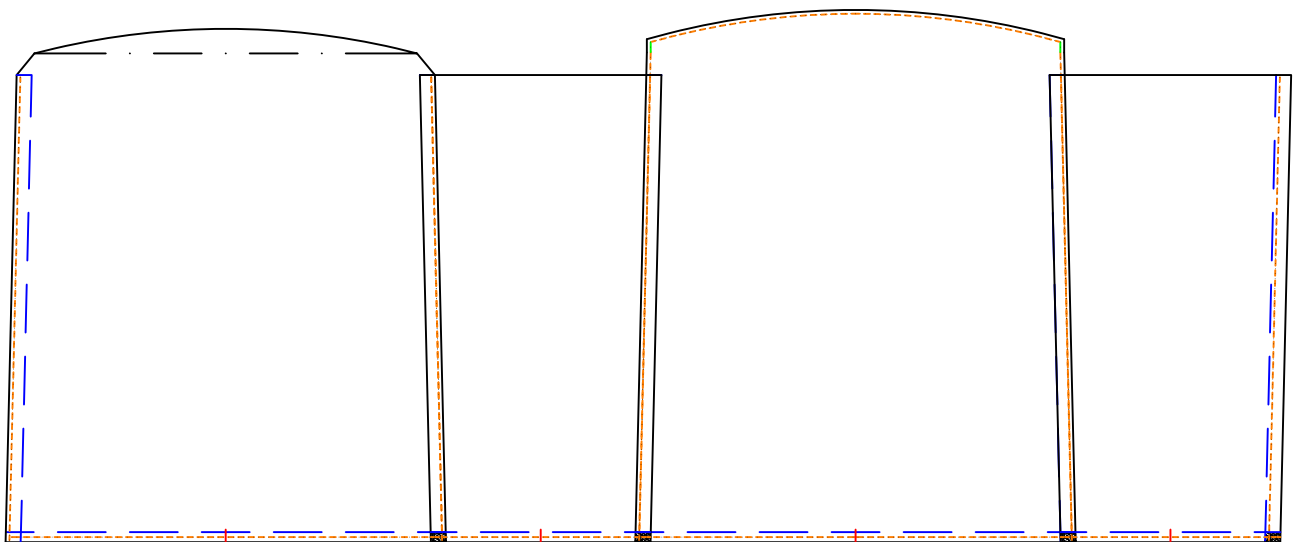

Step 5: Now you can fold the bottom of the bucket, paste and sew between the external and internal bottom. Here on the corners, you can try to cut some triangle openings to make the corners smoothly.

Notice:

1, You can burnish edges for aesthetic if you use vegetable tanned leather and use edge paint for aesthetic if you use chrome tanned leather;

2, 1oz=0.4mm;

3, Here is the line instruction.

