

Step 108



Step 109



Step 110



Step 110



Step 110



Step 111



Step 111



Step 112



Step 112



Step 113





Step 113



Step 113

Step 114



Step 114

TOP




Step 114



Step 115



Step 116

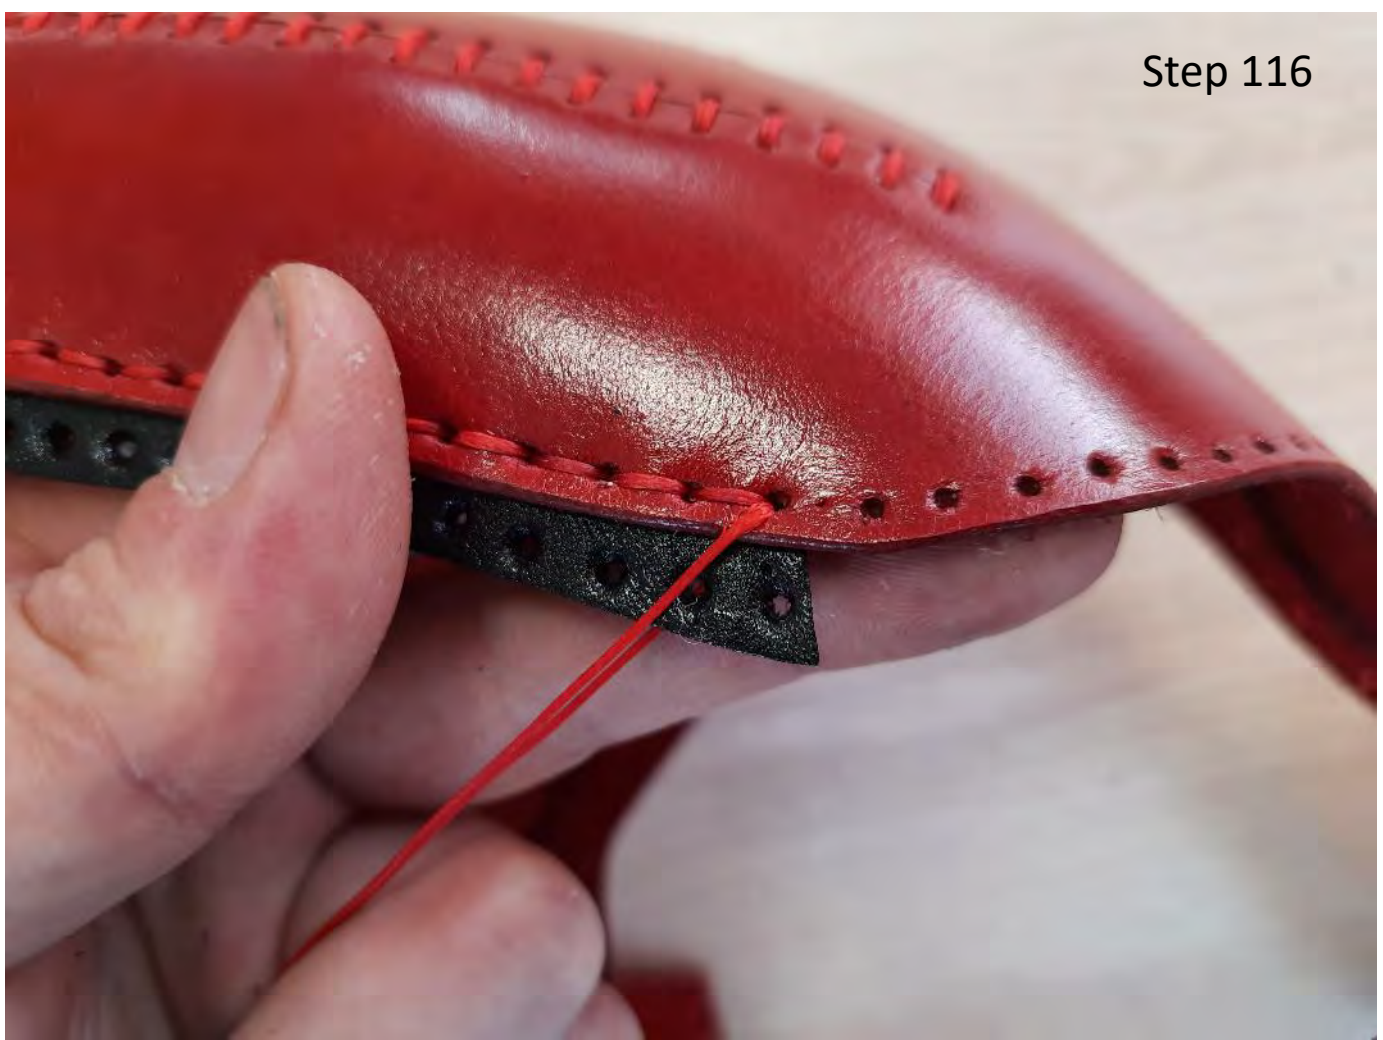

Step 116



Step 117



Step 118



Step 118



Step 119



Step 120




Step 120




Step 121




Step 121

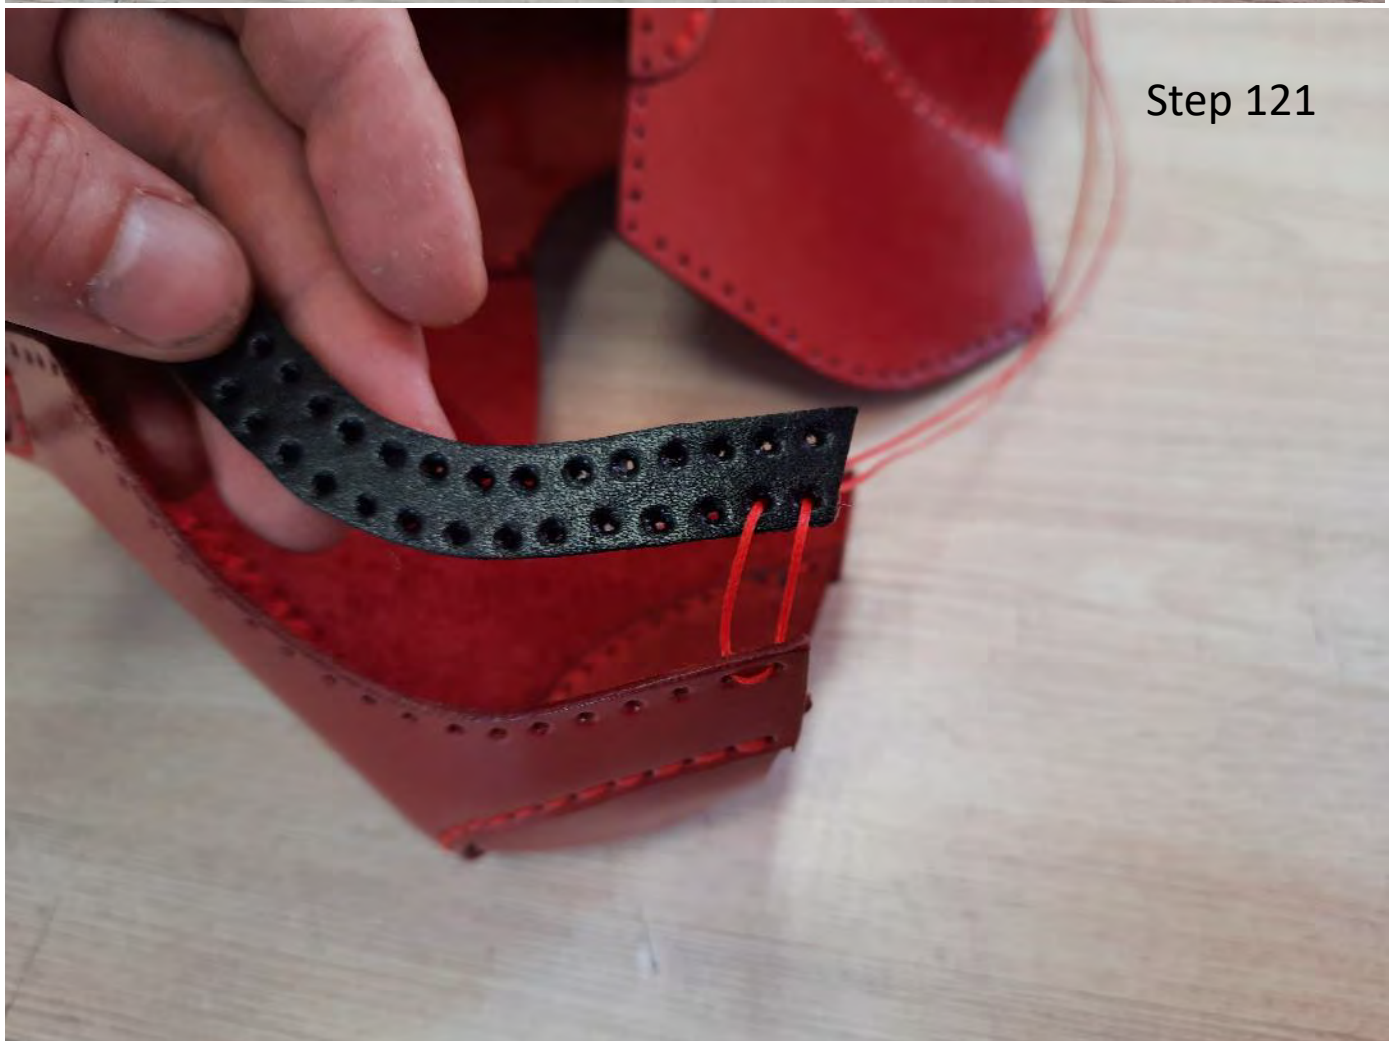

Step 122

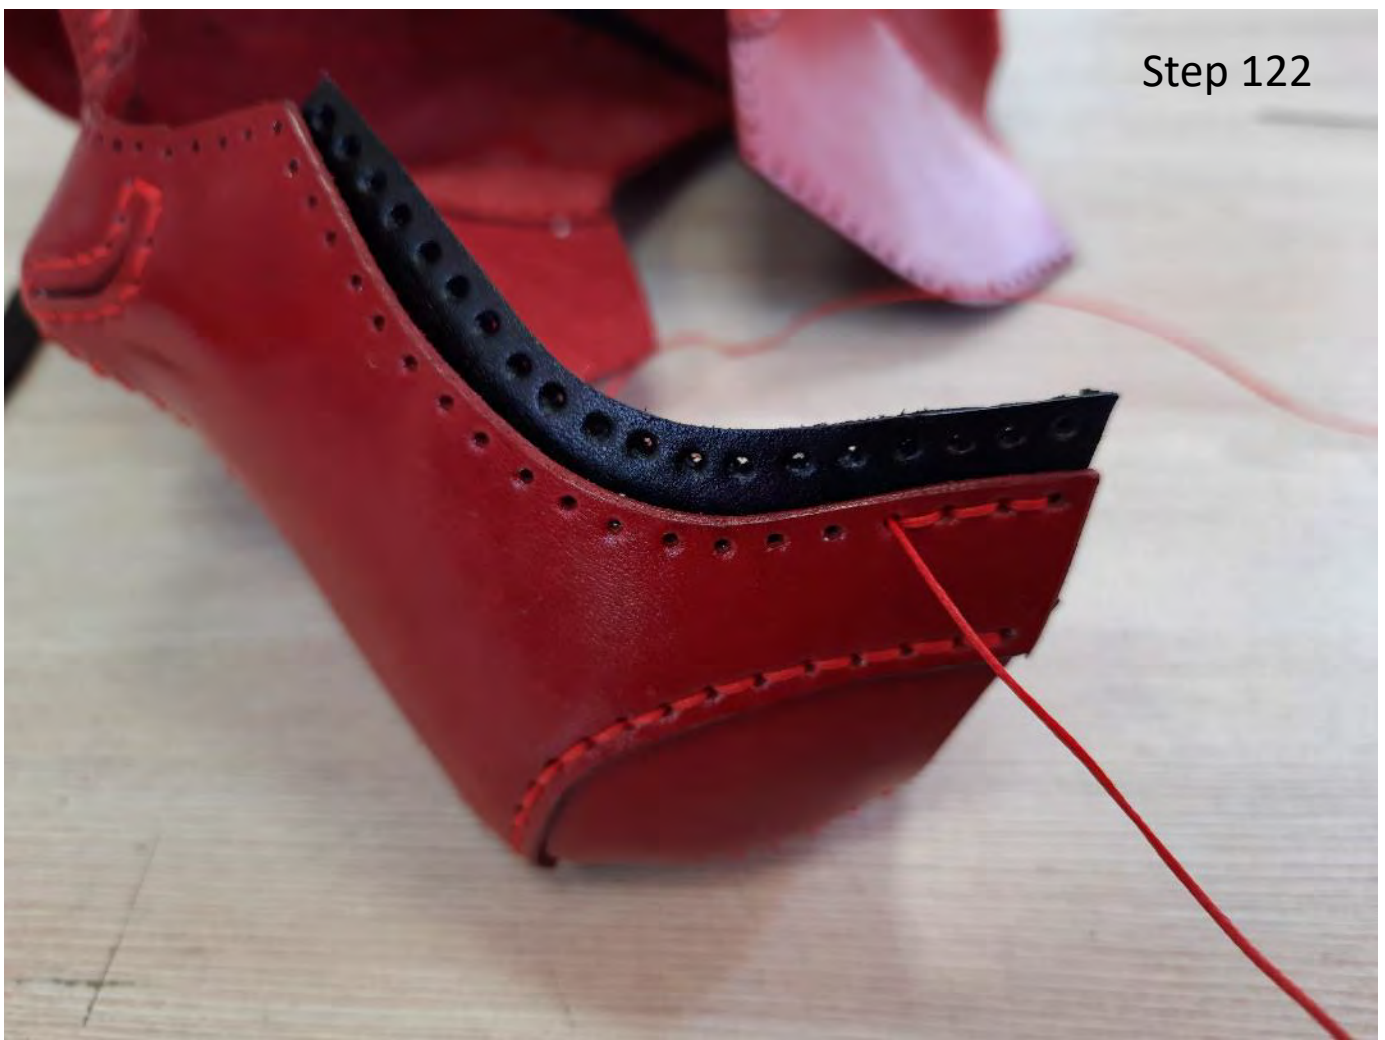

Step 122

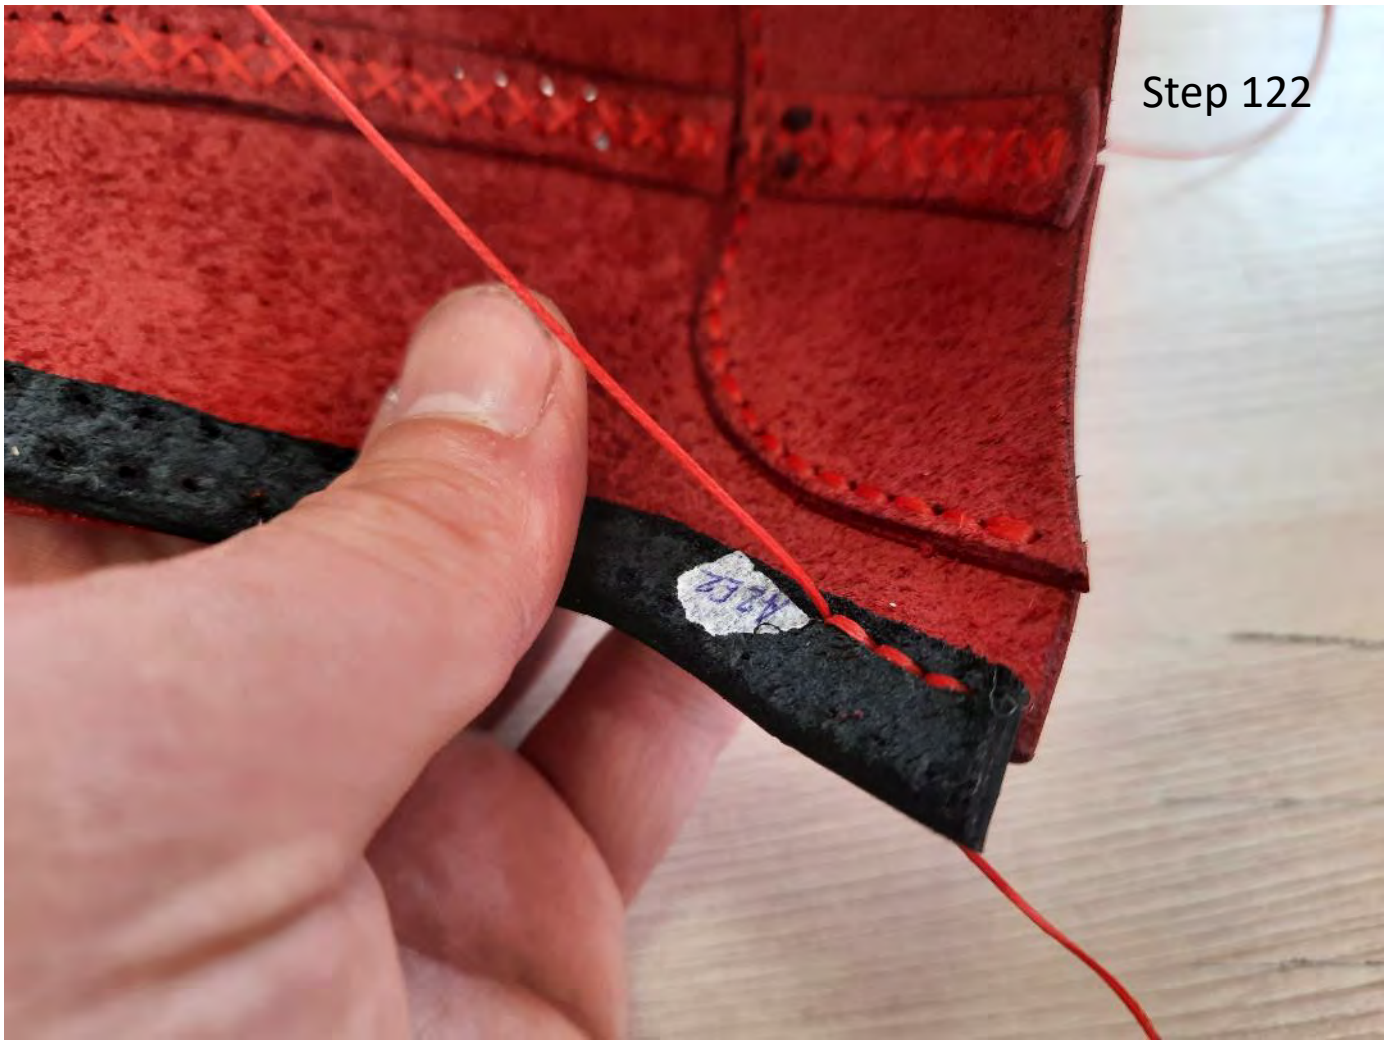

Step 123



Step 123



Step 123



Step 124



Step 125



Step 125



Step 125




Step 126



Step 126



Step 127

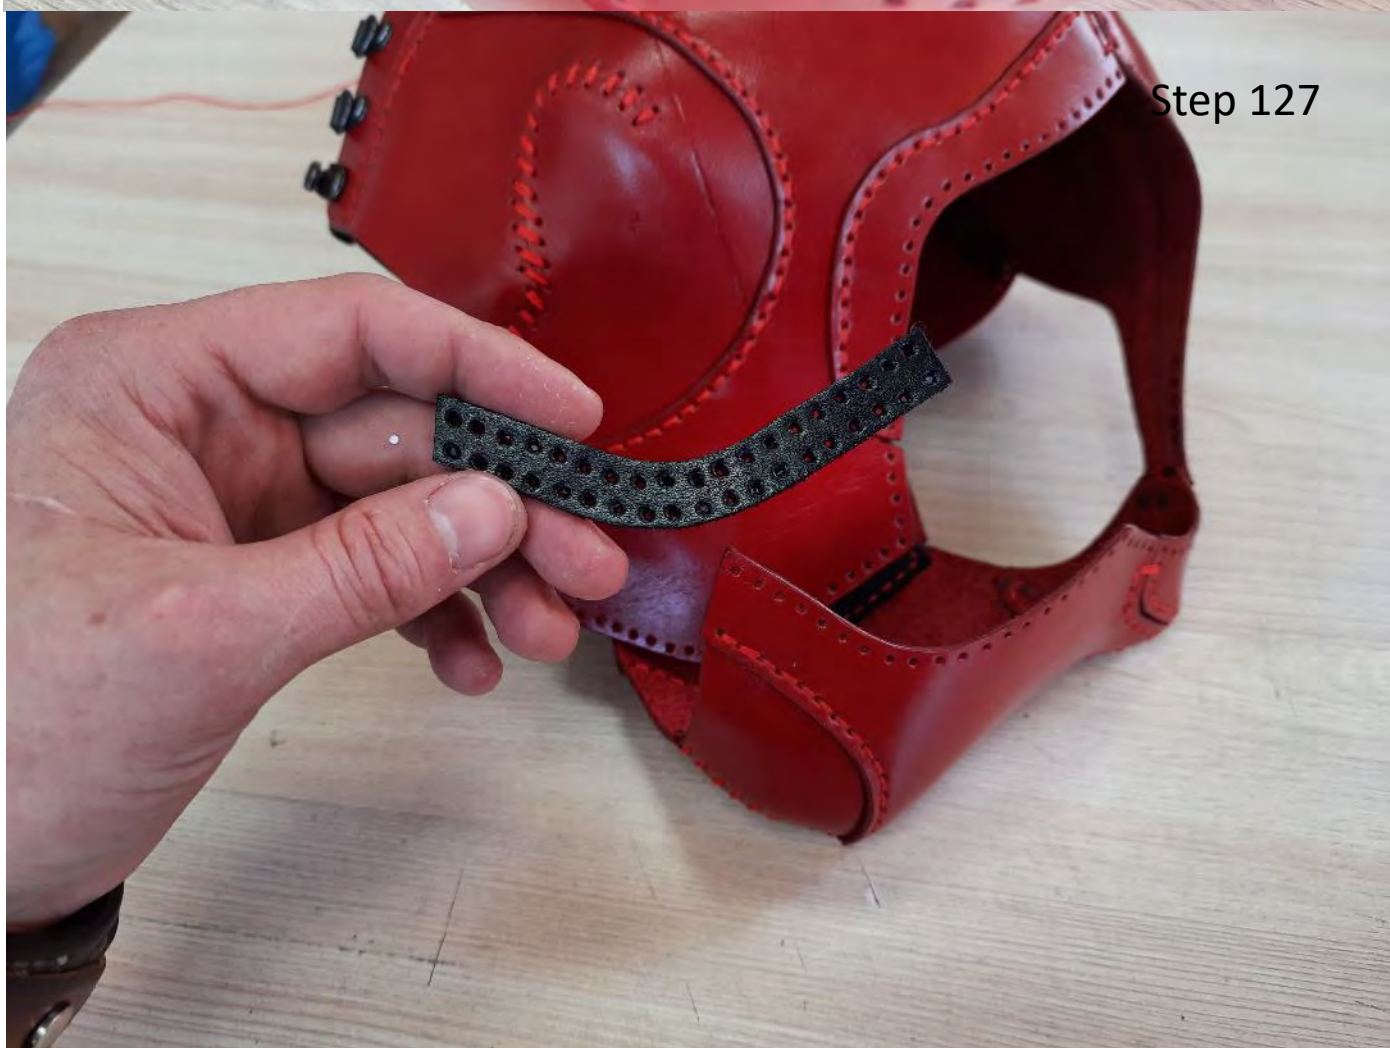


Step 128



Step 129




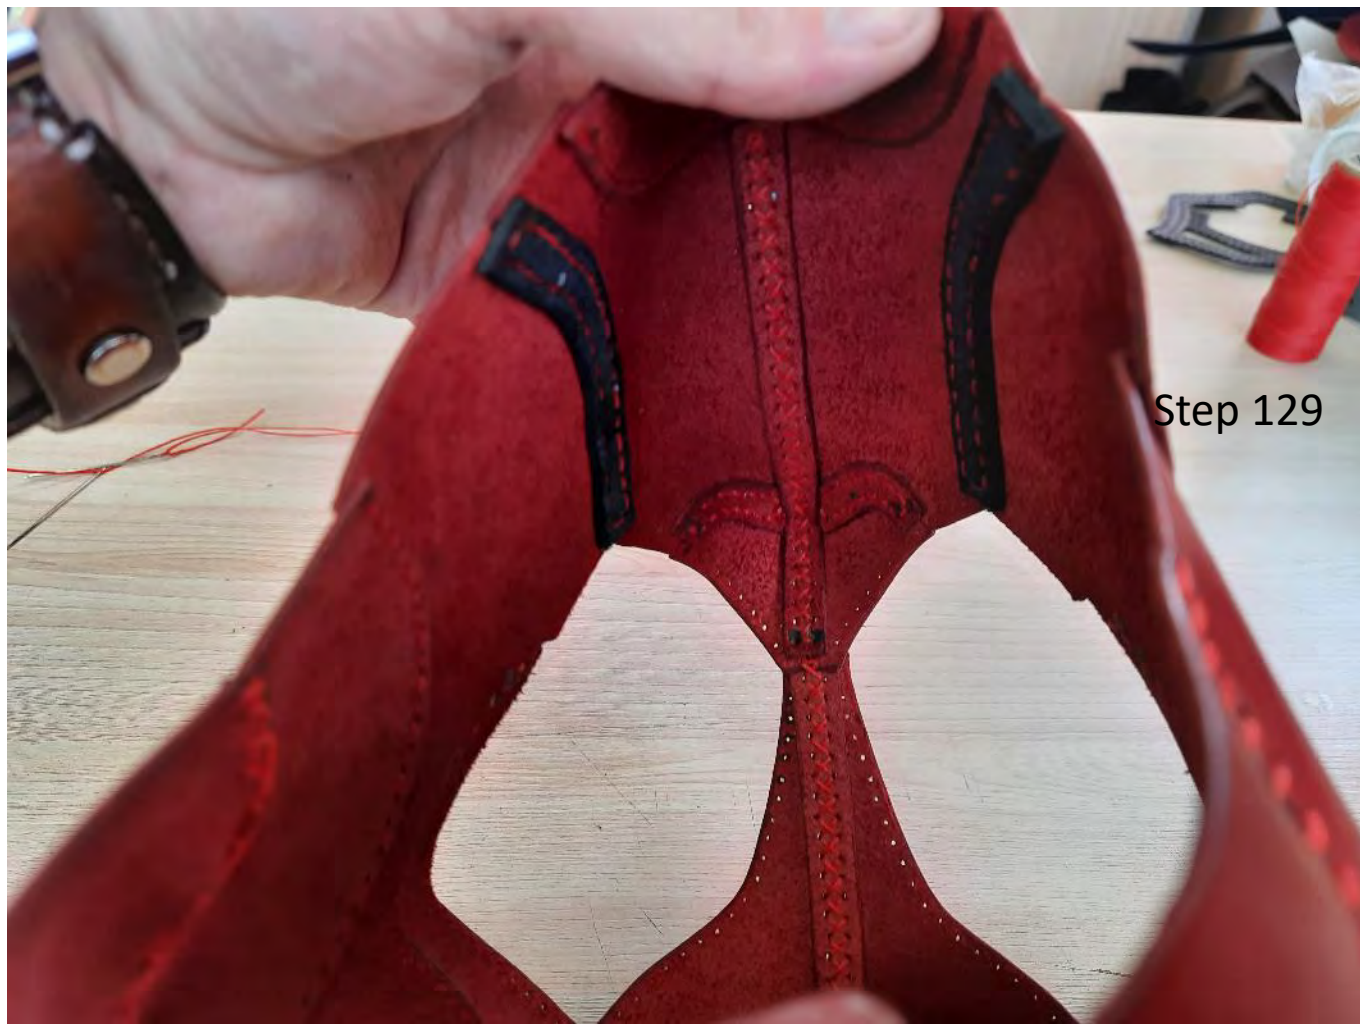

Step 129



Step 130

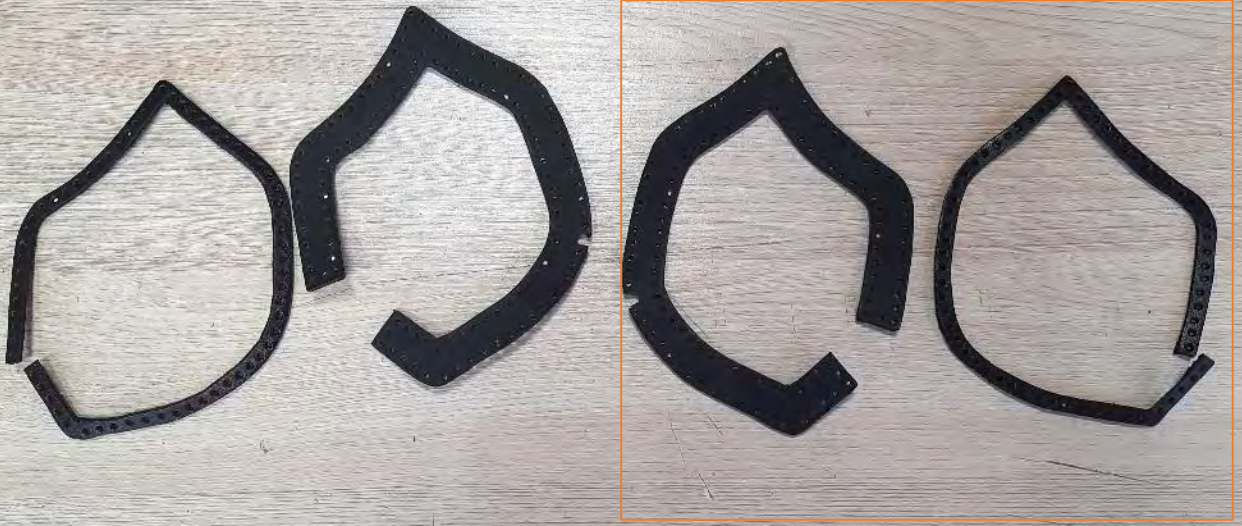


Step 130



Step 130




Step 131

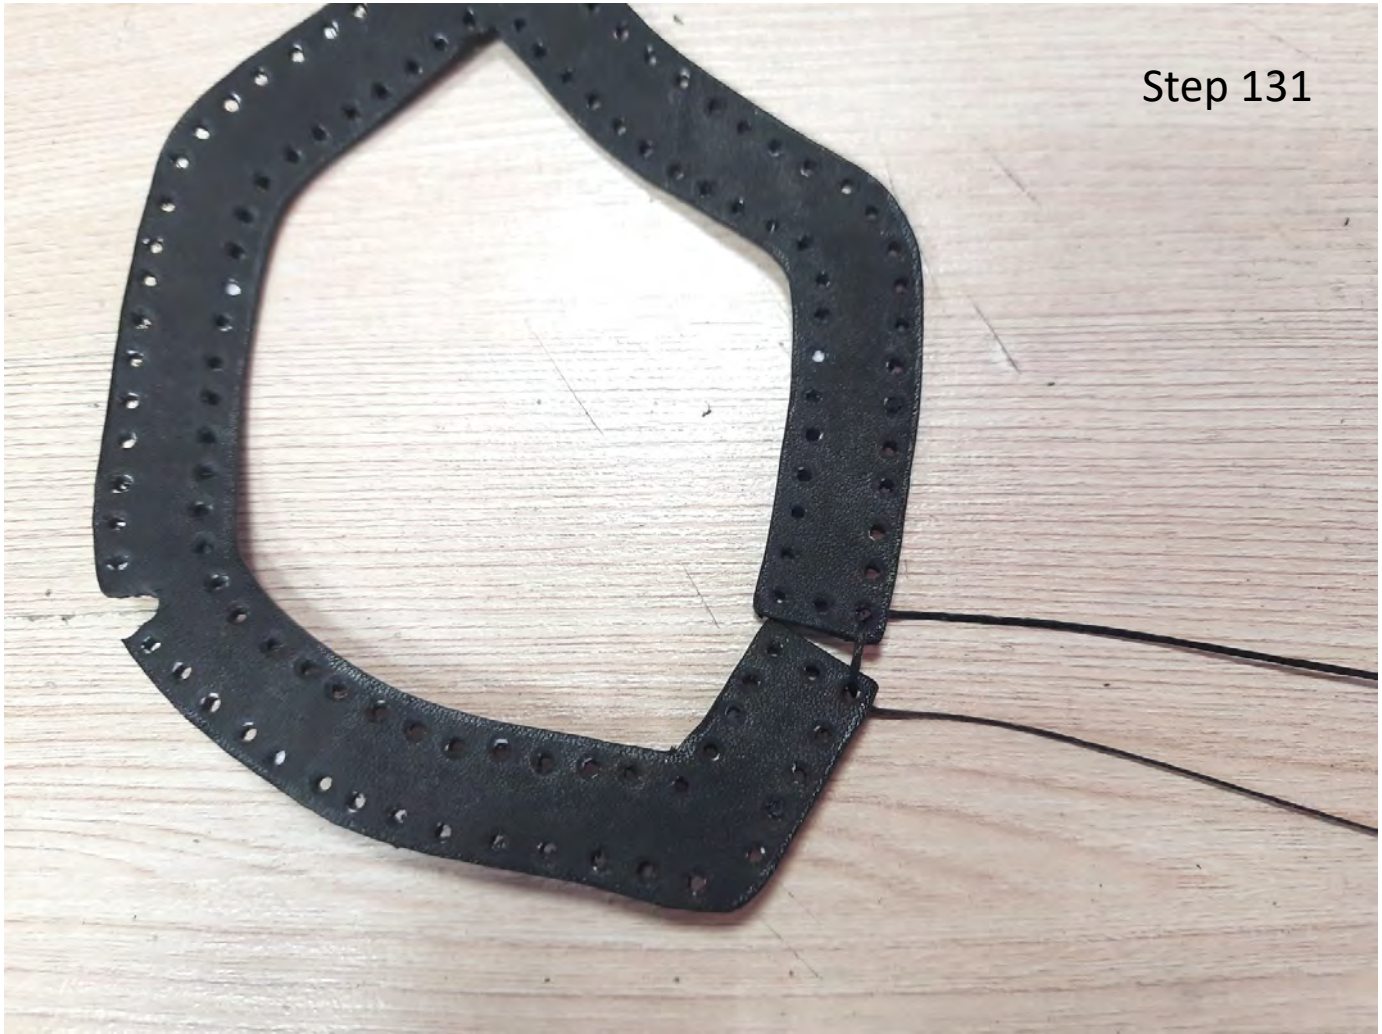

Step 132



Step 132

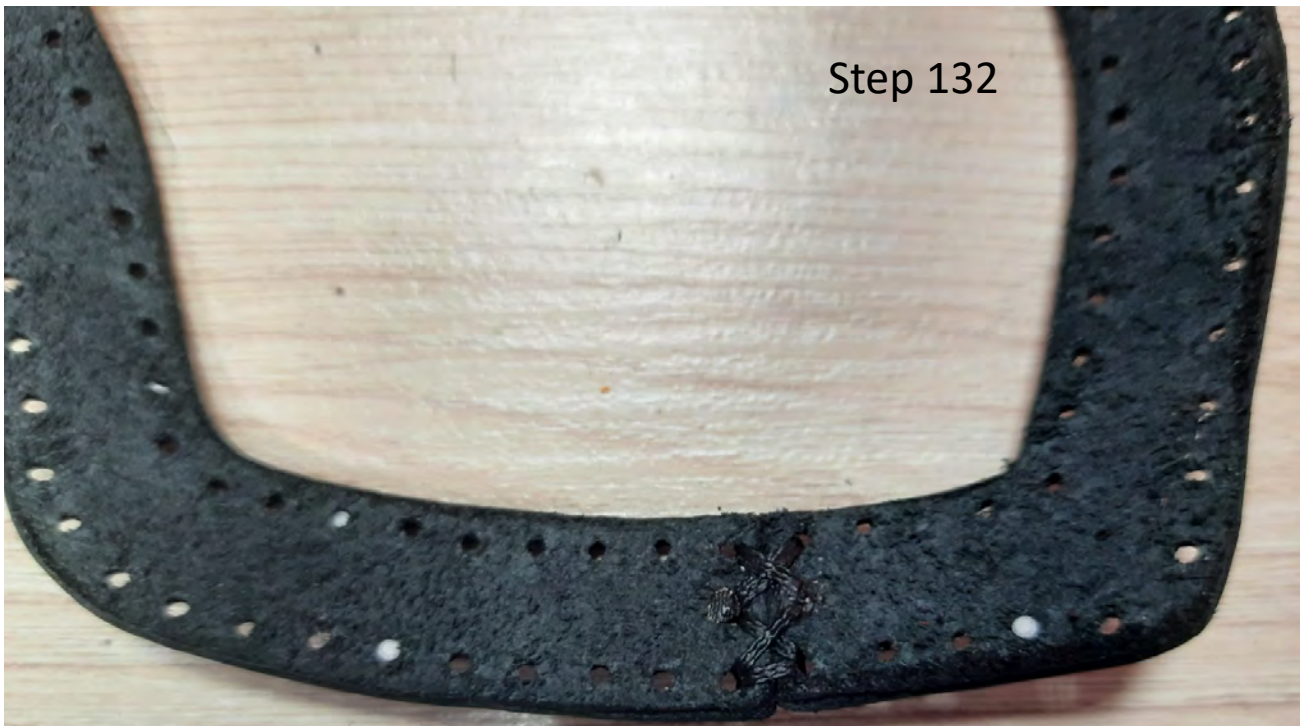

Step 133



Липучка / Velcro

Step 134

Линейкой измерить ширину
Measure the width with a
ruler



Step 135

Петля / loop

Разметить ленту (петля) шириной под оправу
Mark the tape (loop) with a width for the frame

Step 136


Step 136



Step 137



Step 138

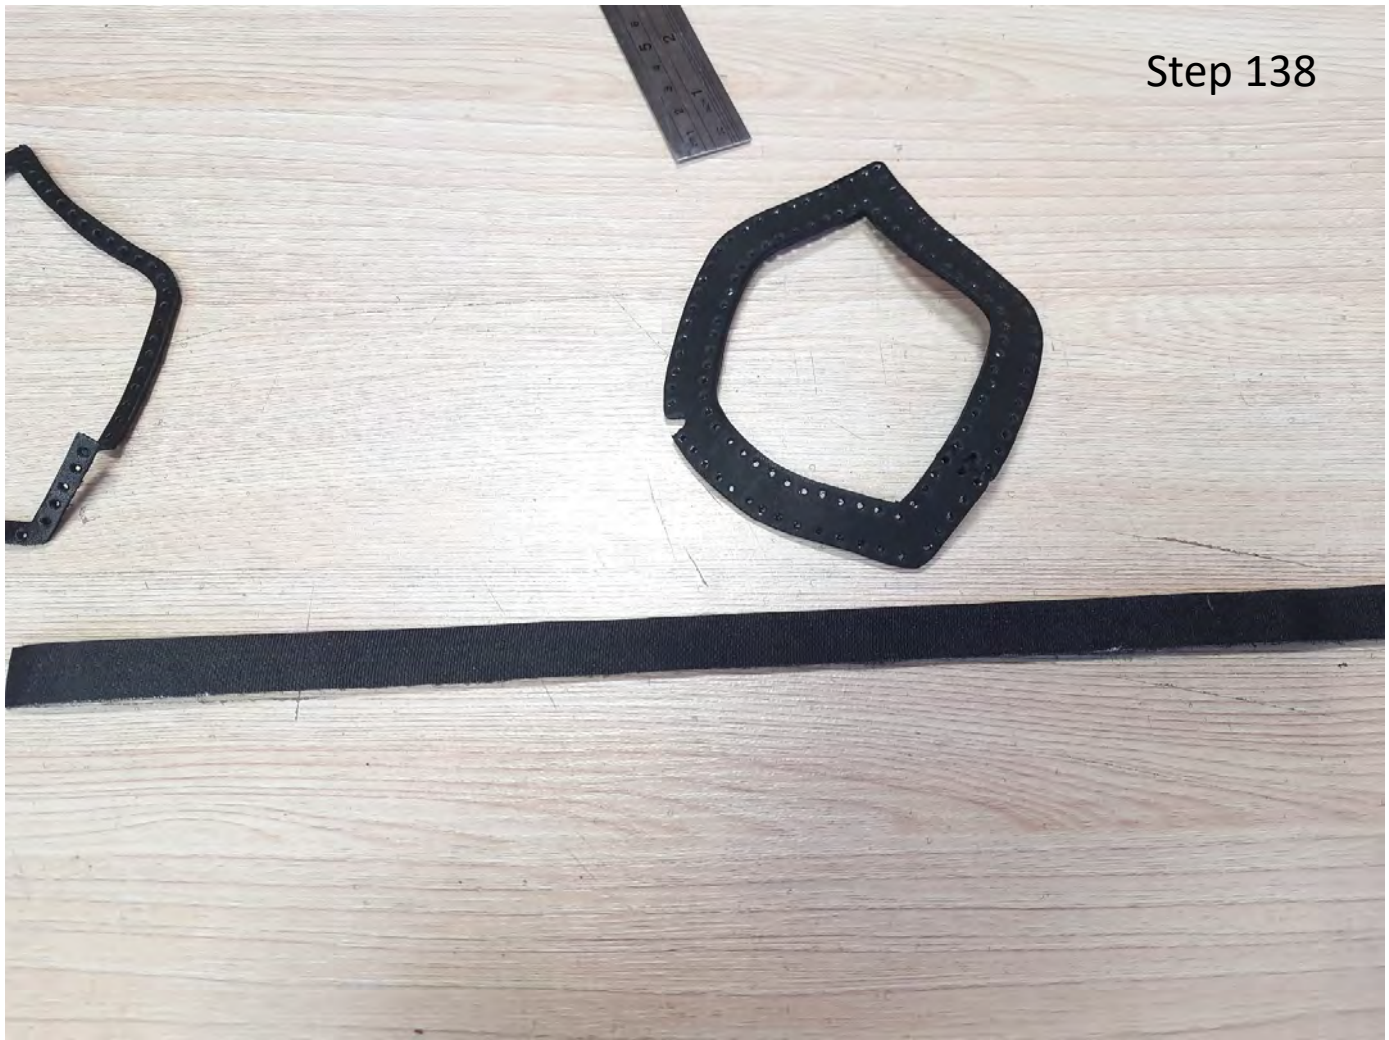

Step 139



Step 140



Step 141



Step 142



Step 143



Step 144



Step 145



Step 146



Step 147



Step 148



Step 149



Step 150


Подрезать лишнее и большие нахлесты
Trim excess



Step 151



Step 152

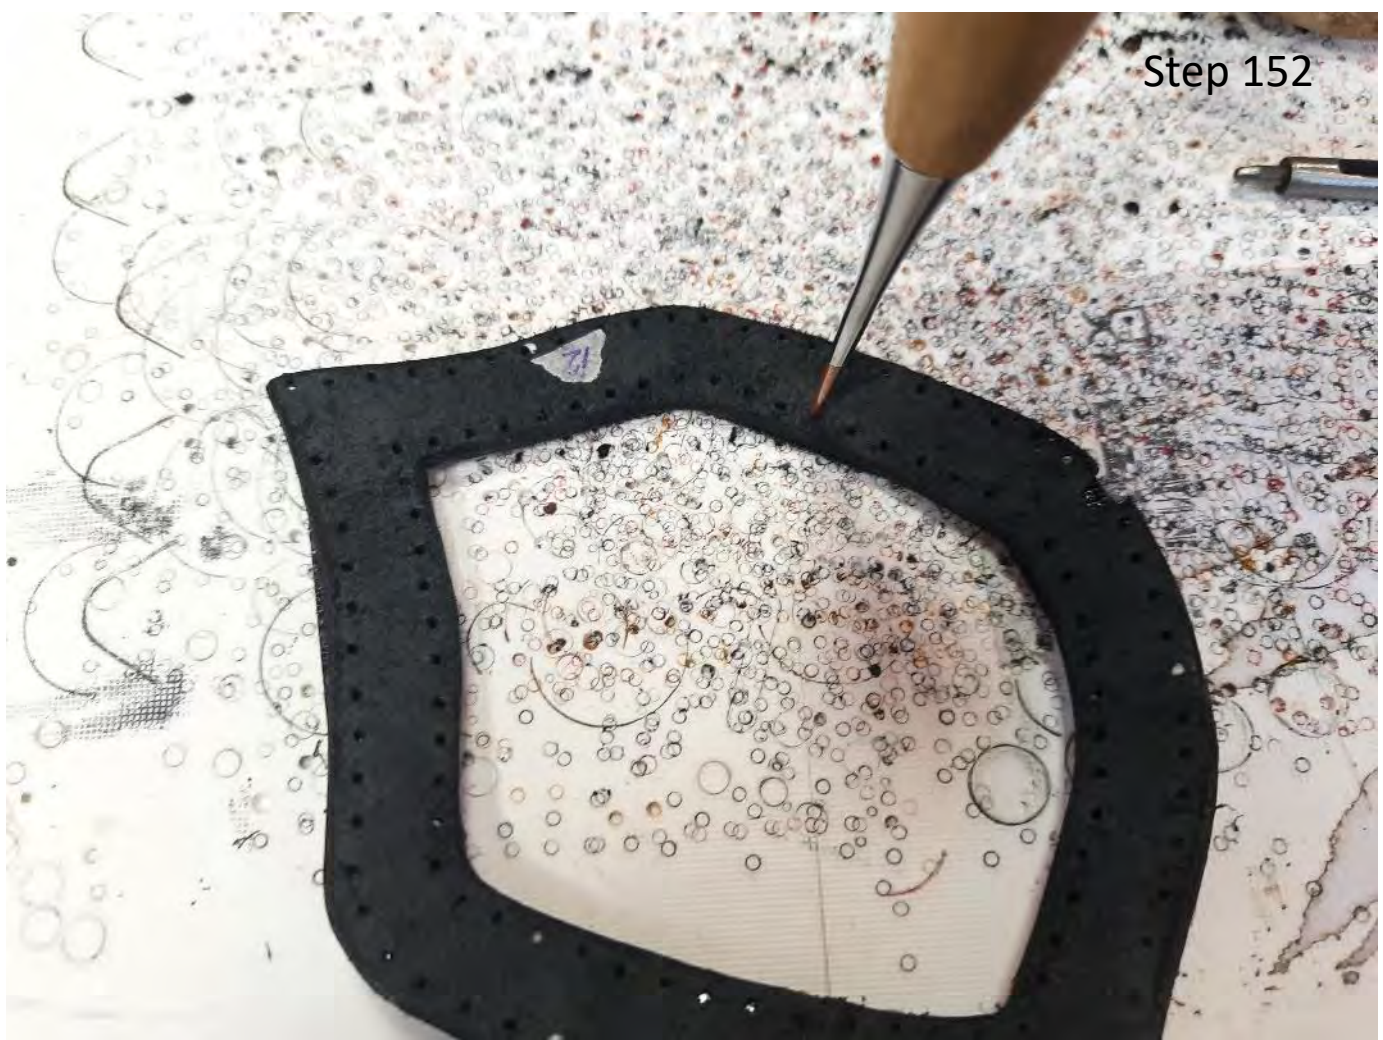

Step 153



Step 154



Step 154



Step 155



Step 156



Step 157



Step 157



Step 158



Step 158



Step 159




Step 160




Step 161




Step 162

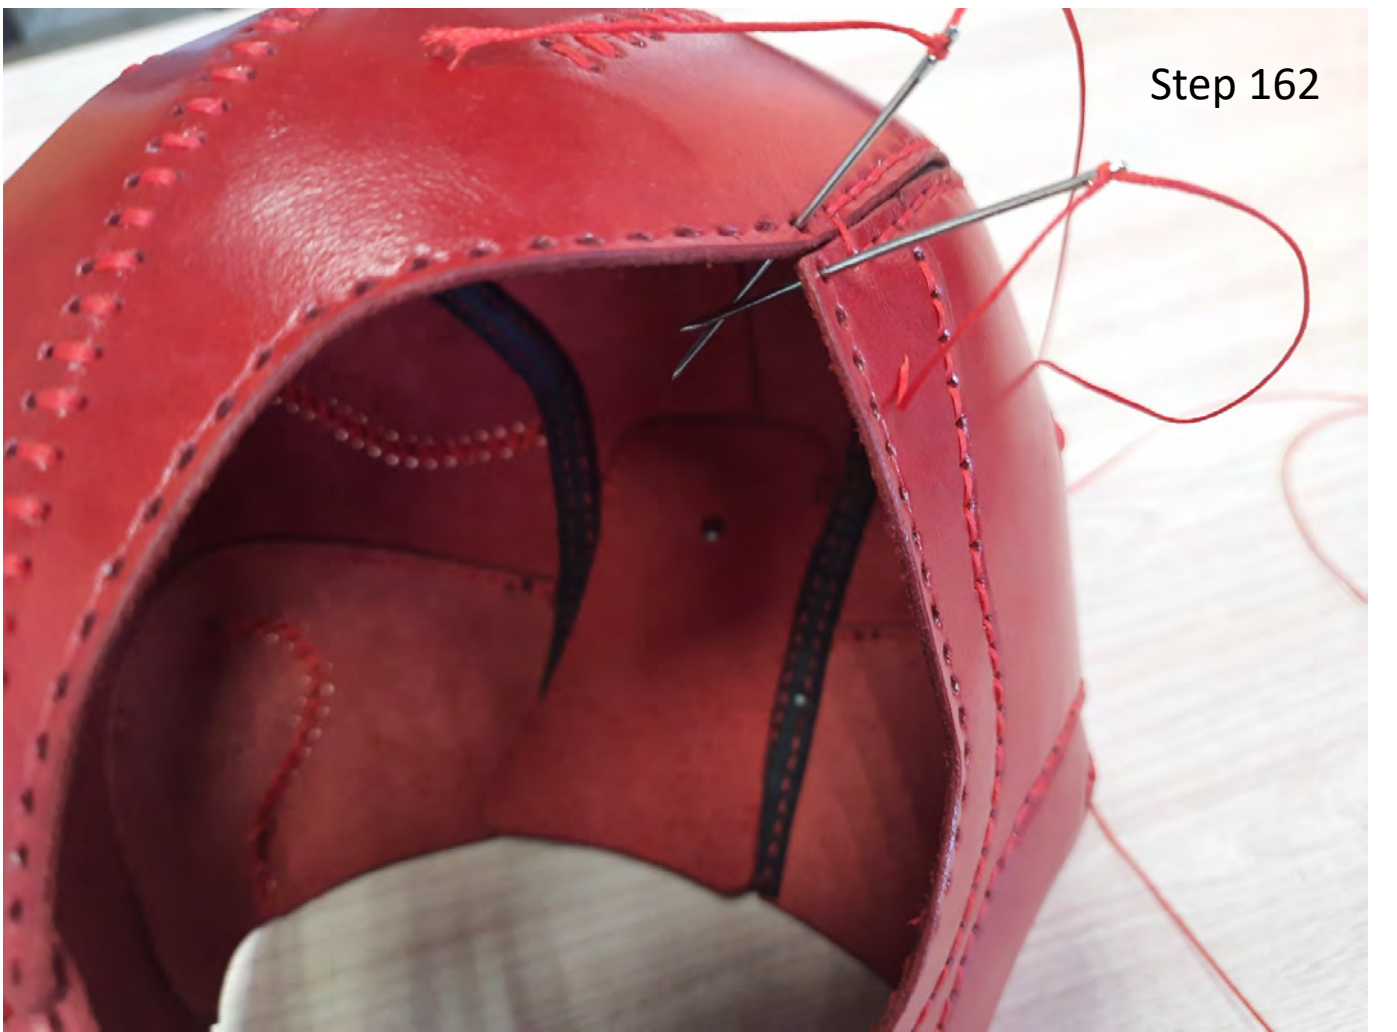

Step 163

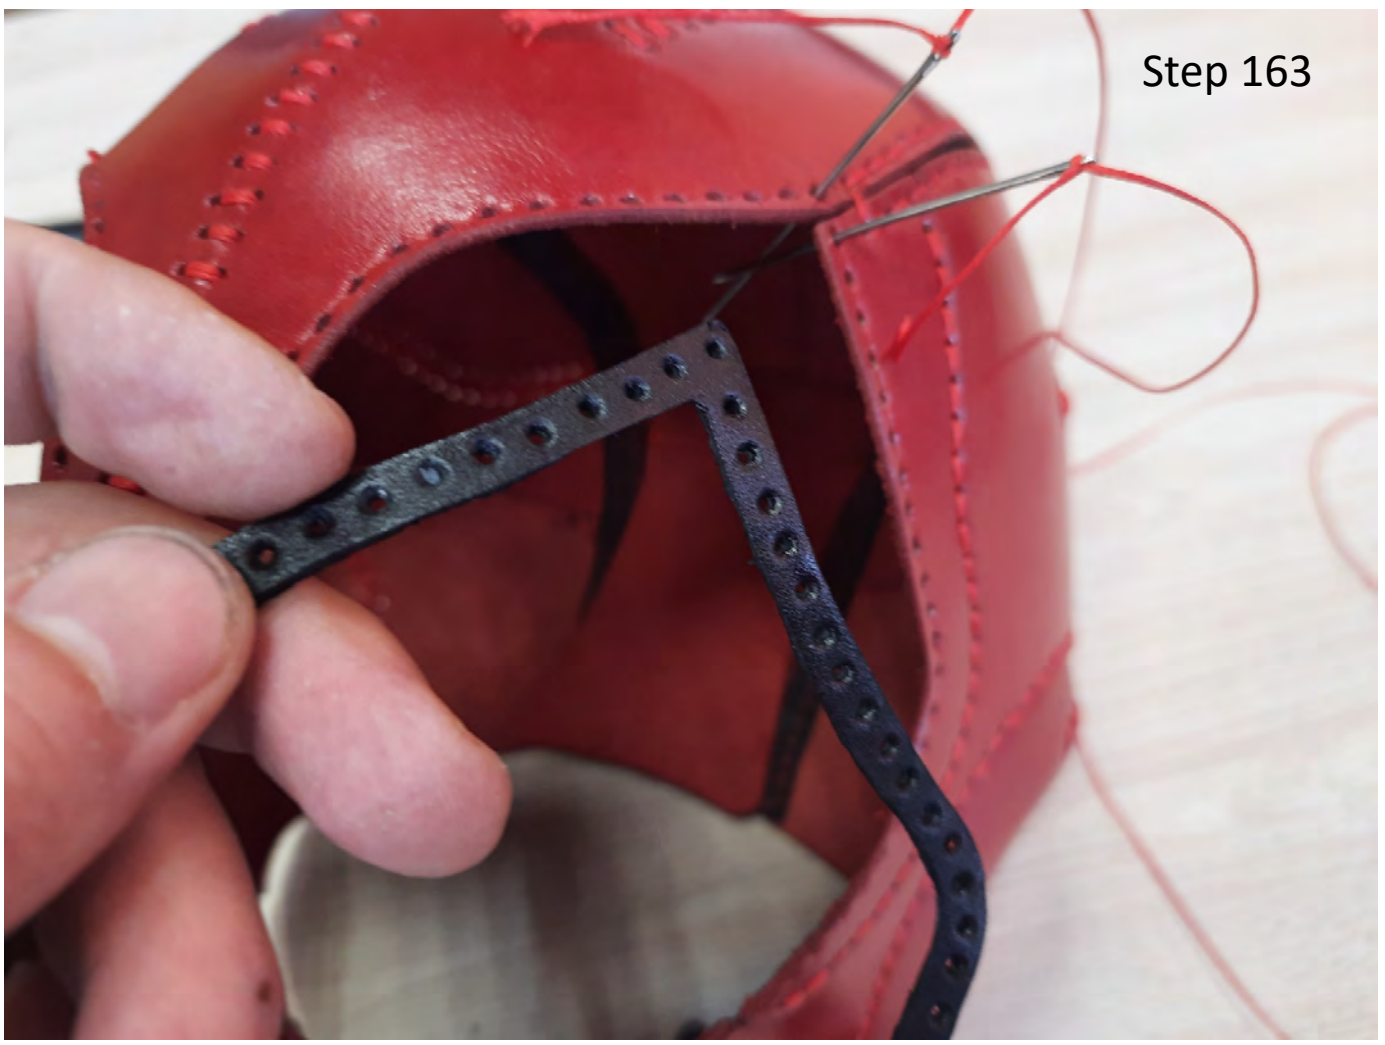

Step 164

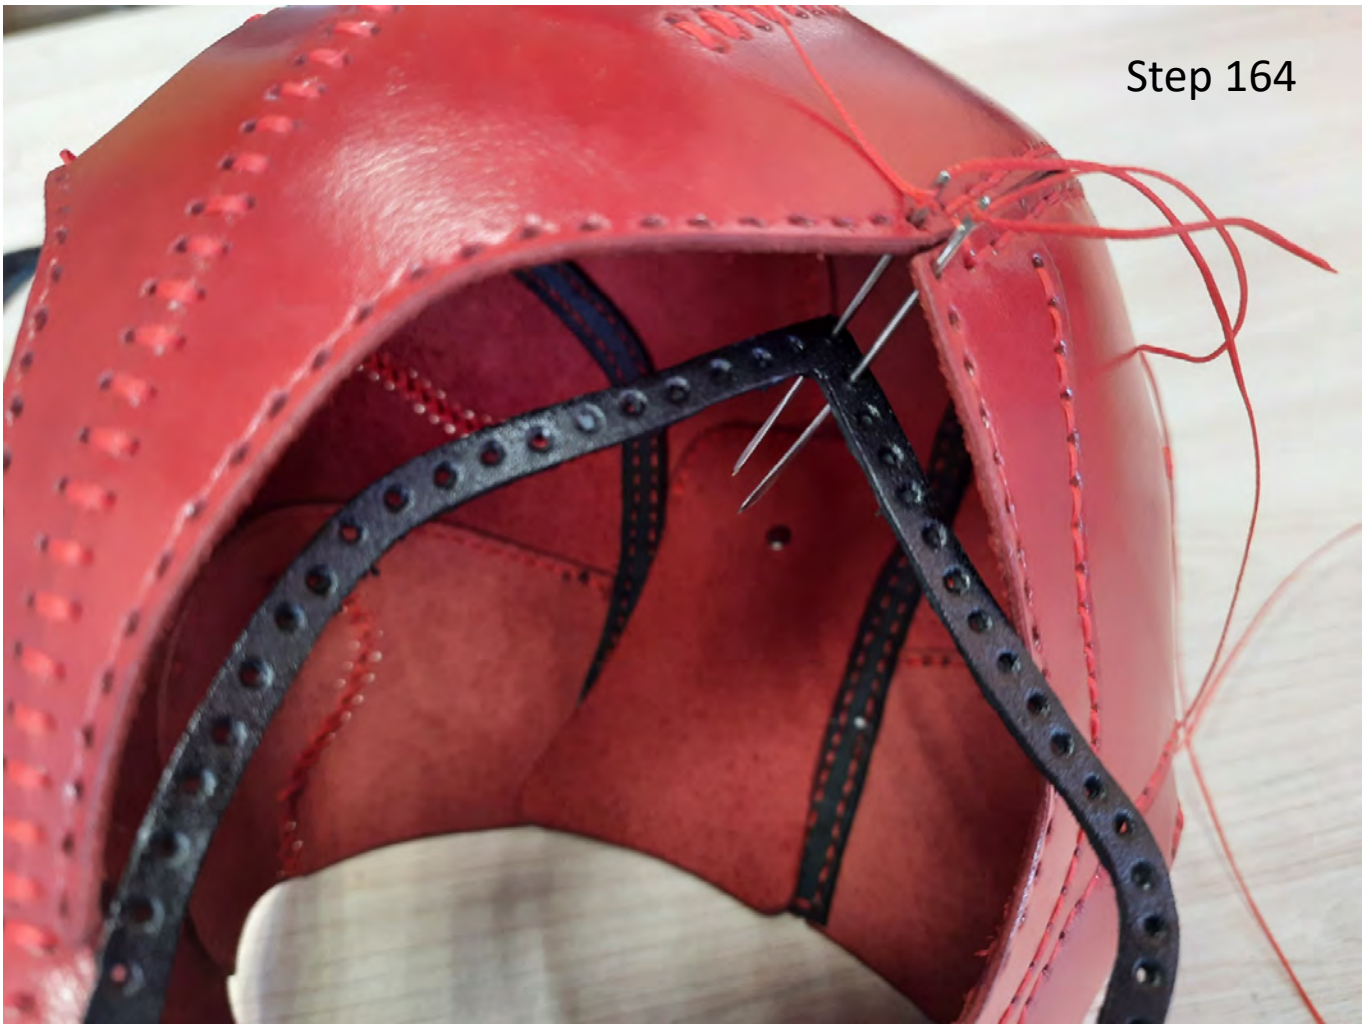




Step 167



Step 168



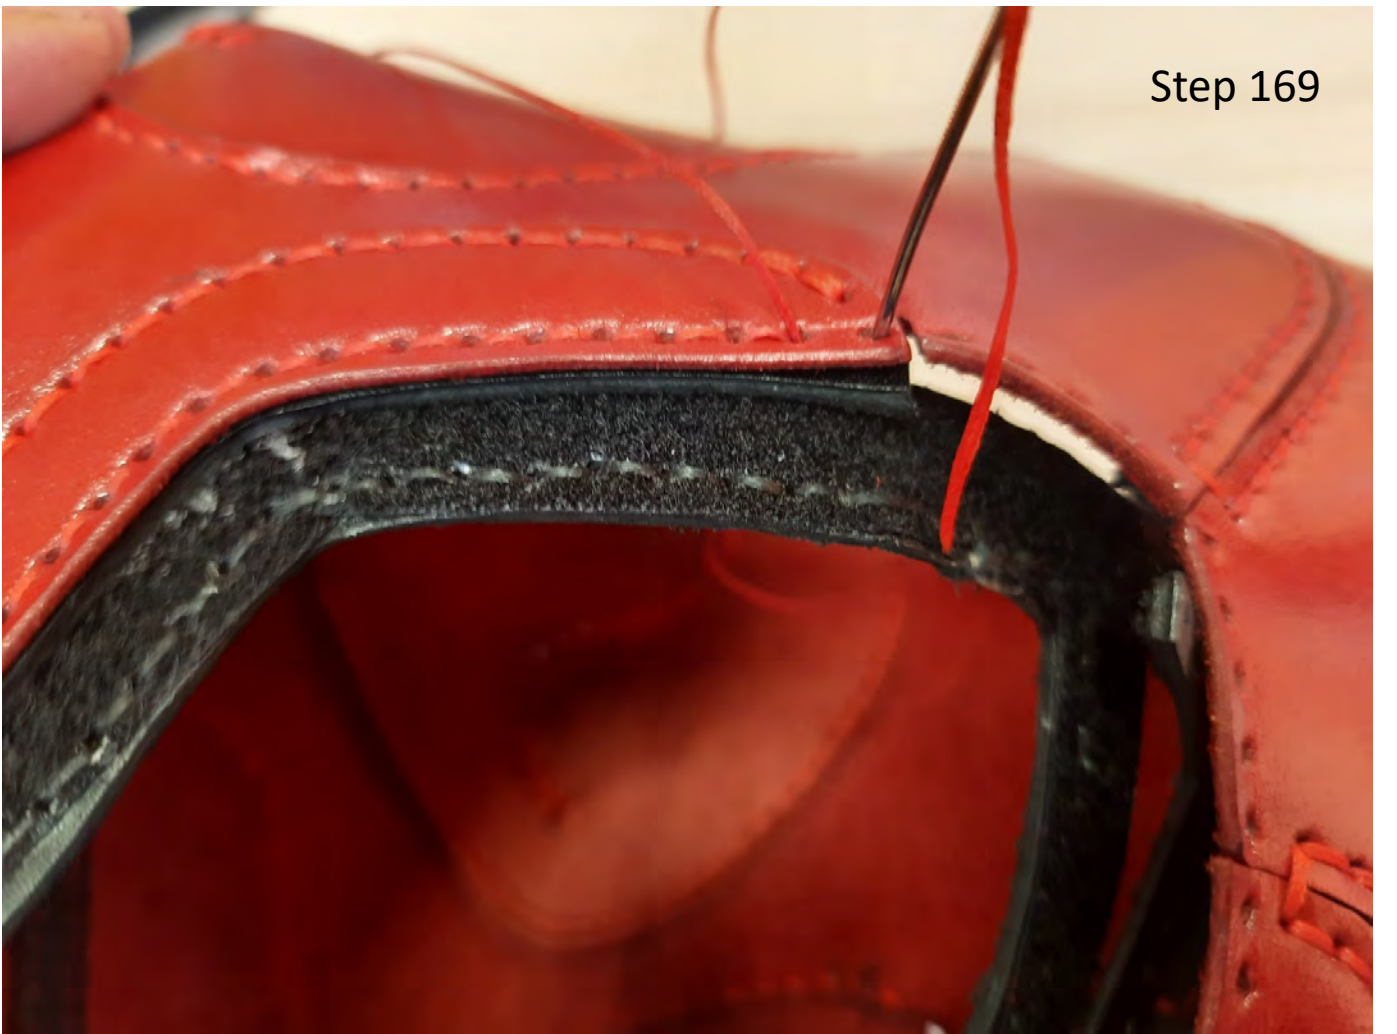

Step 169



Step 169



Step 169



Step 170





Step 170




Step 171

Step 171



Step 171

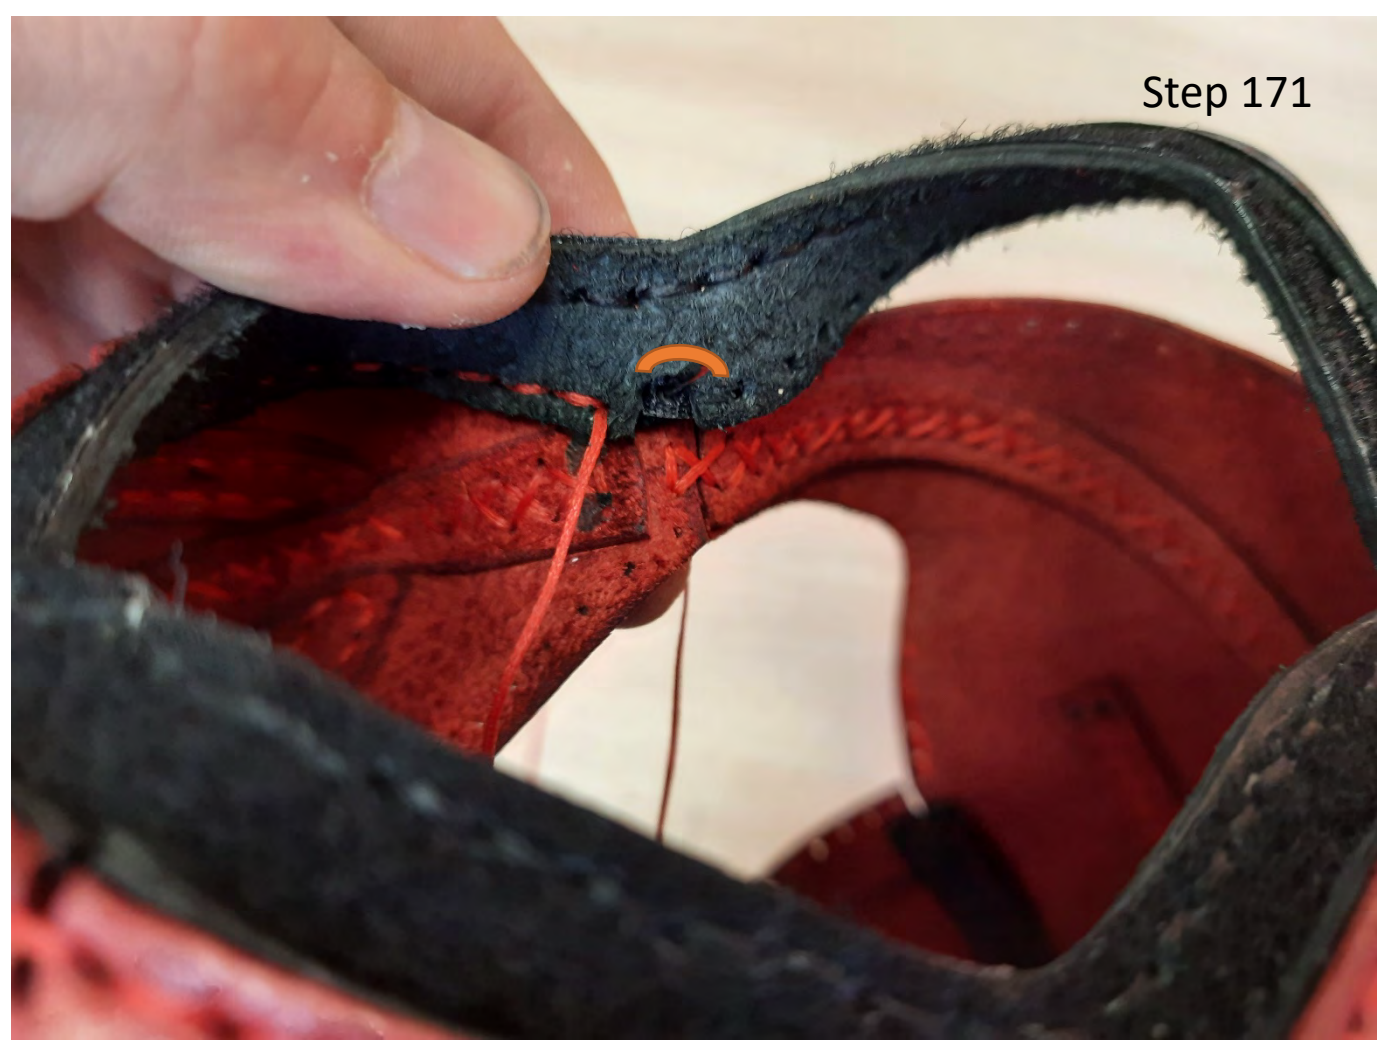

Step 172



Step 172



Step 172



Step 173





Step 173



Step 174

Step 174



Step 175



Step 176



Step 176



Step 177



Step 177



Step 178



Step 179



Step 180



Step 180



Step 181

It looks like this with a perforated front.



Так выглядит с перфорированной передней частью.

Step 182



Step 182




Step 183



Step 184



Step 185

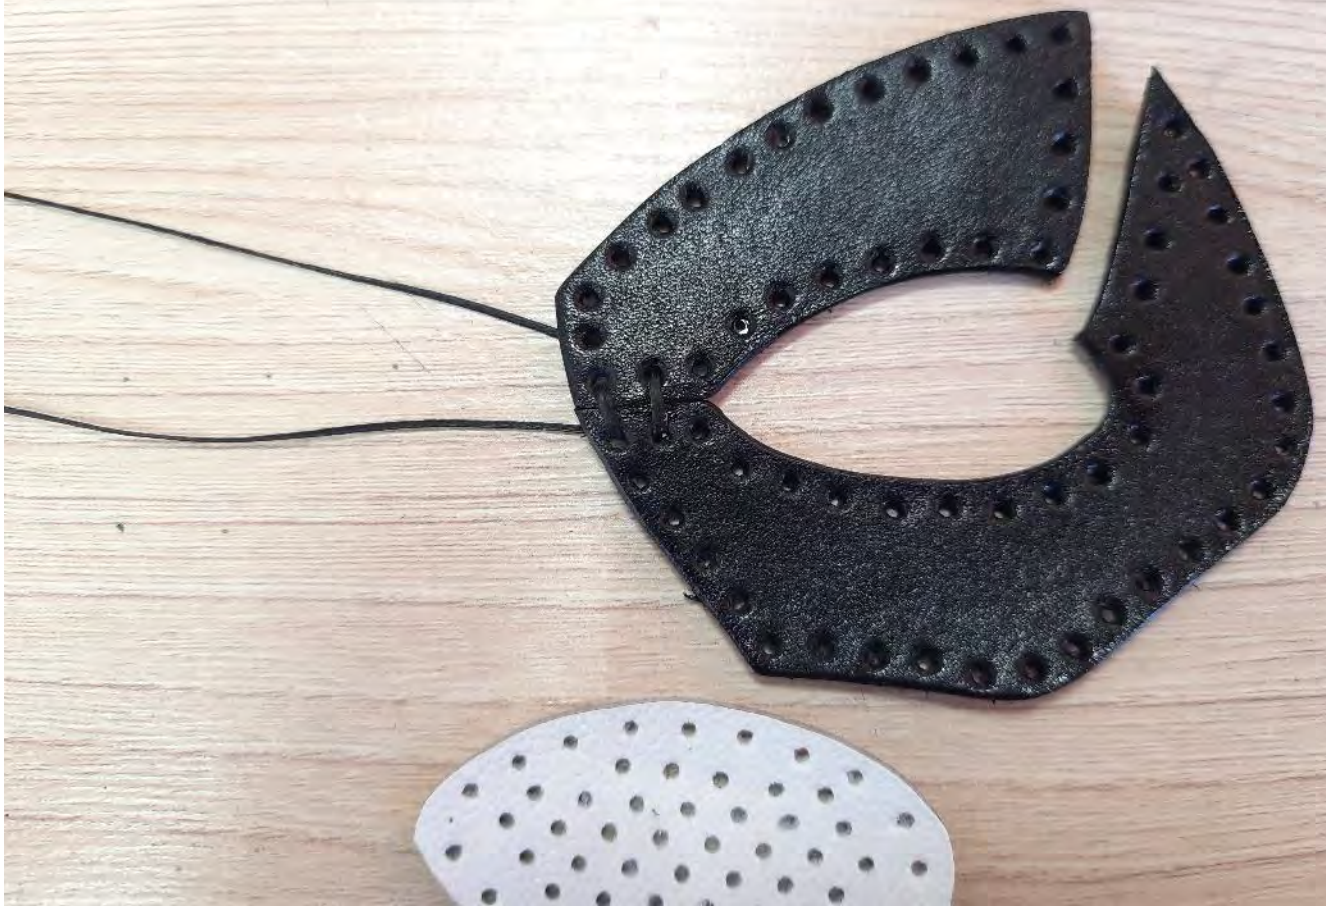

Step 186



Step 187



Step 187




Step 188




Step 188



Step 189

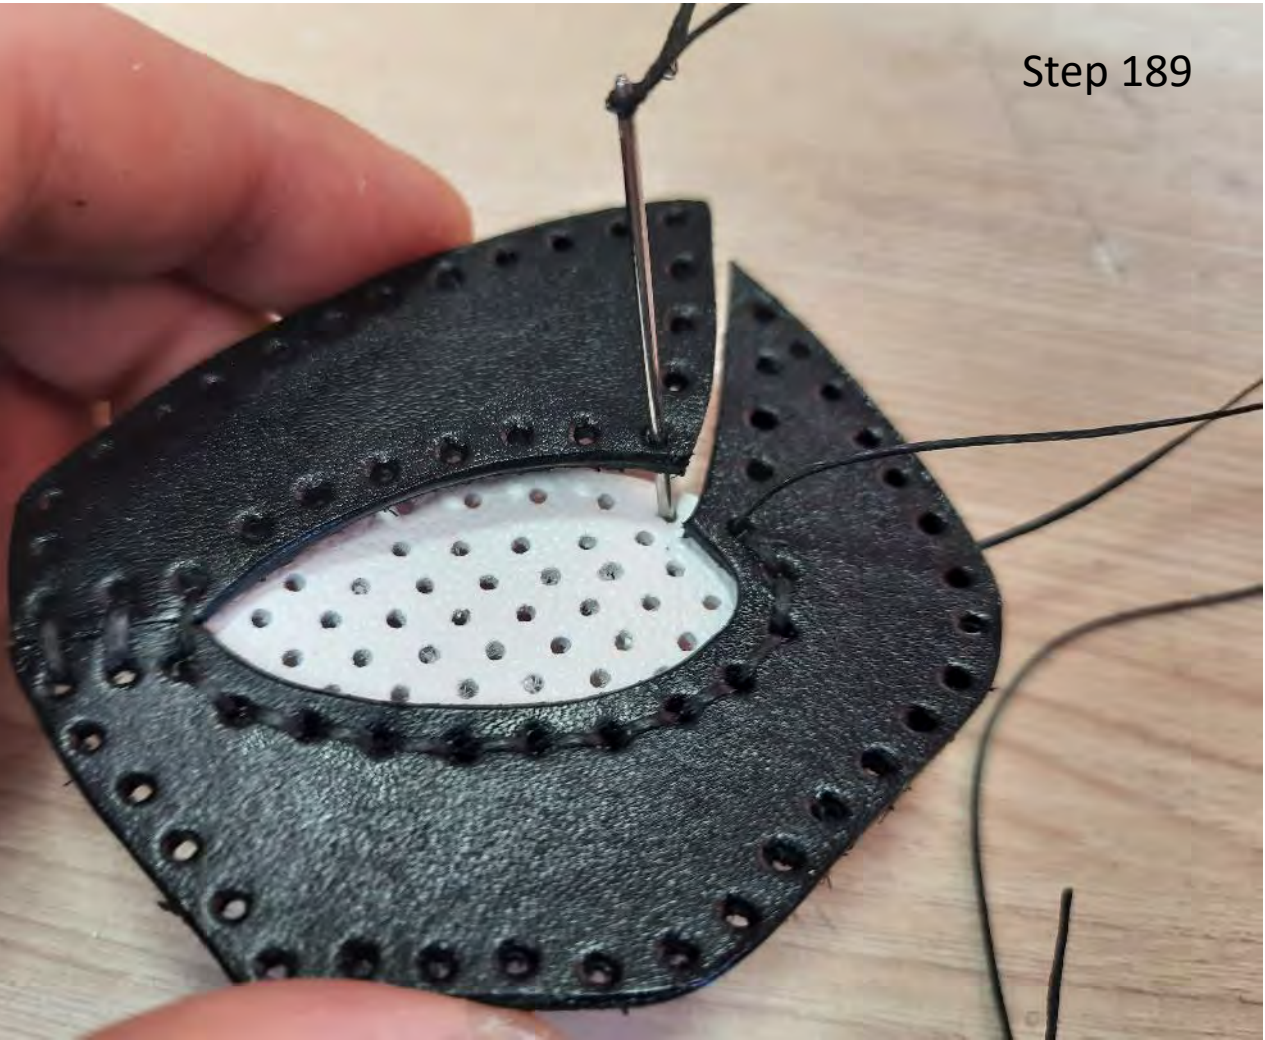

Step 189

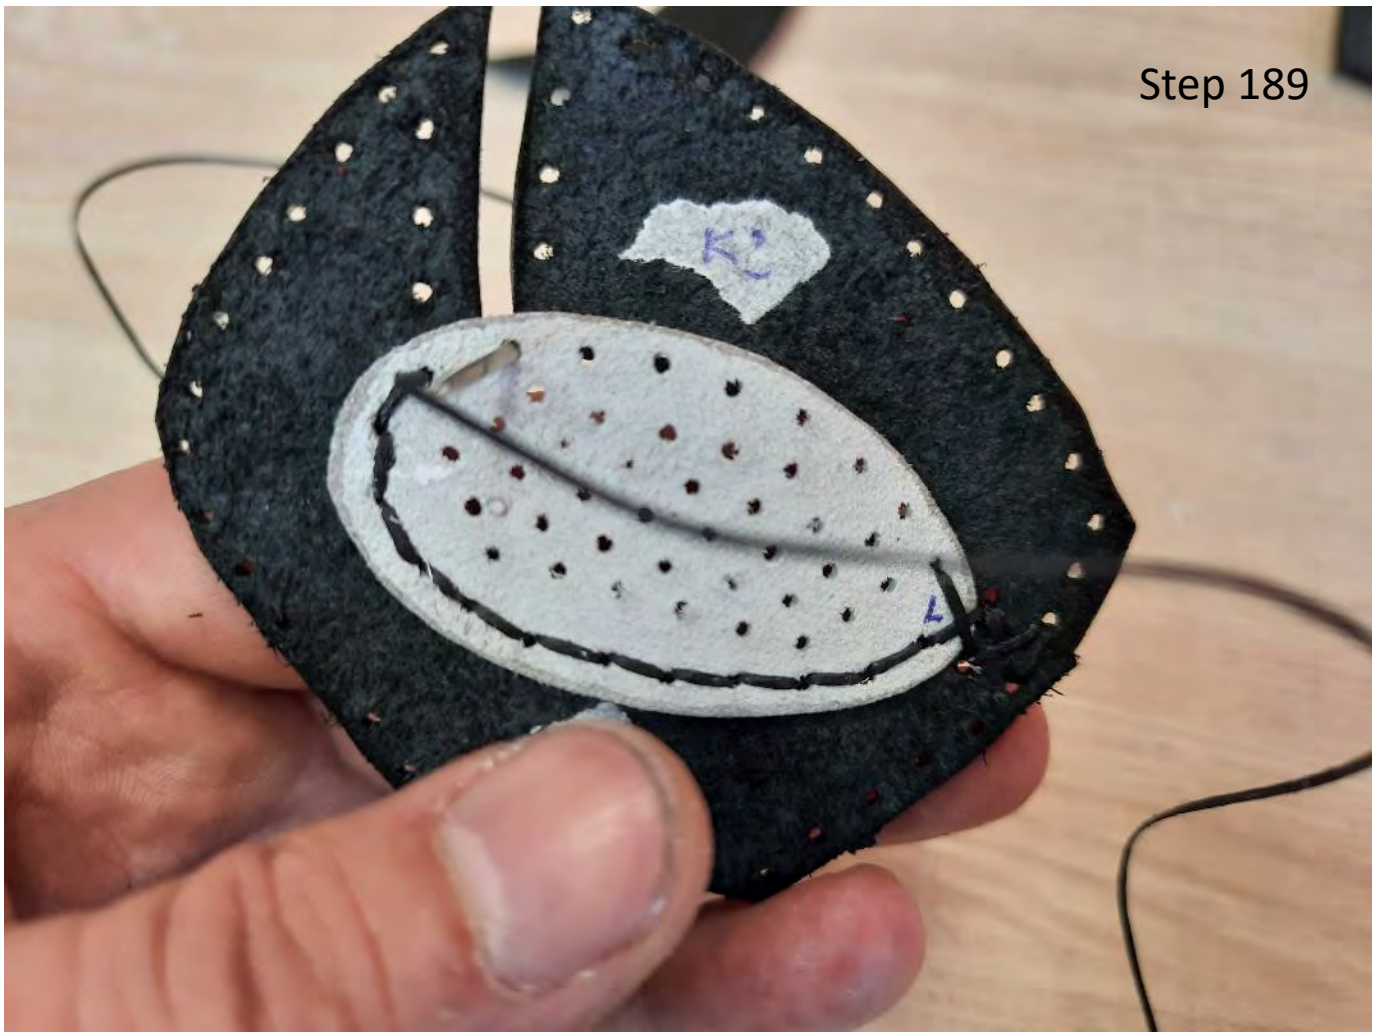

Step 190



Step 190



Step 191



Step 182



Step 182



Step 183



Step 184



Step 184



Step 185



Step 185



Step 186



Step 187



Step 188



Step 188



Step 189



Step 189



Step 190



Step 190



Step 191



Step 191



Step 192



Step 192



Step 193



Step 193



Step 193



Step 193



Step 193



Step 193



Step 194



Step 195



Step 196



Step 197



Step 198



Крюк / hook

Step 198



Step 199



Step 200



Step 201




Step 202



Step 203



Step 204

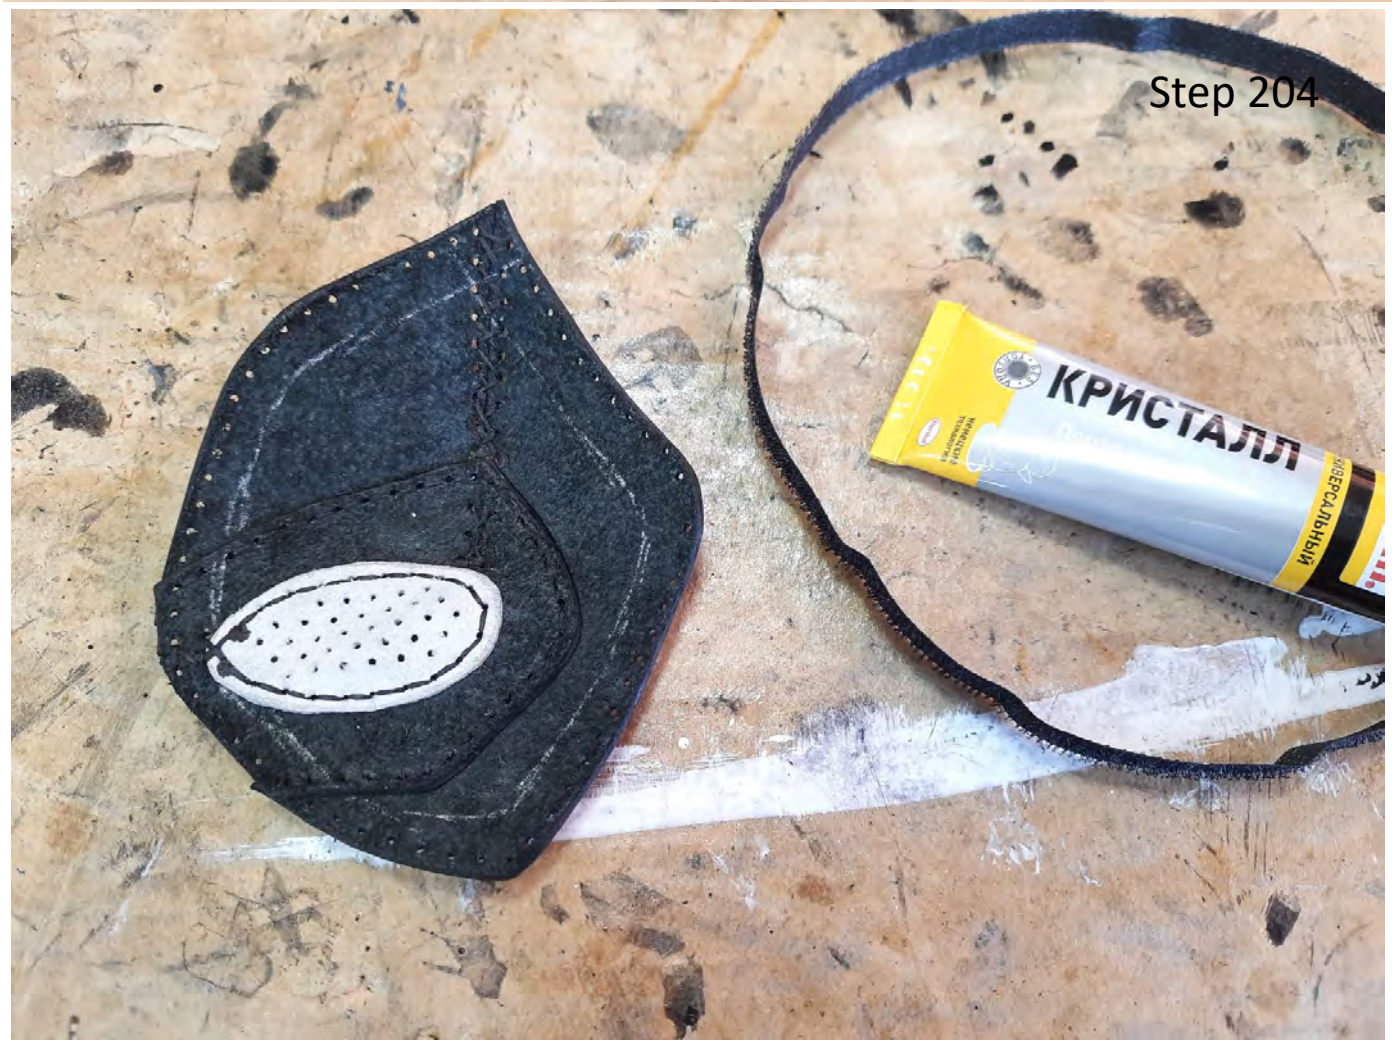

Step 205



Step 206



Step 207



Step 208



Step 209.



Step 210



Step 211



Step 212



Step 213



Step 214



Step 215



Step 216



Step 217



Step 217



Step 218



Step 218



Step 219



Step 220



Step 221



Step 222



Step 222



Step 223



Step 223



Step 224



Step 225



Step 226



Step 227



Step 228



Step 229



Step 230



Step 231



Step 232







Step 235



Step 236



Step 237



Step 238



Step 239



Step 240



Step 240




Step 240



Step 241



Step 242

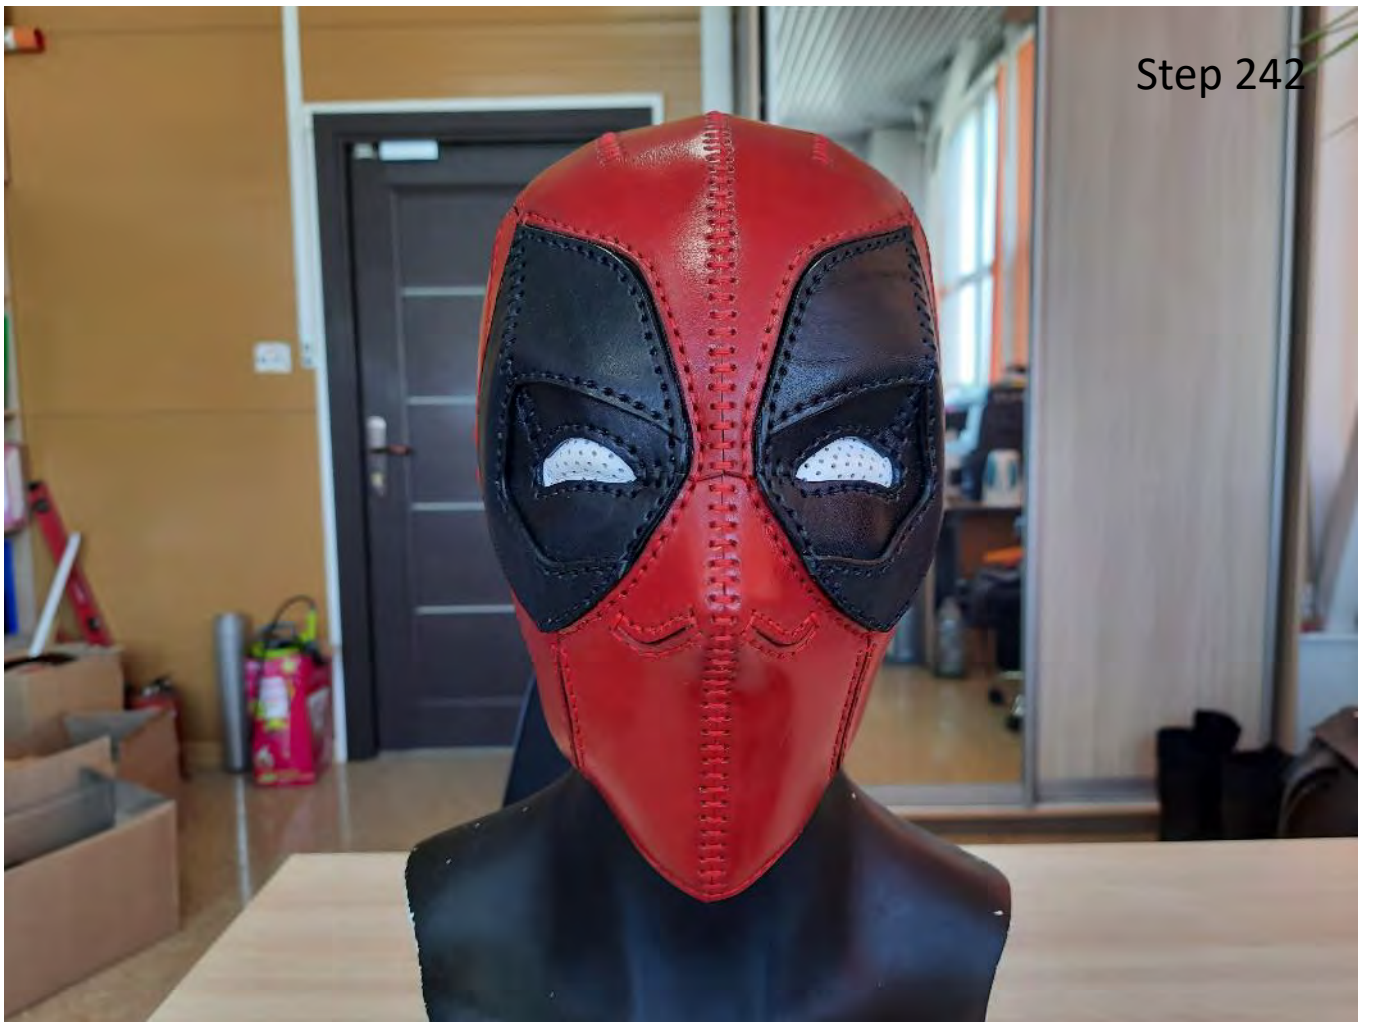

Step 243

Вот так будет выглядеть, если передняя часть с перфорацией, которая вшивается в начале сборки маски

This is how it will look if the front part with perforation, which is sewn in at the beginning of the mask assembly



Step 243



Step 243

