

Assembly instructions

Difficulty level: intermediate
Completion Time: 10 - 12 hours

Copyright Dieselpunk.ro 2019



Copyright Dieselpunk.ro 2019

NECESSARY TOOLS

B&W Printer



Scissors or a cutter



Hole Puncher (We recommend 1.5 - 1.8 mm sized holes for this build)



Max 10 square feet of leather. (We recommend 5-6 oz leather for this build)



Thread and needles (We recommend 1 mm waxed thread for this build)



2 x 25 mm buckles

4 x 7 mm rivets

2 x 5 mm Sam Browne Buttons


2 x 18 mm round magnetic closures

Copyright Dieselpunk.ro 2019

Copyright Dieselpunk.ro 2019

PRINTING THE PATTERN


Set up your paper size to A4, Letter or Legal and **choose actual size** in the printer settings

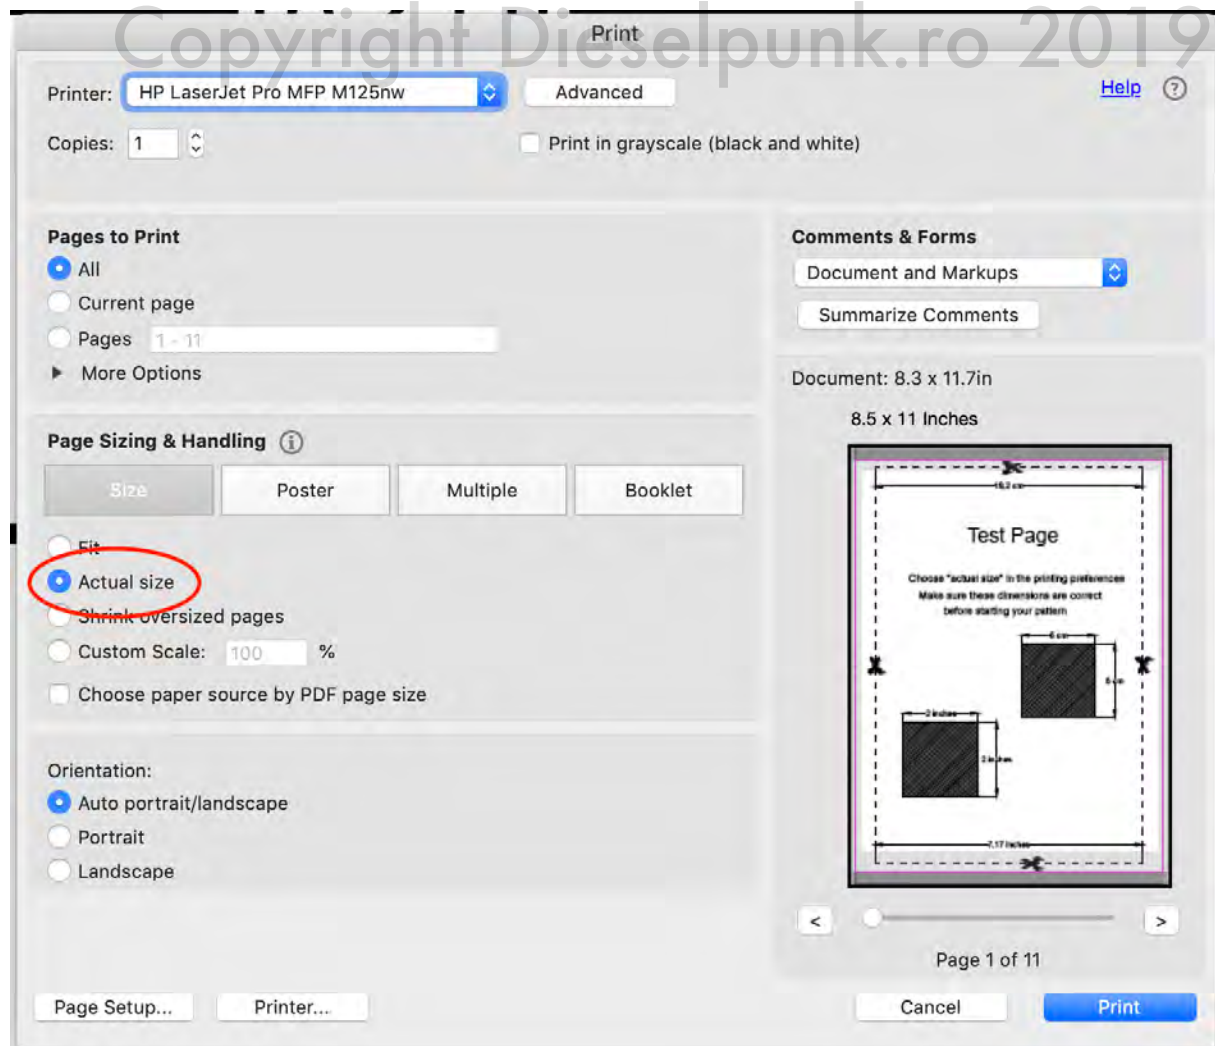

Copyright Dieselpunk.ro 2019

Print all the patterns.

The first page is a measuring reference and you can use a ruler to make sure it matches the square. That means the rest of the pattern will print on the right size

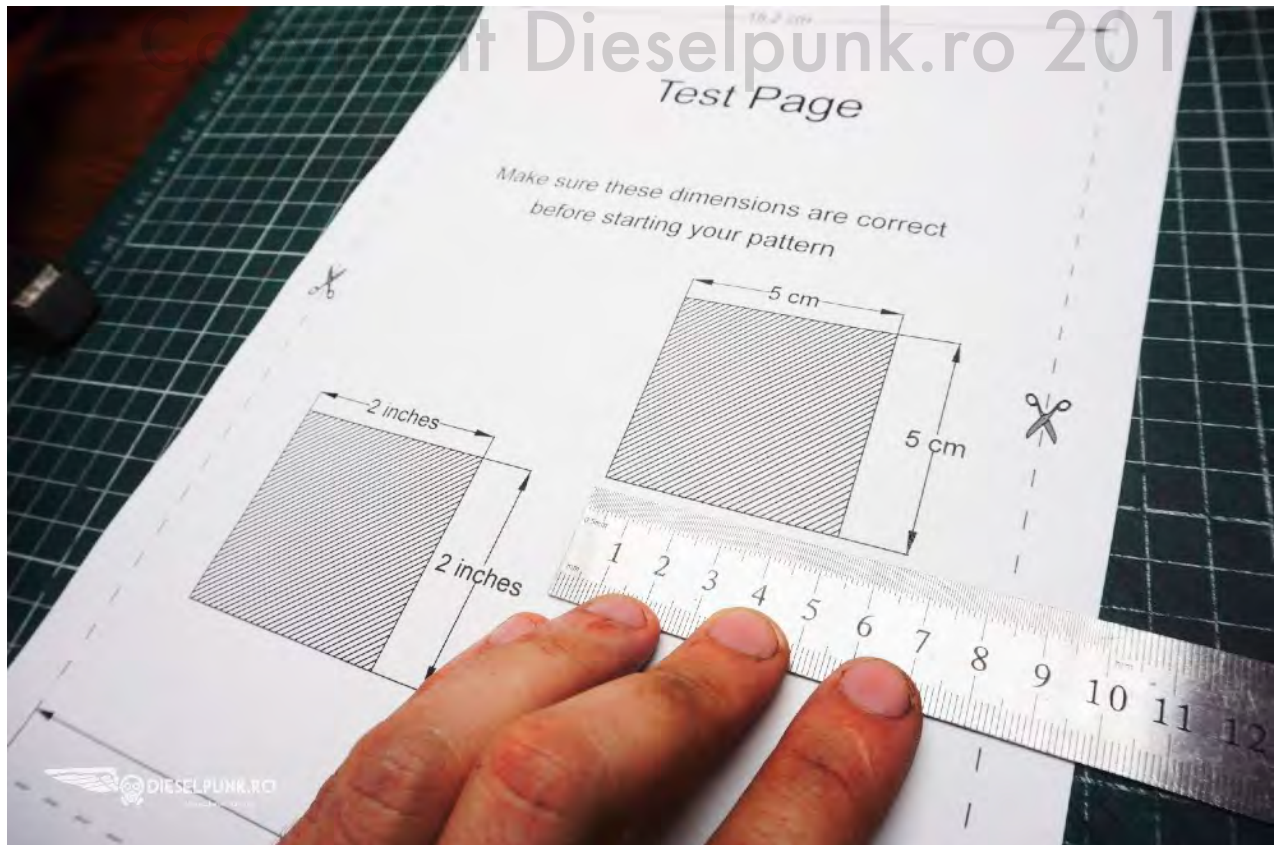

Copyright Dieselpunk.ro 2019

In order to further help with your build, we filmed the entire process from the start to finish.

Please access your instructional video here:

<https://youtu.be/ILP9DyfYLbQ>

Would love to see what you did, so please share or leave a review on Etsy.

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

Thank you for constructing your bag with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date

with the latest patterns available.

Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087/>

Best Regards

Tony

Copyright Dieselpunk.ro 2019