


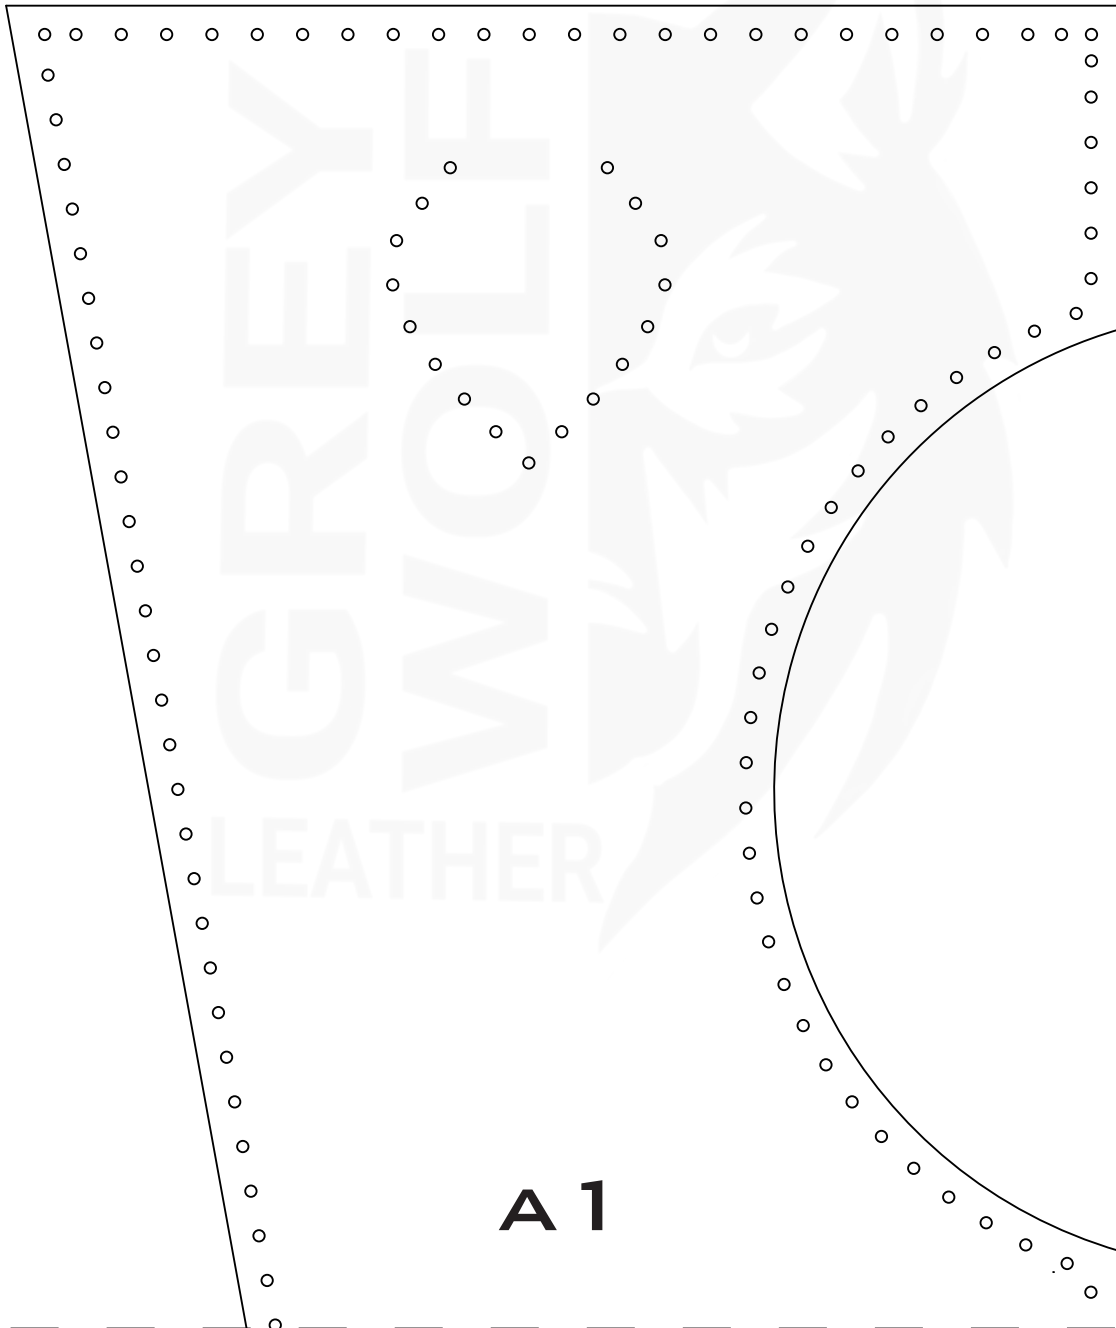
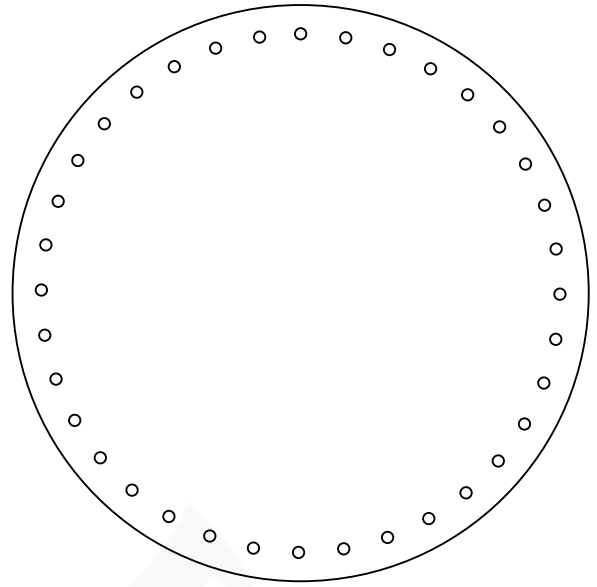


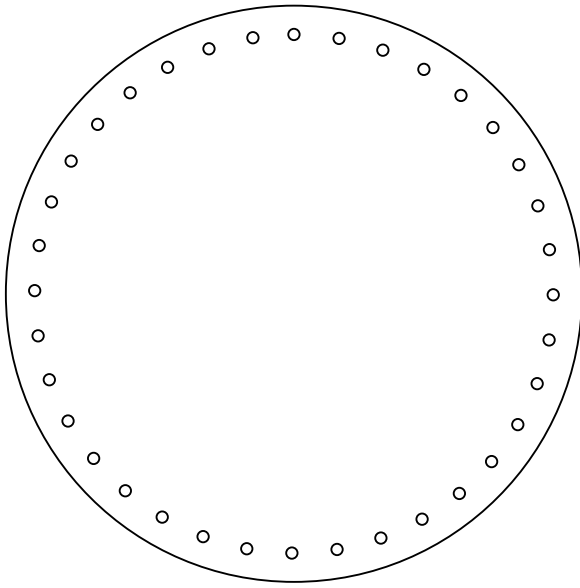



A 1

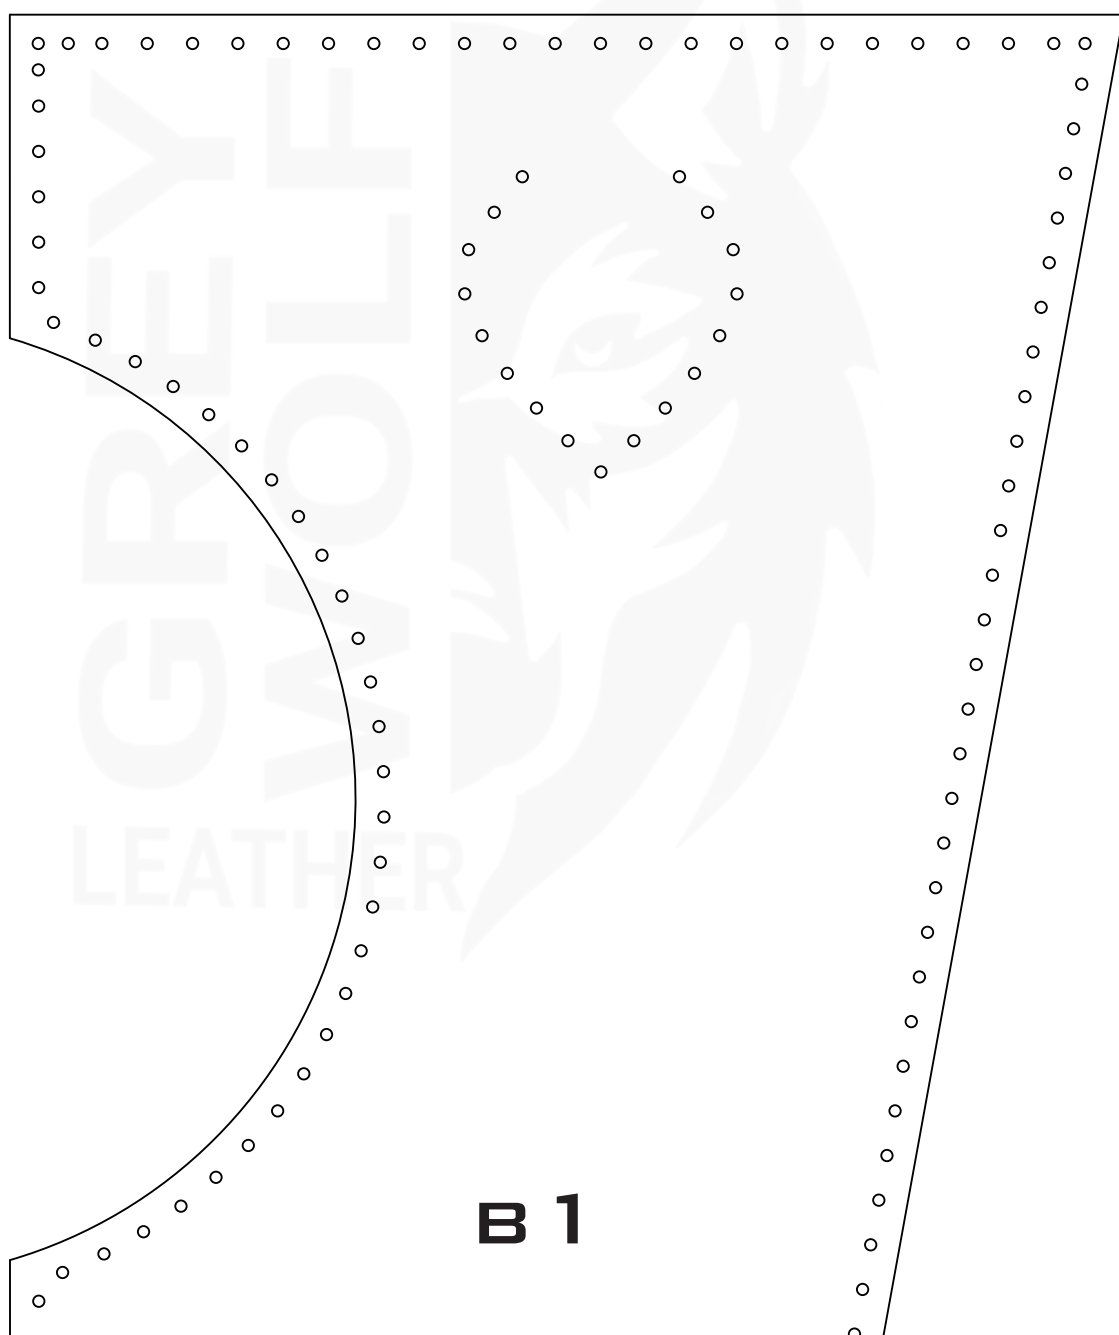


B 1

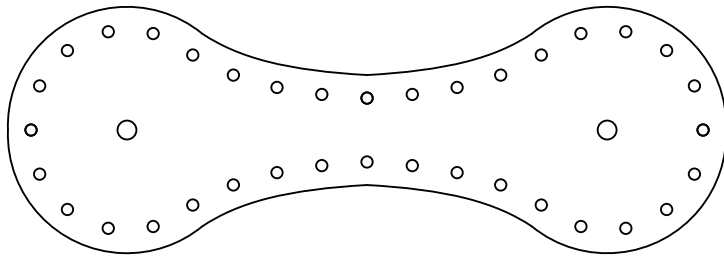

OPTIONAL PURSE FEET

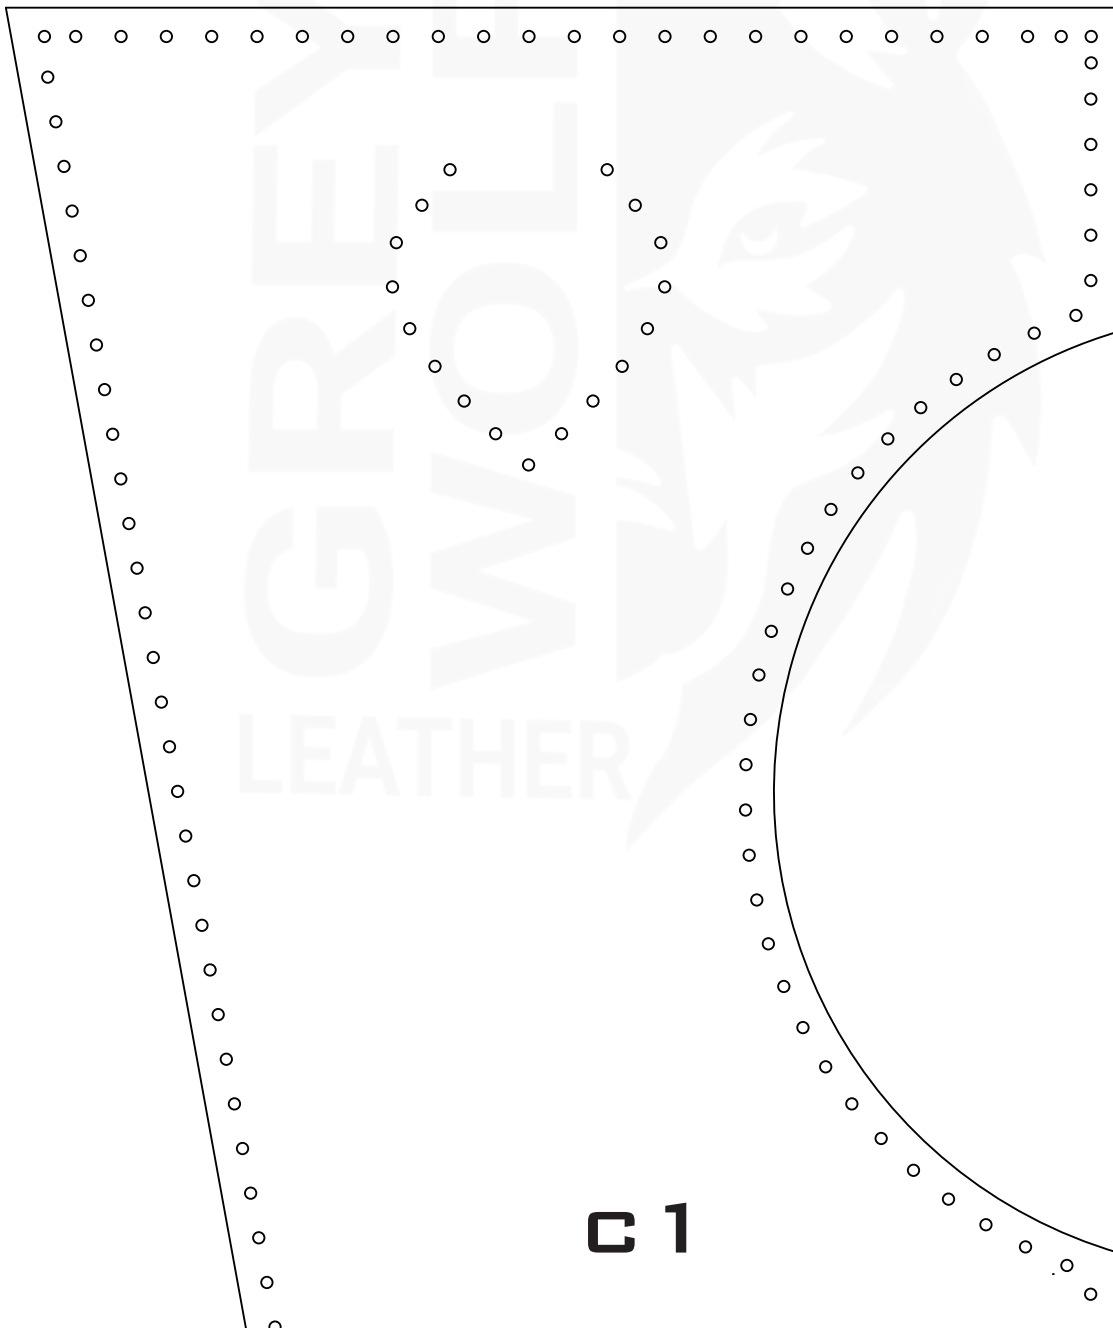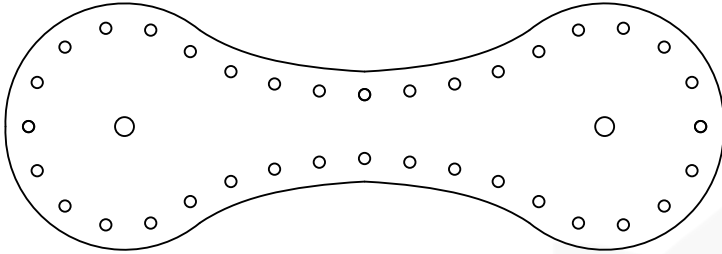



C 1

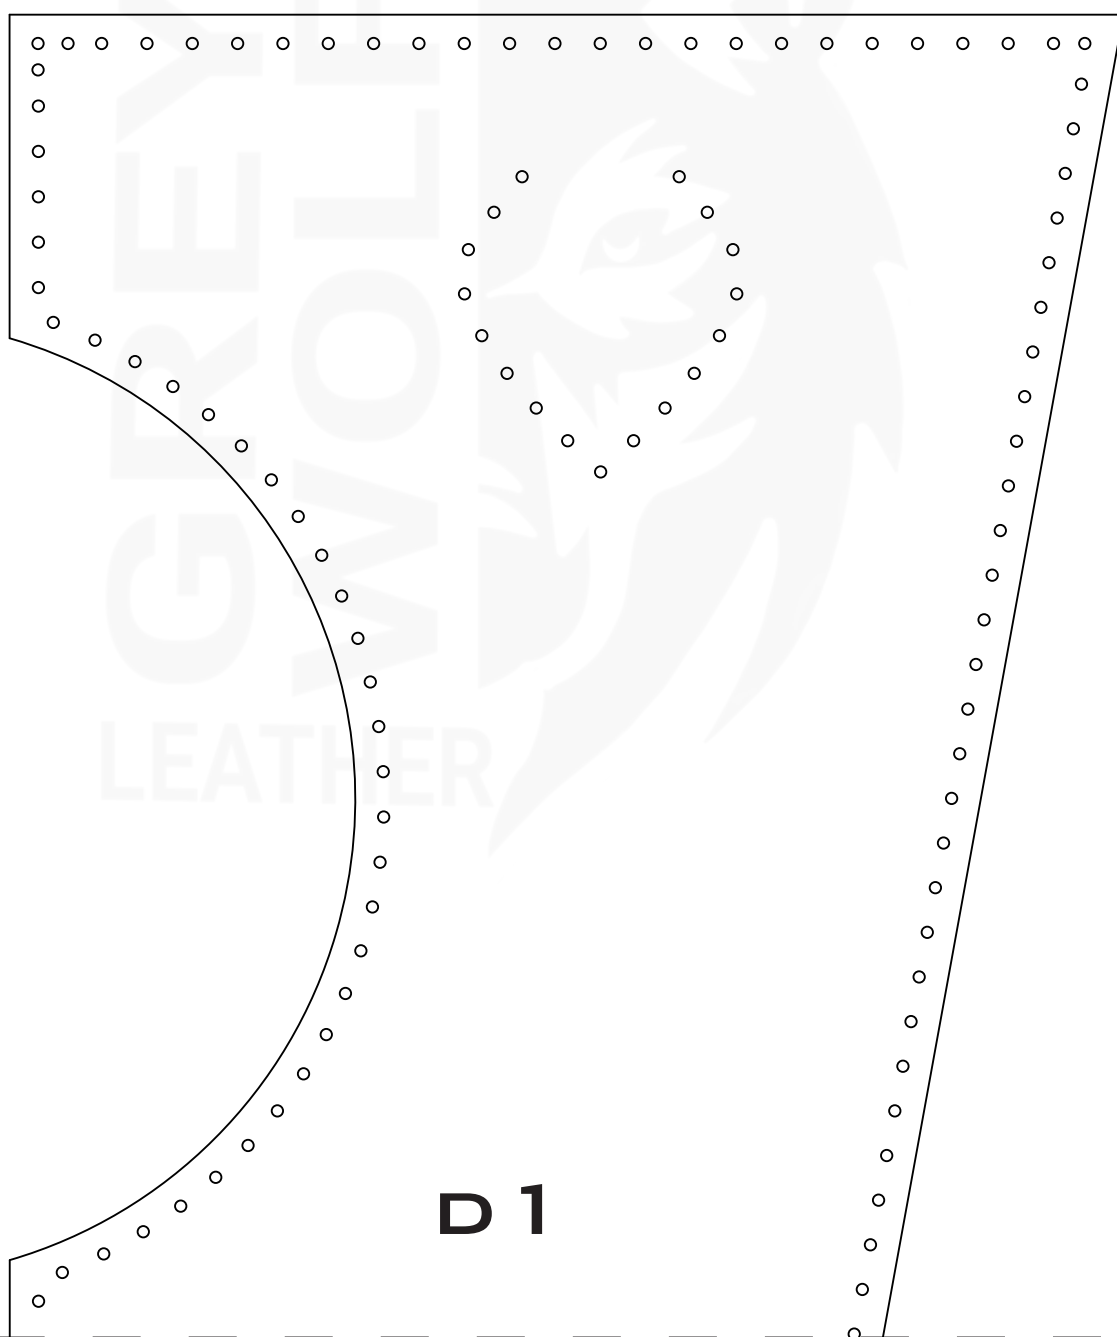


D 1

11

GREY
WOLF

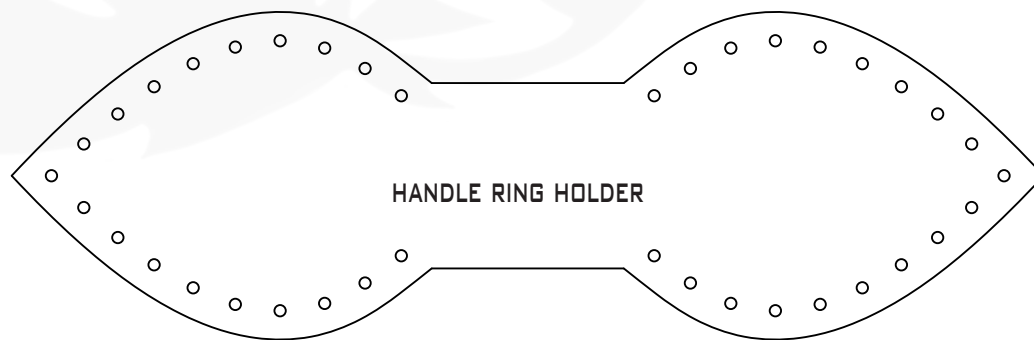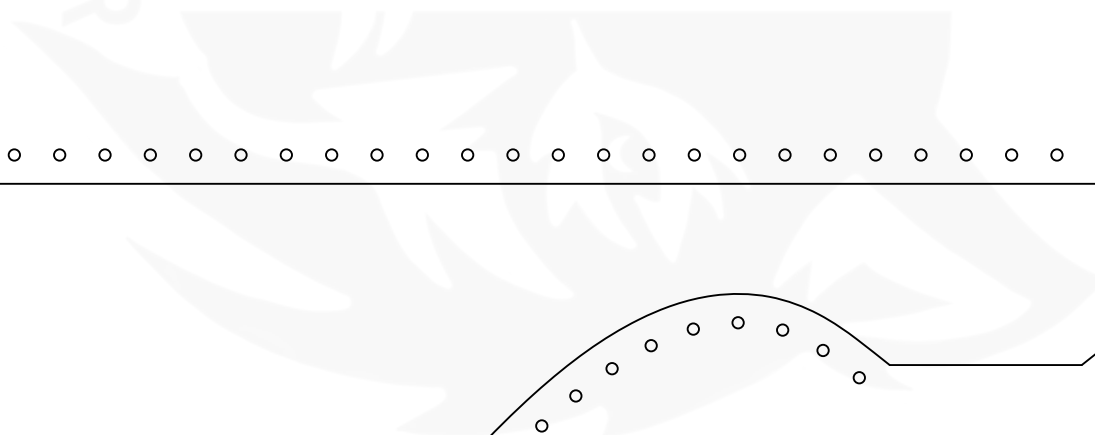

HANDLE RING HOLDER

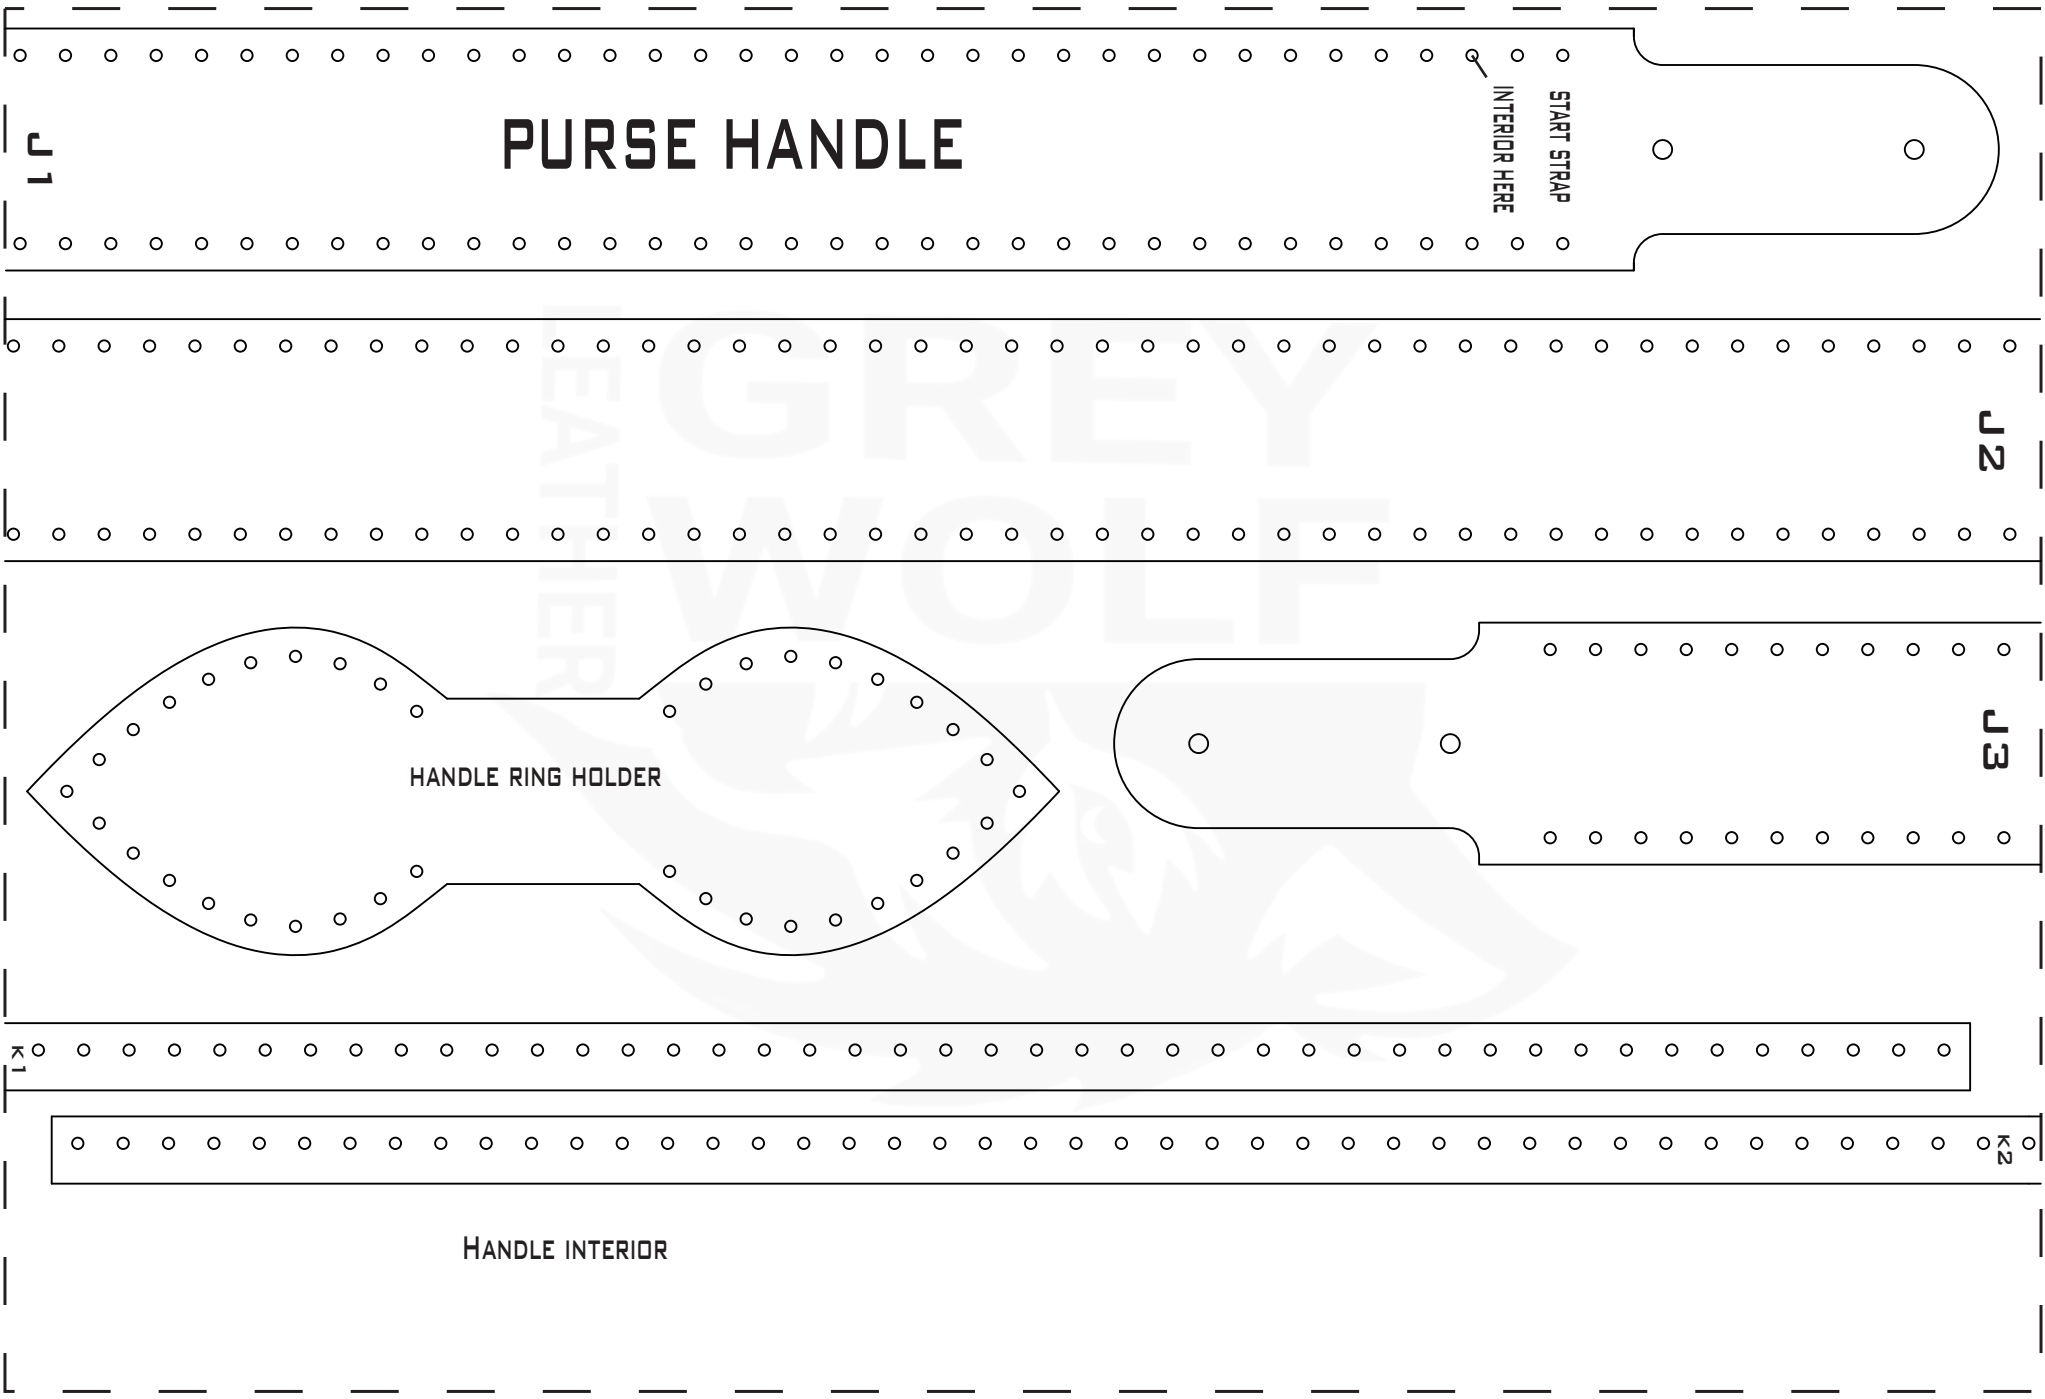

PURSE HANDLE

J1

START STRAP
INTERIOR HERE

J2

J3

HANDLE RING HOLDER


K1

K2

HANDLE INTERIOR


A2

G1

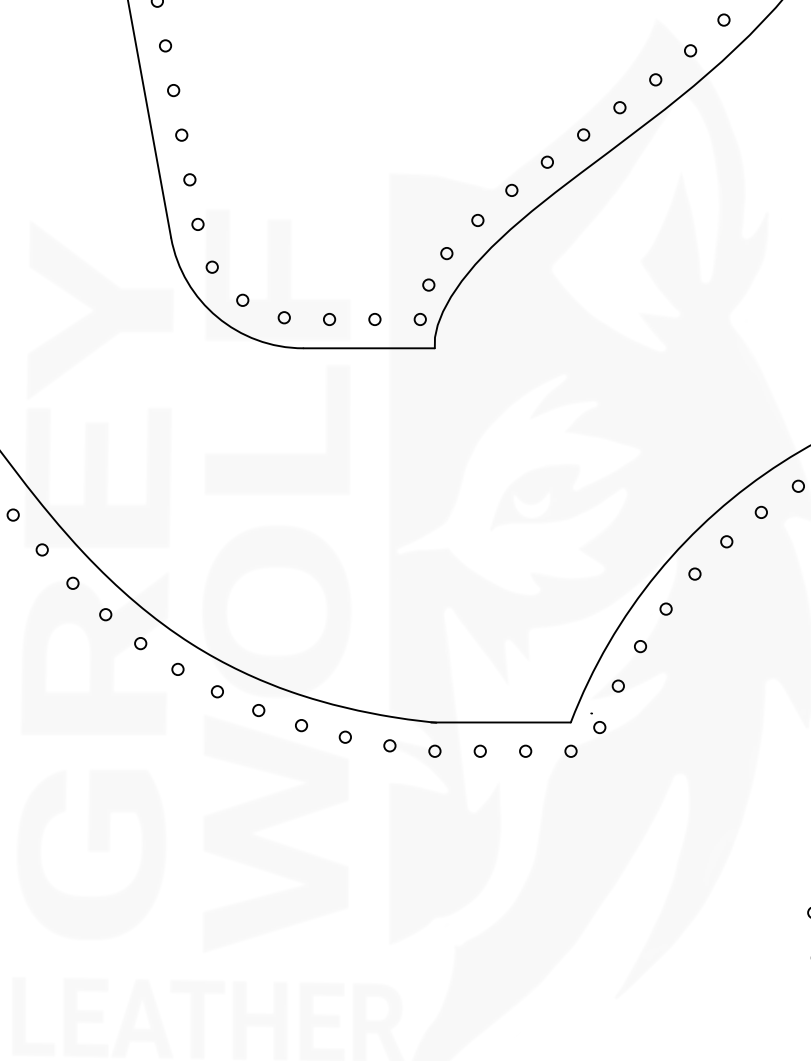


B2

G2

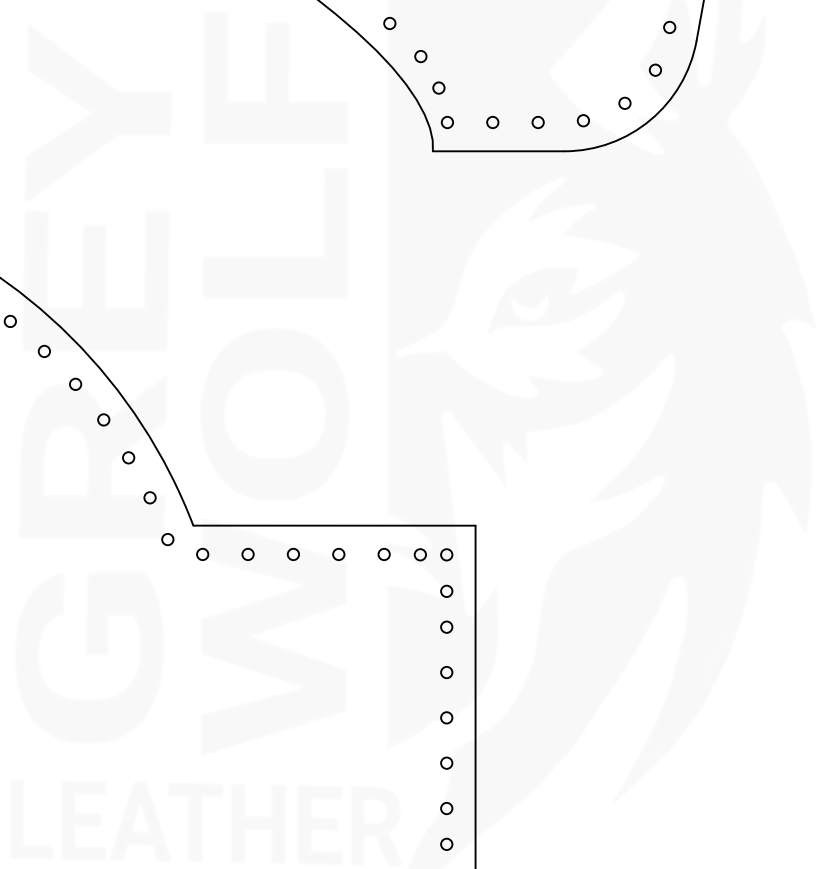

c2

H1

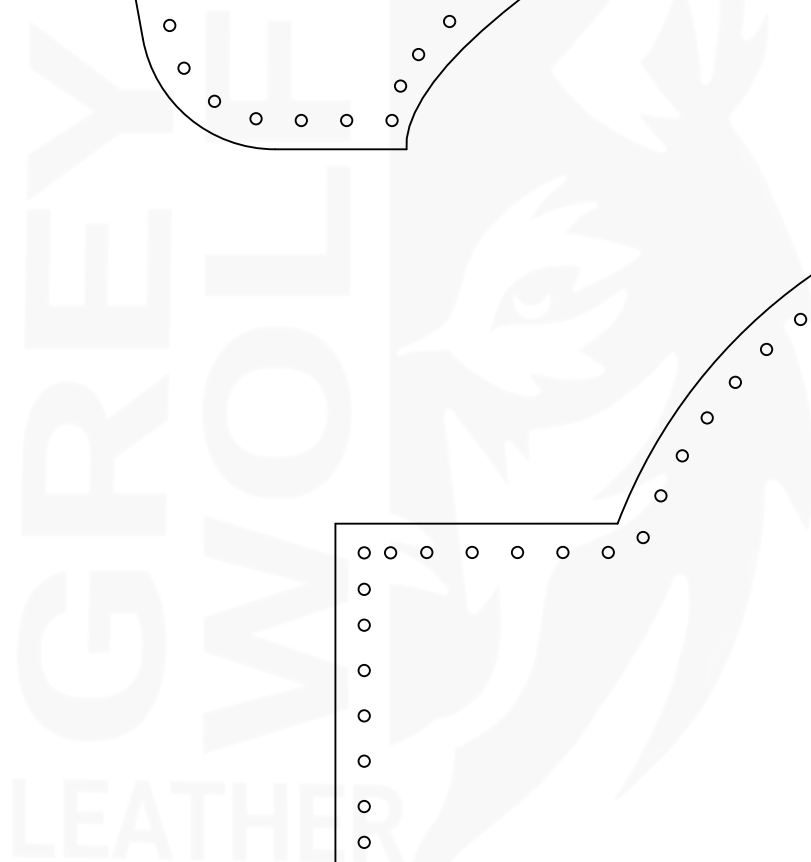


D2

H2




12

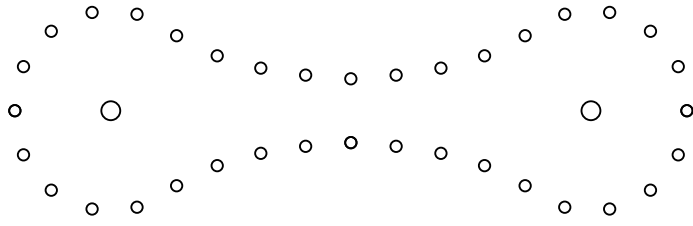


OPTIONAL PURSE FEET


BAG GUSSET

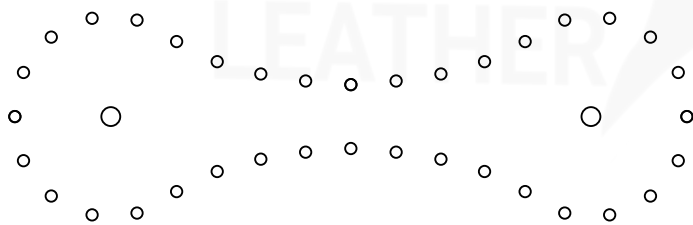

OPTIONAL PURSE FEET

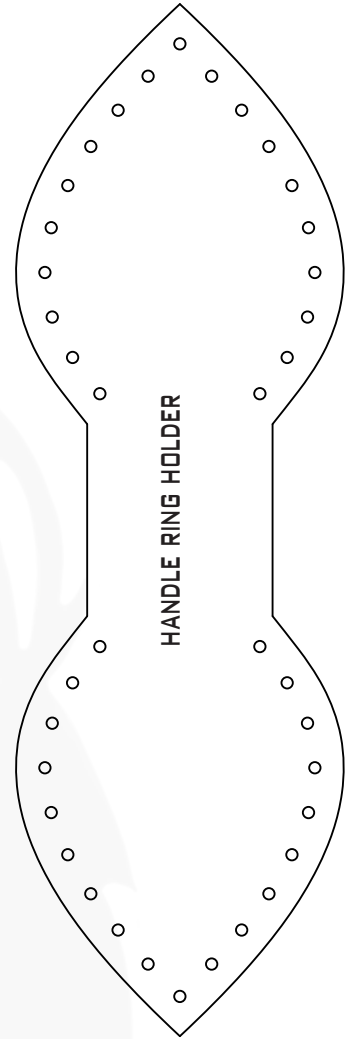

HANDLE RING HOLDER

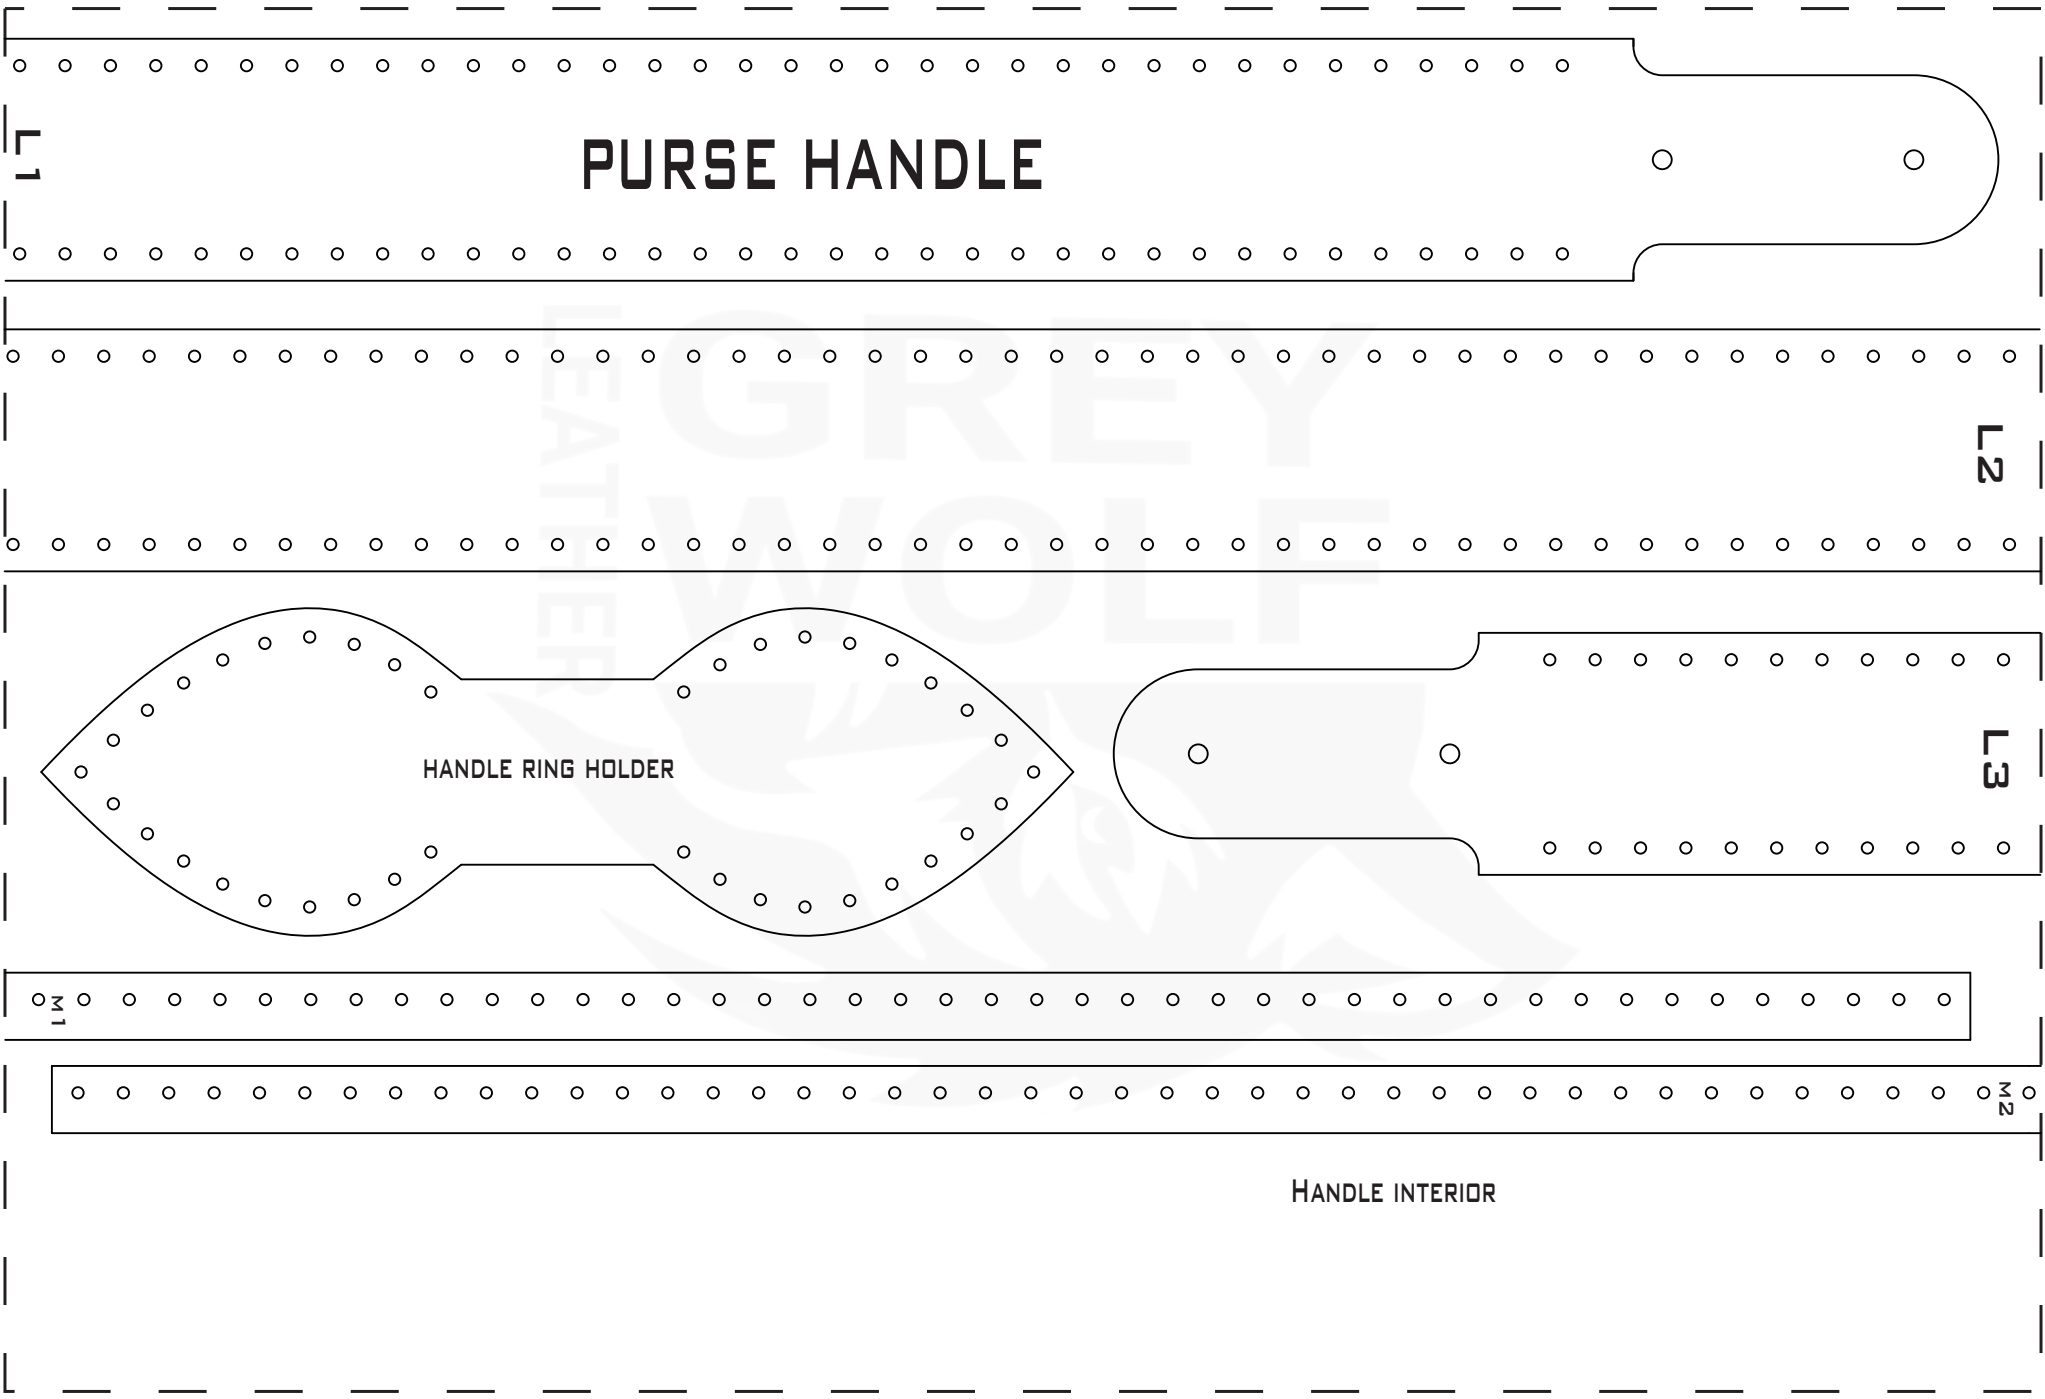

PURSE HANDLE

HANDLE RING HOLDER

HANDLE INTERIOR

2

3

2

13

GREY
WOLF
LEATHER



7.2 INCHES

182.88 MILLIMETERS


CALIBRATION PAGE

1. OPEN IN ADOBE ACROBAT
2. PRINT TO "ACTUAL SIZE" IN PRINTER OPTIONS
3. PRINT CALIBRATION PAGE TO VERIFY PROPERLY SET UP PRIOR TO PRINTING THE PATTERN.


10.6 INCHES

269.24 MILLIMETERS

2"

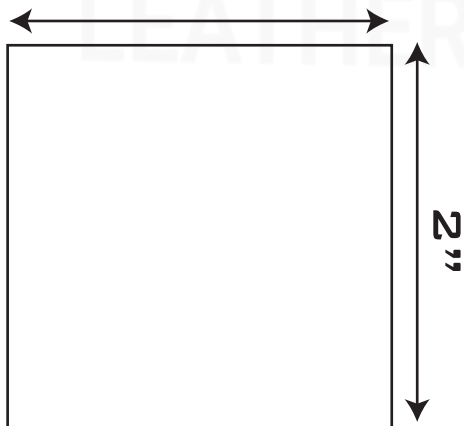

50.8MM

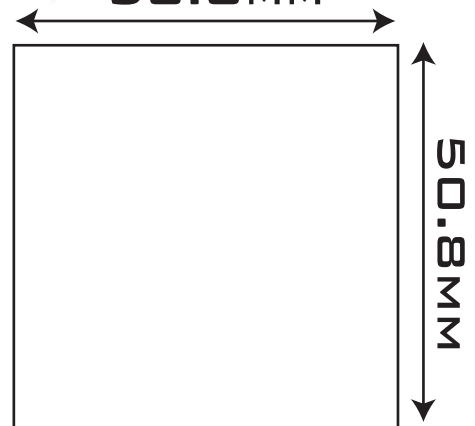



2 TONE BUCKET BAG TUTORIAL



MATERIALS

6-8SQFT OF LEATHER 4-6OZ (I USED 5.5OZ CHROME TANNED AND 4-5 OZ VEG TANNED)

WAXED THREAD (I USED 1MM RITZA TIGER THREAD "CIGAR")

(4) 7MM JIFFY CAP RIVETS

(4) 1" SQUARE RINGS OR D RINGS

TOOLS

-1.5MM STITCHING PUNCH IF USING A MULTIPUNCH THE DISTANCE IS SET AT 6MM

-2.5MM PUNCH FOR SETTING RIVETS


-HAMMER

-KNIFE

-TAPE

-BAND AIDS (IT HAPPENS)

**1. PRINT PATTERN USING ADOBE ACROBAT
READER - PRINT SIZE ACTUAL SIZE, OR 100%**

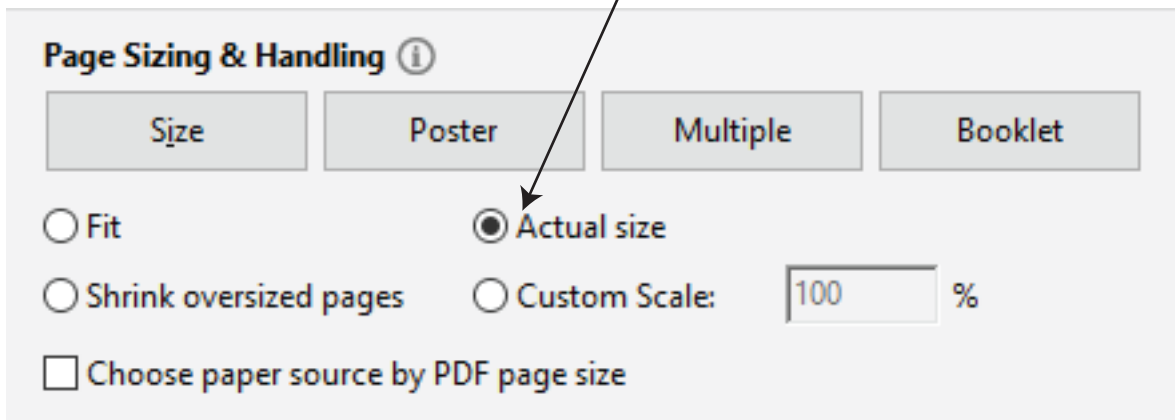

**MAKE SURE YOUR PRINT MATCHES THE CALIBRATION
SHEET KEY ON THE PATTERN**

**2. TAPE PATTERN ONTO LEATHER, I PREFER
ON THE FLESH SIDE TO NOT RUIN ANY FINISH ON
YOUR LEATHER.**

**3. PUNCH OUT HOLES USING A 1.5MM PUNCH
SPACING IS SET AT 6MM (WHEN APPLICABLE) AND
RIVET HOLES ARE SET AT 2.5MM**

4. STITCH THE CIRCLE ACCENT PIECE ONTO THE MID CONNECTOR OF THE BAG.



5. CONNECT THE 2 SIDES OF THE BAG TOGETHER WITH THE MID CONNECTOR




6. ADD THE SQUARE OR D RING TO YOUR STRAP AND FOLD OVER AND RIVET INTO PLACE.



7. STITCH THE HANDLE TOGETHER, DO THE FIRST 2 STITCHES, AND THEN ADD IN THE INTERIOR HANDLE PIECE.

****IMPORTANT, MAKE SURE YOU STITCH THE FIRST 2 HOLES WITHOUT THE INTERIOR OR IT WILL BE OFF, THAT IS THE SPOT YOUR RIVET FOLD OVER SITS.**

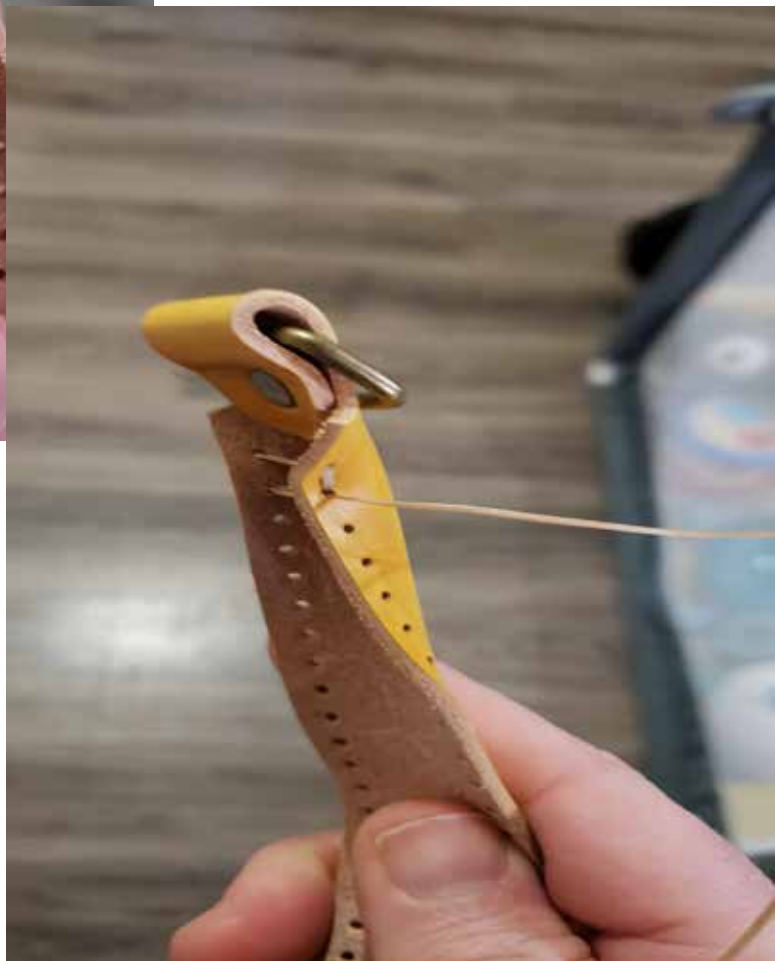

8. ATTACH THE OPTIONAL PURSE FEET ONTO THE PURSE FEET OLDER, AND THEN STITCH TO THE BAG. OPTIONAL, ADD SOME GLUE TO HELP STRENGTHEN IT AND SECURE THE FEET FURTHER.



9. SLIP THE STRAP HOLDERS THROUGH THE SQUARE RING ON THE HANDLE AND ATTACH TO THE BAG.



10. STITCH THE TOP ACCENT PIECE OF THE BAG.



**10. ATTACH THE GUSSET TO THE BAG ON BOTH SIDES
AND THEN YOU'RE DONE!**



FINISHED PRODUCT

