



W. Cambridge Leather
ENGLAND

Luxury Bifold Wallet with Insert (A4)

Property of wcambridgeleather, not for commercial use or resale.



WCambridge Leather

Recommended leather weight





Body- 0.8mm - 1.2 mm




lining - 0.8mm >


1. Print out the template and glue it to heavy card
 2. Cut the template out, ensure all edges are straight
 3. Scribe the template onto your leather
 4. Cut out your leather pieces
 5. Burnish and edge crease interior pockets
 6. Glue lining to main body
 7. Stitch insert to the main body of your wallet
 8. Scribe a line 3/5mm from edge to act as a guide for your prickings irons
 9. Prick your stitching holes and stitch your card holder.
 10. Trim edge to create flush burnishing surface.
 11. Dye and burnish your edges.
- Voilà you have a wallet!

Standard credit
Card

20mm line

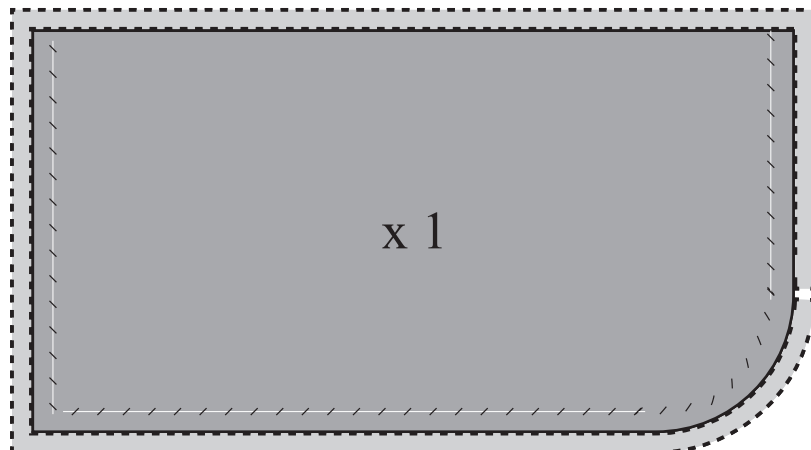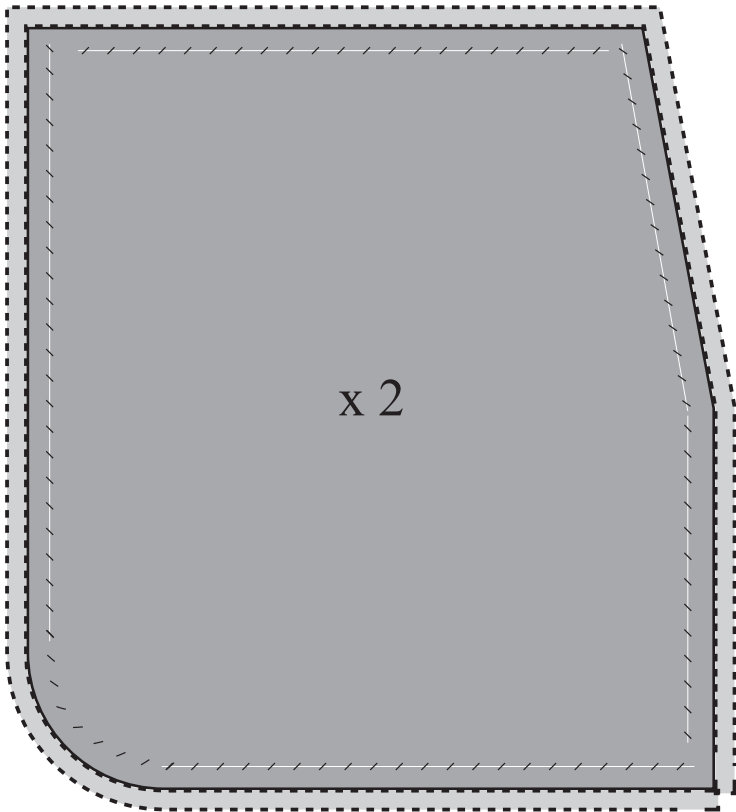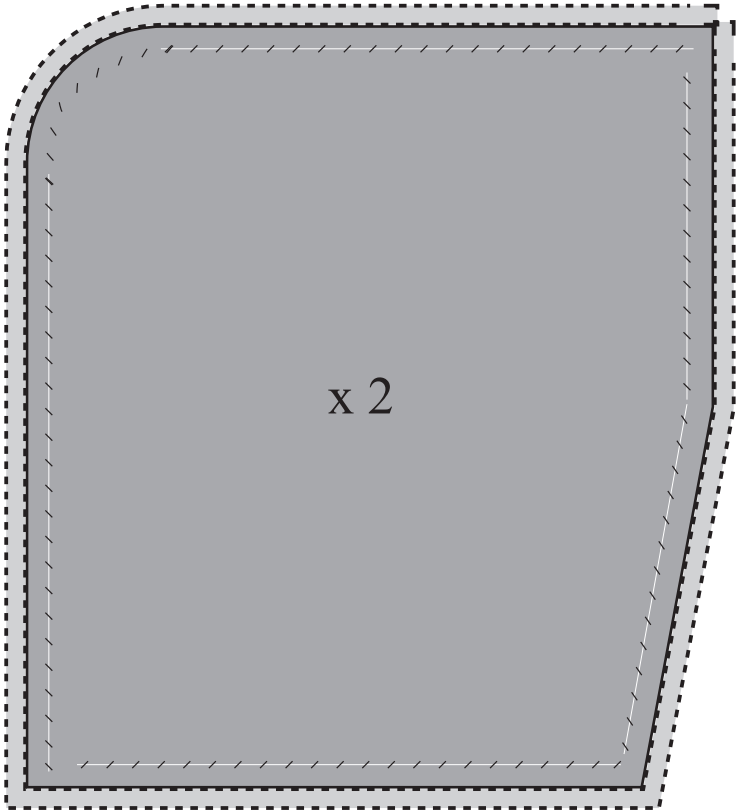

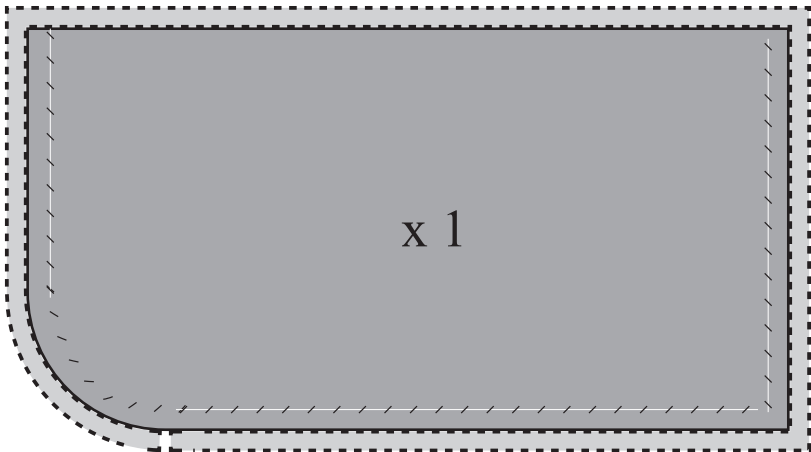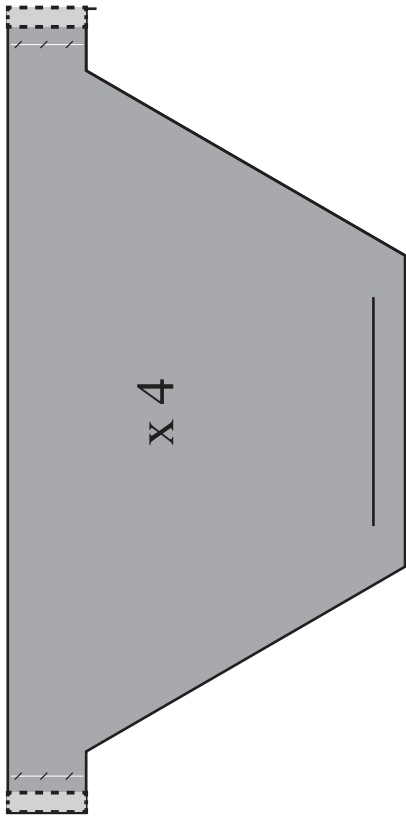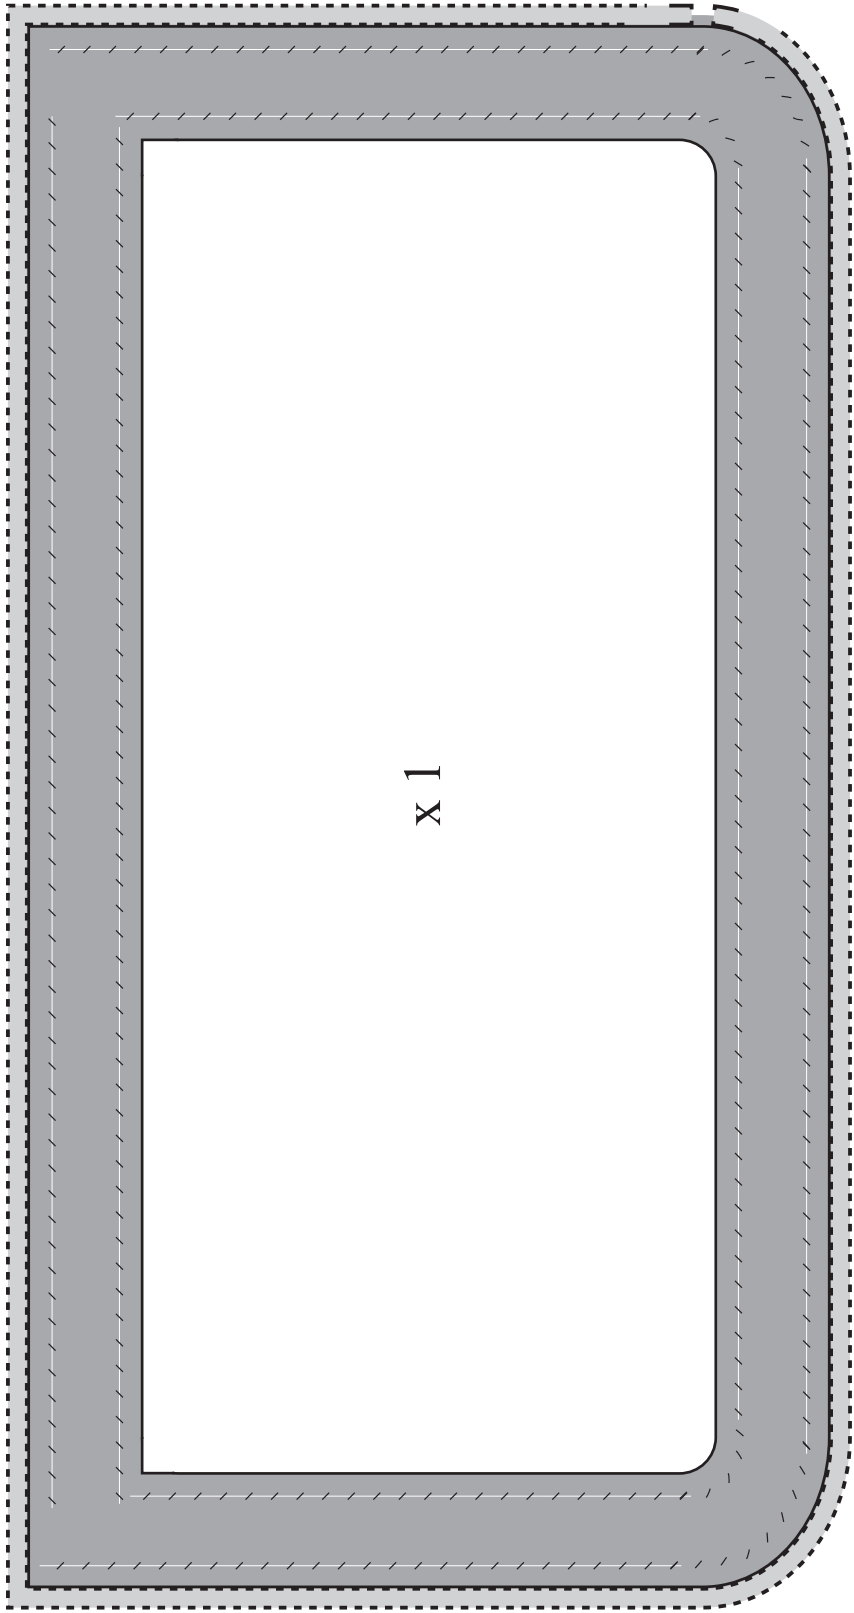

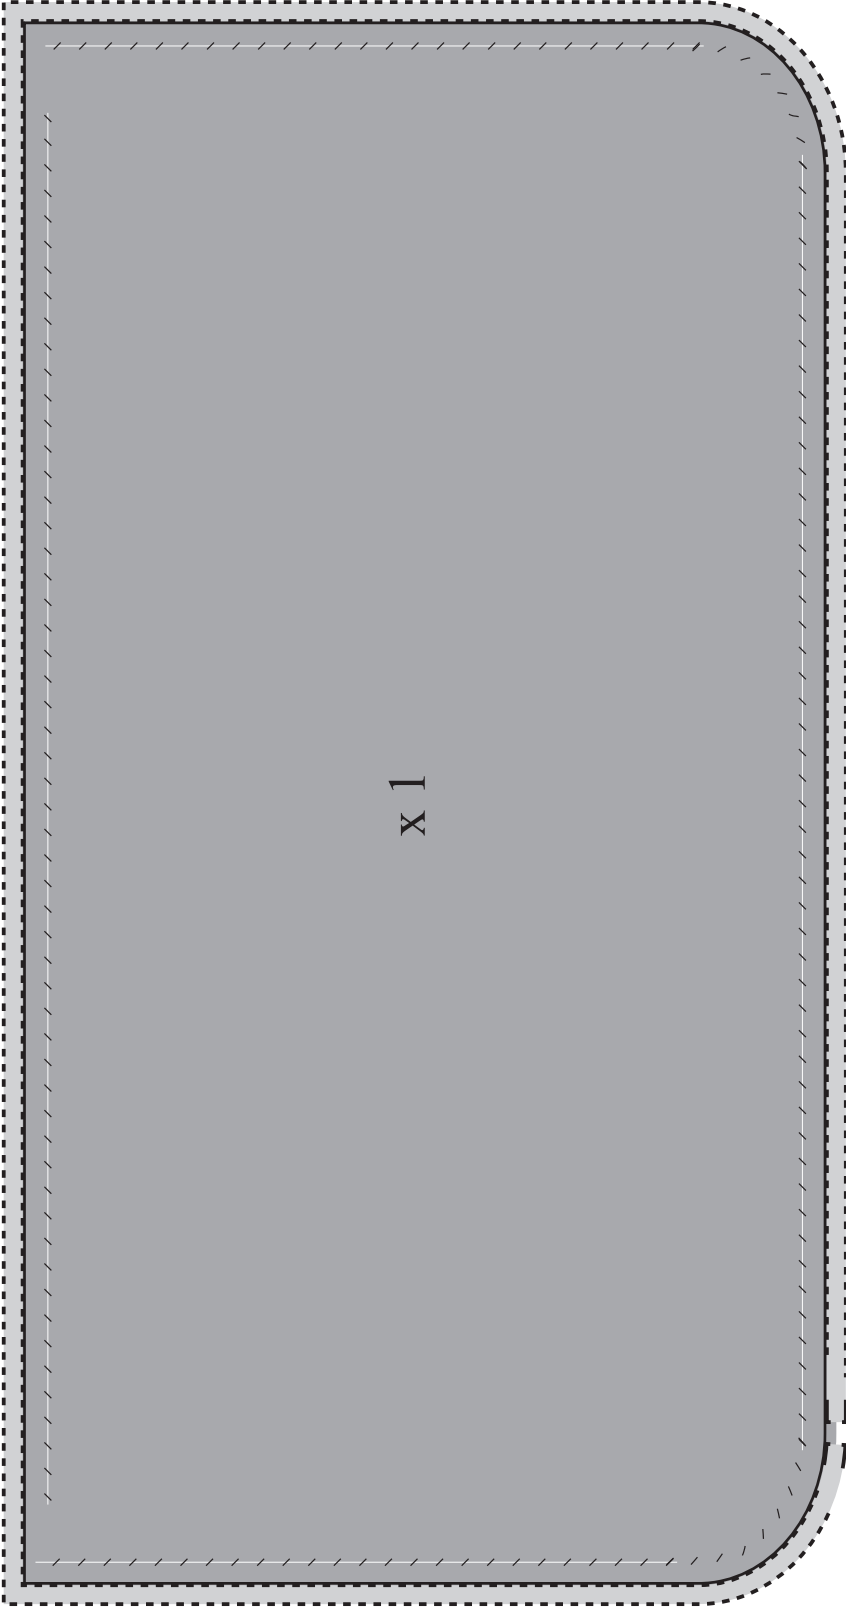

x 1