



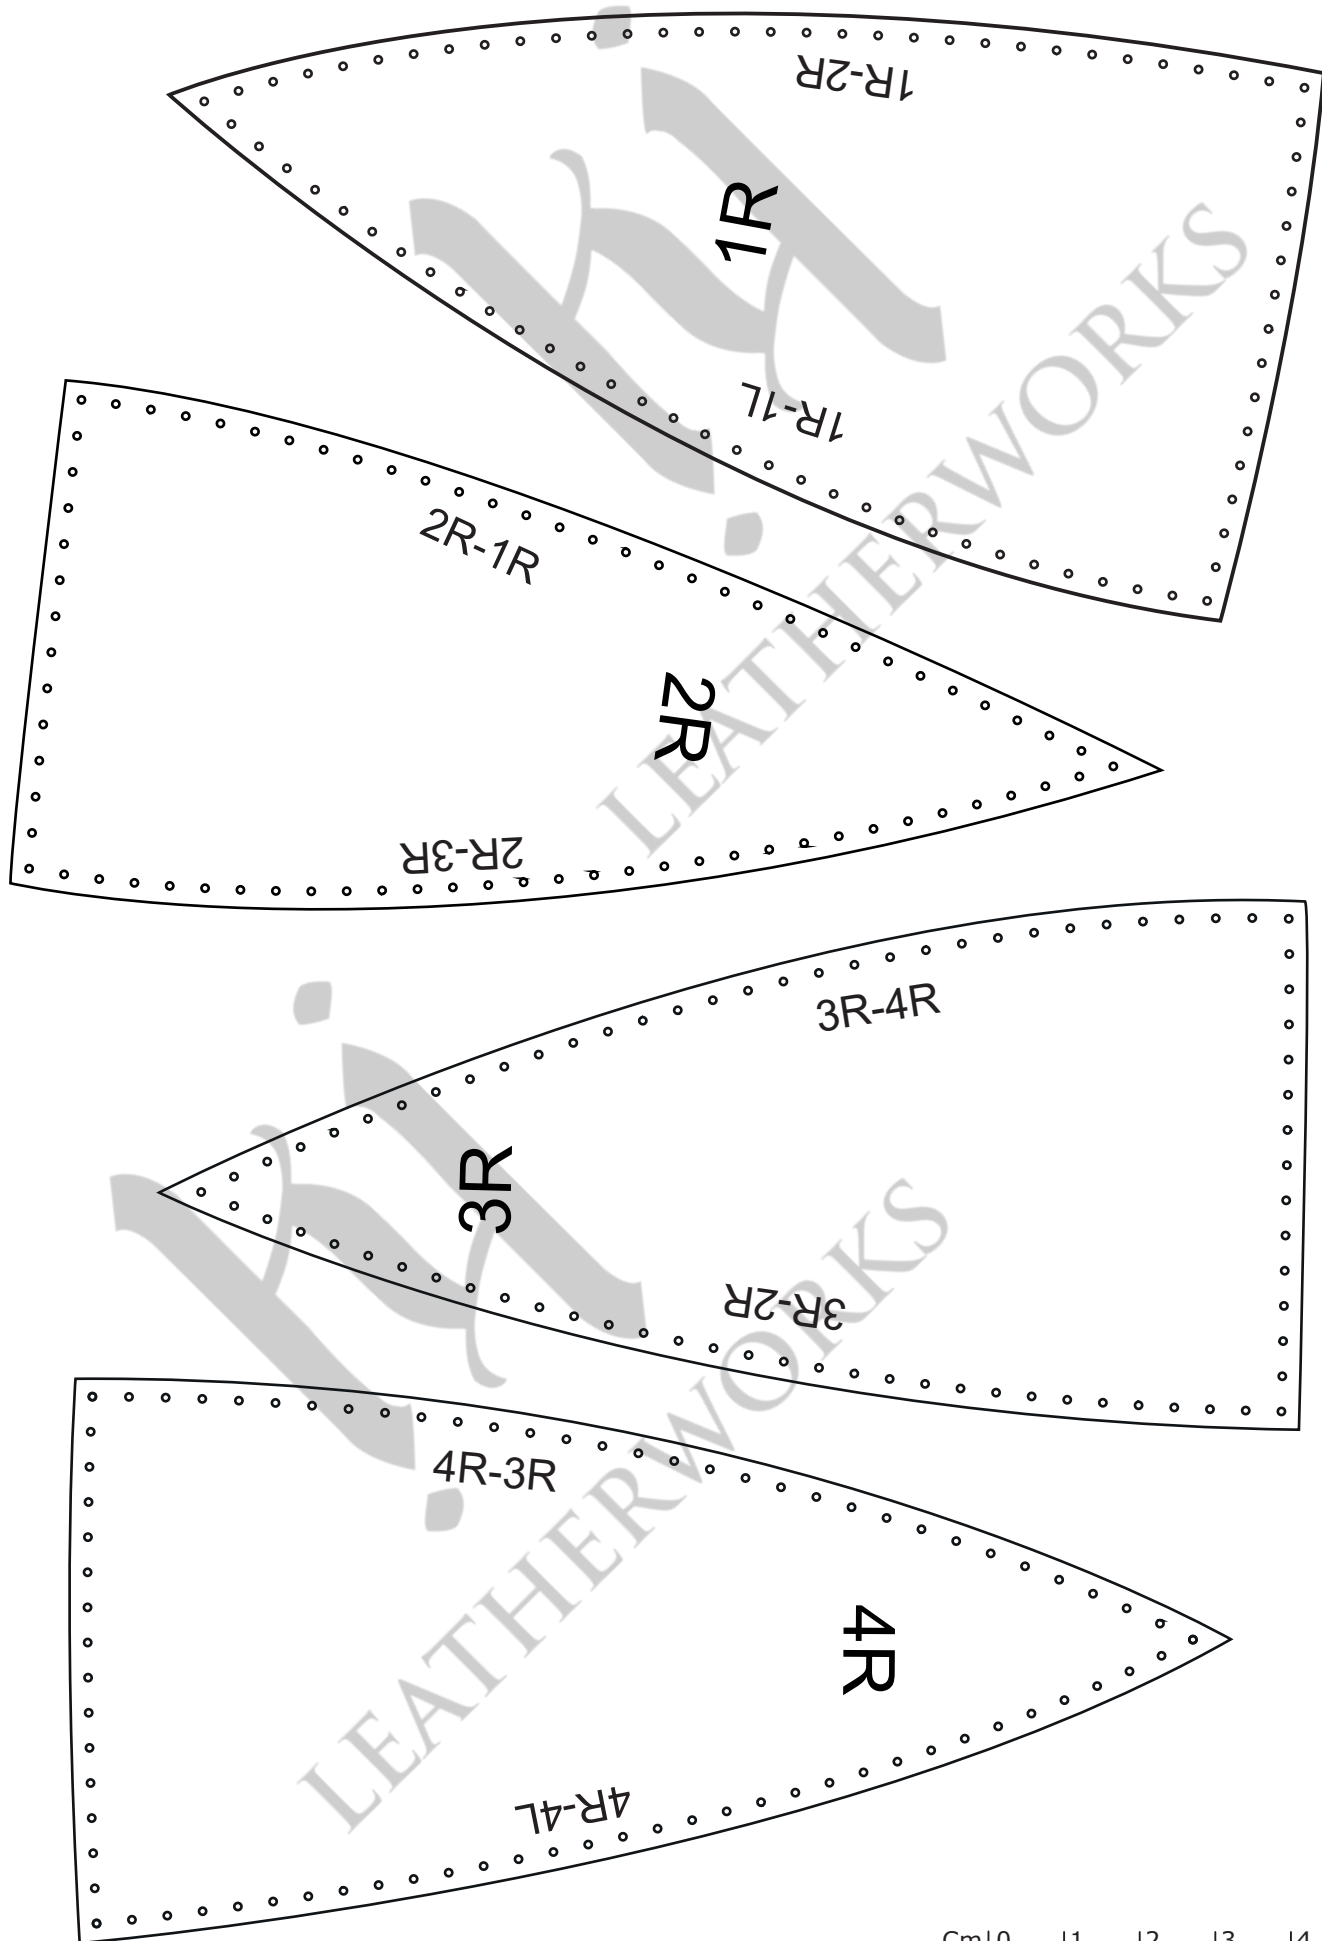
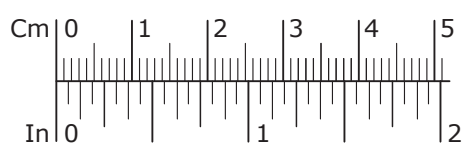
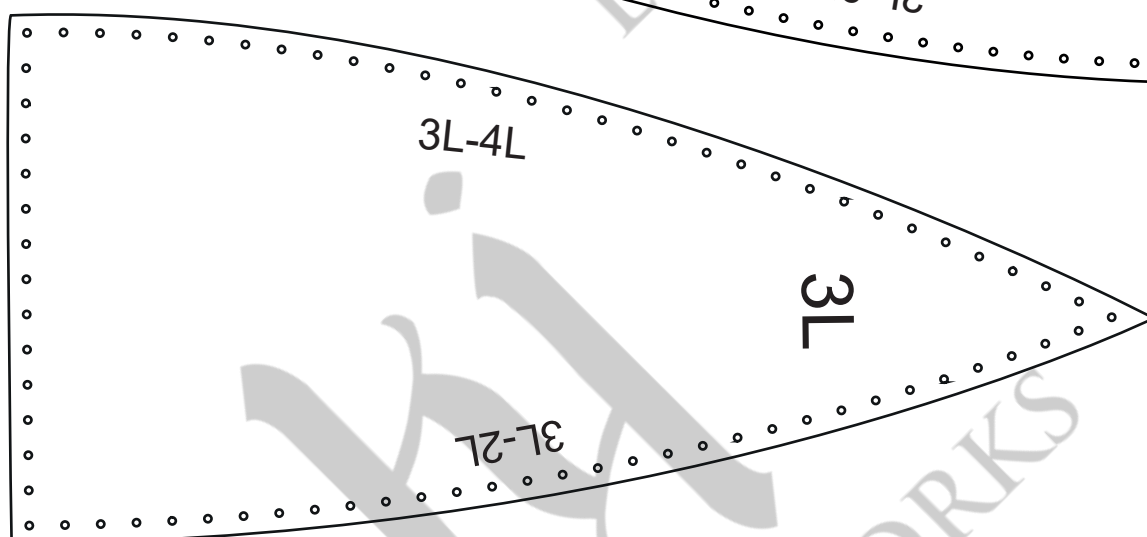
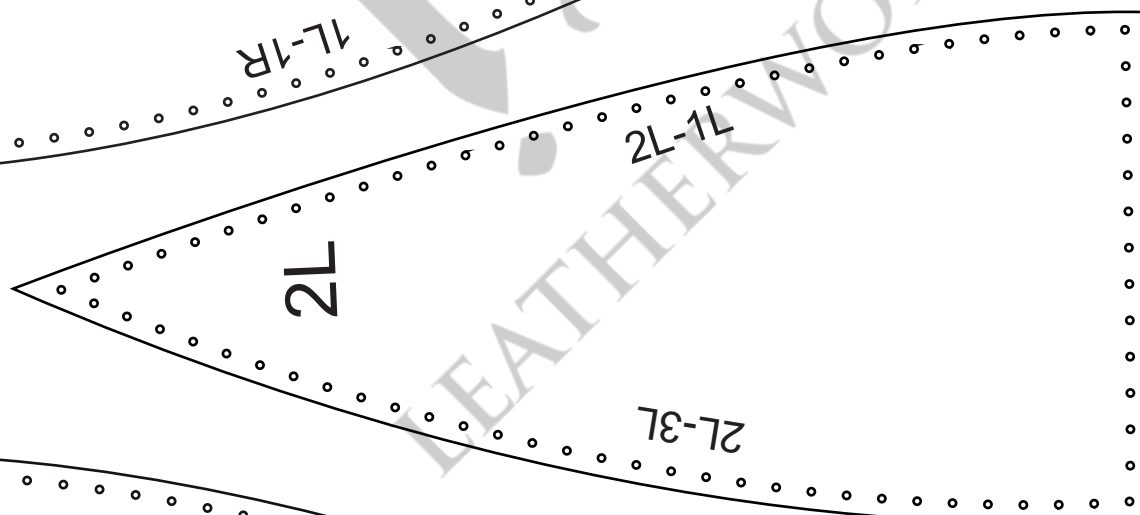
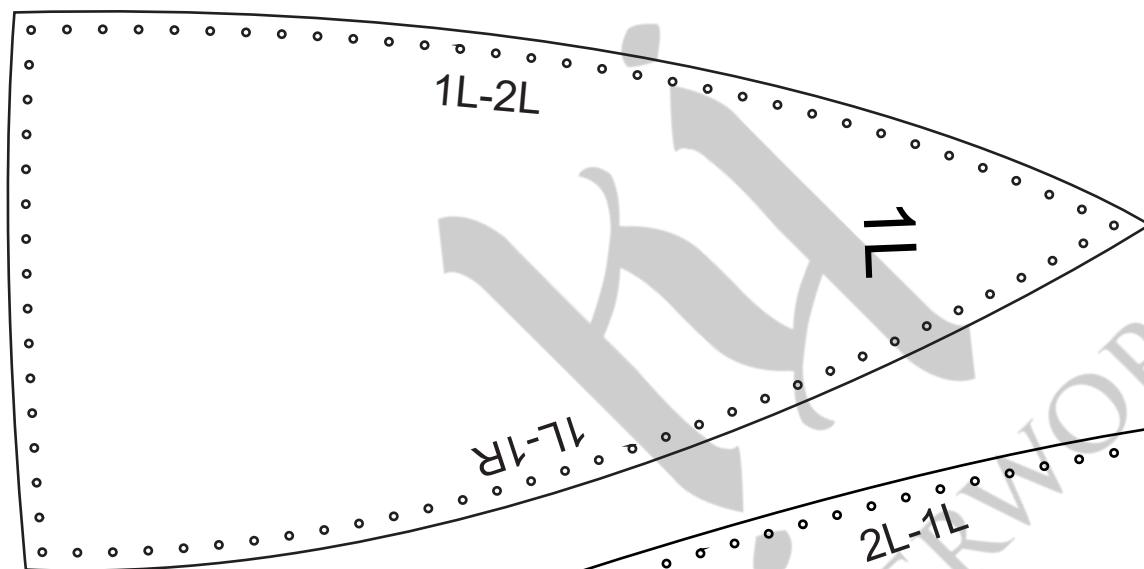
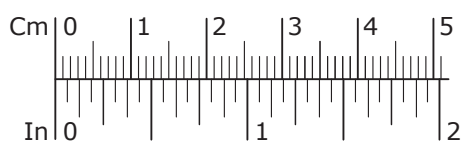
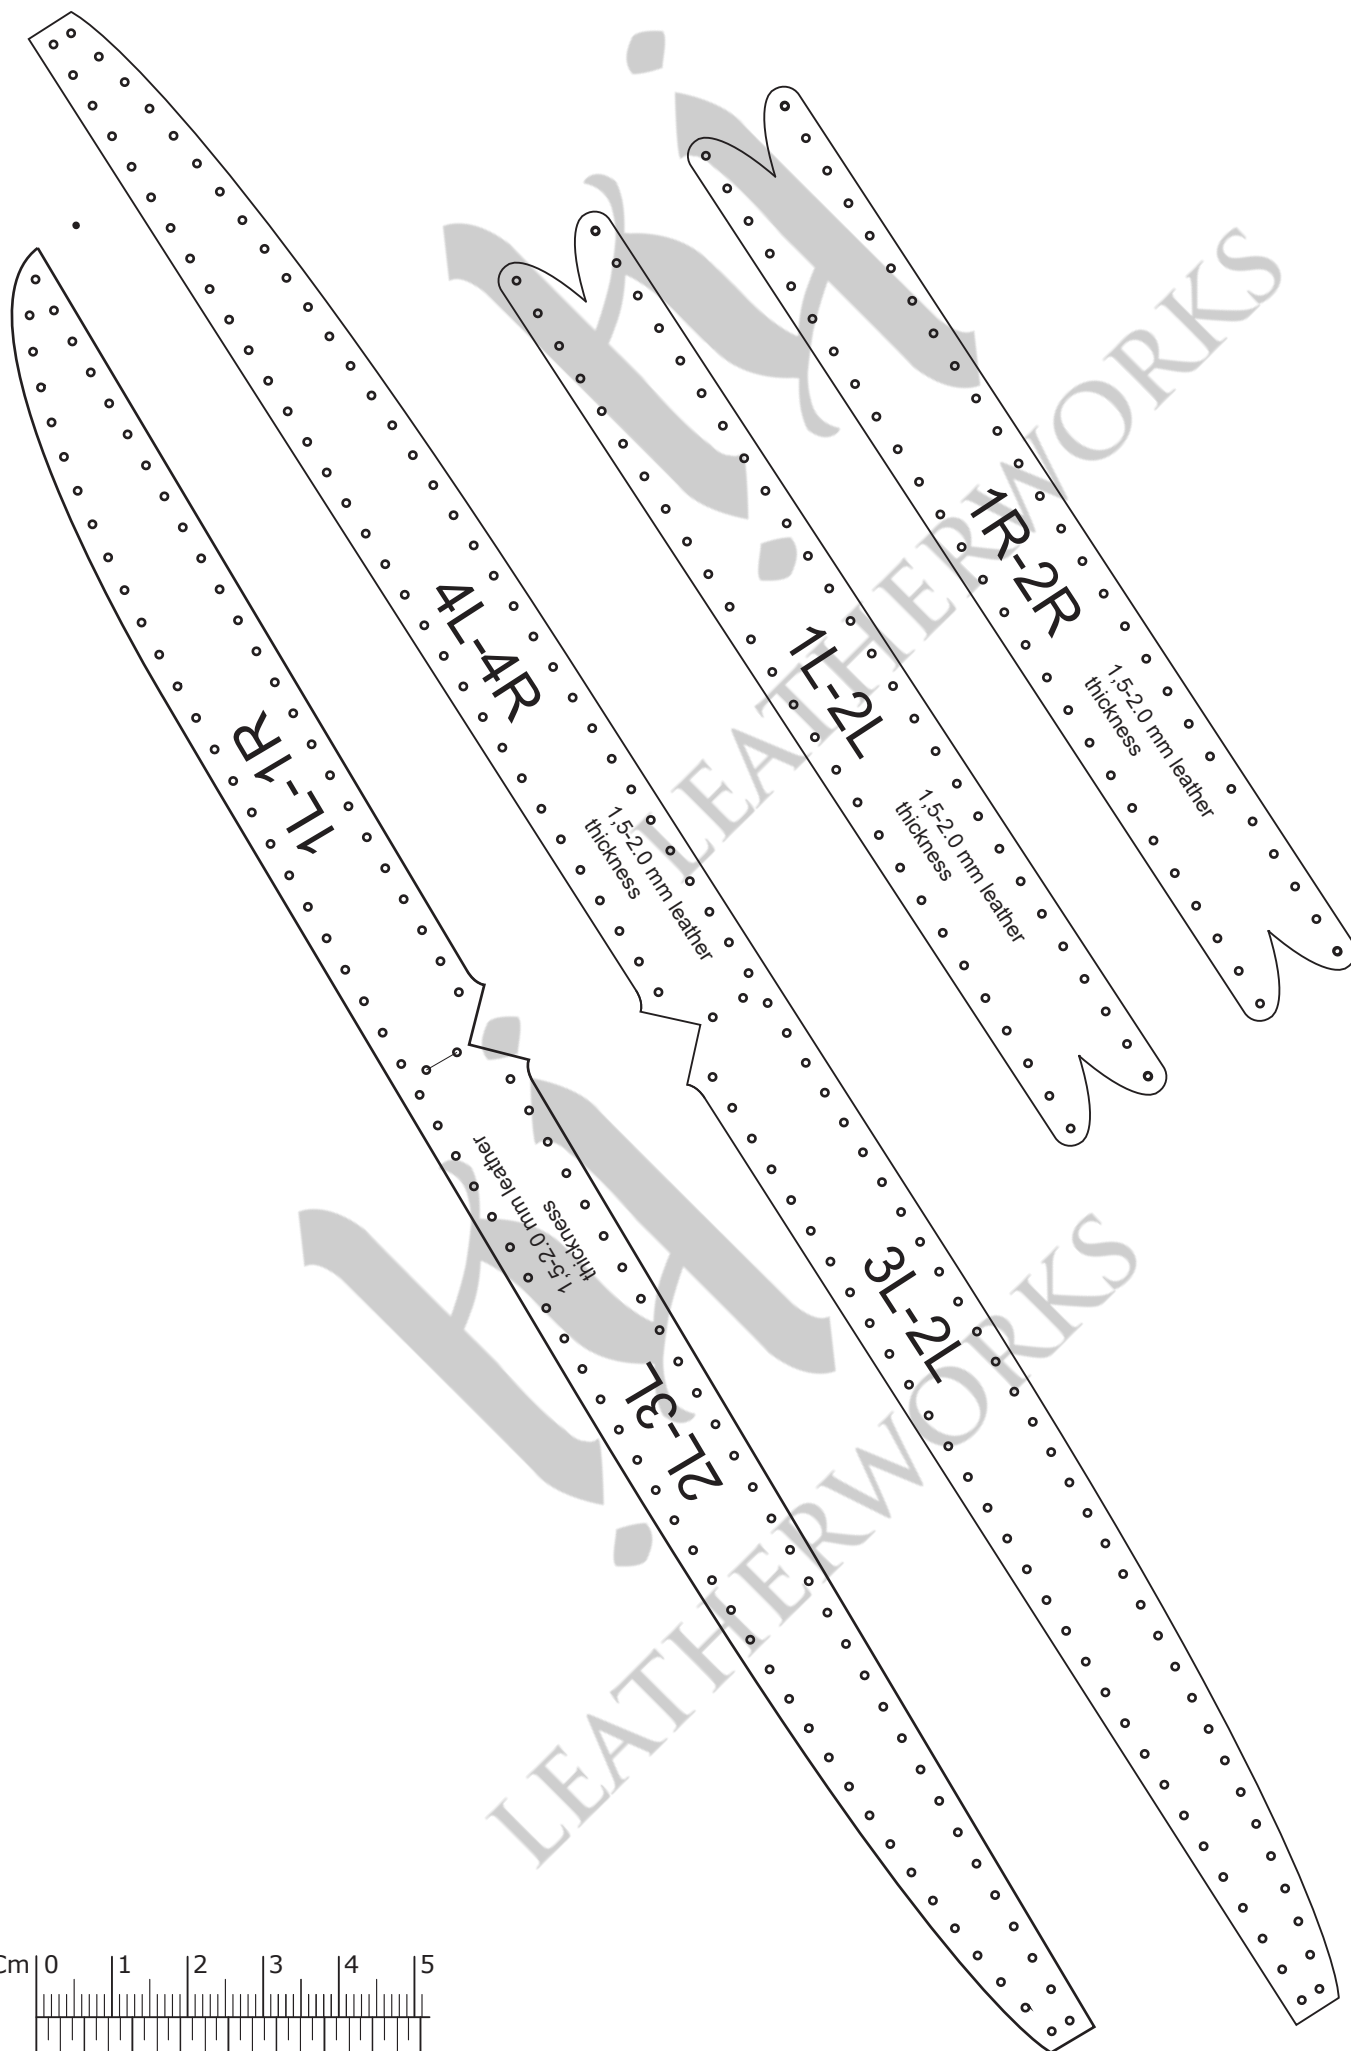
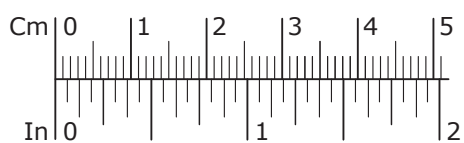


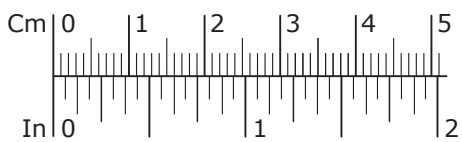

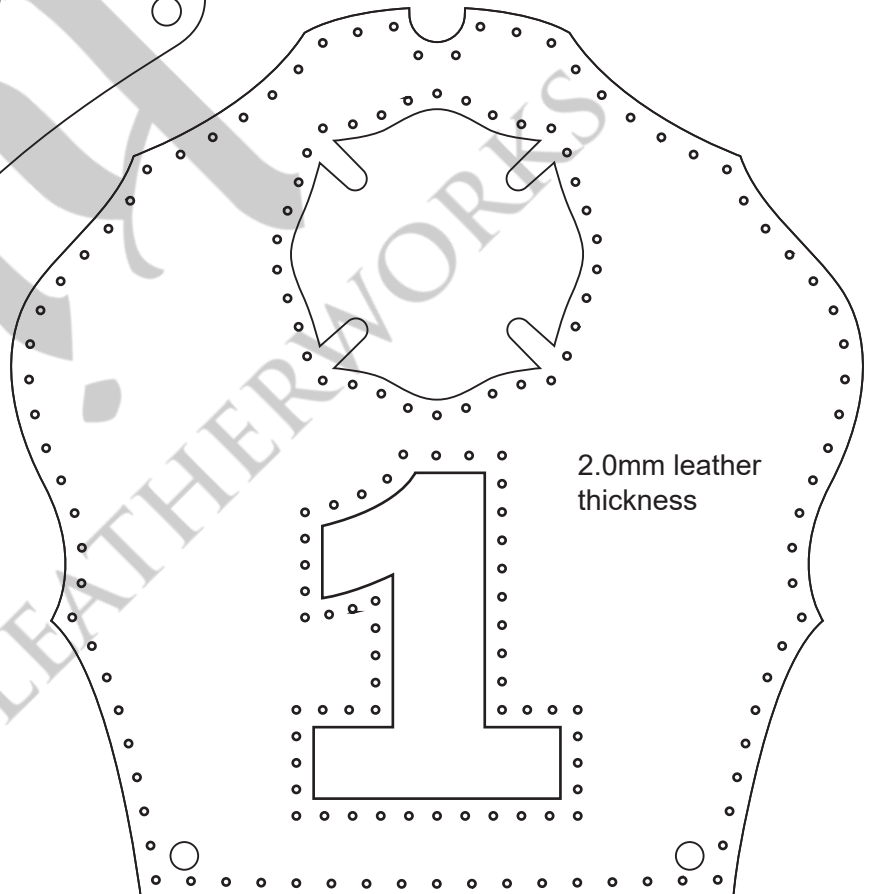

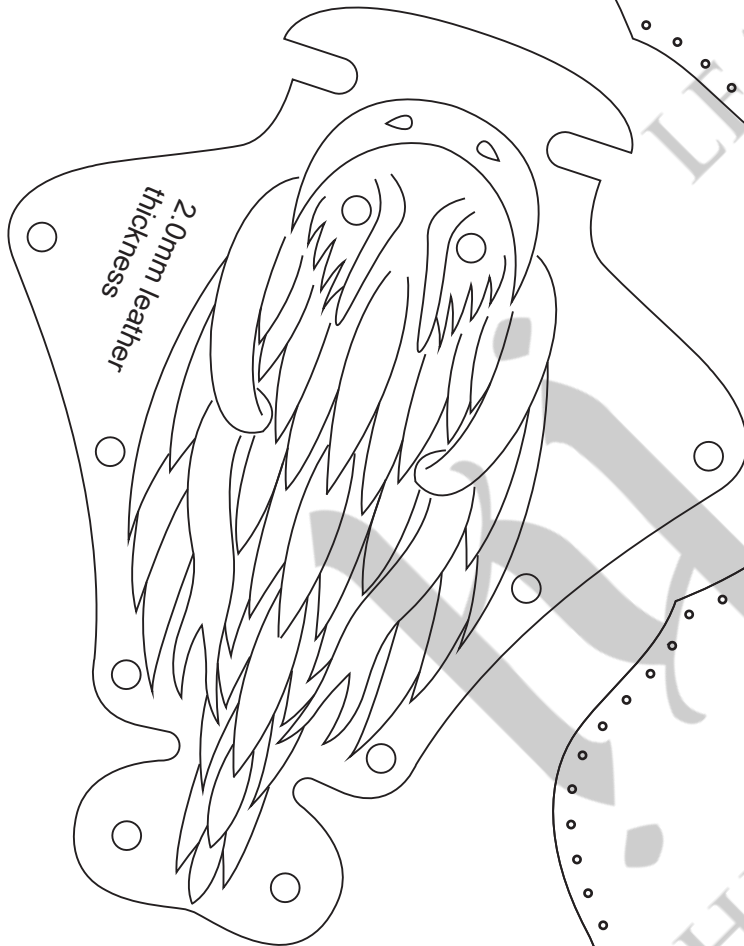

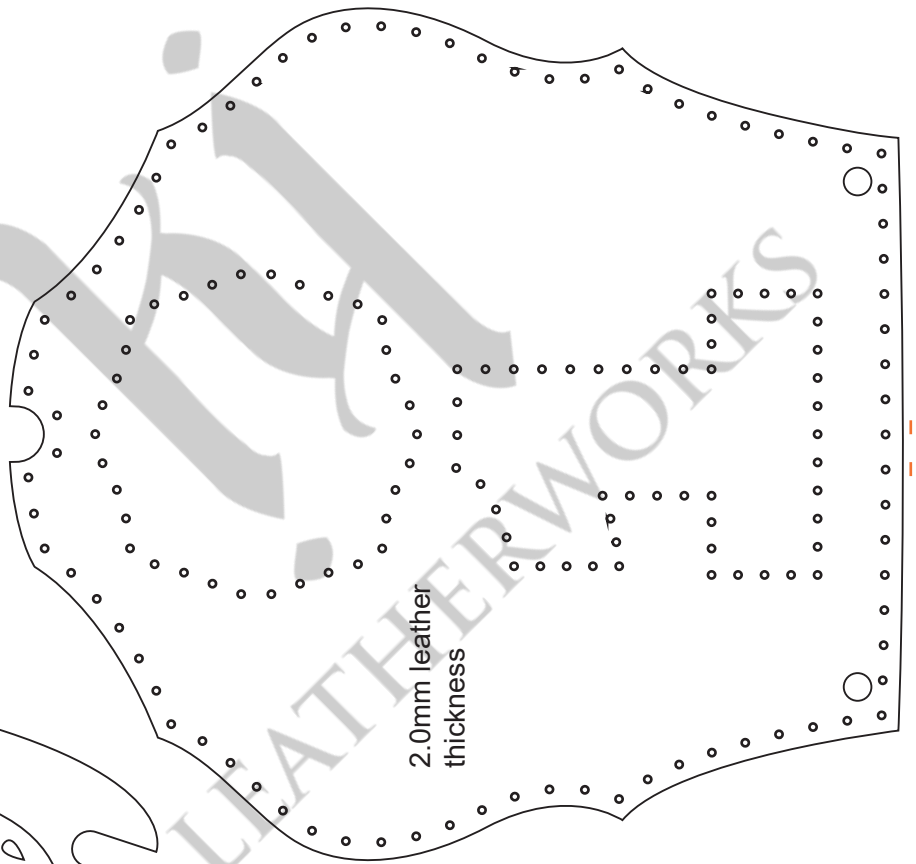

[illegible]

	Tape with part 1A	
1.0-1.5 mm Leather Thickness	○	○
WELT 2A	○	○

[illegible]


	Tape with part 1A	
1.0-1.5 mm Leather Thickness		
WELT 2A		

Connect with the
second part of the brim.

Connect with the
second part of the brim.

BRIM

2.0-2.5 mm
leather thickness

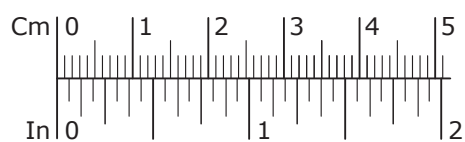

Connect with the
second part of the brim.

Connect with the
second part of the brim.

Landmark point - start
sewing the brim to helmet
from this point

BRIM

2.0-2.5 mm
leather thickness

