
LEATHER CORSET TOTE



Assembly instructions

Difficulty level:	Intermediate
Completion Time	9 - 12 hours

NECESSARY TOOLS

B&W Printer



Scissors or a cutter



Hole Puncher (We recommend 1.8 - 2 mm sized holes for this build)



Approx 9 square feet of leather. (We recommend 5 oz leather for this build)



Thread and needles (We recommend 1 mm waxed thread for this build)




4 rapid rivets

4 Sam Browne buttons

PRINTING THE PATTERN


Set up your paper size to A4 and choose actual size in the printer settings

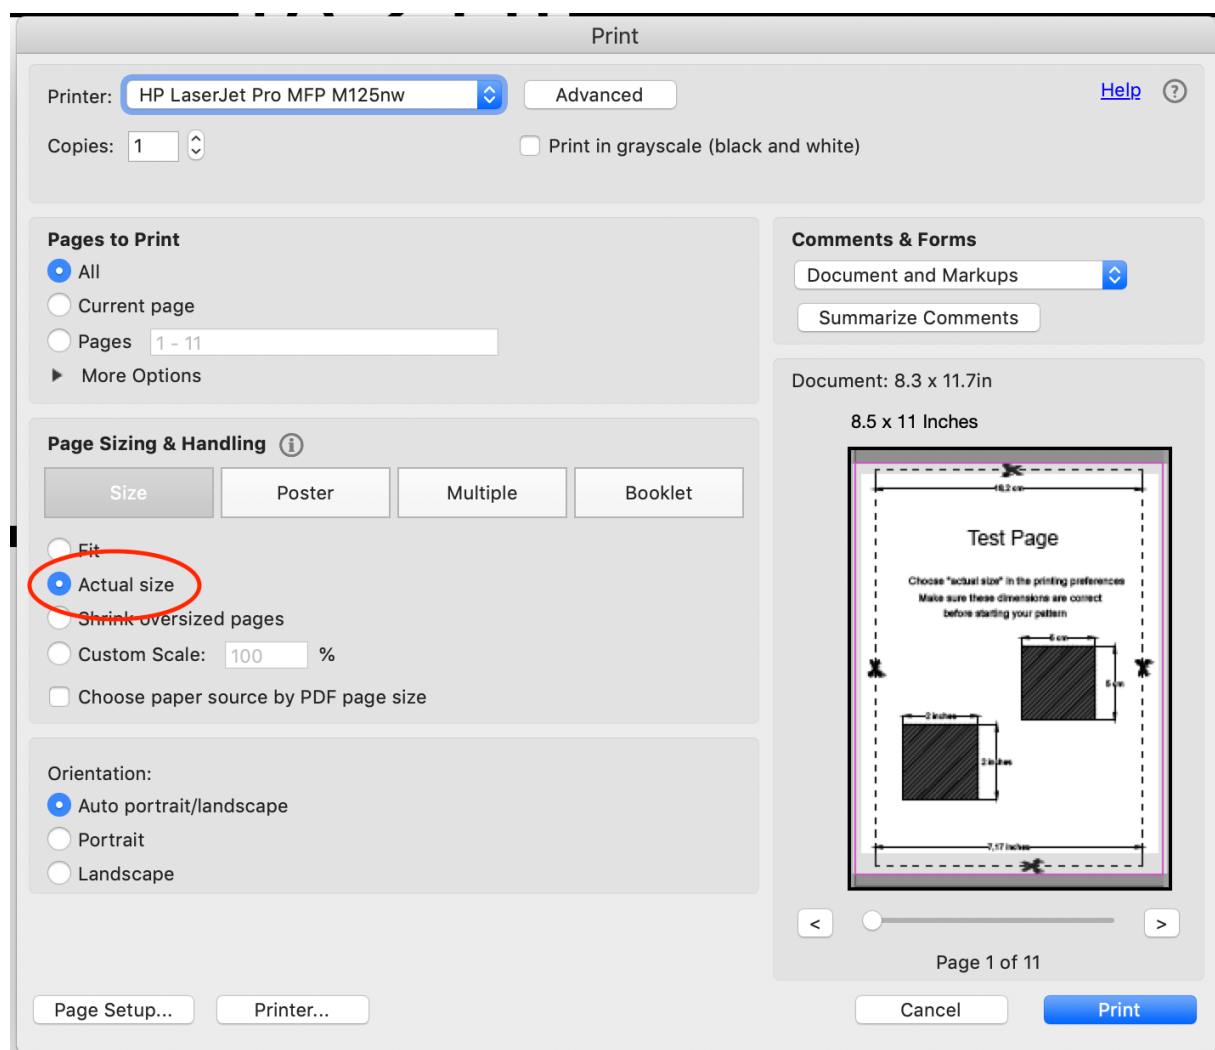

Alternatively you can use “letter” format which is approximately the same size and will not impact the size of the product significantly

Print all the patterns.



The first page is a measuring reference and you can use a ruler to make sure it matches the square. That means the rest of the pattern will print on the right size

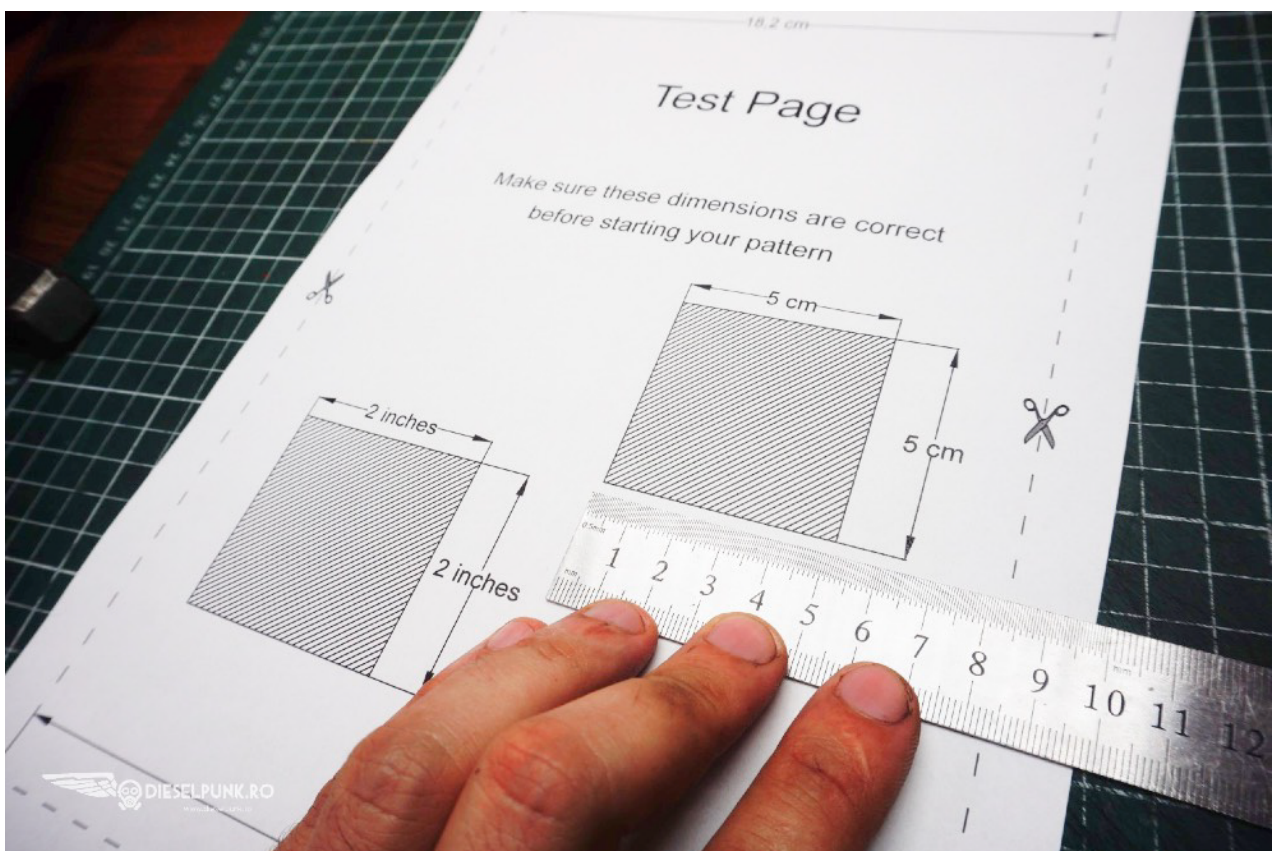

Take note that some of the larger parts are spread over two or even three or more pages.

Use the second page of the pattern as an assembly guide

Cut out the edges and use only the inside of the page

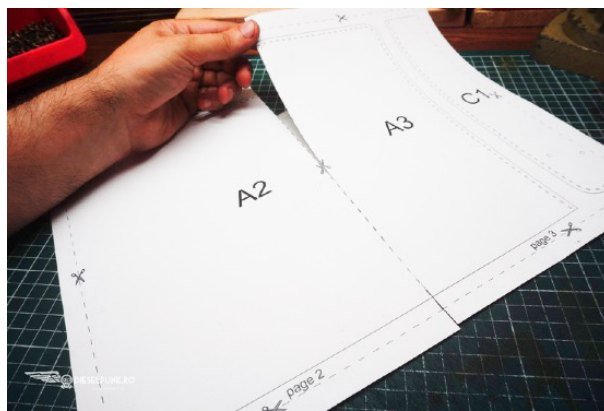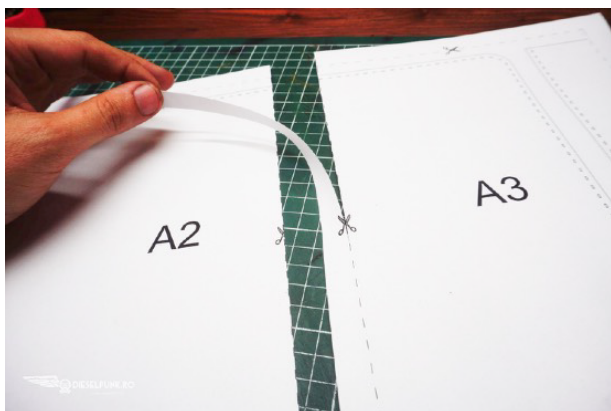

In order to further help with your build, we filmed the entire process from the start to finish.
Please access your instructional video here:

<https://youtu.be/h7AHmtbQ53E>

Would love to see what you did, so please share or leave a review on Etsy.

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

Thank you for constructing your bag with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date with the latest patterns available.

Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087/>

Best Regards
Tony