


MAKESUPPLY SHOULDER STRAP PAD PATTERN PACK



RECOMMENDED LEATHER WEIGHT:

At least half of your strap weight. If your strap is 8oz thick, we recommend using (2) pieces of 4oz or something similar.

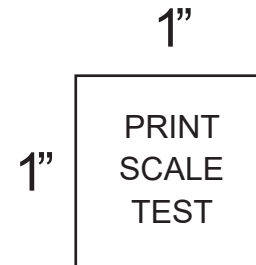

1. Determine the width of your bag strap
2. Print out the corresponding page on heavy card stock paper
3. Cut out your chosen pad design (exterior) and cut out your preferred slot positions.
Outside or Inside. You can use all 4 slots if you wish.
4. Trace pad design on your leather marking the slot positions and stitching holes (if applicable).
5. Cut out the leather and cut (or punch using oblong punch) the slots.
6. Apply glue to the edges of the pad you just cut out and place it down on another piece of leather.
7. After glue has dried, cut out the bottom piece using the top piece as a guide.
8. Stitch and finish your edges.
9. Done!







