




PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”



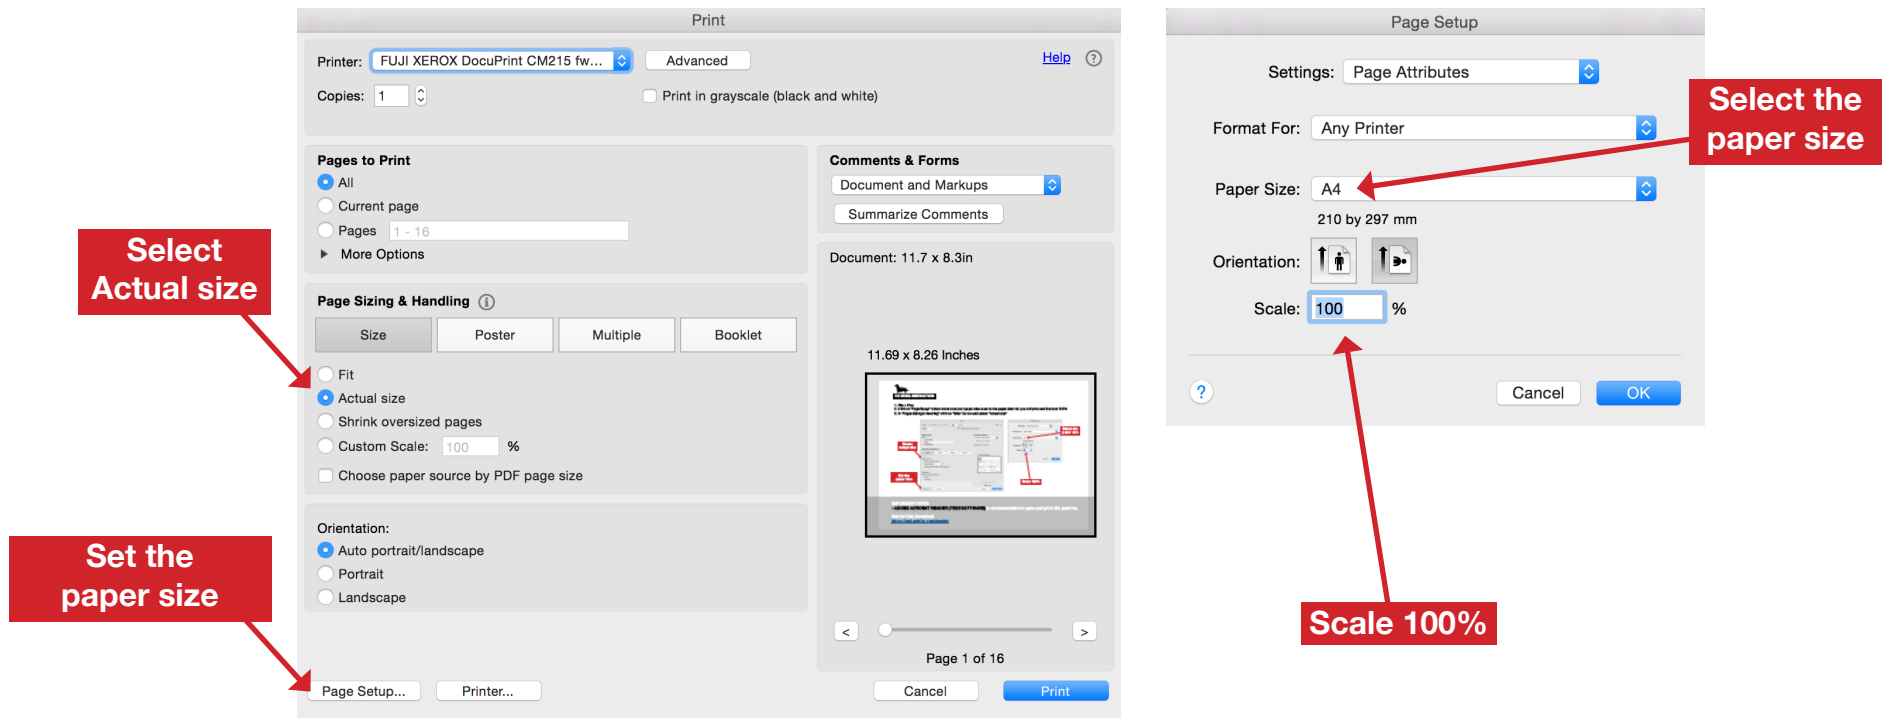


IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>

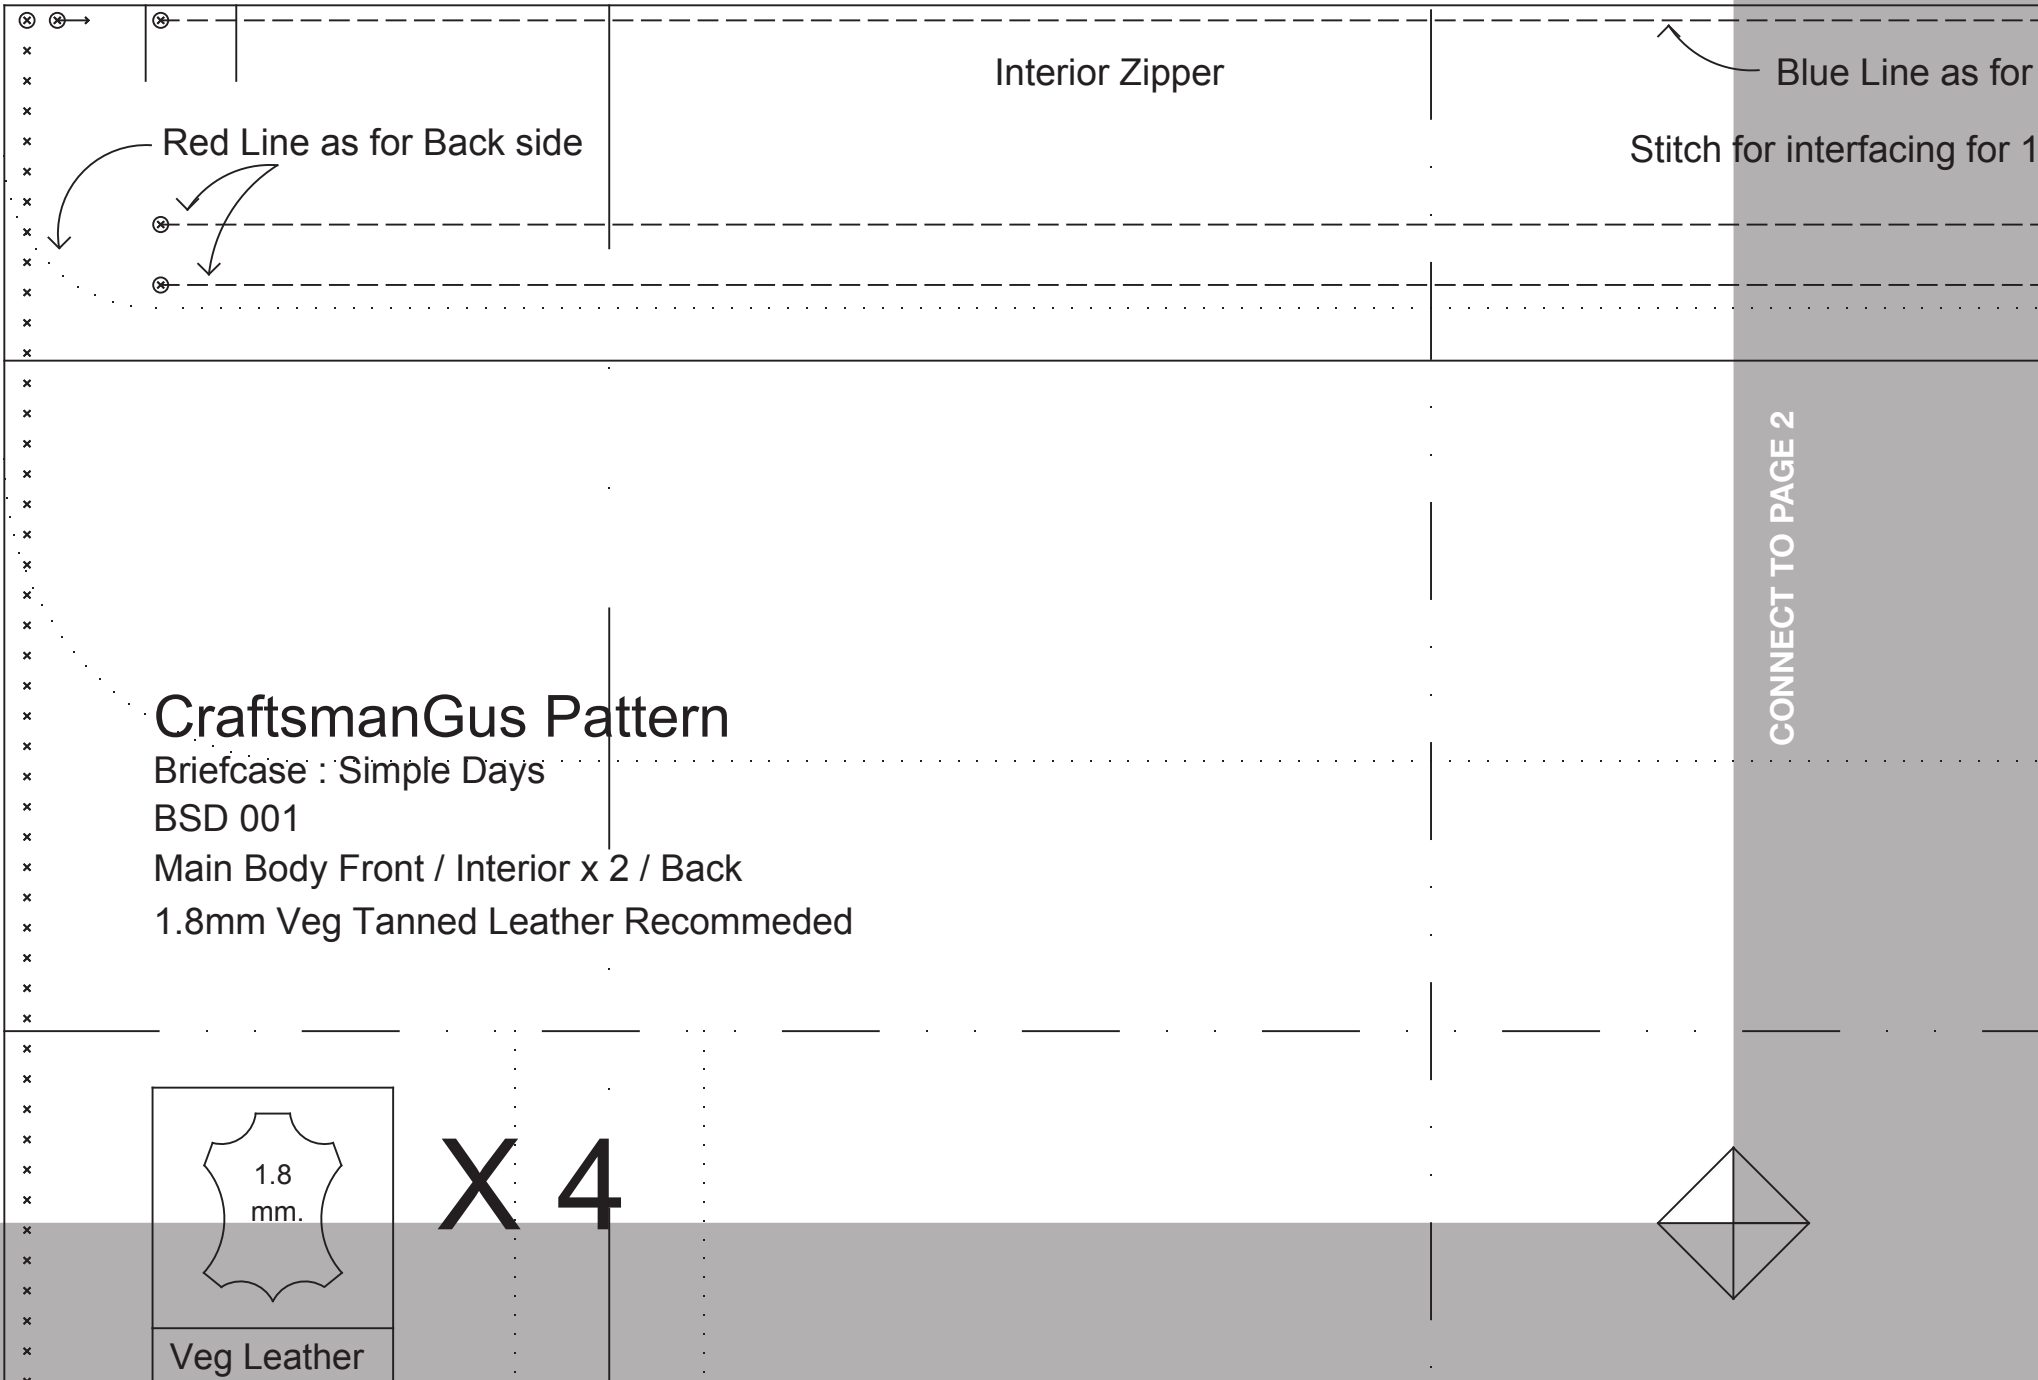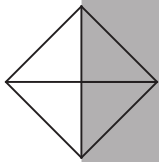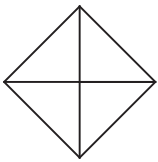

Interior Zipper

Red Line as for Back side

Blue Line as for
Stitch for interfacing for 1

CraftsmanGus Pattern

Briefcase : Simple Days
BSD 001



Main Body Front / Interior x 2 / Back
1.8mm Veg Tanned Leather Recommended



Veg Leather



X 4

CONNECT TO PAGE 2

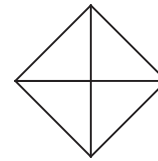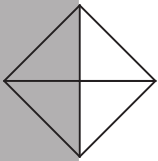

Blue Line as for 2nd & 3rd Interior Side
Stitch for interfacing for 1st & 4th(Back)' interfacing

CONNECT TO PAGE 1

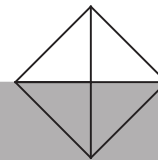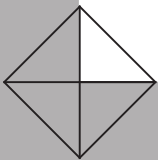

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Gusset/Side pieces

1.8mm Veg Tanned Leather Recommended

X 6

Veg Leather

1.8
mm.



X 4

CONNECT TO PAGE 1

Axis Line of Lock Straps

Center / Axis Line of Lock


CraftsmanGus Pattern

Briefcase : Simple Days


BSD 001

Bottom Gusset

1.8mm Veg Tanned Leather Recommended



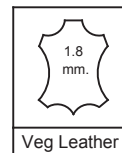





X 3

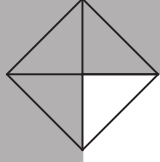


Axis Line of Lock Straps

CONNECT TO PAGE 2

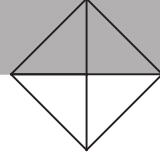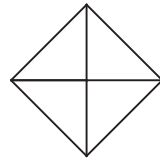
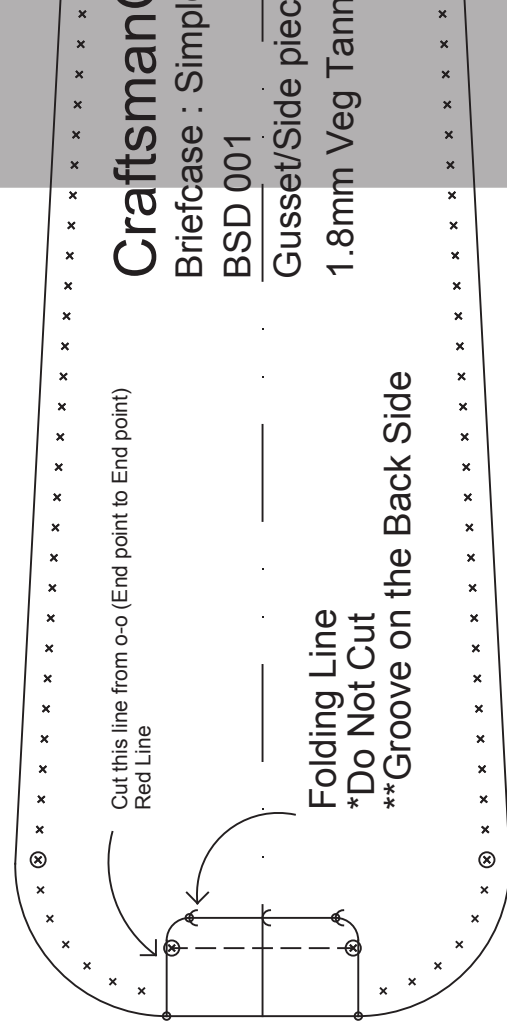


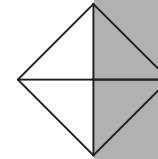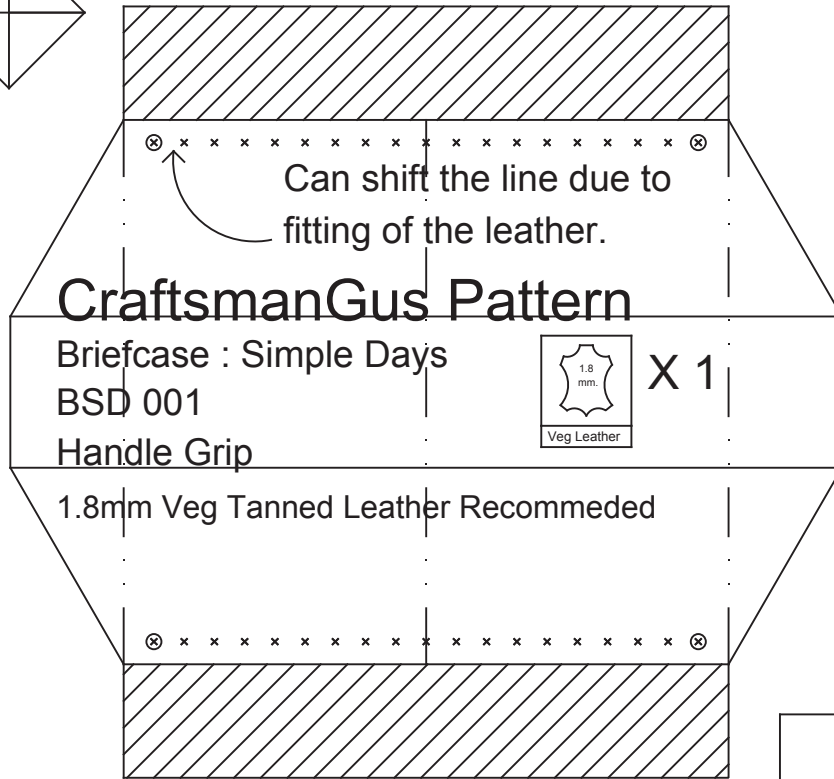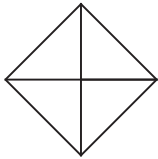

CONNECT TO PAGE 6


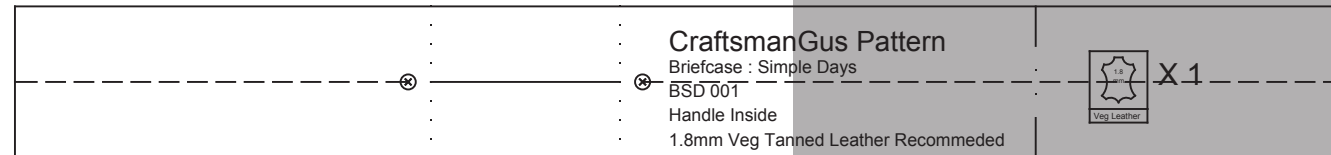


Triple Deck Briefcase
Page 5 of 11

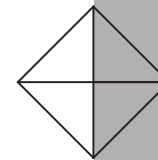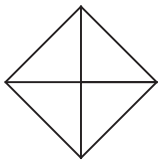





CONNECT TO PAGE 5

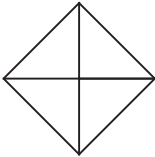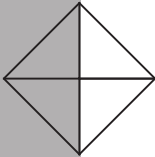


CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Spine 1.8mm Veg Tanned Leather Recommended	 X 1
--	--

CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Inside 1.8mm Veg Tanned Leather Recommended	 X 1
---	--


CraftsmanGus Pattern Briefcase : Simple Days BSD 001 Handle Outside 1.8mm Veg Tanned Leather Recommended	 X 1	
--	--	--

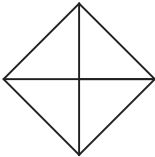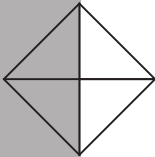

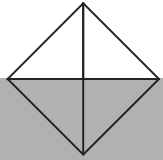


CONNECT TO PAGE 8


needed

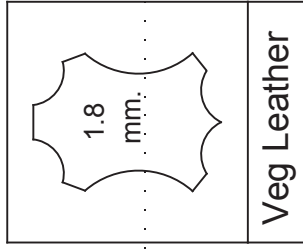


X 1

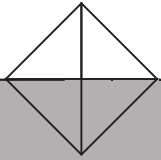

Center / Axis Line of Lock

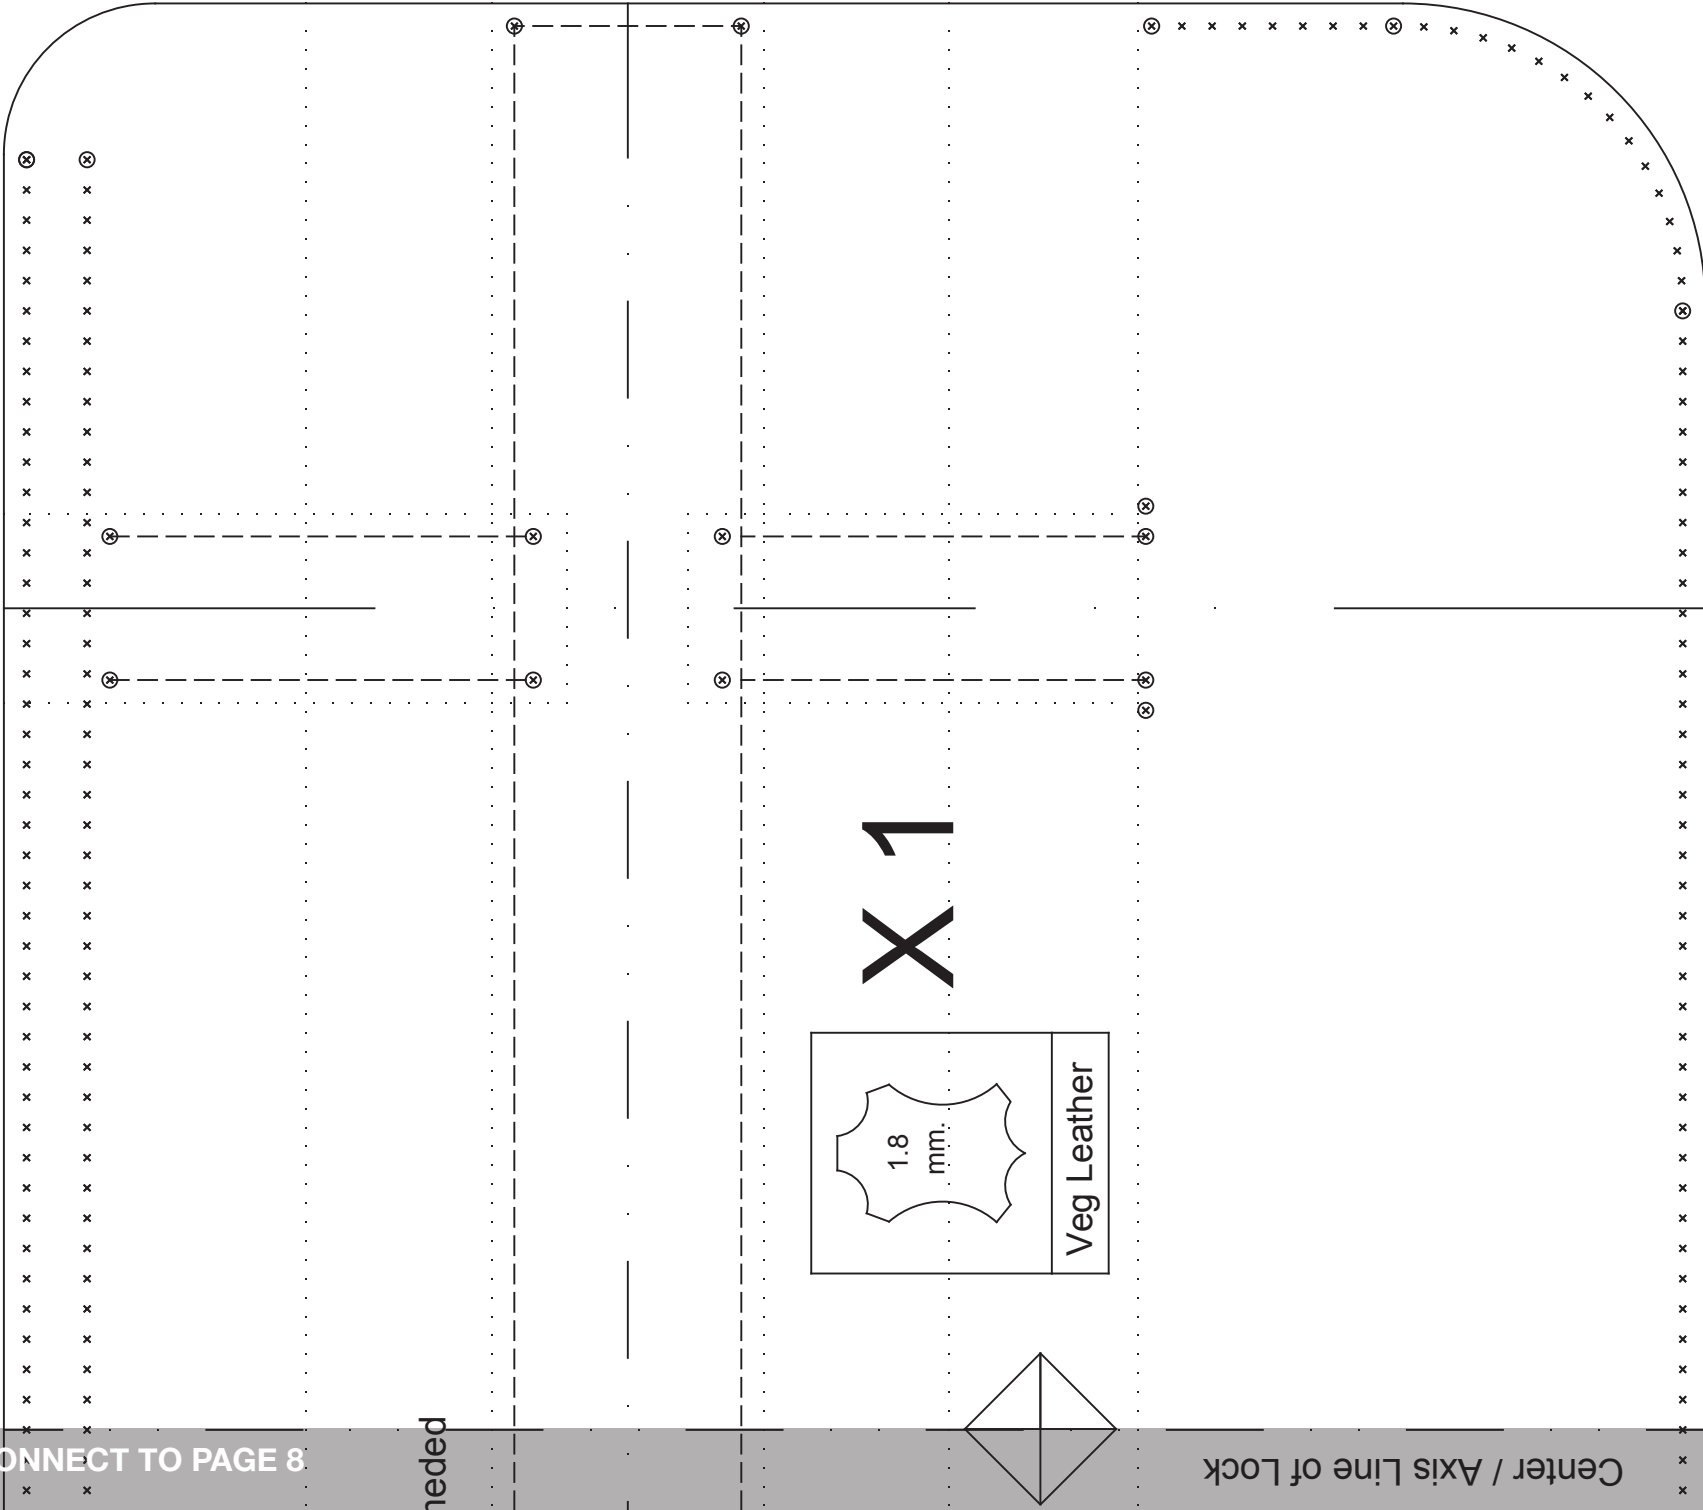

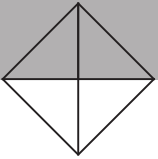

CONNECT TO PAGE 7




CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001


Flap

1.8mm Veg Tanned Leather Recommended

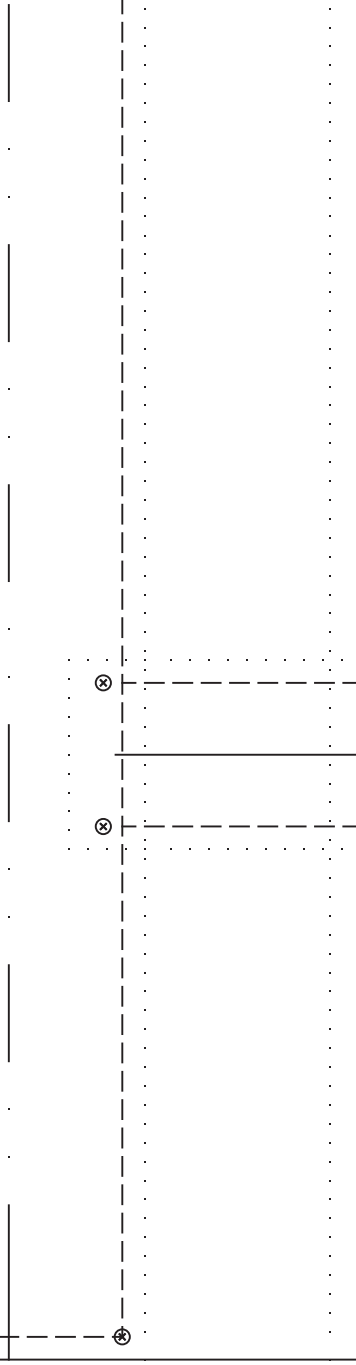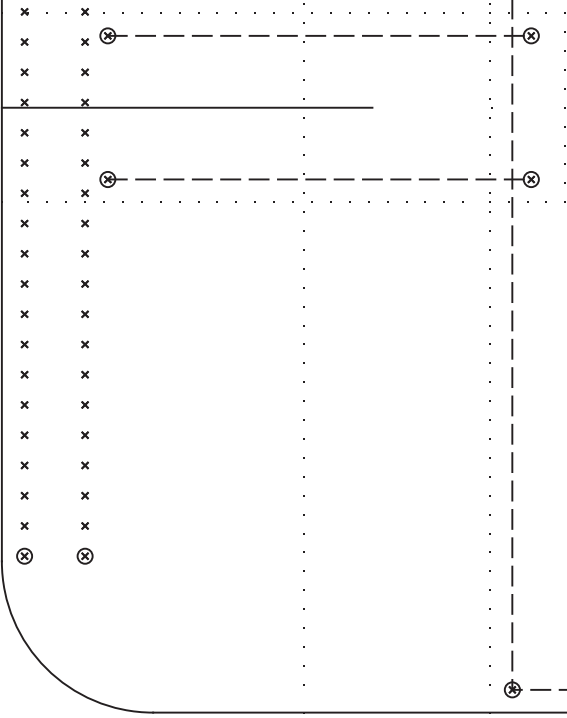

Border of interfacing.





Center / Axis Line of Lock


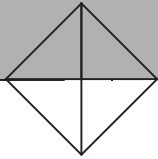





Triple Deck Briefcase

Page 9 of 11

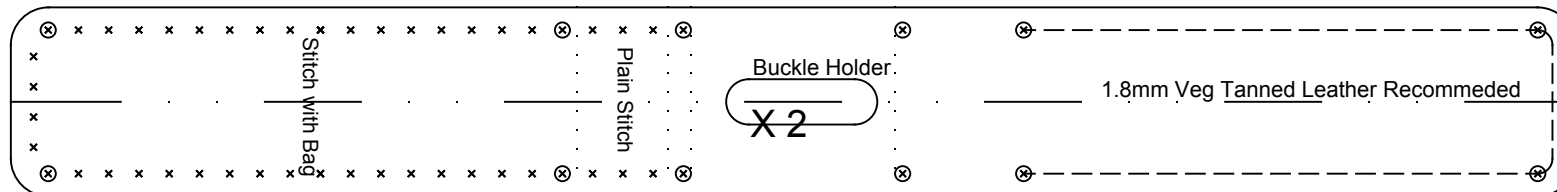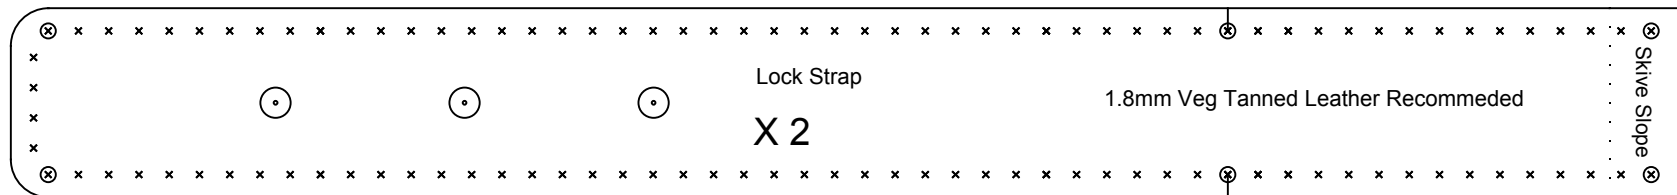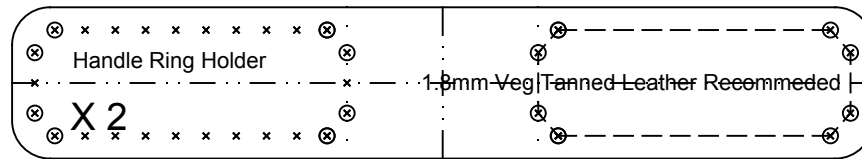

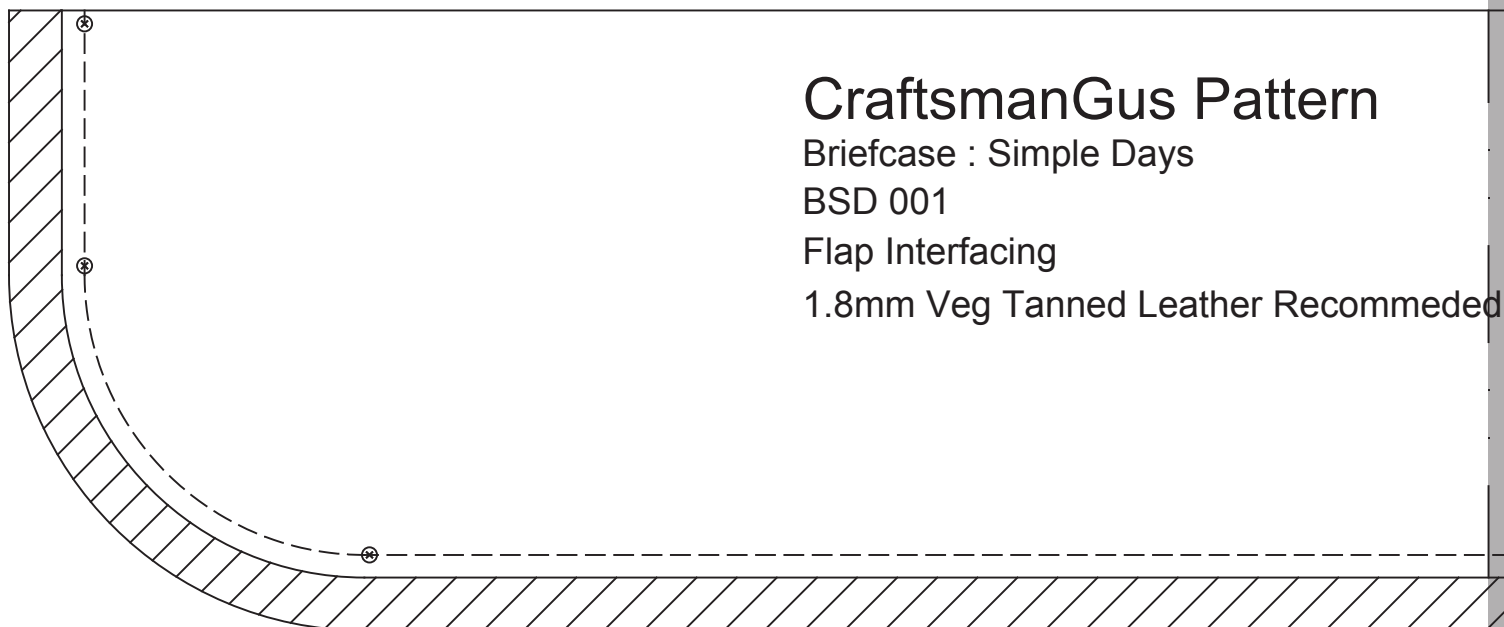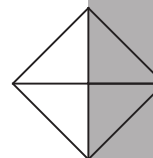


X 1

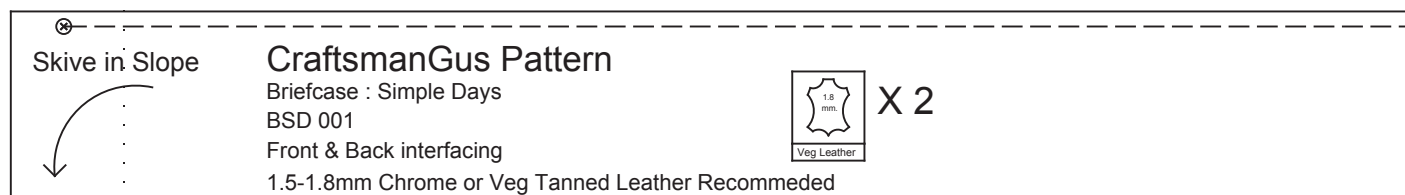



X 2

Glue all the area

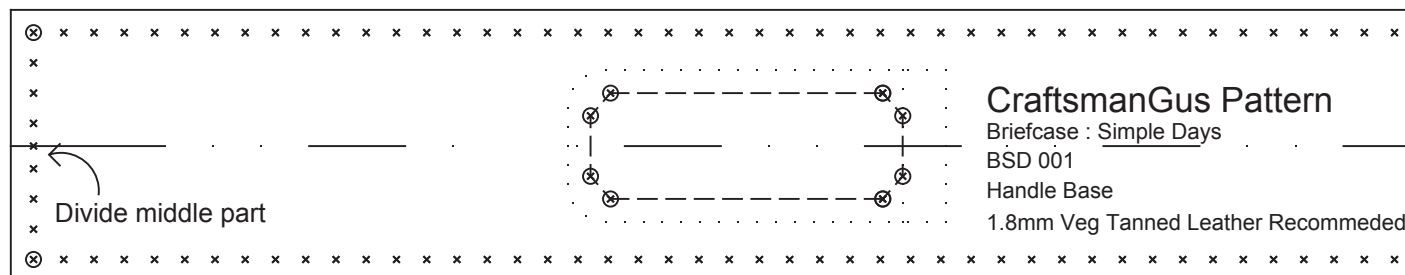

X 1

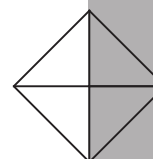

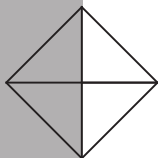

CONNECT TO PAGE 10


CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Map Interfacing

1.8mm Veg Tanned Leather Recommended

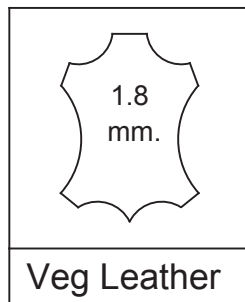

X 1





X 2

Recommended

Glue all the area

Skive in Slope

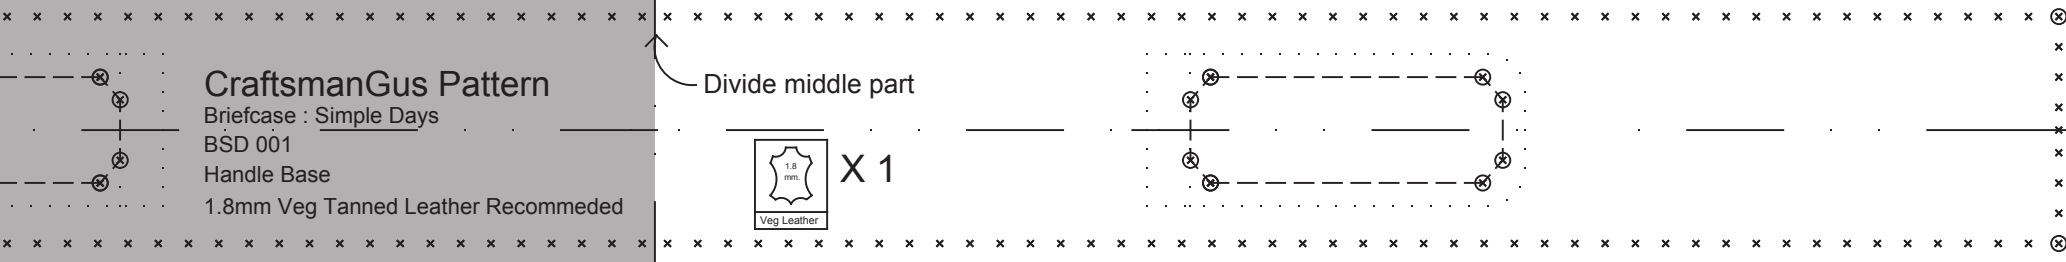

Divide middle part



X 1

CraftsmanGus Pattern

Briefcase : Simple Days
BSD 001

Handle Base

1.8mm Veg Tanned Leather Recommended

